

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2009 Chevrolet Corvette Service and Repair Manual

[Go to manual page](#)

S2L Transmission Manual Shift Switch - Left (M5U)

X85 X85 Steering Wheel Air Bag Coil

Steering Column Components

X85 Steering Wheel Air Bag Coil X1

X85 Steering Wheel Air Bag Coil X2

X85 Steering Wheel Air Bag Coil X3

X85 Steering Wheel Air Bag Coil X4

S2R S2R Transmission Manual Shift Switch - Right (M5U)

Steering Wheel Components

S2R Transmission Manual Shift Switch - Right (M5U)

K9 K9 Body Control Module

Right Front of Passenger Compartment Components

K9 Body Control Module X1

K9 Body Control Module X2

K9 Body Control Module X3

K9 Body Control Module X4

K9 Body Control Module X5

K9 Body Control Module X6

K9 Body Control Module X7

K20 K20 Engine Control Module

Right Front of the Vehicle Components

K20 Engine Control Module X1 (LT1)

K20 Engine Control Module X1 (LT4)

K20 Engine Control Module X2 (LT1)

K20 Engine Control Module X2 (LT4)

K20 Engine Control Module X3 (LT1)

K20 Engine Control Module X3 (LT4)

Pressure and Shift Controls

6401 Clutch Solenoid Valve B Control

6401_BU 6401 BU

CAV_2 2

6402 Clutch Solenoid Valve C Control

6402_GY 6402 GY

CAV_19 19

6403 Clutch Solenoid Valve D Control

6403_GY/GN 6403 GY/GN

CAV_3 3

6404 Clutch Solenoid Valve E Control

6404_YE/BN 6404 YE/BN

CAV_20 20

6210 Torque Converter Clutch Enable Solenoid Valve B Control

6210_YE/BN 6210 YE/BN

CAV_22 22

CAV_2 2

CAV_1 1

CAV_2 2

CAV_1 1

CAV_2 2

CAV_1 1

CAV_2 2

CAV_1 1

CAV_2 2

CAV_1 1

CAV_2 2

CAV_1 1

6400_BN 6400 BN

6401_BU 6401 BU

CAV_17 17

4507 Transmission Clutch H Control

4507_WH/BU 4507 WH/BU

CAV_1 1

6380 Torque Converter Clutch Enable Solenoid Valve A Control

6380_GN/WH 6380 GN/WH

CAV_21 21

4508_WH 4508 WH

4507_WH/BU 4507 WH/BU

6380_GN/WH 6380 GN/WH

4508_WH 4508 WH

4507_WH/L-BU 4507 WH/L-BU

6380_L-GN/WH 6380 L-GN/WH

6387_GN/GY 6387 GN/GY

6387_GN/GY 6387 GN/GY

6387_GN/GY 6387 GN/GY

6387_GN/GY 6387 GN/GY

6387_GN/GY 6387 GN/GY

X175 X175

[Automatic Transmission Harness Routing](#)

[X175 Transmission Harness to Transmission Case Harness \(M5U\)](#)

CAV_5 5

CAV_6 6

CAV_10 10

CAV_4 4

CAV_3 3

CAV_7 7

CAV_13 13

CAV_14 14

[Automatic Transmission Harness Routing](#)

[X175 Transmission Harness to Transmission Case Harness \(M5U\)](#)

X176 X176

[X176 Transmission Case Harness to Transmission Control Harness \(M5U\)](#)

K71 K71 Transmission Control Module (M5U)

[Rear Underbody Components](#)

[K71 Transmission Control Module](#)

K71 K71 Transmission Control Module (M5U)

[Rear Underbody Components](#)

[K71 Transmission Control Module](#)

Q77A Q77A Transmission Control Solenoid Valve 1 (M5U)

[Automatic Transmission Valve Body Components](#)

[Q77A Transmission Control Solenoid Valve 1 \(M5U\)](#)

Q77B Q77B Transmission Control Solenoid Valve 2 (M5U)

[Automatic Transmission Valve Body Components](#)

[Q77B Transmission Control Solenoid Valve 2 \(M5U\)](#)

Q77C Q77C Transmission Control Solenoid Valve 3 (M5U)

[Automatic Transmission Valve Body Components](#)

[Q77C Transmission Control Solenoid Valve 3 \(M5U\)](#)

Q77D Q77D Transmission Control Solenoid Valve 4 (M5U)

[Automatic Transmission Valve Body Components](#)

[Q77D Transmission Control Solenoid Valve 4 \(M5U\)](#)

Q77E Q77E Transmission Control Solenoid Valve 5 (M5U)

[Automatic Transmission Valve Body Components](#)

[Q77E Transmission Control Solenoid Valve 5 \(M5U\)](#)

Q77F Q77F Transmission Control Solenoid Valve 6 (M5U)

[Automatic Transmission Valve Body Components](#)

[Q77F Transmission Control Solenoid Valve 6 \(M5U\)](#)

Q77G Q77G Transmission Control Solenoid Valve 7 (M5U)

[Automatic Transmission Valve Body Components](#)