


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2009 FORD Mustang OEM Service and Repair Workshop Manual

[Go to manual page](#)

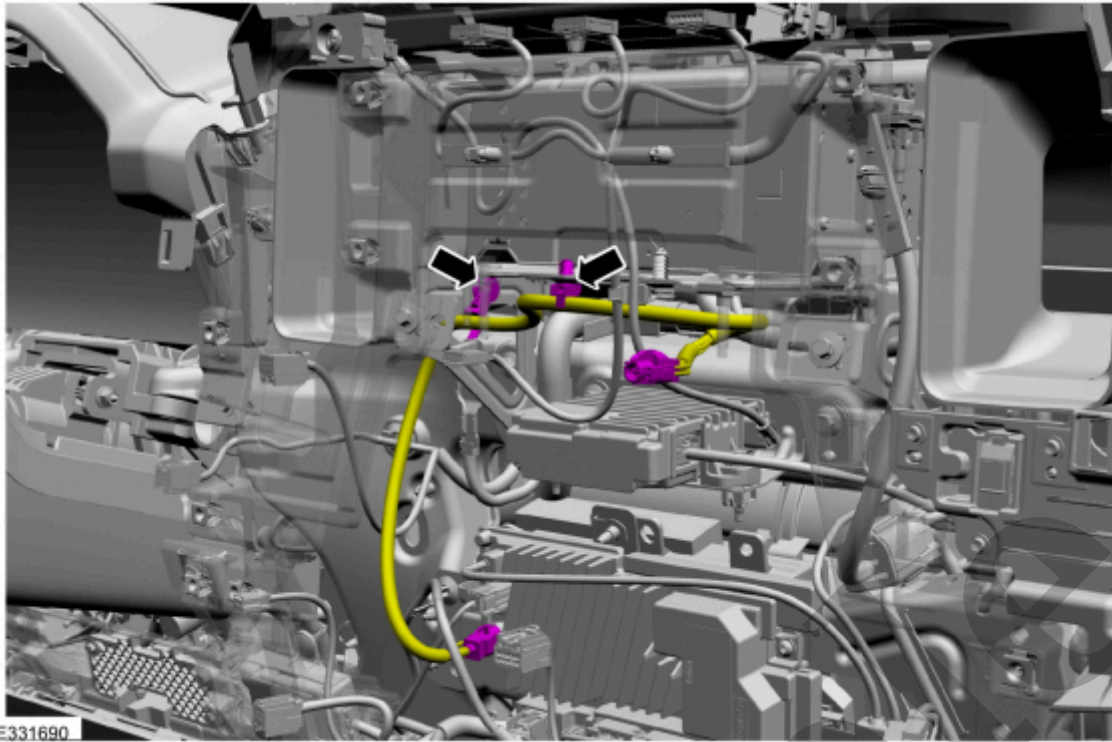


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation


1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

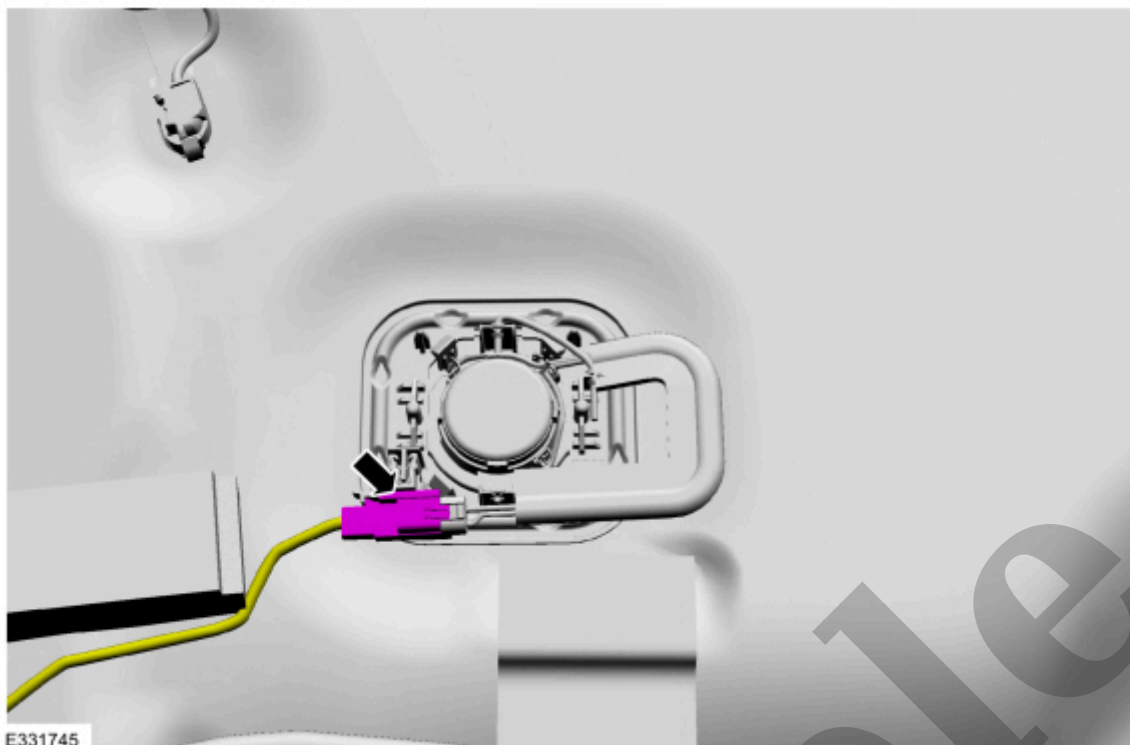

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Release the speaker tether.

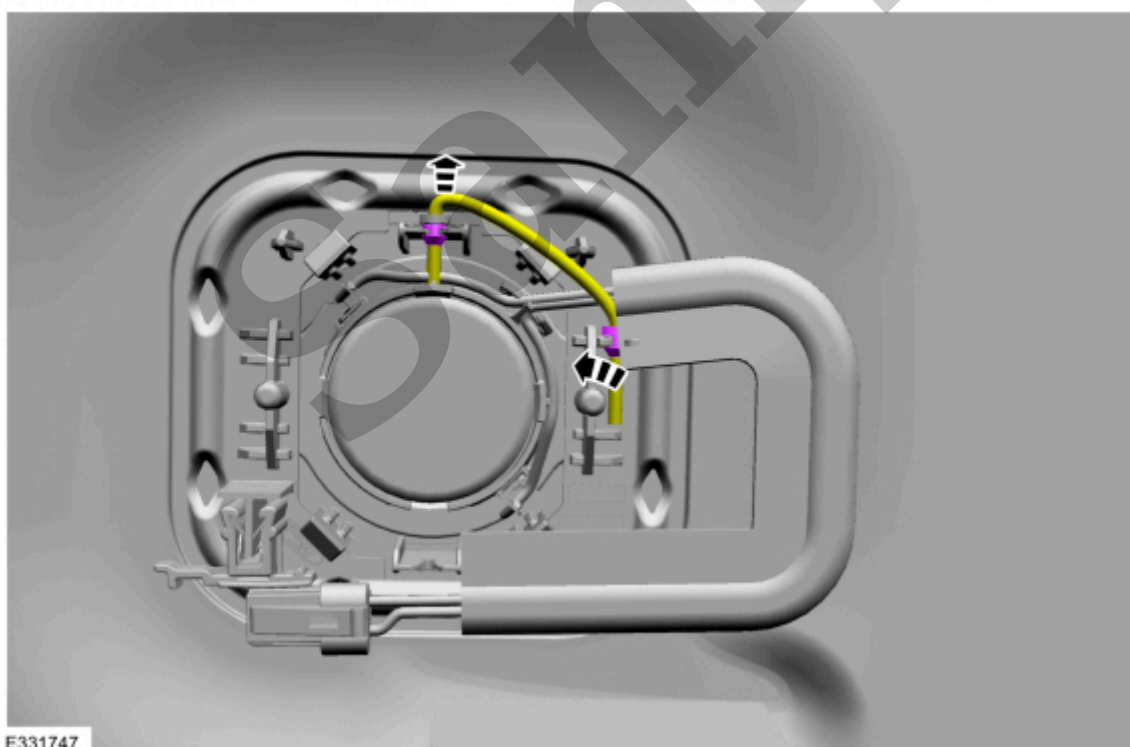


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. Release the tabs and remove the speaker grille.

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company


Sample

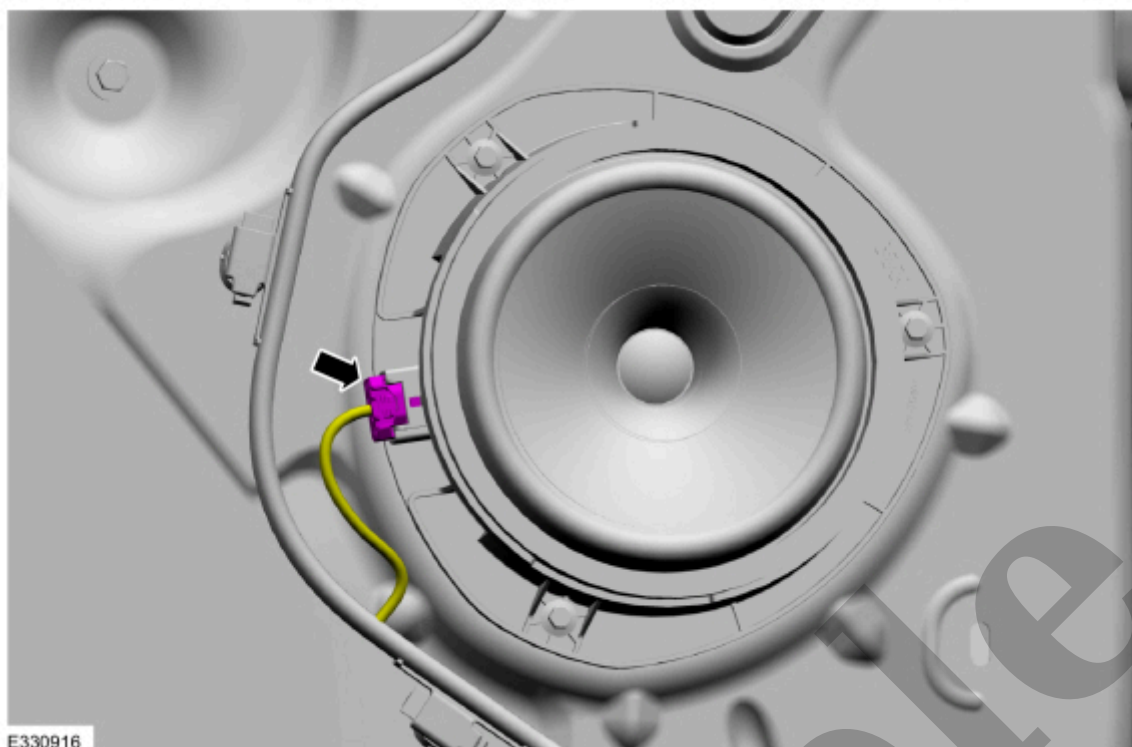

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Remove the screws and the rear door speaker.

Torque : 22 lb.in (2,5 Nm)

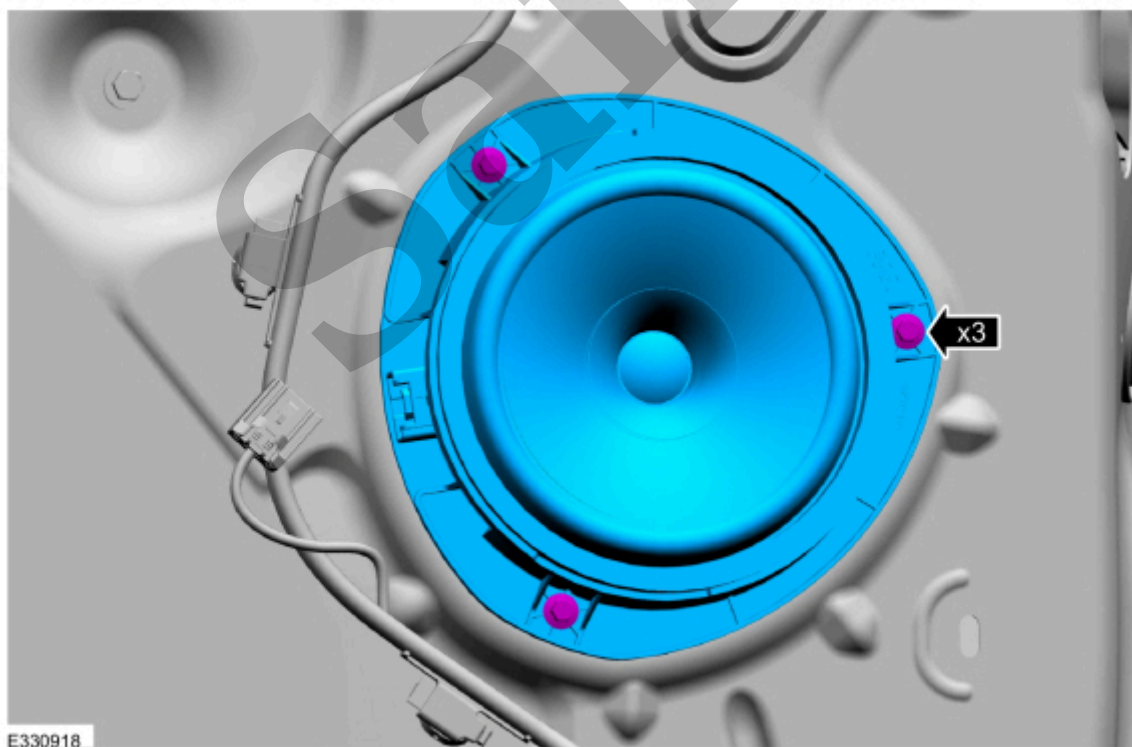

[Click here to learn about symbols, color coding, and icons used in this manual.](#)



Subwoofer Speaker

415-00 Information and Entertainment System - General Information	2022 F-150
Removal and Installation	Procedure revision date: 09/18/2020

Subwoofer Speaker

Removal

1. Remove the LH (left-hand) rear seat.

Refer to: [Rear Seat LH - SuperCab](#)(501-10B Rear Seats, Removal and Installation).


Refer to: [Rear Seat LH - SuperCrew](#)(501-10B Rear Seats, Removal and Installation).
2. Disconnect the electrical connector and separate the wiring guide.

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample

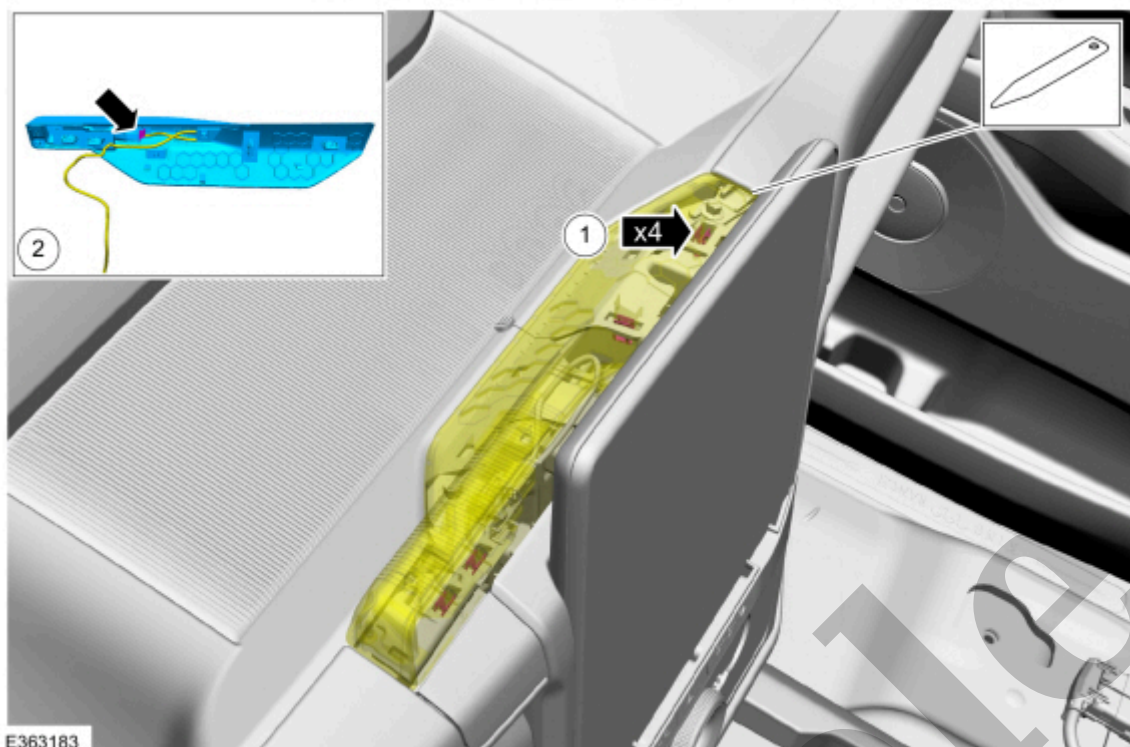


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Remove the bolts.

Torque : 106 lb.in (12 Nm)



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

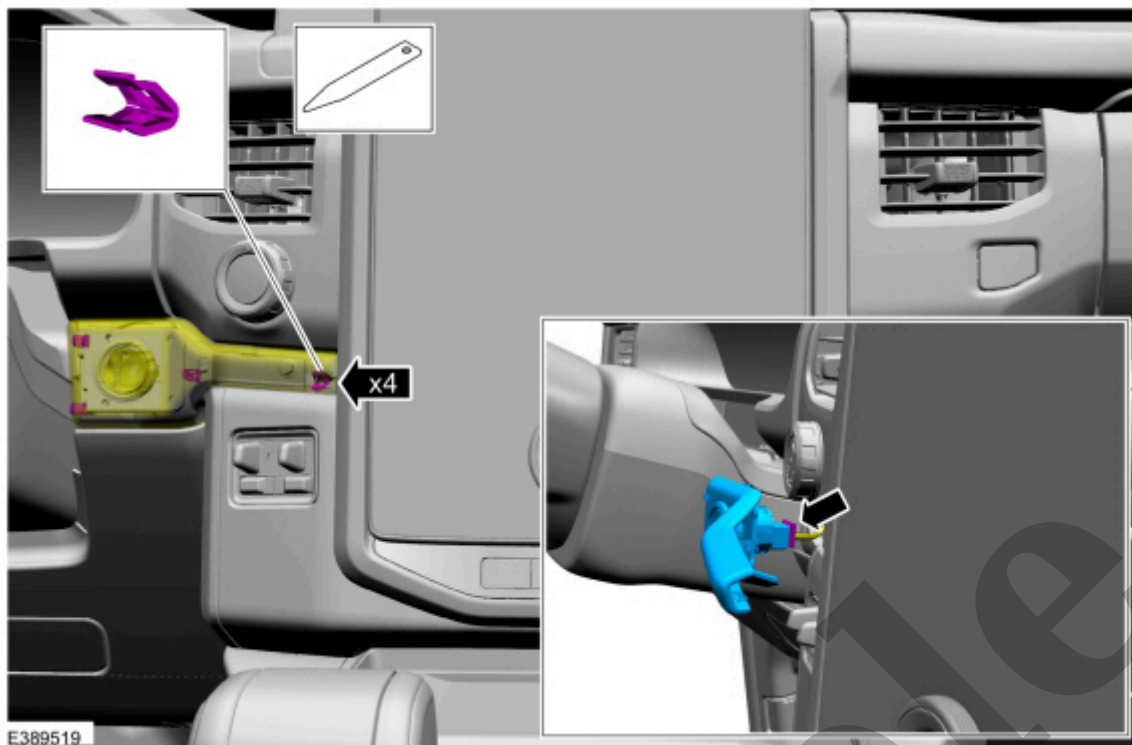

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Remove the screws.


Torque : 22 lb.in (2.5 Nm)



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. Remove the screws and the APIM (SYNC module) .

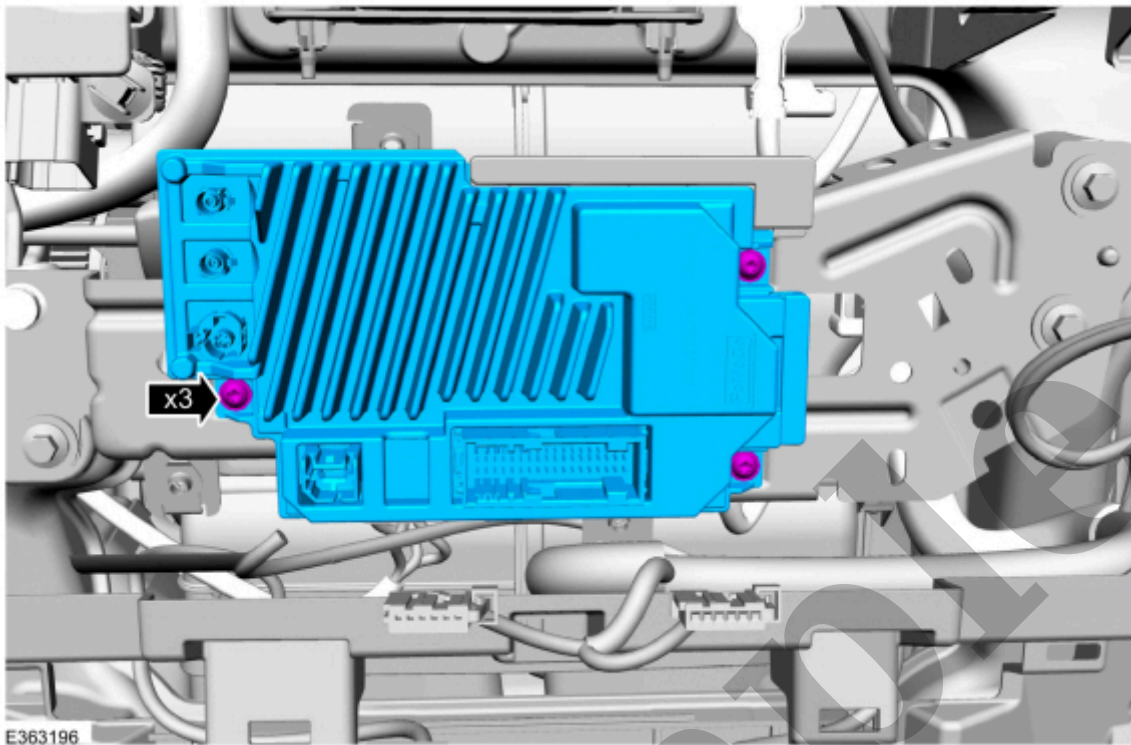

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

2. NOTE

This step is only necessary when installing a new component.

Using a diagnostic scan tool, complete the PMI (programmable module installation) process for the APIM (SYNC module) following the on-screen instructions.

3. NOTE

This step is only necessary when installing a new component.

If a new APIM (SYNC module) is being installed, program the APIM (SYNC module) to the correct software level.