

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2009 FORD Ranger Regular Cab OEM Service and Repair Workshop Manual

[Go to manual page](#)

7. Position the rear center seatbelt anchor/buckle assembly aside.


1. Disconnect the electrical connector.

2. Remove the nut.

Torque : 59 lb.ft (80 Nm)

3. Remove the pin-type retainer.

4. Position the rear center seatbelt anchor/buckle assembly aside.

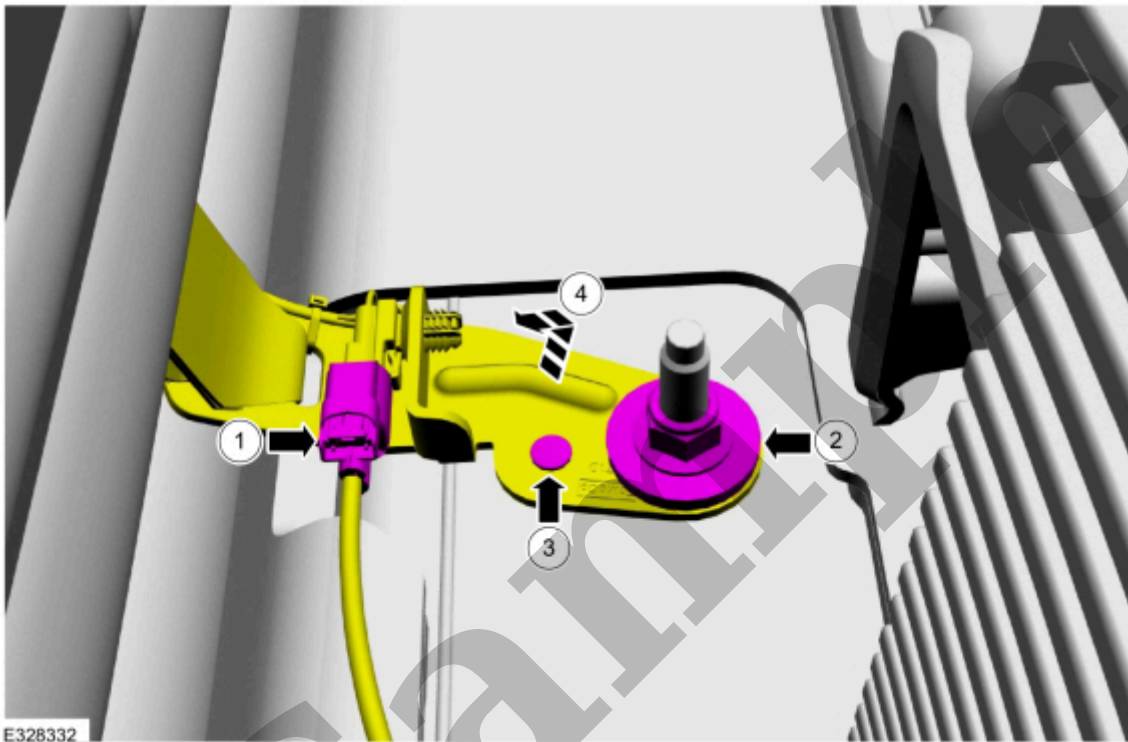

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8. Disconnect the rear seat heated seat electrical connector (if equipped) and remove the LH (left-hand) rear seat nuts.

Torque : 59 lb.ft (80 Nm)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


Installation

NOTE

During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

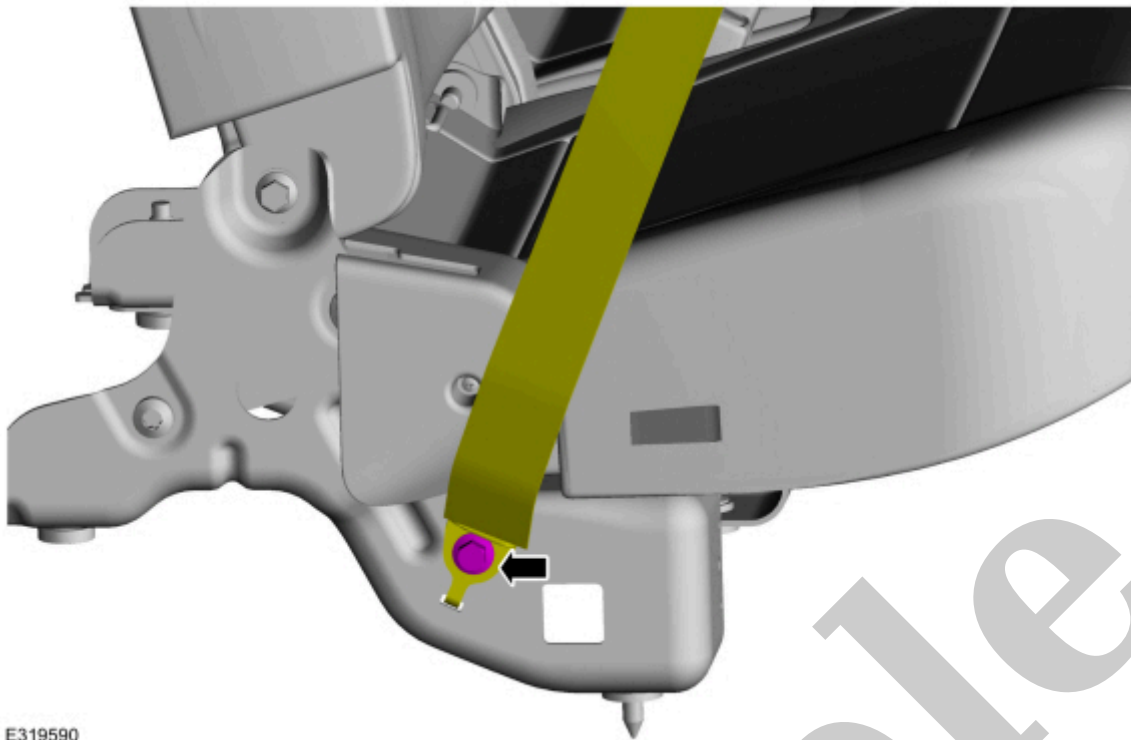

E319590

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


2. Remove and discard the rear seat RH (right-hand) front bolts.

1. Raise the rear seat RH (right-hand) cushion.

2. Remove the rear seat RH (right-hand) front bolts.

Torque : 35 lb.ft (47.5 Nm)

4. 1. Remove the vehicle jack tie down retainer.
2. Position the vehicle jack tie down aside.
3. Remove the vehicle jack.

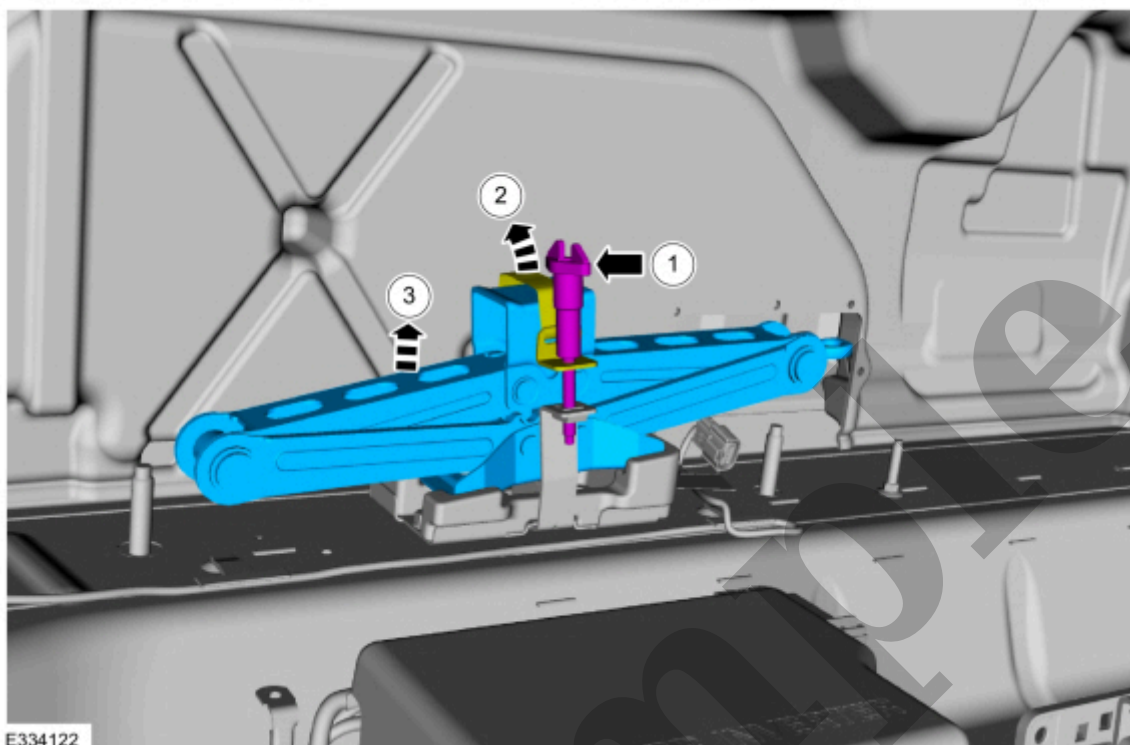

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. 1. Disconnect the rear seat electrical connectors.
2. Disconnect the rear seat electrical connector wire retainer.

Installation


NOTE

During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample

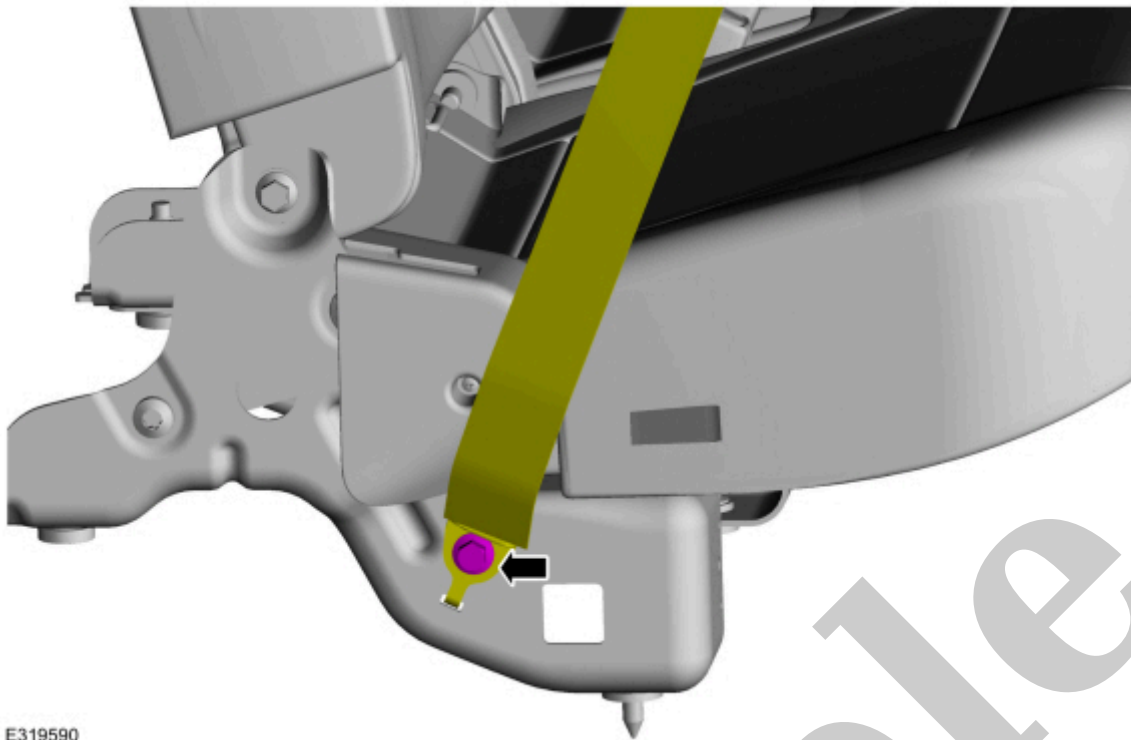

E319590

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. **NOTE**


The rear seat cushion must be unlocked to perform this step if the vehicle has rear under seat storage.

Raise the rear seat RH (right-hand) cushion.

4. Fold the rear seat RH (right-hand) backrest down.

1. Release the backrest latch.

2. Fold the rear seat RH (right-hand) backrest down.

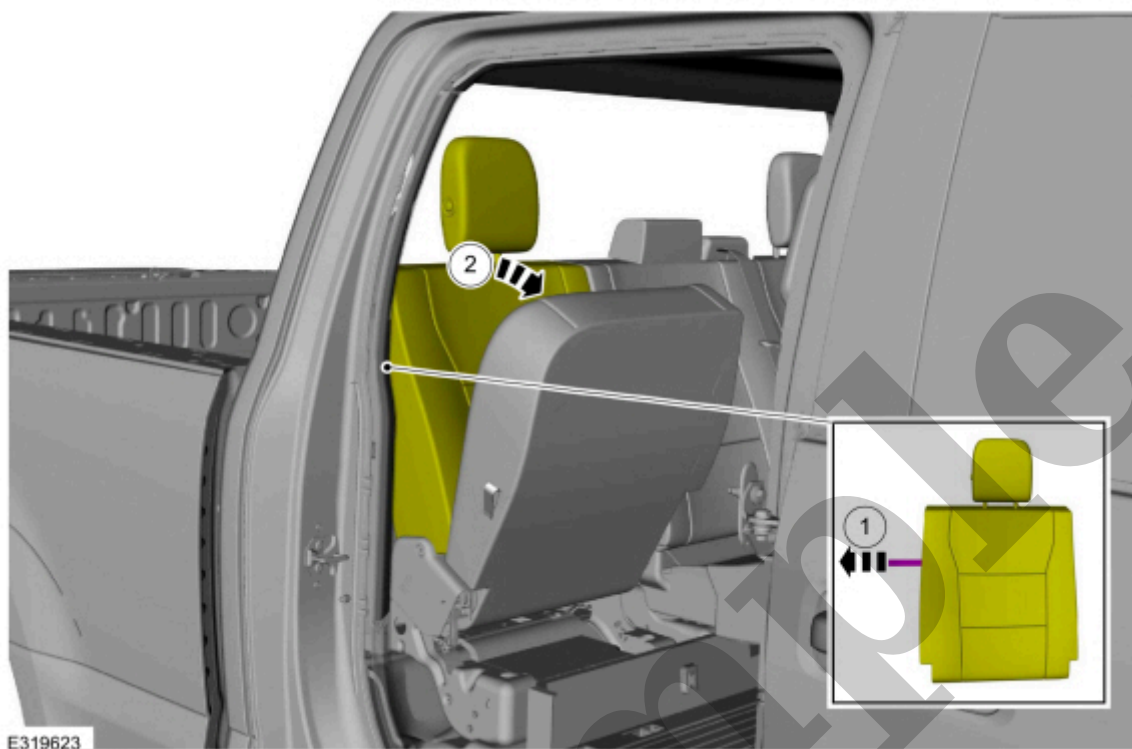

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. 1. Remove the vehicle jack tie down retainer.


2. Position the vehicle jack tie down aside.

3. Remove the vehicle jack.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Remove the rear seat RH (right-hand) nuts and remove the rear seat RH (right-hand) .

Torque : 59 lb.ft (80 Nm)

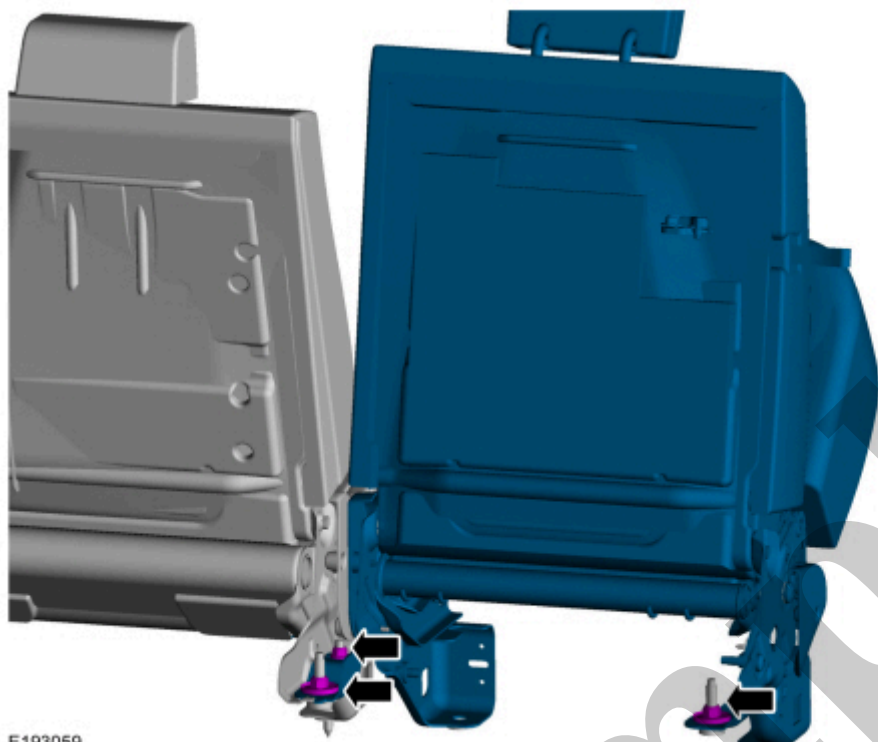

E193059

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

NOTE

During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

This vehicle may be equipped with LH (left-hand) and RH (right-hand) power telescoping mirrors. The power telescoping mirror feature allows the exterior mirrors to be electronically extended or retracted.

Exterior, Auto-Dimming

The LH (left-hand) exterior mirror may be equipped with an auto-dimming mirror glass. The LH (left-hand) exterior auto-dimming mirror function is controlled by the interior auto-dimming rear view mirror. The exterior mirror glass only darkens when the interior auto-dimming mirror detects bright light from behind the vehicle during nighttime conditions.

Exterior, Turn Signals

The LH (left-hand) and RH (right-hand) exterior mirrors may be equipped with a mirror-mounted turn signal assembly. For repair procedures and information on the mirror-mounted turn signals,

Refer to: [Turn Signal and Hazard Lamps](#)

(417-01 Exterior Lighting, Diagnosis and Testing).

Exterior, Parking Lamps

The LH (left-hand) and RH (right-hand) exterior mirrors may be equipped with a parking lamp. For repair procedures and information on the mirror-mounted parking lamps,

Refer to: [Parking, Rear and License Plate Lamps](#)

(417-01 Exterior Lighting, Diagnosis and Testing).

Exterior, Spot Lamps

The LH (left-hand) and RH (right-hand) exterior mirrors may be equipped with a mirror-mounted spot lamp assembly. For repair procedures and information on the mirror-mounted spot lamps,

Refer to: [Spot Lamps](#)

(417-01 Exterior Lighting, Diagnosis and Testing).

Exterior, Puddle Lamps

The LH (left-hand) and RH (right-hand) exterior mirrors may be equipped with a puddle lamp. For repair procedures and information on the mirror-mounted puddle lamps,

Refer to: [Interior Lighting](#)

(417-02 Interior Lighting, Diagnosis and Testing).

Exterior, BLIS (blind spot information system) ®/ CTA (cross traffic alert) Light Emitting Diodes (LEDs)

The LH (left-hand) and RH (right-hand) exterior mirrors may be equipped with a BLIS (blind spot information system) ®/ CTA (cross traffic alert) LED (light emitting diode) . For repair procedures and information on the mirror-mounted BLIS (blind spot information system) ®/ CTA (cross traffic alert) Light Emitting Diodes (LEDs),