


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2010 FORD Mustang Shelby GT500 Convertible OEM Service and Repair Workshop Manual


[Go to manual page](#)

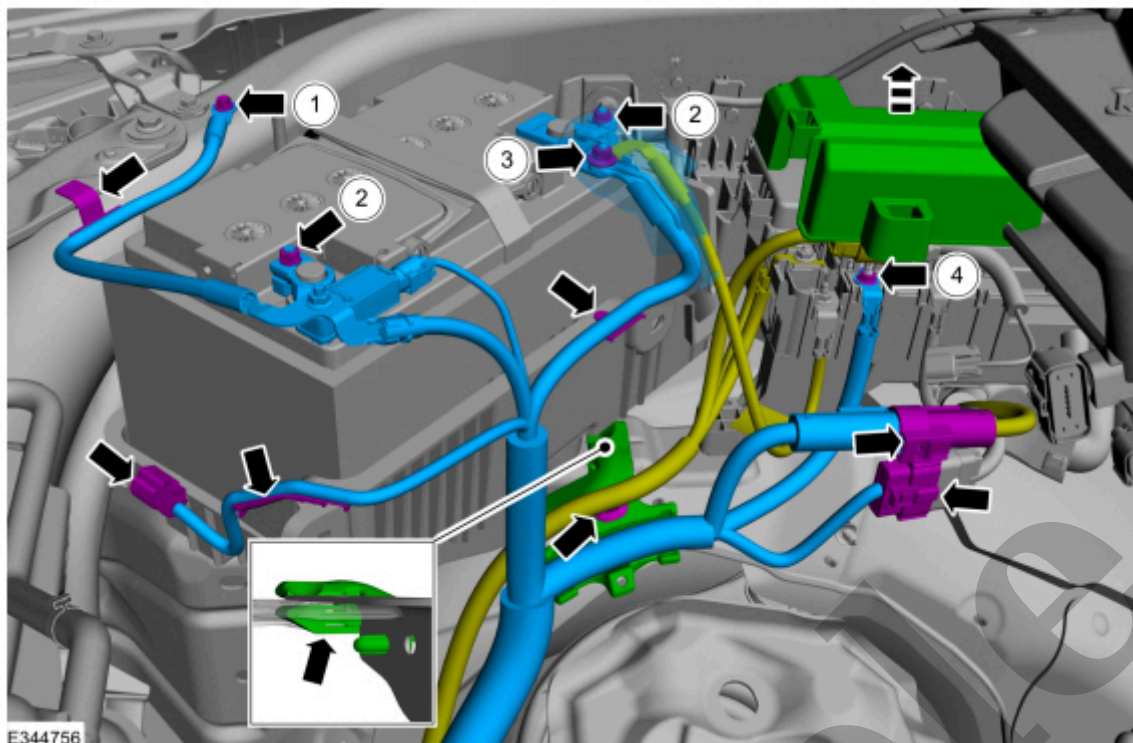


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

All vehicles

6. 1. **Torque** : 177 lb.in (20 Nm)
2. **Torque** : 177 lb.in (20 Nm)

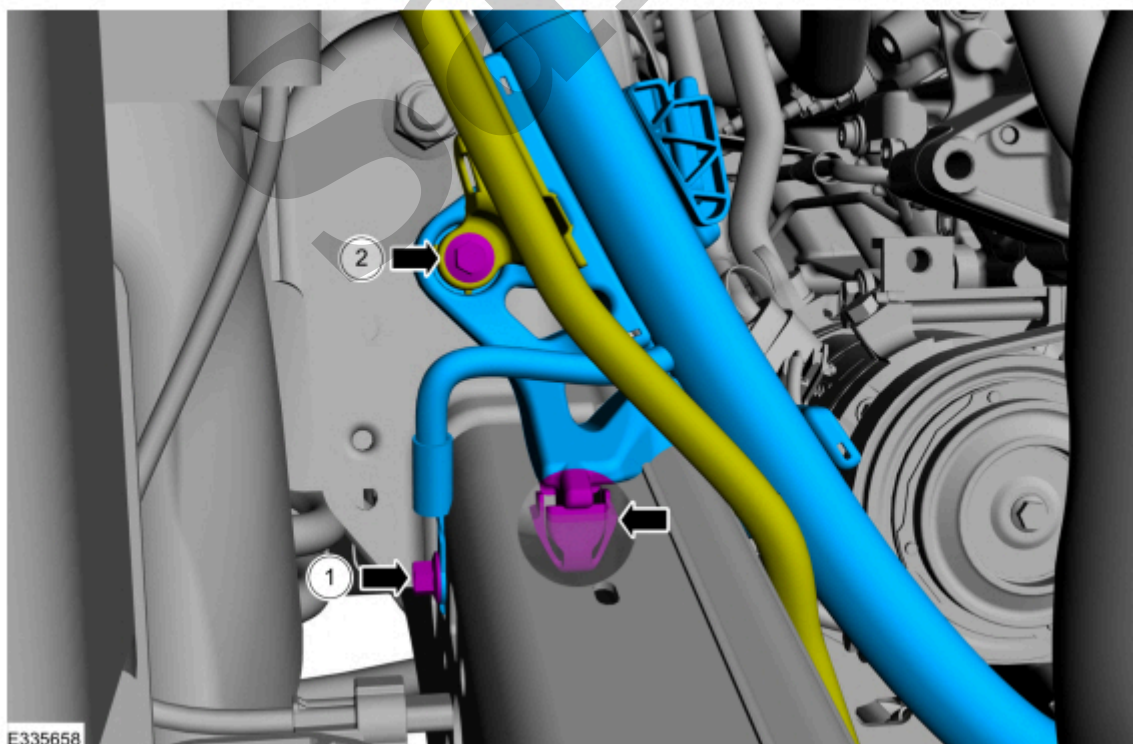


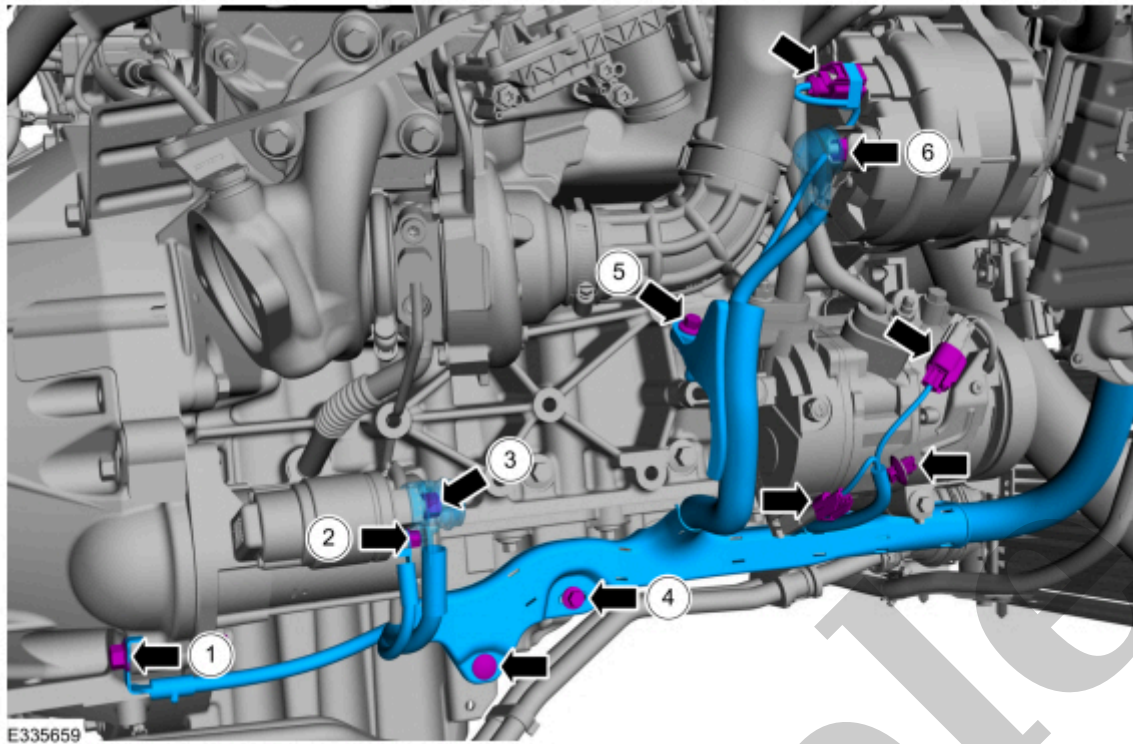

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

All vehicles

9. **Torque** : 106 lb.in (12 Nm)

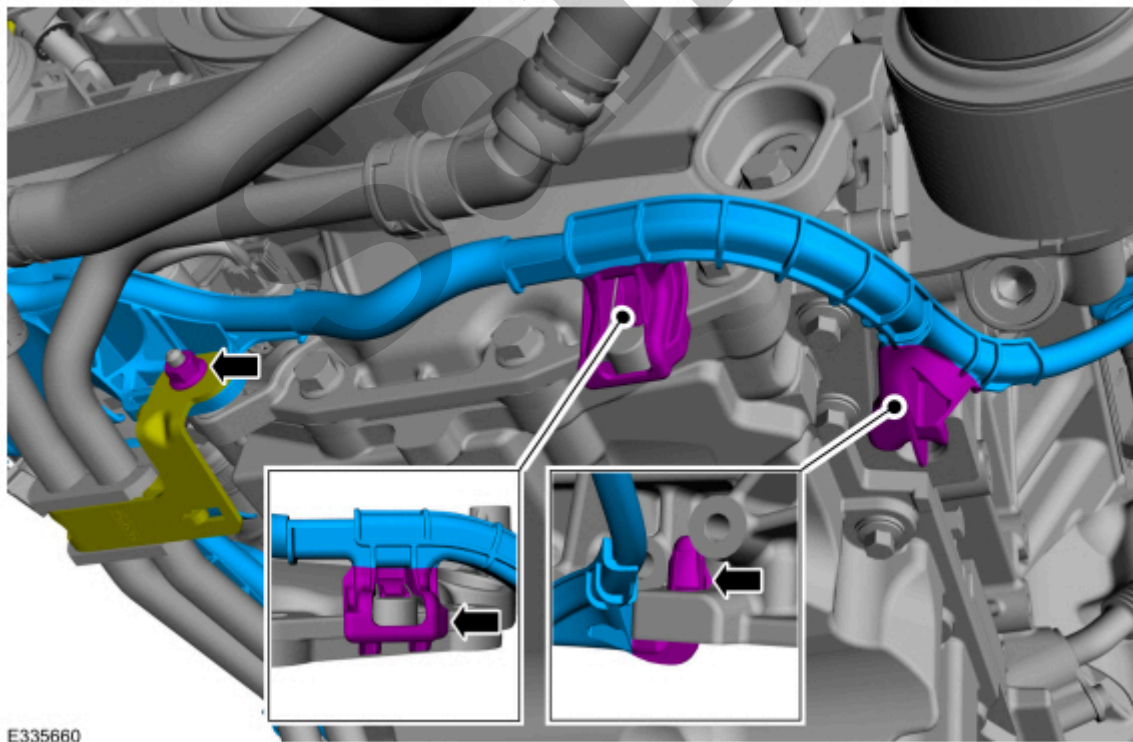

[Click here to learn about symbols, color coding, and icons used in this manual.](#)



Battery Cables - 3.5L V6 PowerBoost (CN)

414-01 Battery, Mounting and Cables	2022 F-150
Removal and Installation	Procedure revision date: 09/25/2020

Battery Cables - 3.5L V6 PowerBoost (CN)

Removal

NOTE

This procedure provides information about routing, retaining points and connectors of the cable. It does not include the steps for removing components to gain access to the cable.


1. With the vehicle in NEUTRAL, position it on a hoist.

Refer to: [Jacking and Lifting - Overview](#)(100-02 Jacking and Lifting, Description and Operation).

2. Disconnect the battery.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).


3.
 1. **Torque** : 80 lb.in (9 Nm)
 2. **Torque** : 80 lb.in (9 Nm)
 3. **Torque** : 55 lb.in (6.2 Nm)
 4. **Torque** : 80 lb.in (9 Nm)

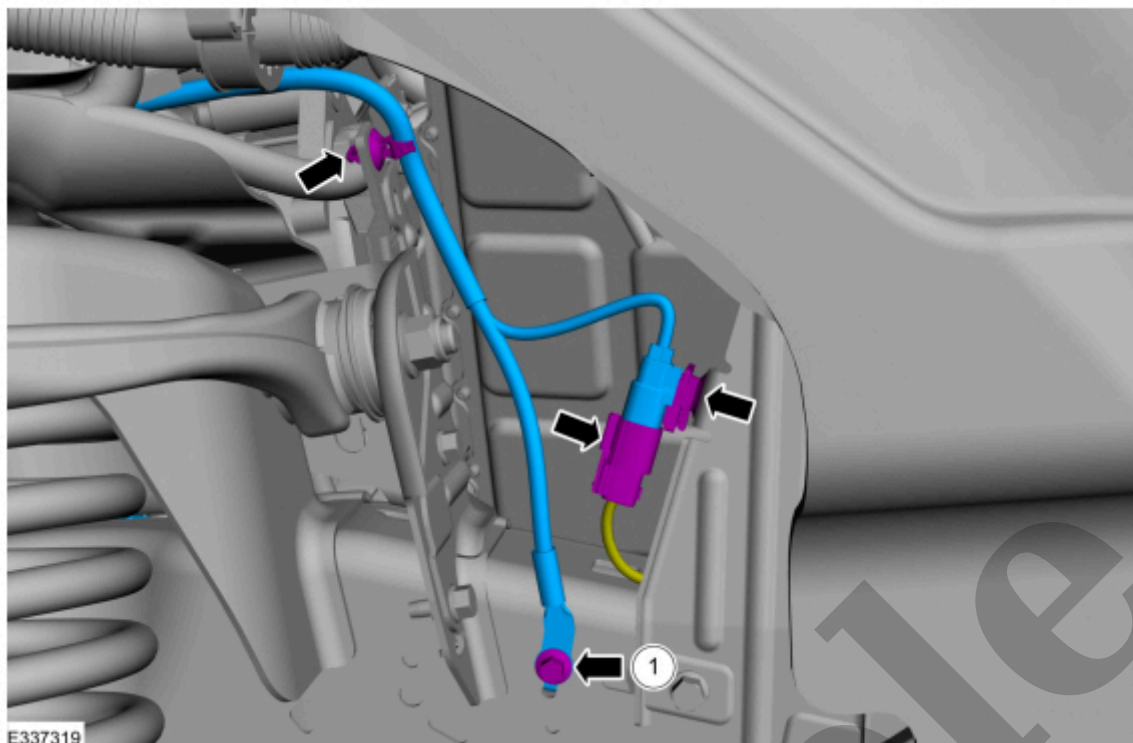

E337319

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. 1. **Torque** : 35 lb.ft (48 Nm)
2. **Torque** : 55 lb.in (6.2 Nm)
3. **Torque** : 106 lb.in (12 Nm)
4. **Torque** : 106 lb.in (12 Nm)
5. **Torque** : 177 lb.in (20 Nm)

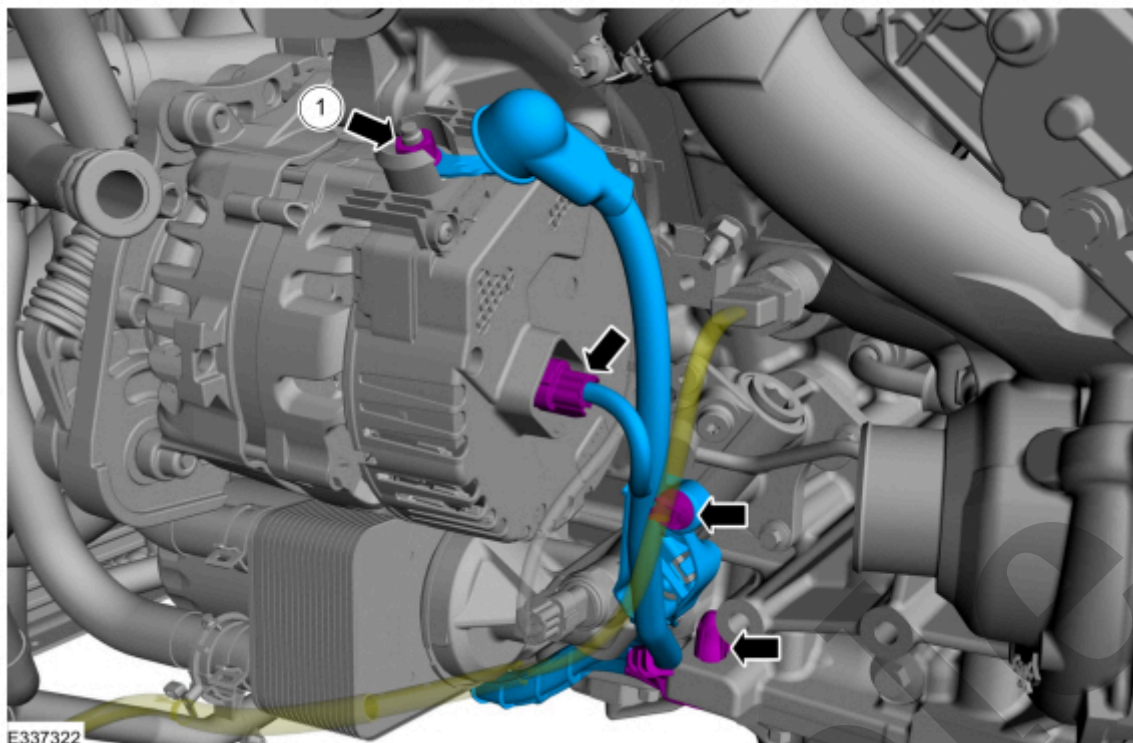


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.


Copyright © Ford Motor Company

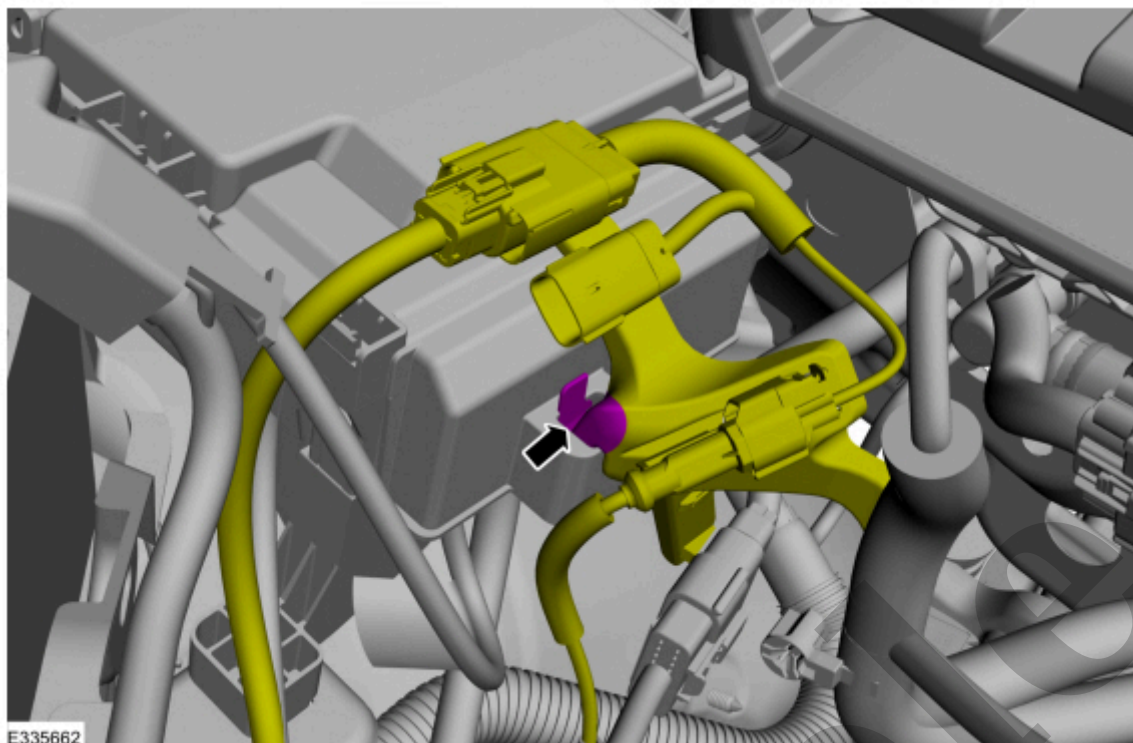

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Vehicles without dual generators


4. 1. **Torque** : 80 lb.in (9 Nm)
2. **Torque** : 55 lb.in (6.2 Nm)
3. **Torque** : 80 lb.in (9 Nm)
4. **Torque** : 93 lb.in (10.5 Nm)

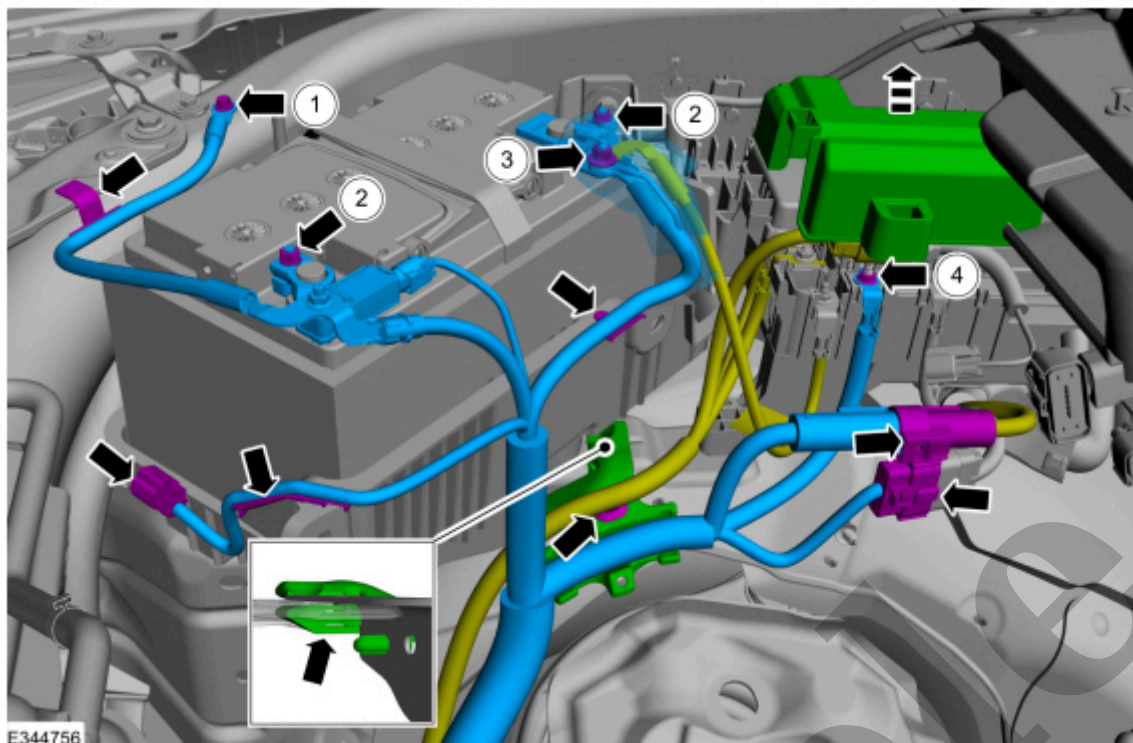


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

All vehicles

6. 1. **Torque** : 177 lb.in (20 Nm)
2. **Torque** : 177 lb.in (20 Nm)

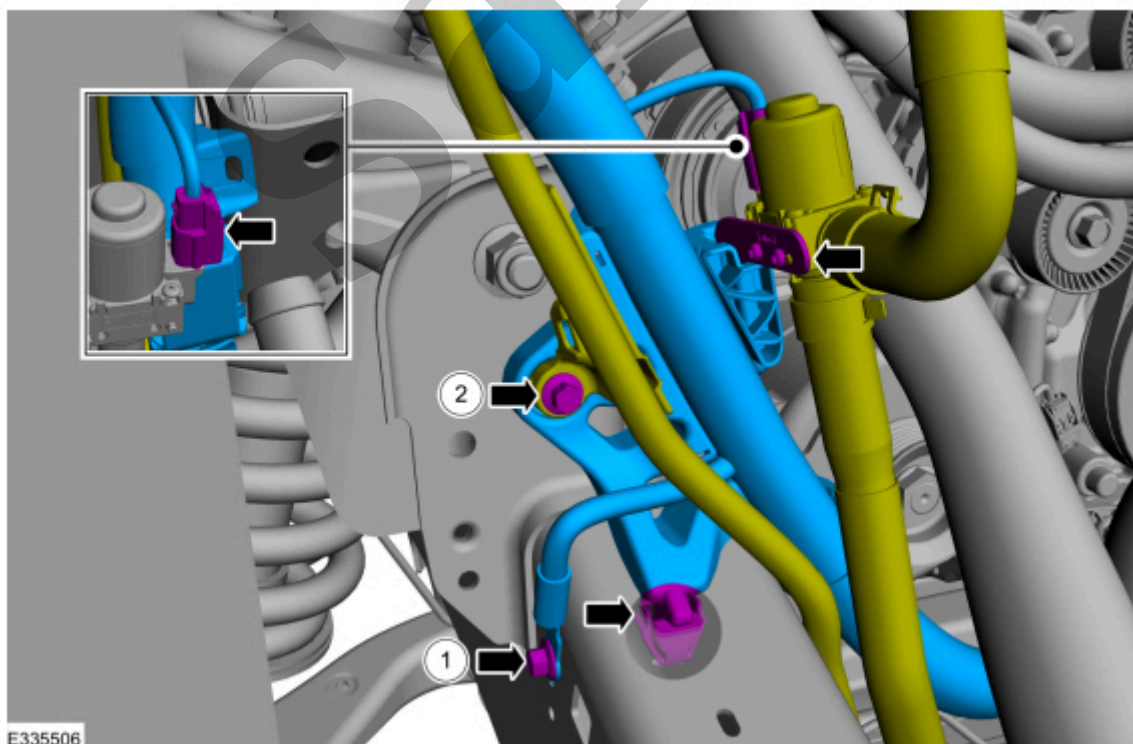

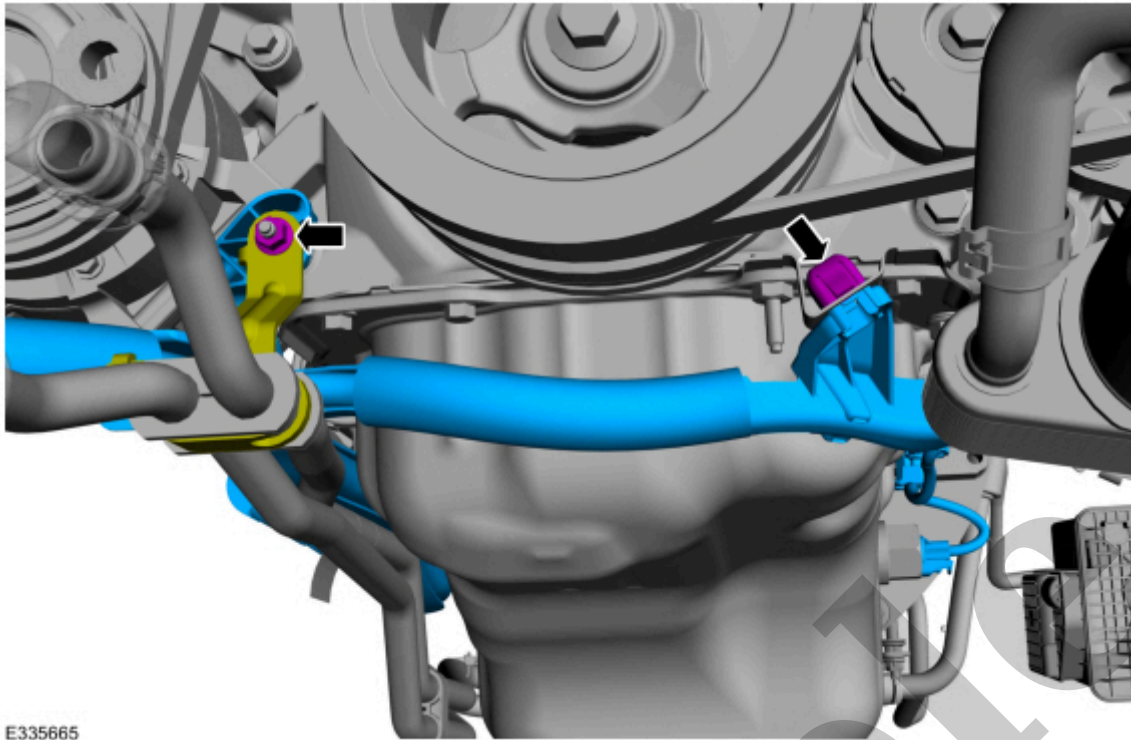


E335665


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Vehicles without dual generators

9. 1. **Torque** : 155 lb.in (17.5 Nm)
2. **Torque** : 106 lb.in (12 Nm)

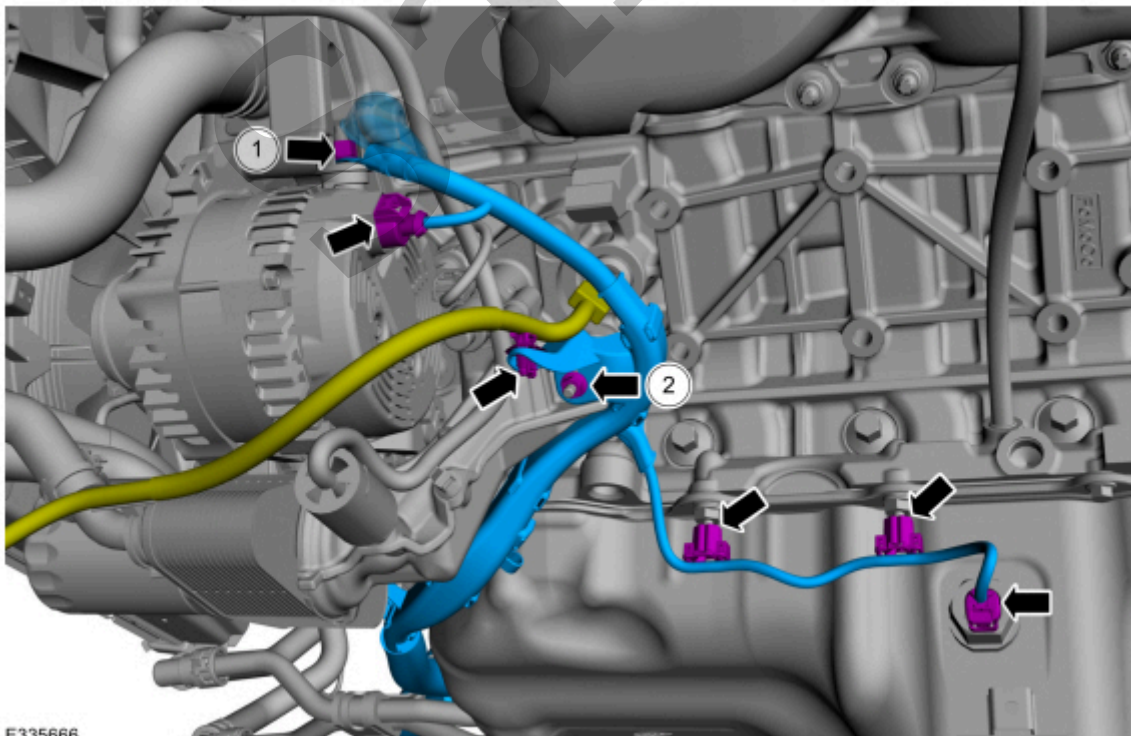

E335666

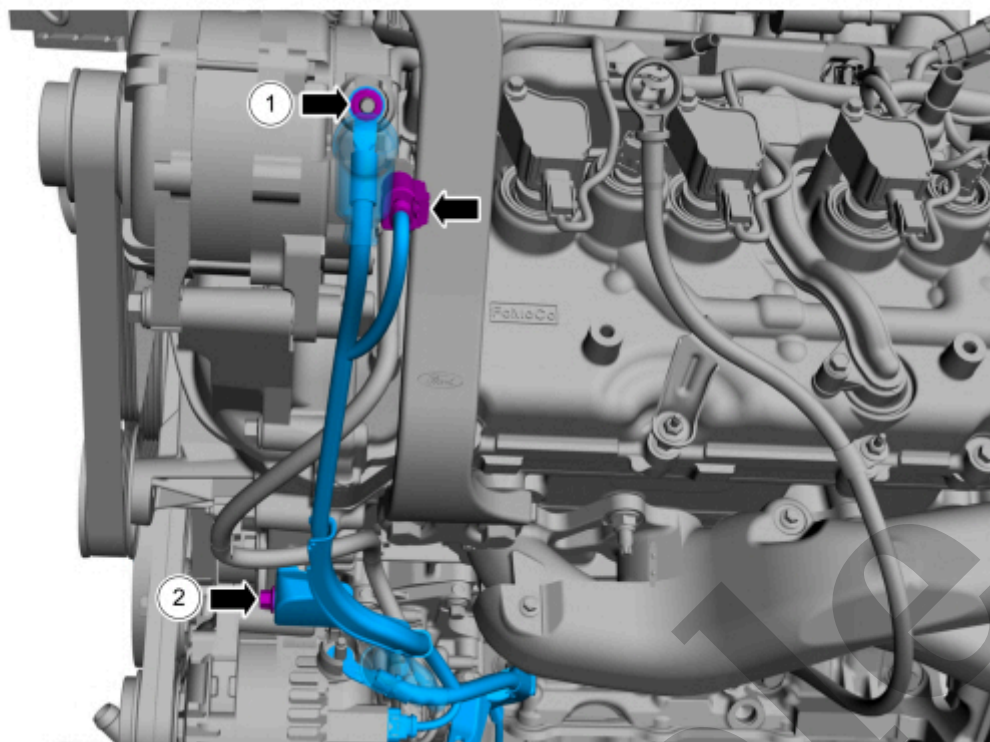

E345280

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company