

Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2010 FORD Mustang Shelby GT500 OEM Service and Repair Workshop Manual

[Go to manual page](#)

Release the clips and remove the LH (left-hand) lower centerstack trim panel.

Use the General Equipment: Interior Trim Remover

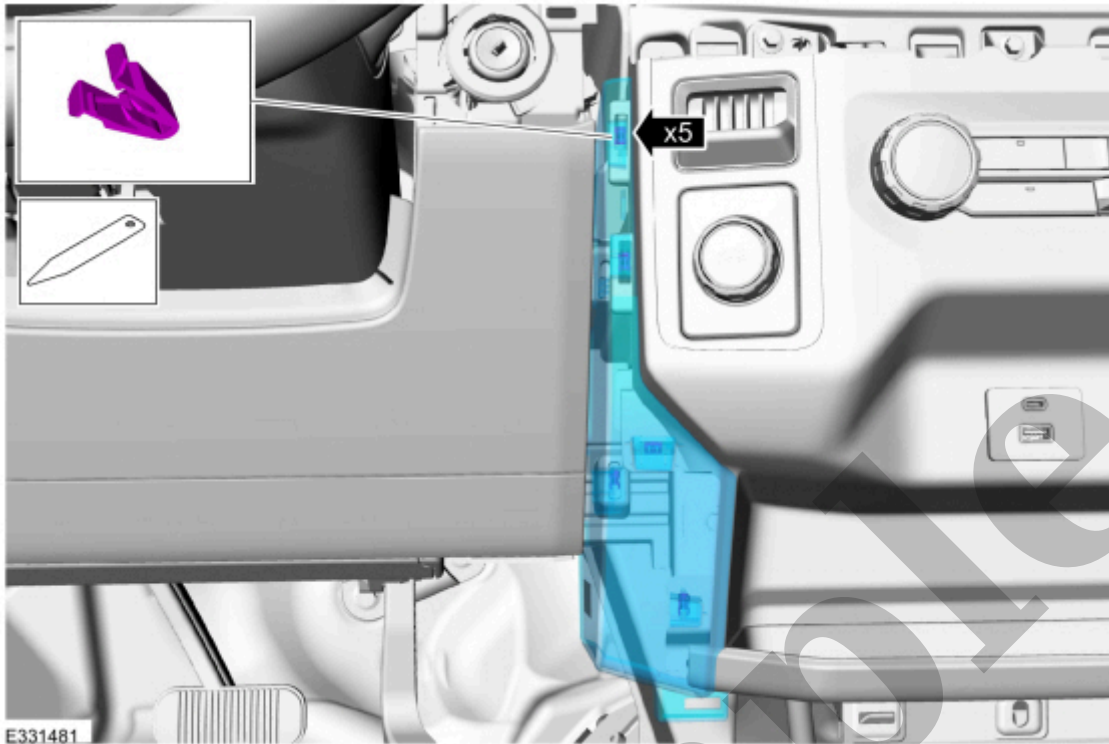


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

12. On vehicles not equipped with a floor console.

Release the clips and remove the RH (right-hand) lower centerstack trim panel.

Use the General Equipment: Interior Trim Remover

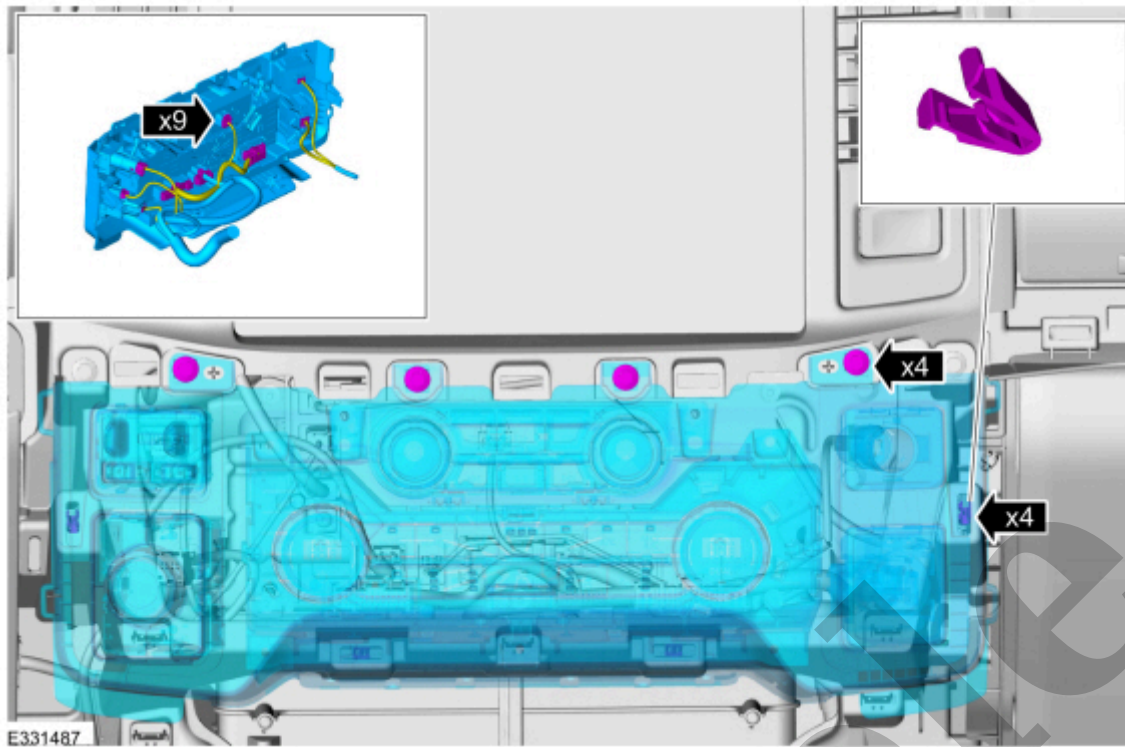

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

14. **NOTE**

Vehicle not equipped with a floor console.


Remove the lower centerstack trim panel.

- Remove the bolts.
Torque : 22 lb.in (2.5 Nm)
- Release the clips.
- Disconnect the electrical connectors.

16. Vehicles equipped with a 8 inch display

Remove the bolts.

Torque : 55 lb.in (6.2 Nm)


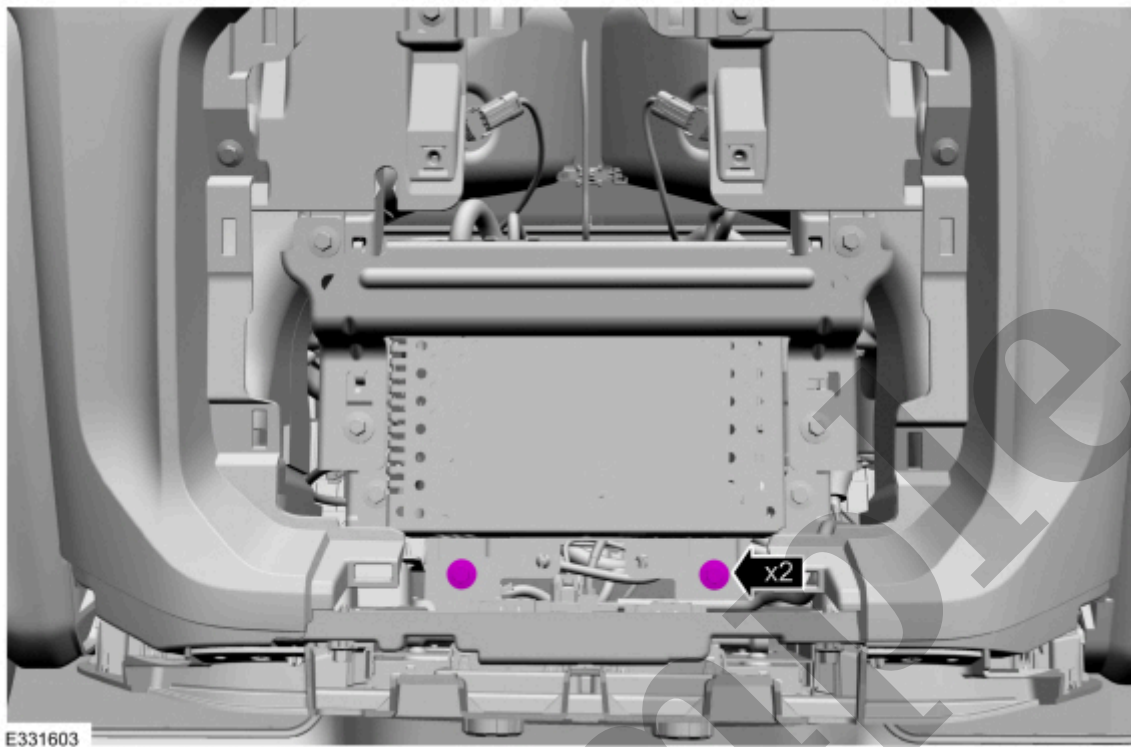


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

17. Vehicles equipped with a 8 inch display

Remove the bolts, disconnect the electrical connectors and remove the centerstack trim panel.

Torque : 55 lb.in (6.2 Nm)

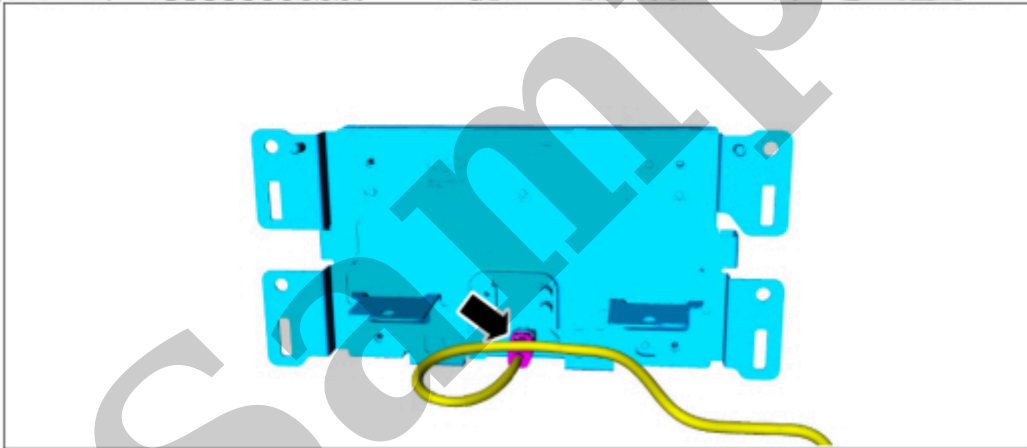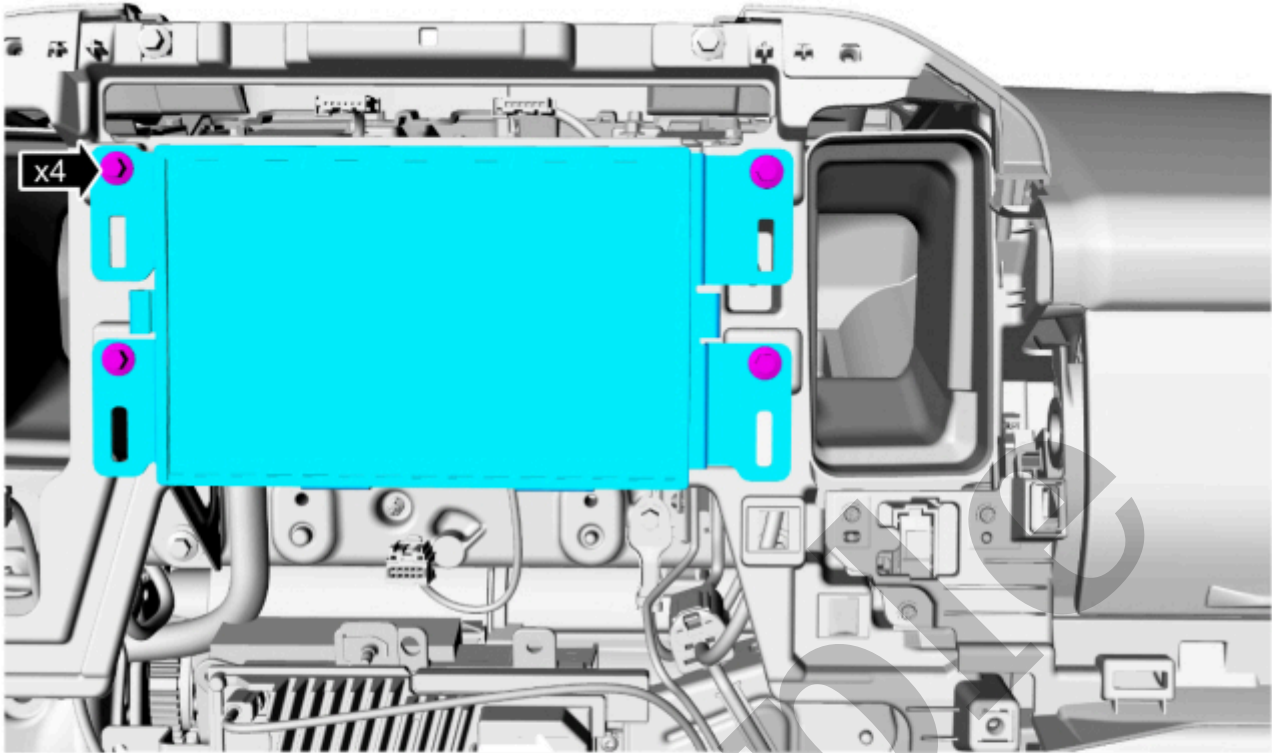


E331646

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

19. Vehicles equipped with a 12 inch display

Remove the bolts.

Torque : 55 lb.in (6.2 Nm)

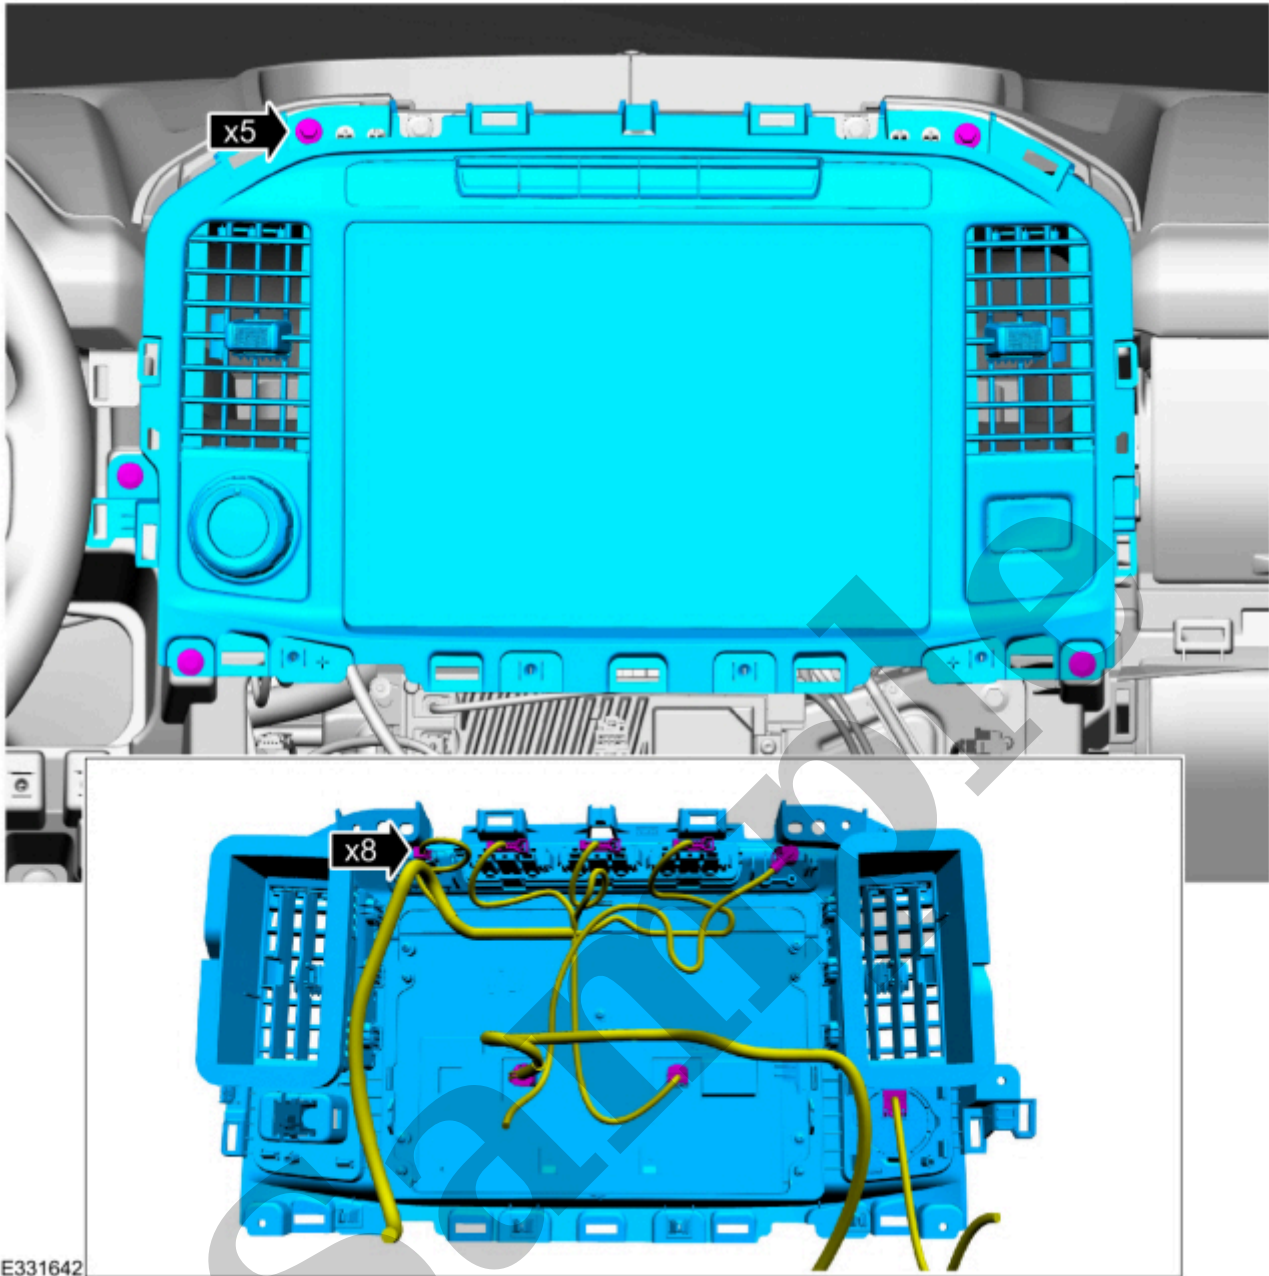

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Body harness automotive audio bus cable - Supercab vehicles

21. Remove the front seats.


Refer to: [Front Seat](#)(501-10A Front Seats, Removal and Installation).

Refer to: [Front Center Seat](#)(501-10A Front Seats, Removal and Installation).

22. Vehicles equipped with a floor console.

Remove the floor console.

Refer to: [Floor Console](#)(501-12 Instrument Panel and Console, Removal and Installation).

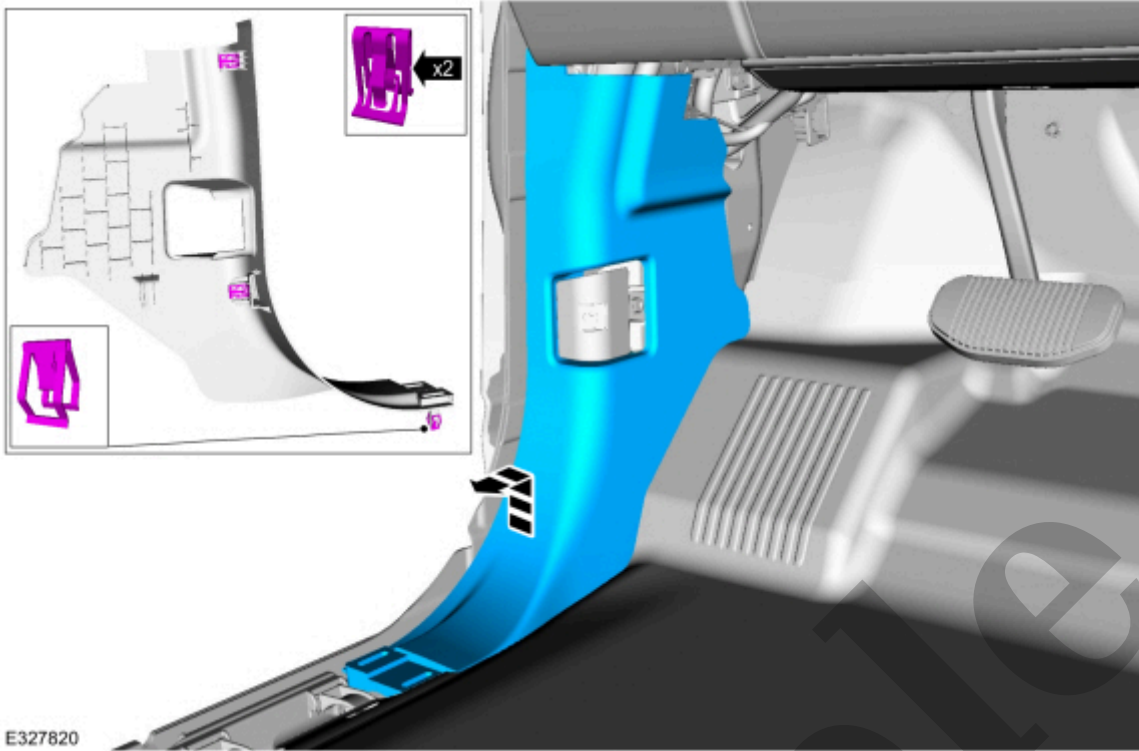

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

26. Remove the LH (left-hand) B-pillar trim panel.

Refer to: [B-Pillar Trim Panel - SuperCab](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

27. Fold the carpet rearward.

29. **NOTE**


SuperCab equipped vehicles

NOTE

The striker should be in its lowest position for the latch to engage.


Lower the LH (left-hand) seat backrest.

1. Pull the backrest release strap and release the latch from the striker.
2. Lower the backrest.

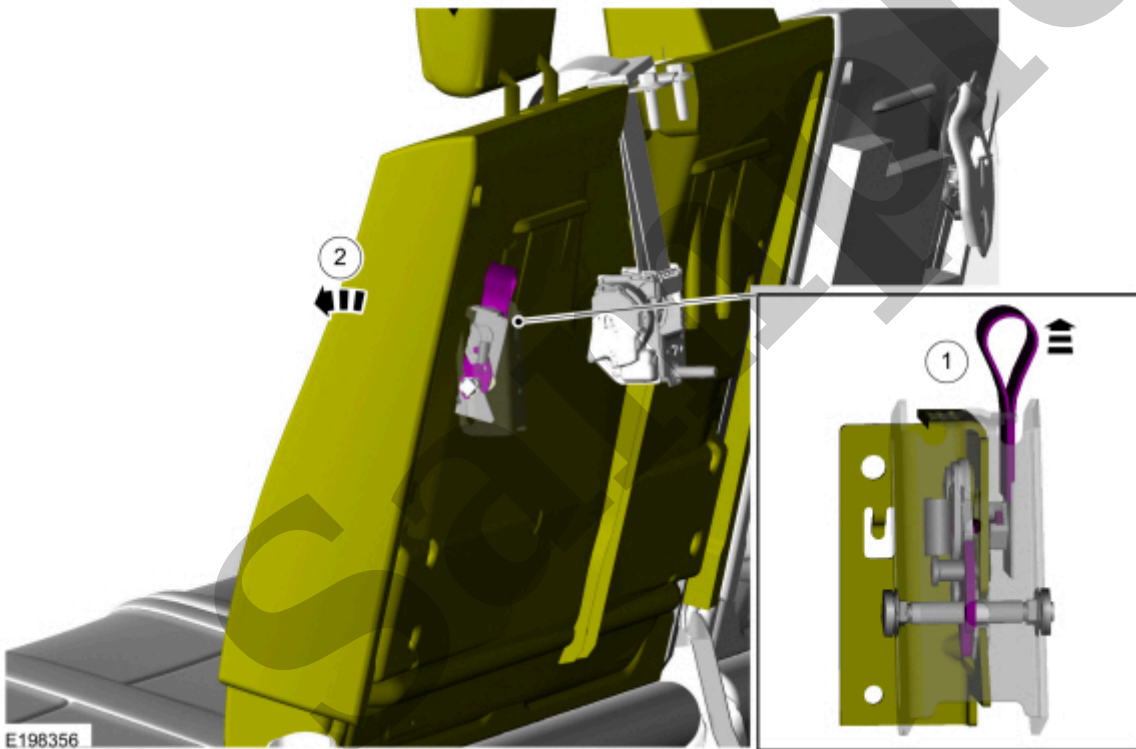

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

30. Disconnect the body harness AAB (automotive audio bus) front connector.

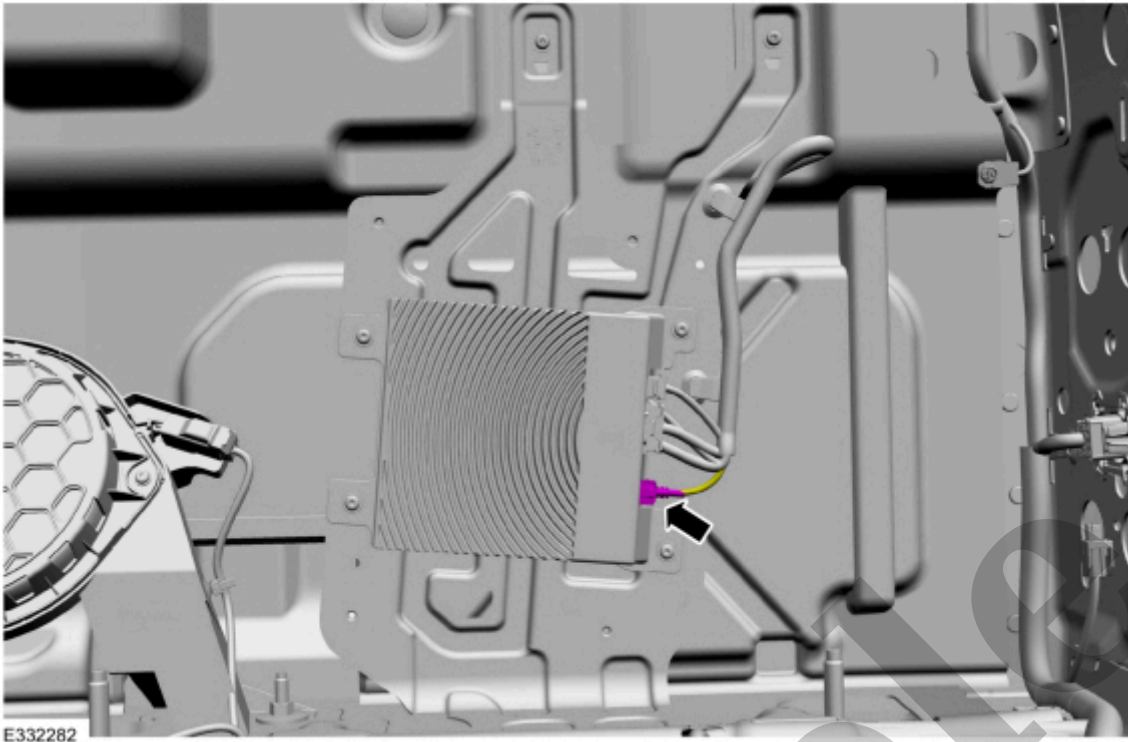

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Body harness automotive audio bus cable - Supercrew vehicles

32. Remove the front seats.

Refer to: [Front Seat](#)(501-10A Front Seats, Removal and Installation).

Refer to: [Front Center Seat](#)(501-10A Front Seats, Removal and Installation).

33. Vehicles equipped with a floor console.

Remove the floor console.

Refer to: [Floor Console](#)(501-12 Instrument Panel and Console, Removal and Installation).

34. Remove the front scuff plate trim panels.

Refer to: [Front Scuff Plate Trim Panel - SuperCab](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).


35. Release the clips and remove the RH (right-hand) lower cowl trim panel.

Refer to: [B-Pillar Trim Panel - SuperCrew](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

38. Remove the LH (left-hand) C-pillar trim panel.

Refer to: [C-Pillar Trim Panel](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

39. Fold the carpet rearward.

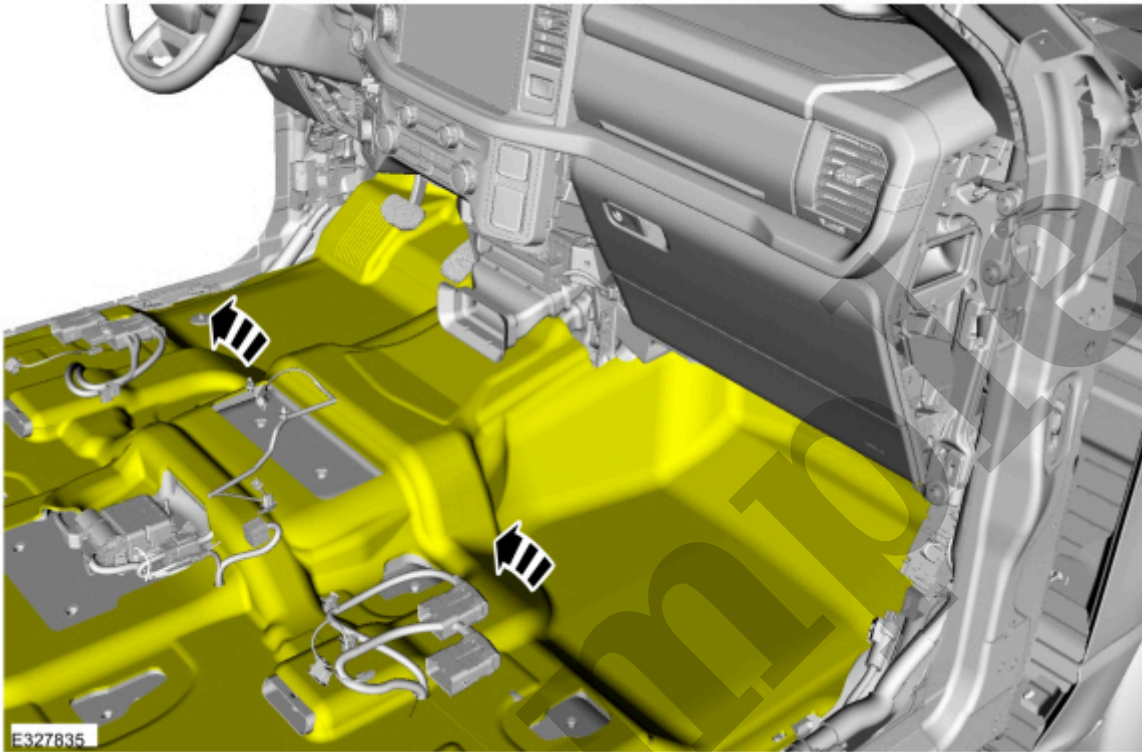

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

40. Remove the push pins and the HVAC (heating, ventilation and air conditioning) floor duct.