


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2011 FORD Expedition OEM Service and Repair Workshop Manual


[Go to manual page](#)

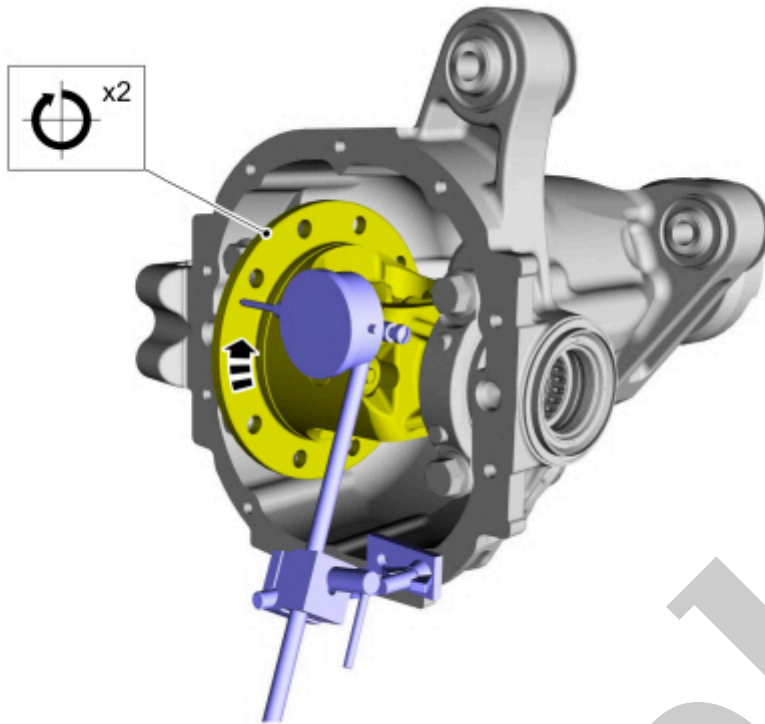

E194040

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


16. Remove the bolts and the differential bearing caps.

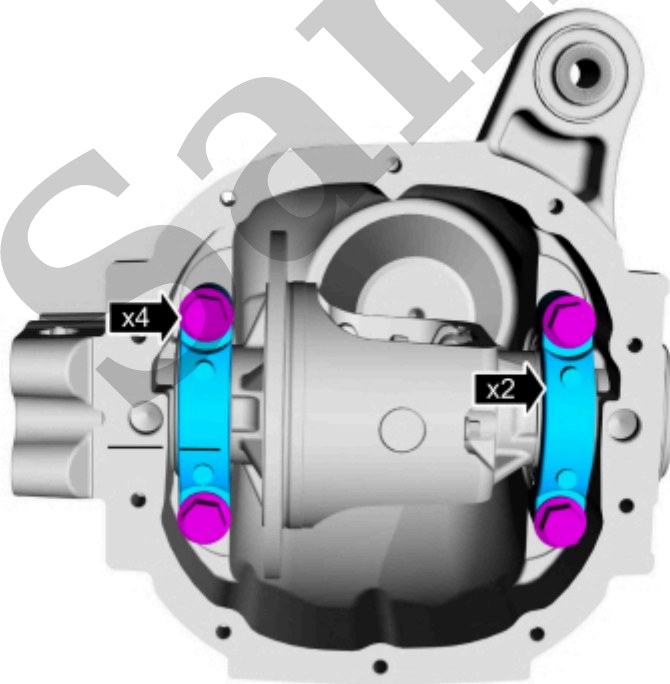

E194049

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

17. Remove the differential carrier, differential bearing cups, and differential bearing preload shims.

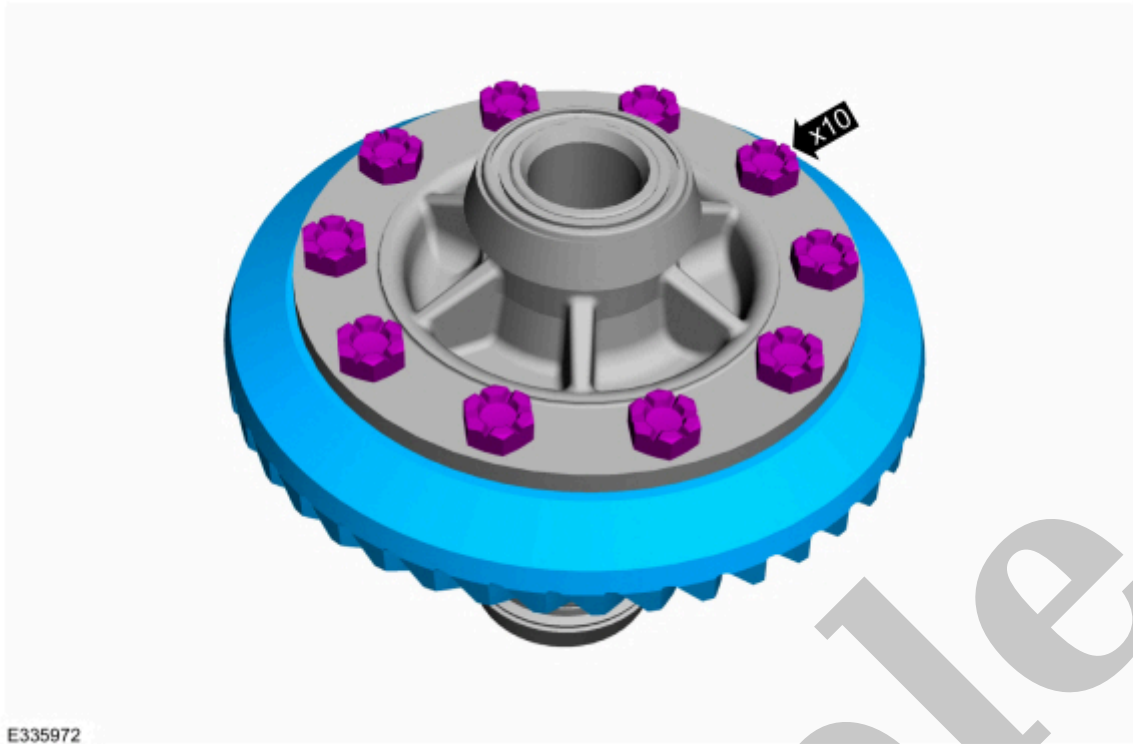


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

19. Install the differential carrier.

Refer to: [Differential Carrier](#)(205-03 Front Drive Axle/Differential, Removal and Installation).

Copyright © Ford Motor Company

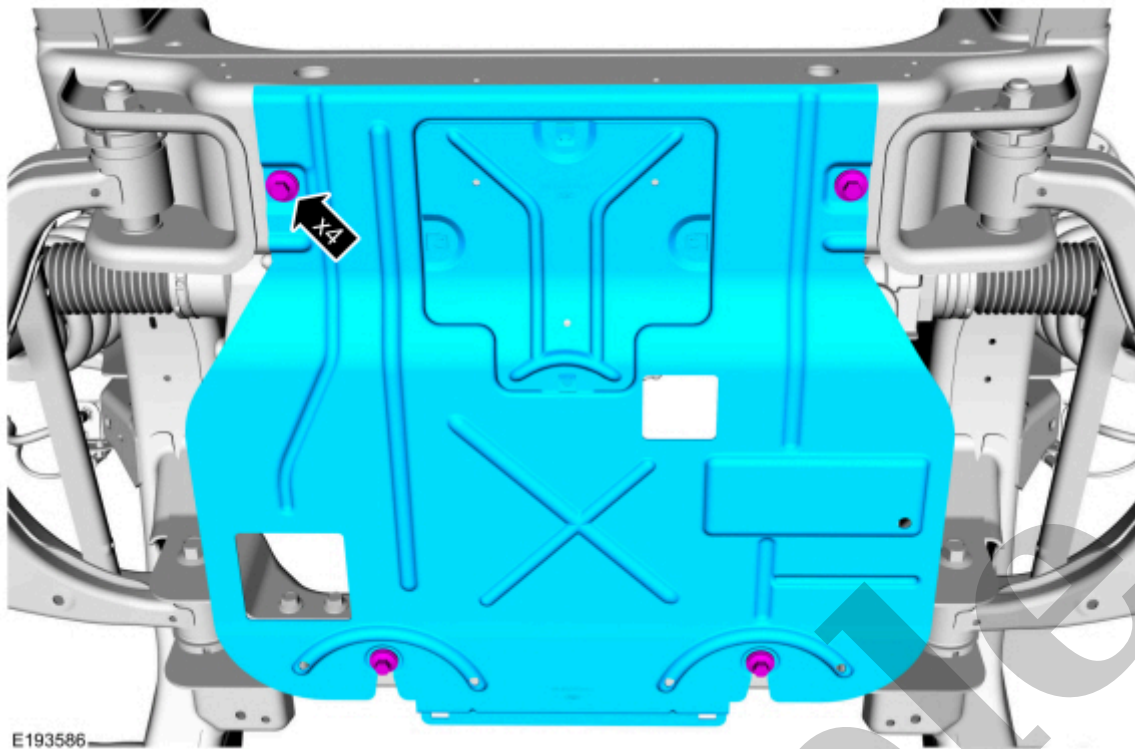


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. **NOTE**


If equipped.

Remove the underbody shield bolts, the pin type retainers and remove the underbody shield.

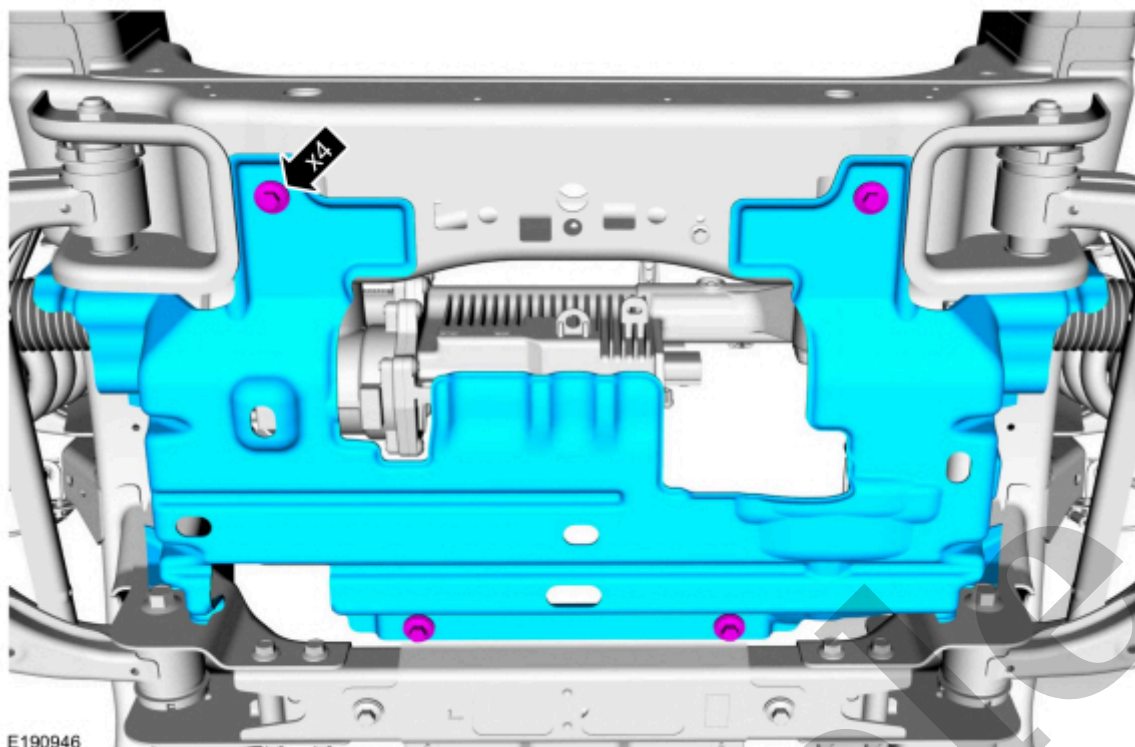


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Remove the front differential fill plug.

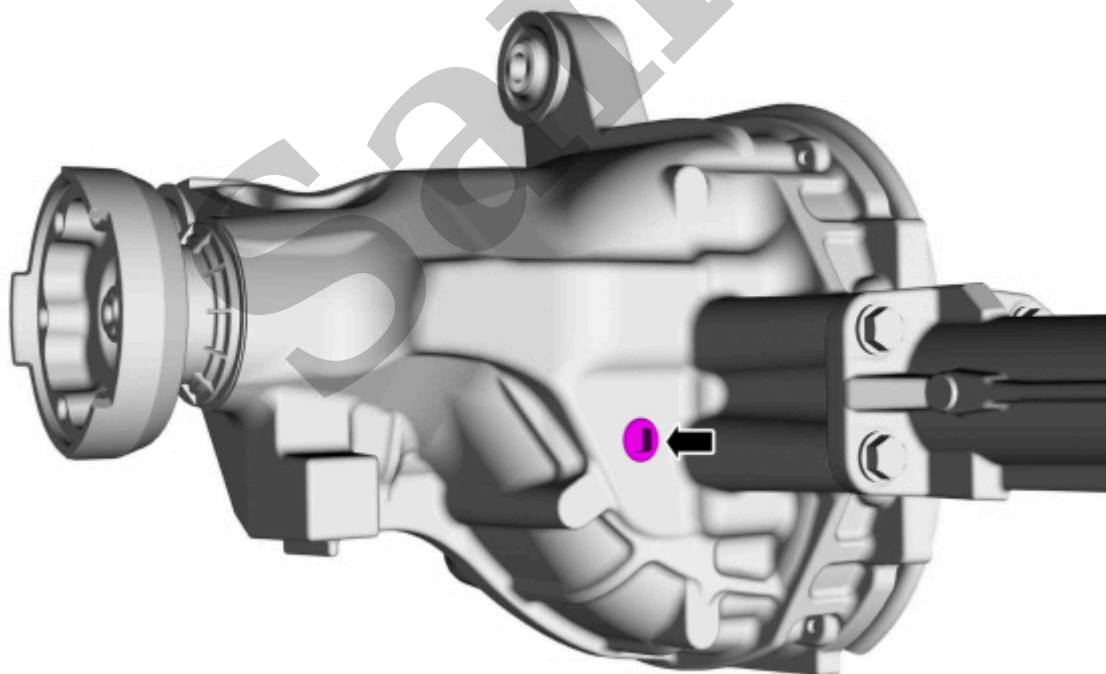

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. If draining is needed.

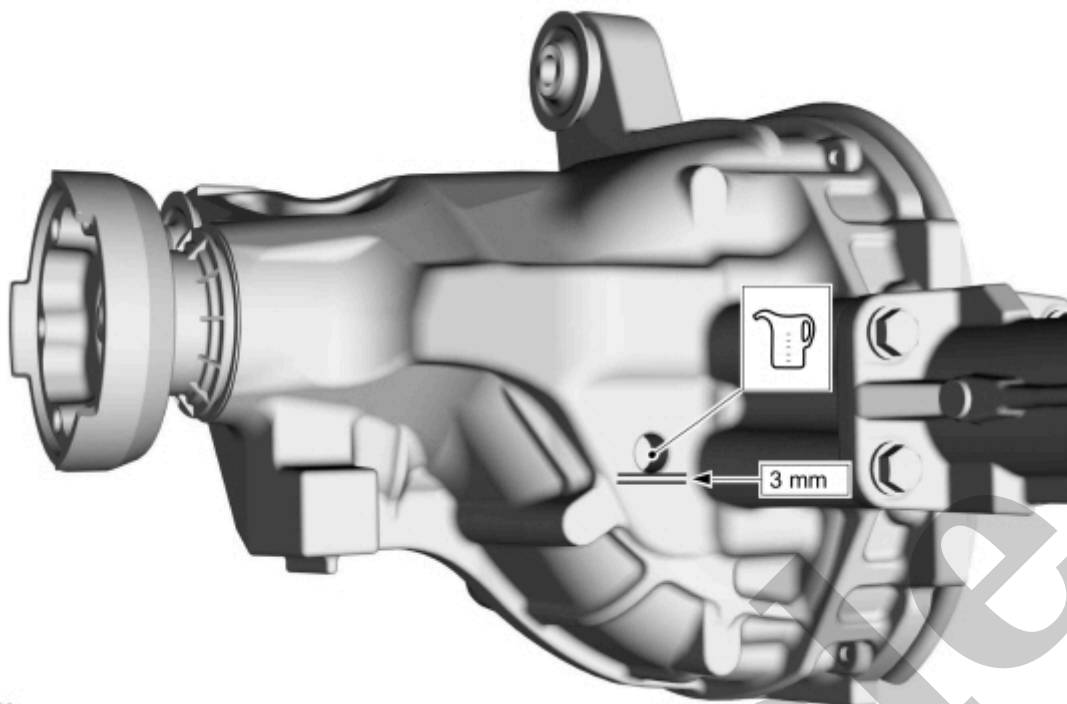


E193960

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


8. Install the front differential fill plug.

Torque : 18 lb.ft (25 Nm)

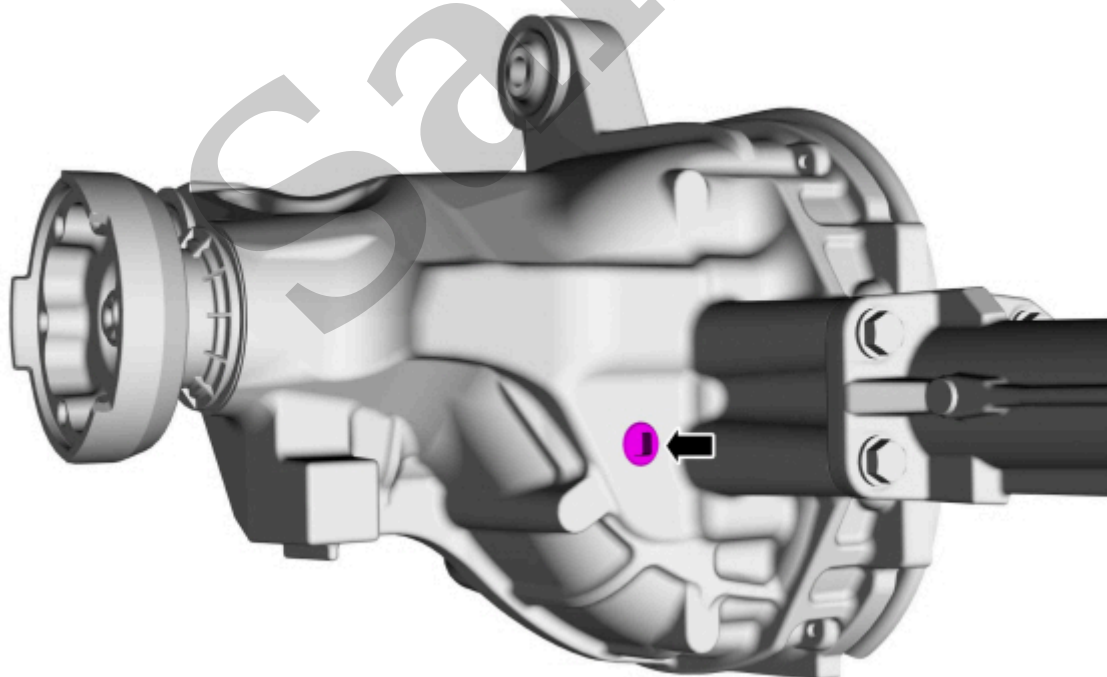

E193959

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

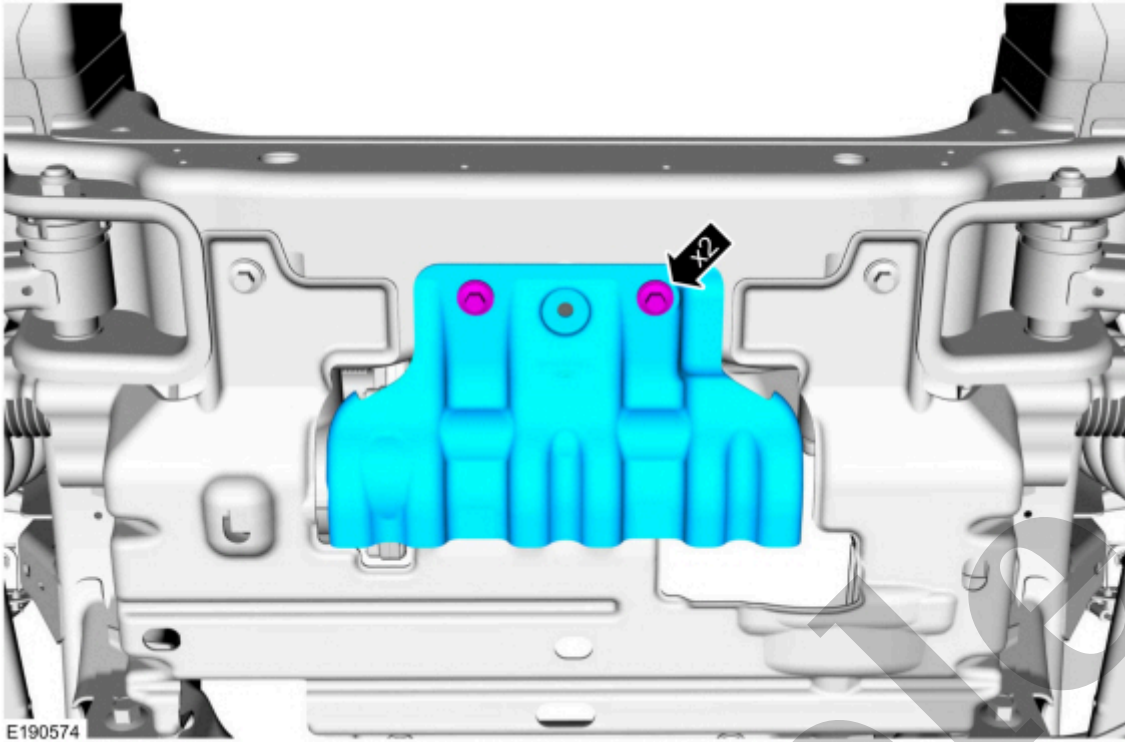

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

11. **NOTE**

If equipped.

Install the underbody shield and the underbody shield bolts.

Torque : 30 lb.ft (40 Nm)



Axle Assembly

205-03 Front Drive Axle/Differential	2022 F-150
Removal and Installation	Procedure revision date: 10/2/2020

Axle Assembly

Removal

NOTE

The removal steps in this procedure may contain installation details.

All vehicles

1. Remove the front driveshaft.

Refer to: [Front Driveshaft](#)(205-01 Driveshaft, Removal and Installation).


2. Remove the front halfshafts.

Refer to: [Halfshaft - Vehicles Without: Integrated Wheel End \(IWE\)](#)(205-04 Front Drive Halfshafts, Removal and Installation).

3. If equipped.


Remove the bolts and the rear underbody shield.

Torque : 30 lb.ft (40 Nm)

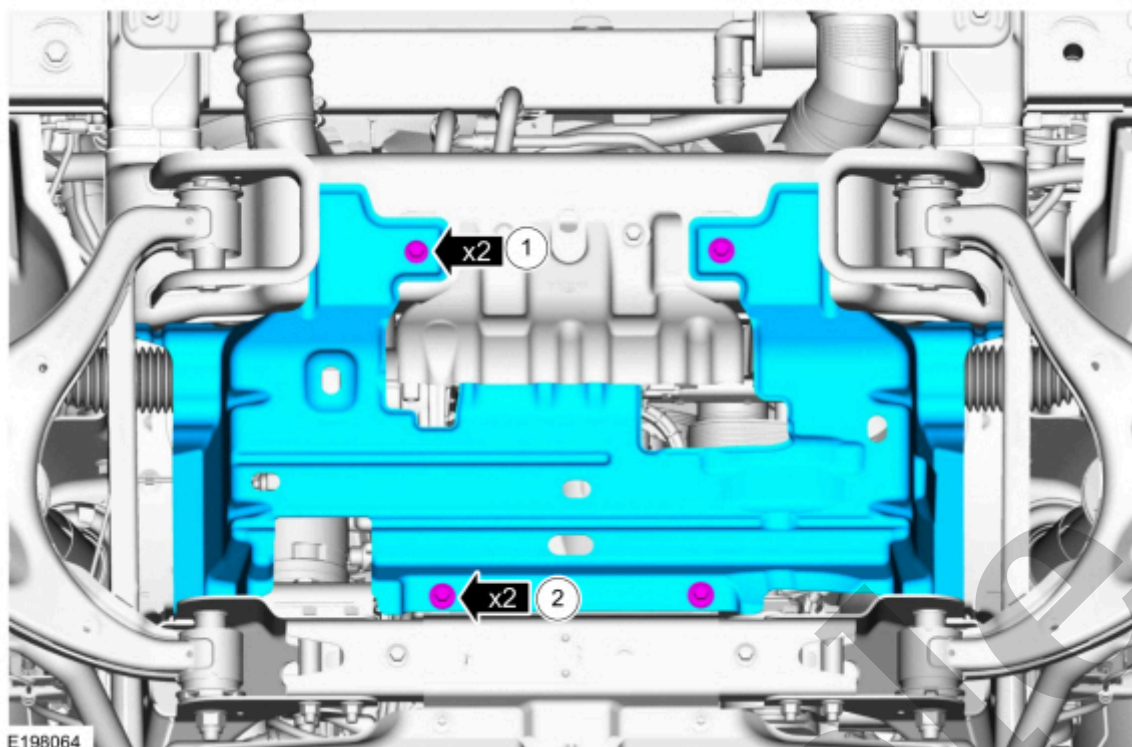


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Using a holding device, hold the steering wheel in the straight-ahead position.

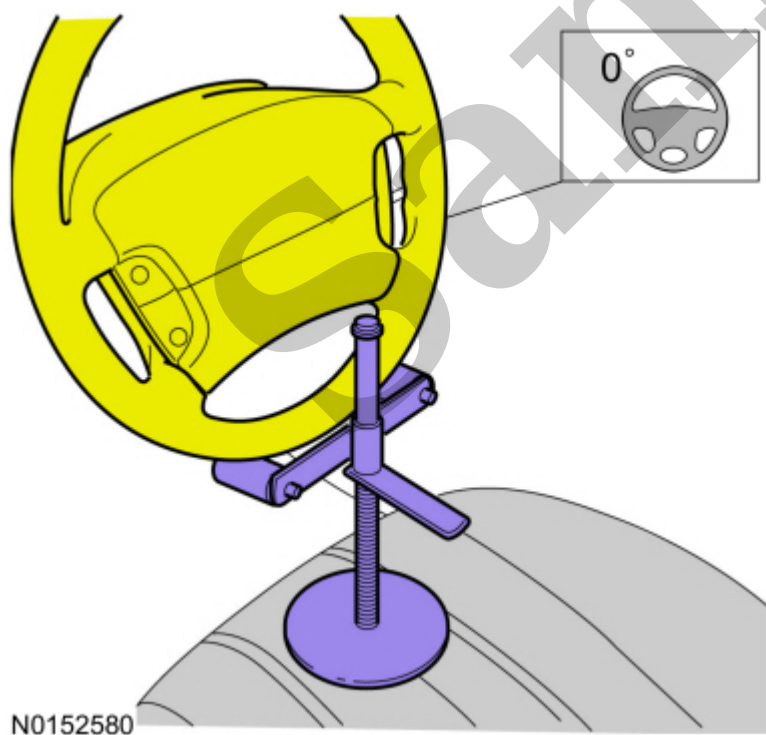


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

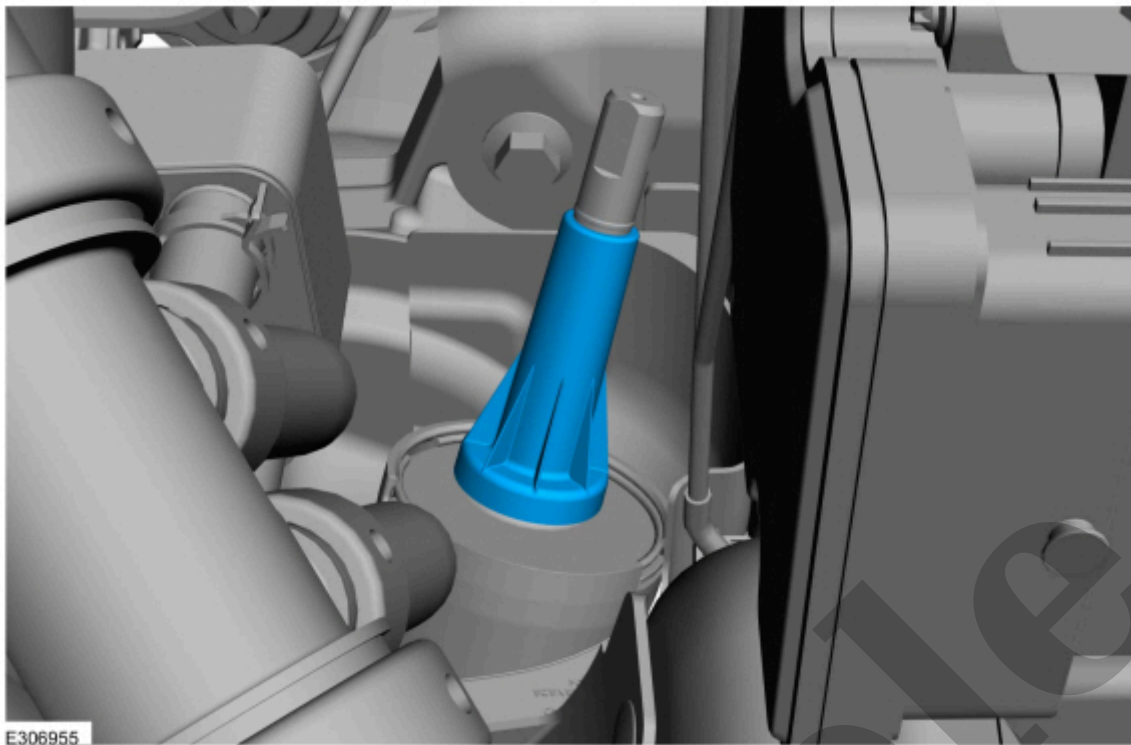

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8. Remove the nuts, bolts and the crossmember.

Torque : 66 lb.ft (90 Nm)

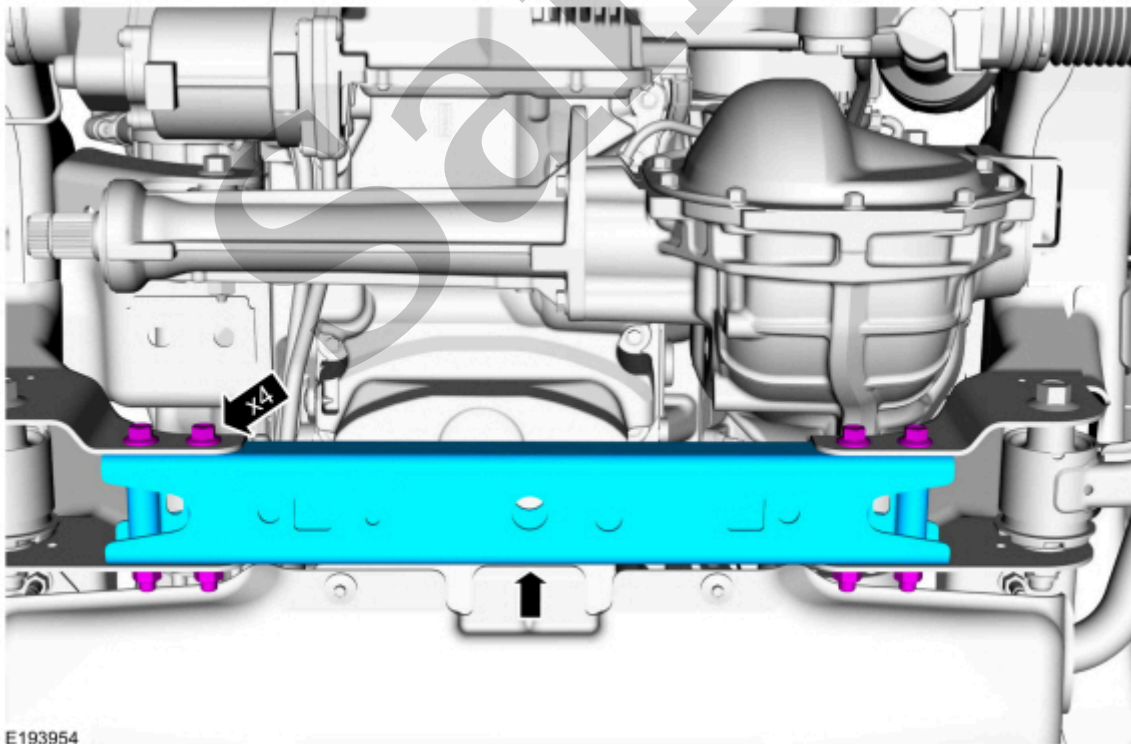

[Click here to learn about symbols, color coding, and icons used in this manual.](#)