


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2011 FORD Mustang OEM Service and Repair Workshop Manual

[Go to manual page](#)

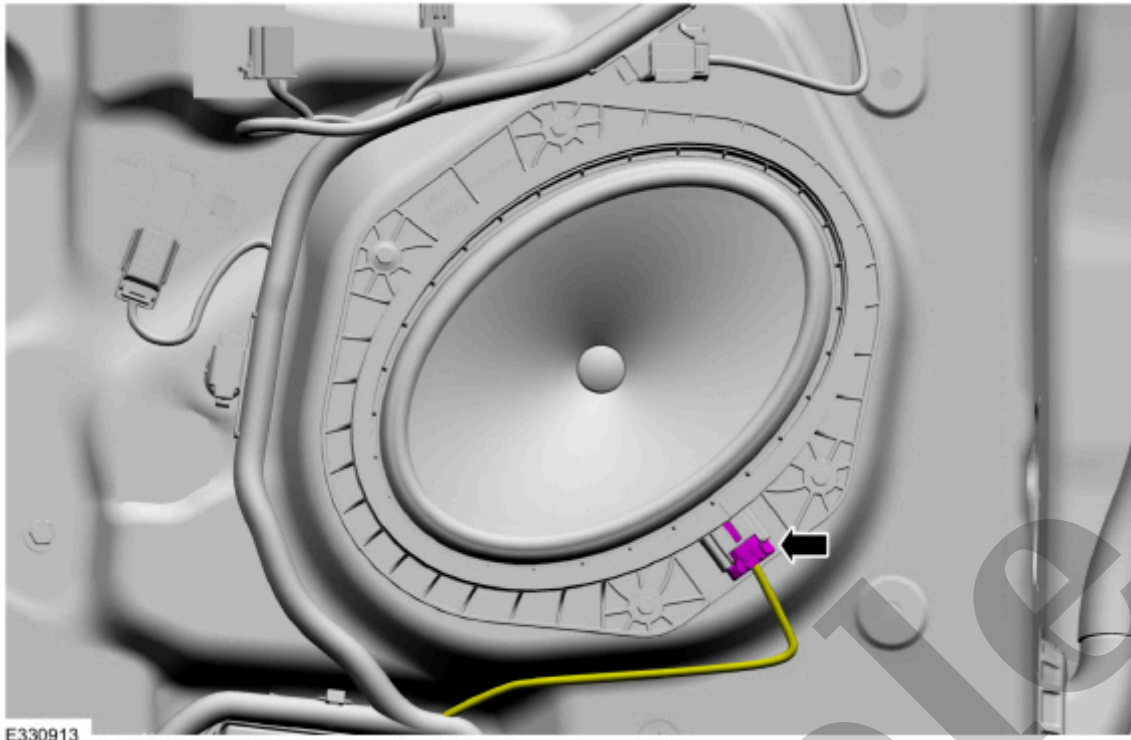


E330913

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Remove the screws and the front door speaker.

Torque : 13 lb.in (1.5 Nm)

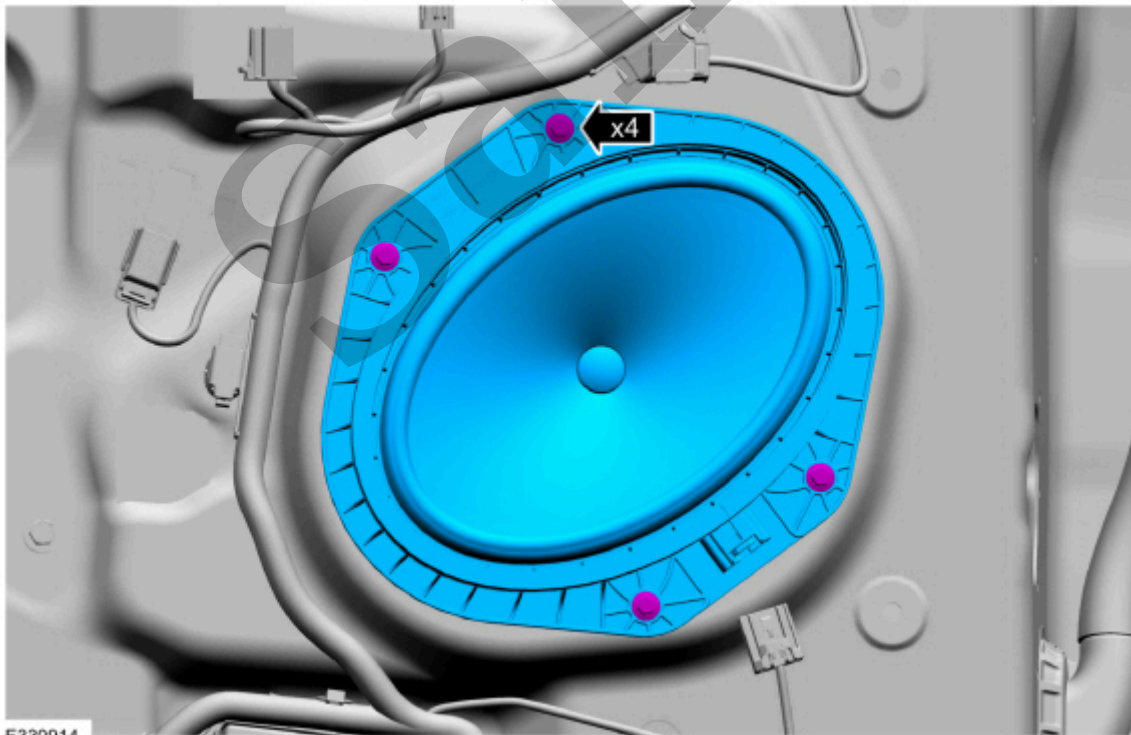

E330914

[Click here to learn about symbols, color coding, and icons used in this manual.](#)



Instrument Panel Center Speaker - Vehicles With: 15.5 Inch Center Display Screen

| | |
|--|--|
| 415-00 Information and Entertainment System - General Information | 2022 F-150 |
| Removal and Installation | Procedure revision date: 01/27/2022 |

Instrument Panel Center Speaker - Vehicles With: 15.5 Inch Center Display Screen

Removal

NOTE

Removal steps in this procedure may contain installation details.


- 1. Release the clips and remove the instrument panel center speaker grille.
Use the General Equipment: Interior Trim Remover

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company


Sample

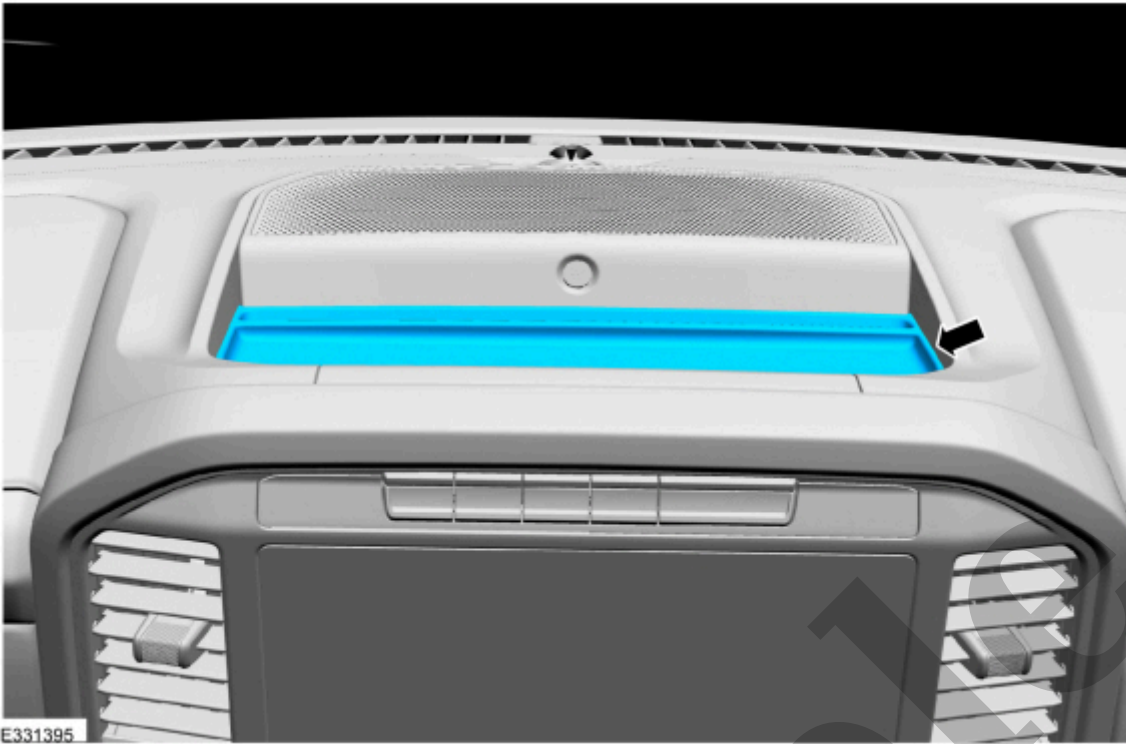

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Release the clips and remove the center instrument panel speaker grille.

Use the General Equipment: Interior Trim Remover

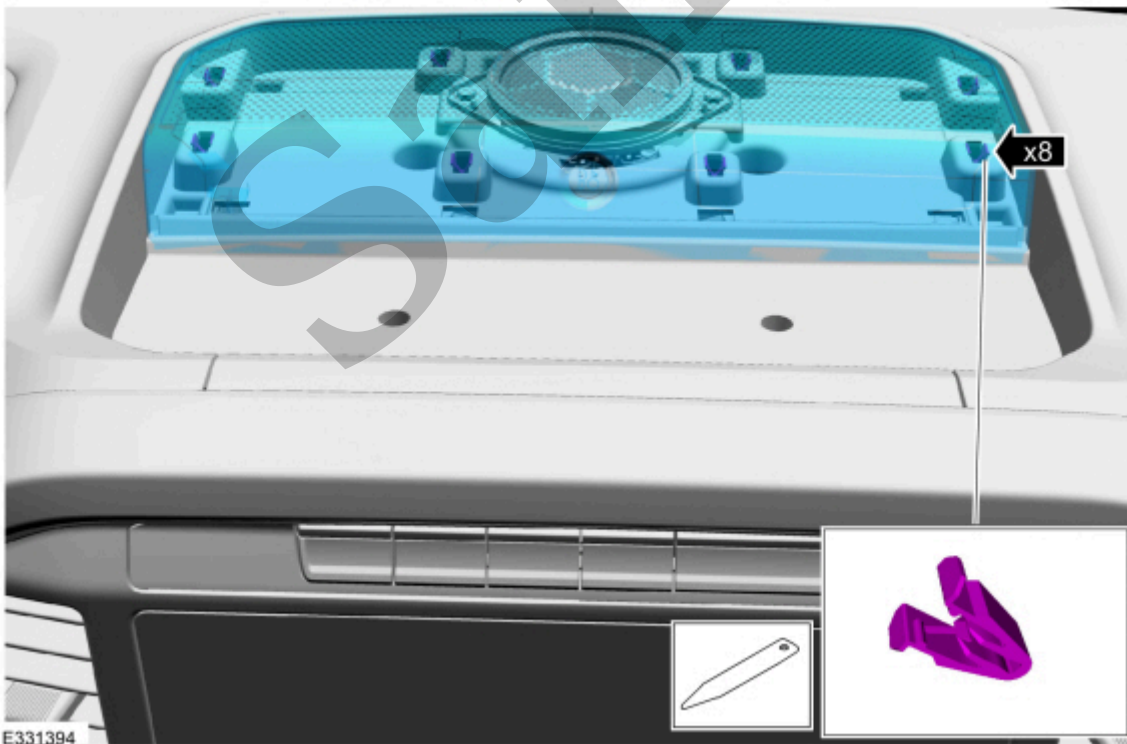

[Click here to learn about symbols, color coding, and icons used in this manual.](#)



Instrument Panel Speaker

| | |
|--|--|
| 415-00 Information and Entertainment System - General Information | 2022 F-150 |
| Removal and Installation | Procedure revision date: 09/18/2020 |

Instrument Panel Speaker

Removal

NOTE

Removal steps in this procedure may contain installation details.

NOTE

LH (left-hand) instrument panel speaker is shown, RH (right-hand) instrument panel speaker is similar.

1. Remove the A-pillar trim panels.

Refer to: [A-Pillar Trim Panel](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

2. Release the clips and remove the defroster grille.


Use the General Equipment: Interior Trim Remover

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample

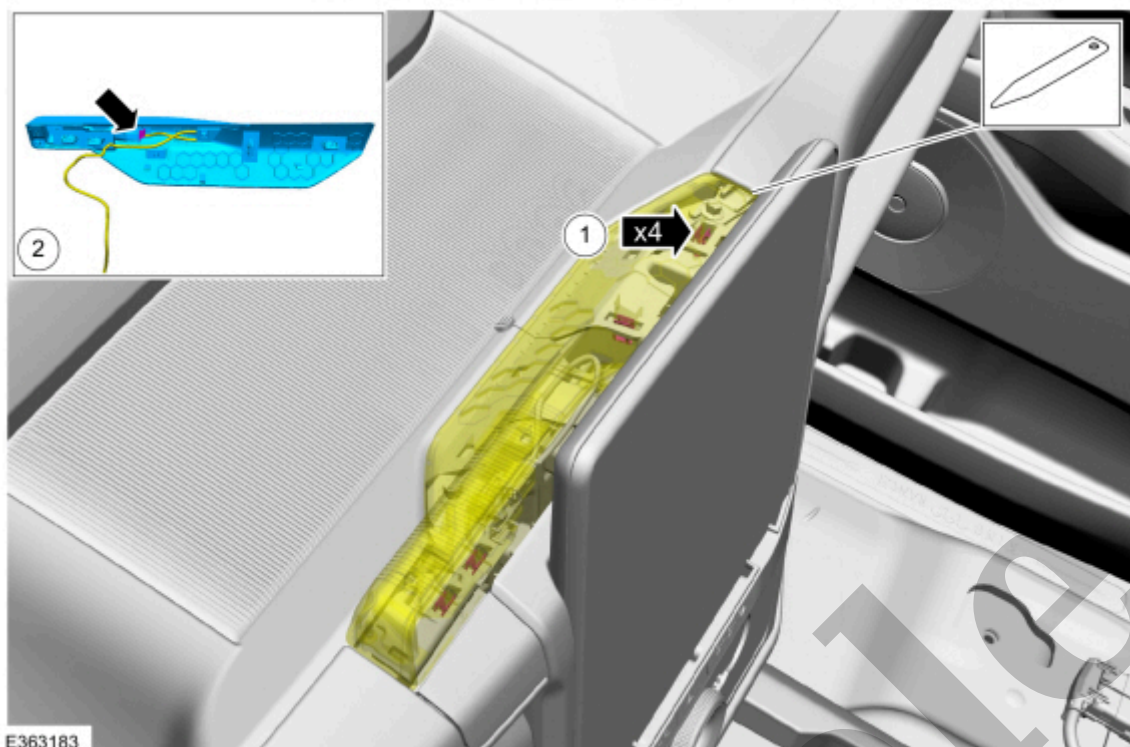


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Remove the bolts.

Torque : 106 lb.in (12 Nm)



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

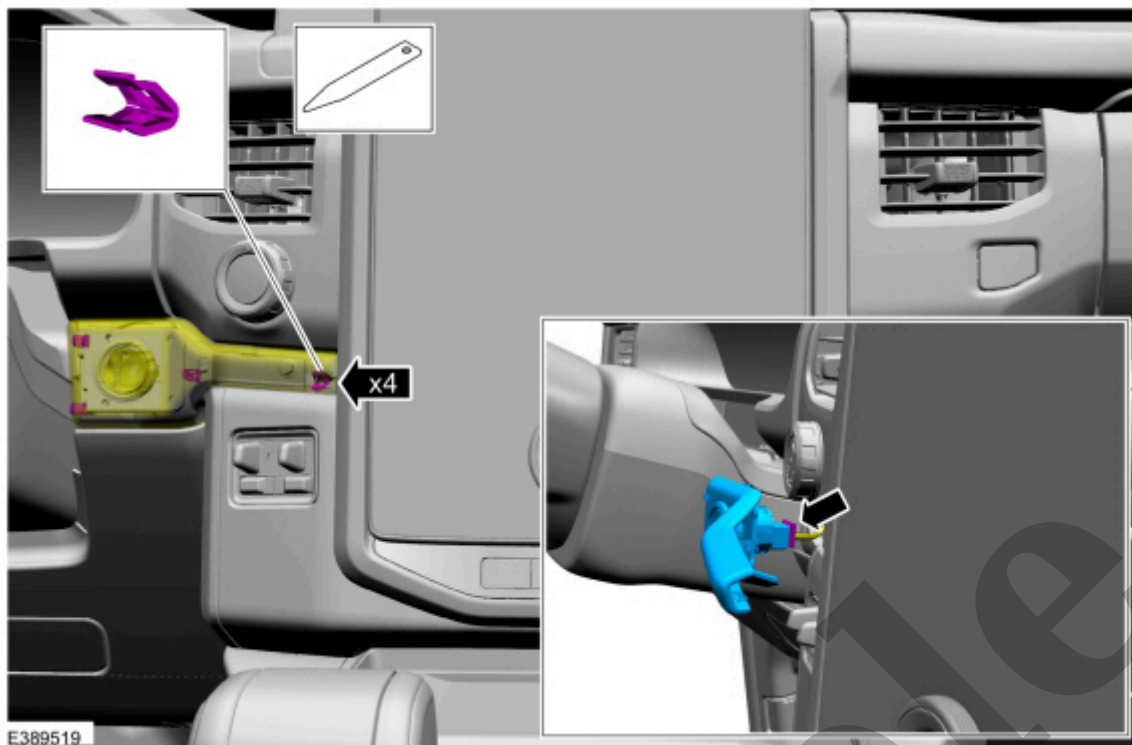


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Remove the screws.

Torque : 22 lb.in (2.5 Nm)



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

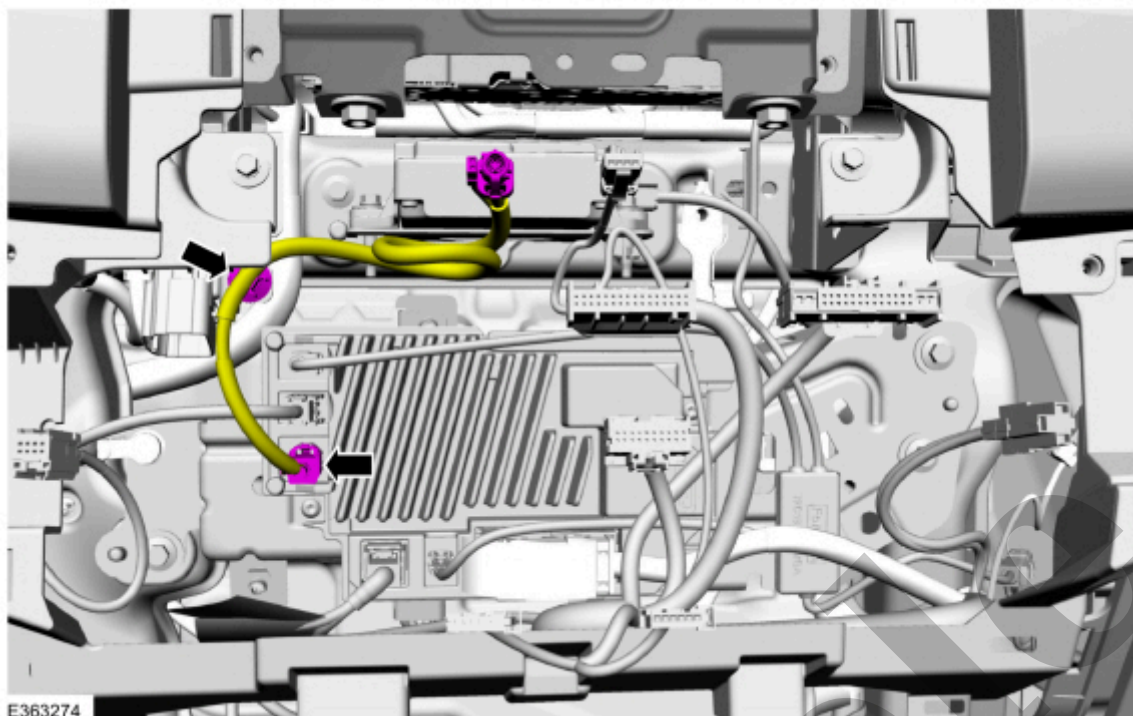

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company