


## Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2011 VOLVO V50 OEM Service and Repair Workshop Manual


Go to manual page

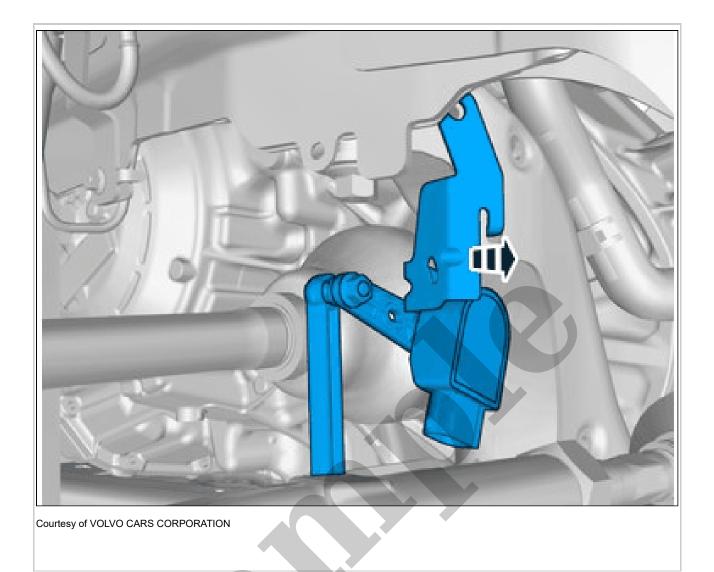


Remove the marked part.

## POSITION SENSOR, WHEEL SUSPENSION FRONT > POSITION SENSOR, WHEEL SUSPENSION FRONT [2018-2022] > INSTALLATION

To install, reverse the removal procedure.

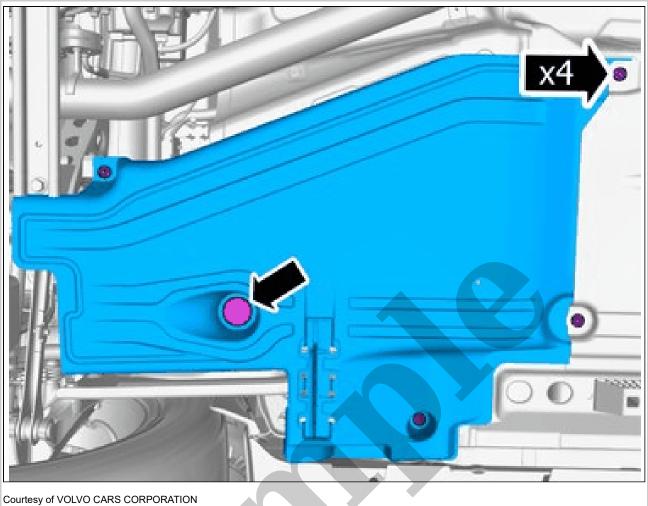

Remove the nuts. Remove the clip.

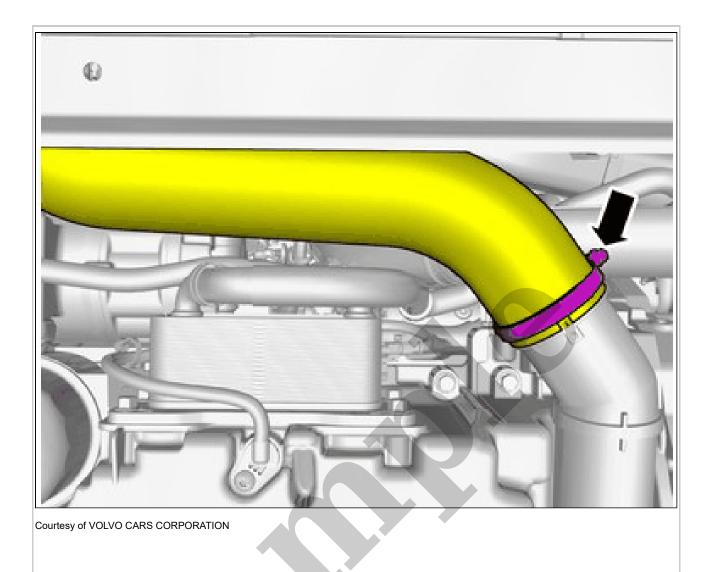

Loosen the hose clamp. Loosen the component indicated. Do not remove it.

Remove the screw. **Torque:** Rpm sensor for wheel spindle, 10Nm Remove the marked part.

## WHEEL SPEED SENSOR, FRONT > WHEEL SPEED SENSOR, FRONT [2018-2022] > INSTALLATION


To install, reverse the removal procedure.

## WHEEL SPEED SENSOR, REAR > WHEEL SPEED SENSOR, REAR [2018-2022] > REMOVAL


**NOTE:** Removal steps in this procedure may contain installation details.

Remove the wheel. Refer to: WHEELS

EMERGENCY OPENING OF HOOD > EMERGENCY OPENING OF HOOD [2018-2021 | 2021-2022, B4204T18; B4204T47] > REMOVAL

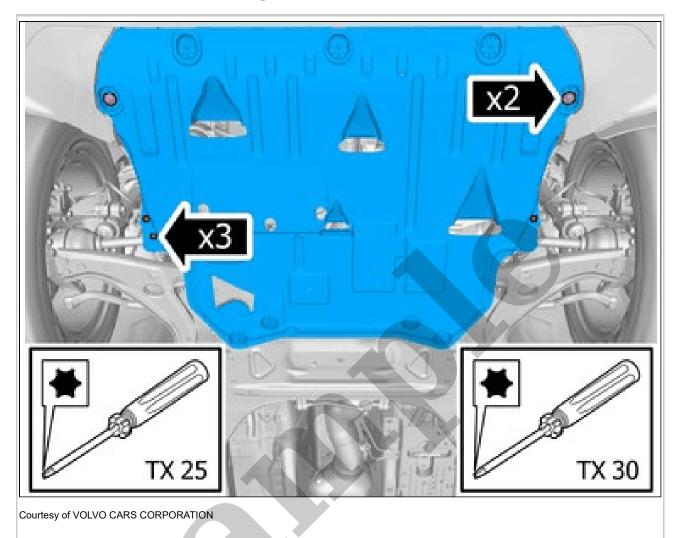

Remove the screws.

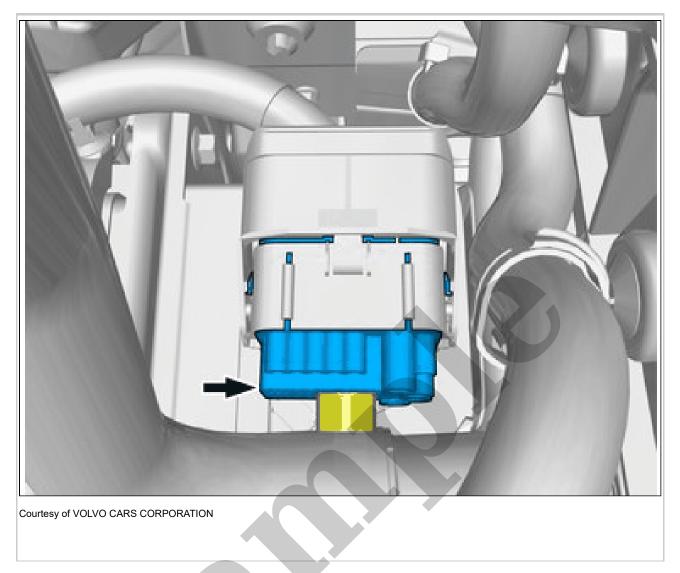


Remove the marked part.



On both sides. Remove the screws. Remove the marked part.



Remove the marked part.

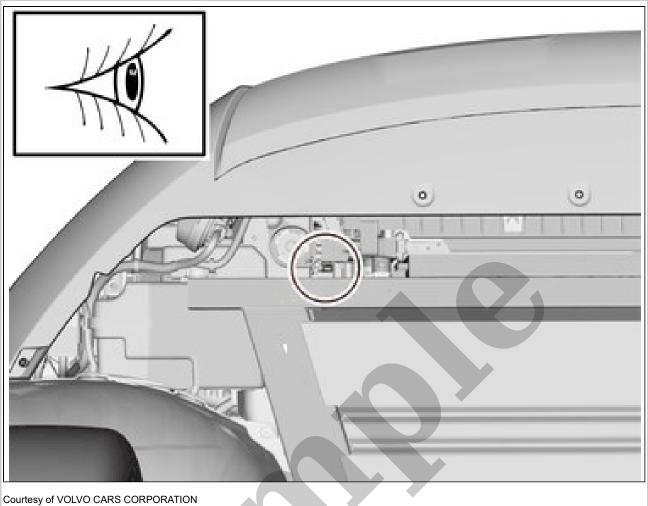

Countesy of VOLVO CARS CORPORATION

NOTE: Orientation view