


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2012 FORD Mustang OEM Service and Repair Workshop Manual

[Go to manual page](#)

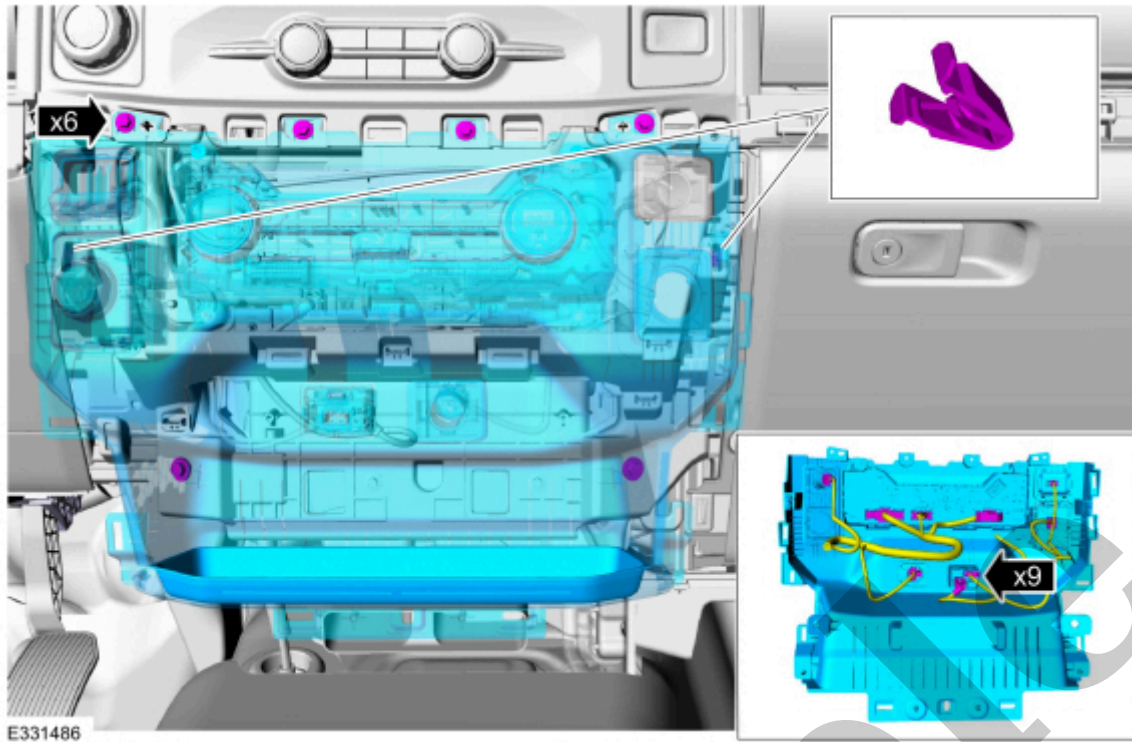

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


Vehicles equipped with an instrument panel center speaker

18. Remove the instrument panel center speaker.

Refer to: [Instrument Panel Center Speaker - Vehicles With: 8 Inch Center Display Screen/12 Inch Center Display Screen](#)(415-00 Information and Entertainment System - General Information, Removal and Installation).

19. Remove the screws, release the clips and remove the instrument panel center speaker mounting plate.


21. Remove the screws, release the clips and remove the upper instrument panel tray.

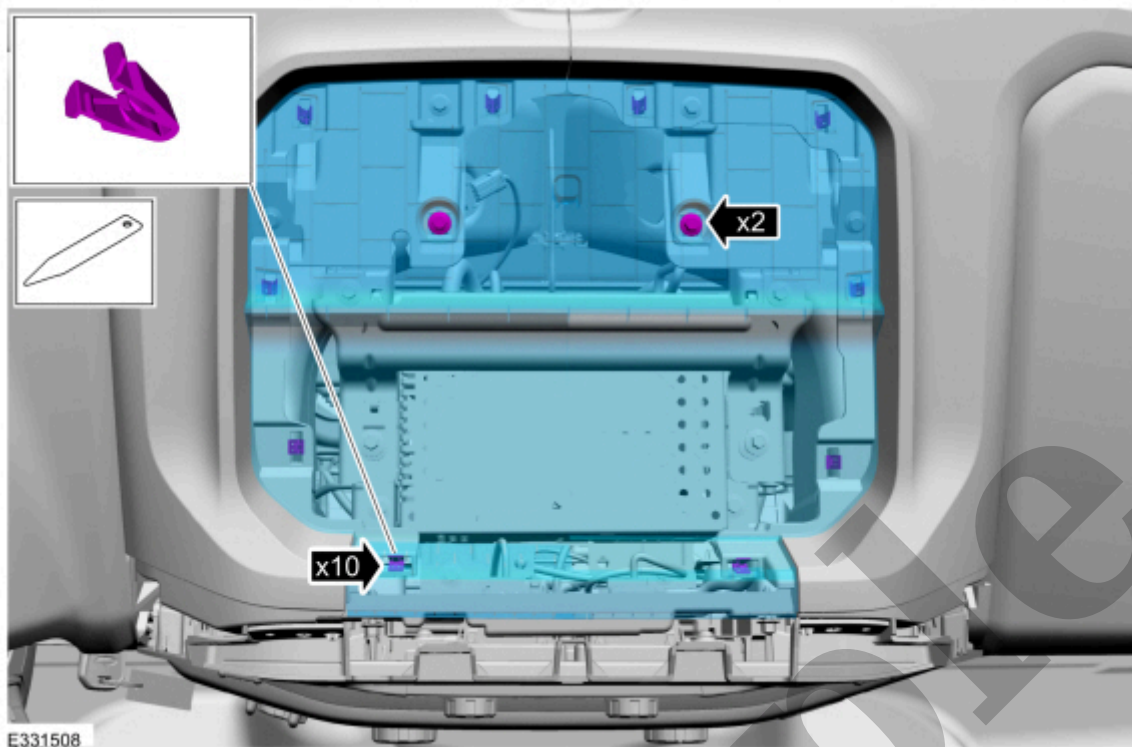


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Vehicles equipped with a 8 inch display

22. Disconnect the electrical connectors.

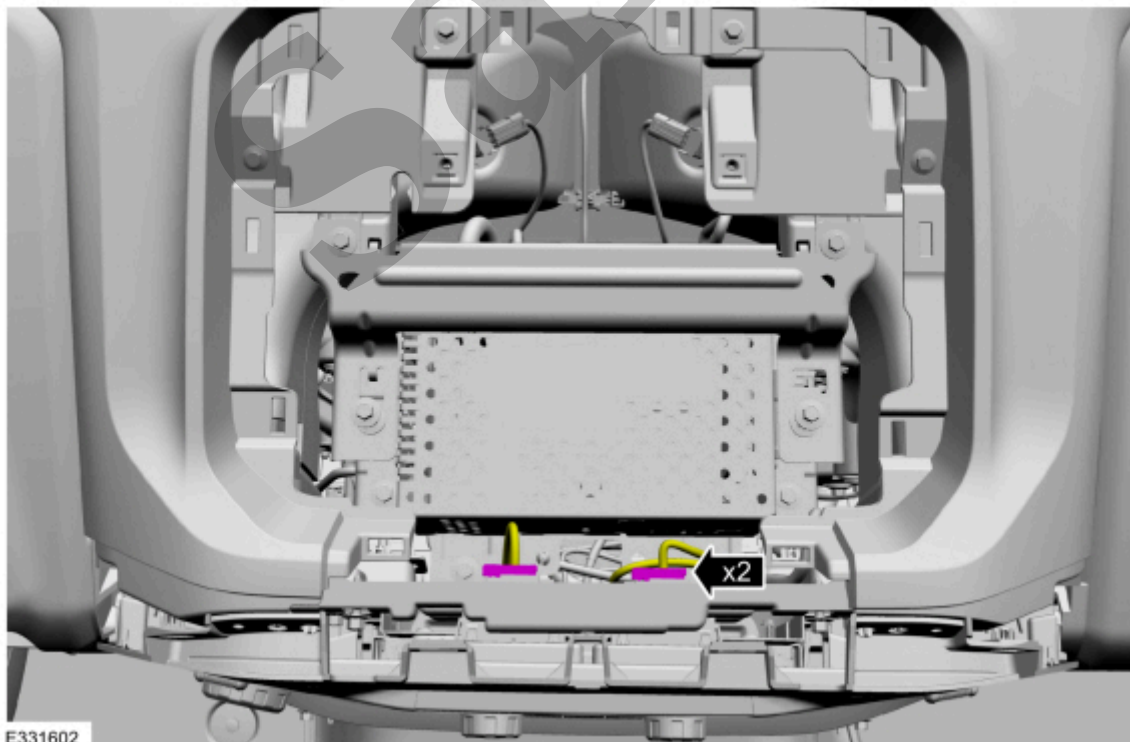

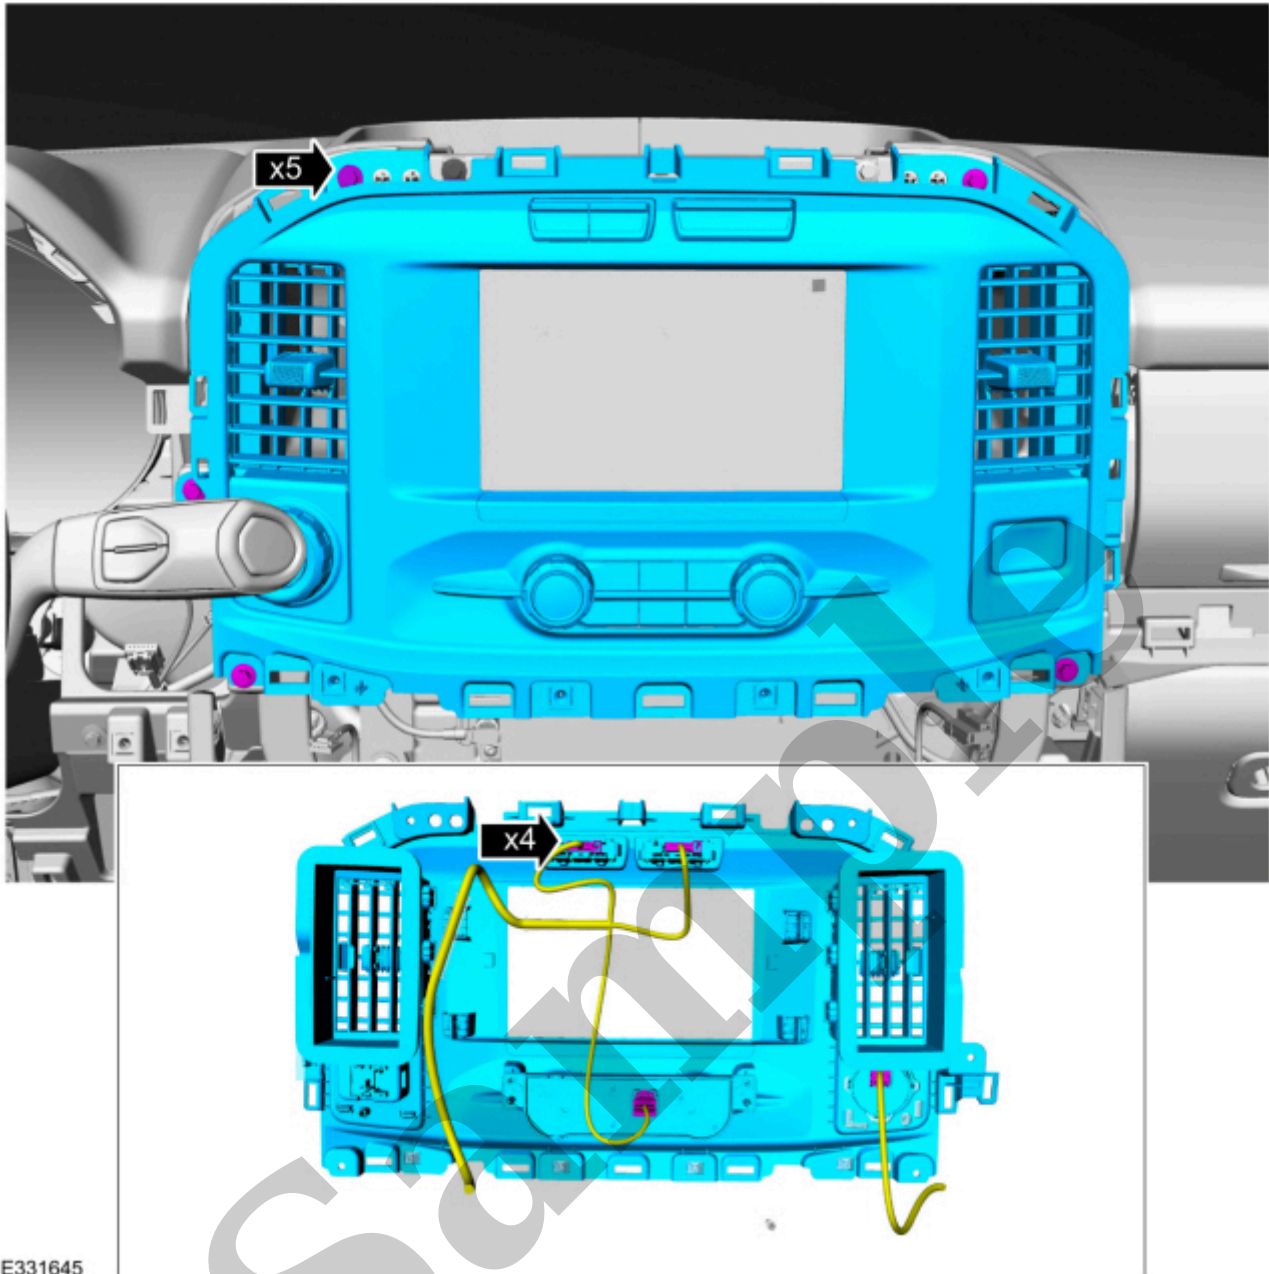


E331645

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

25. Remove the bolts, disconnect the electrical connector and remove the information and entertainment display unit.


Torque : 55 lb.in (6.2 Nm)

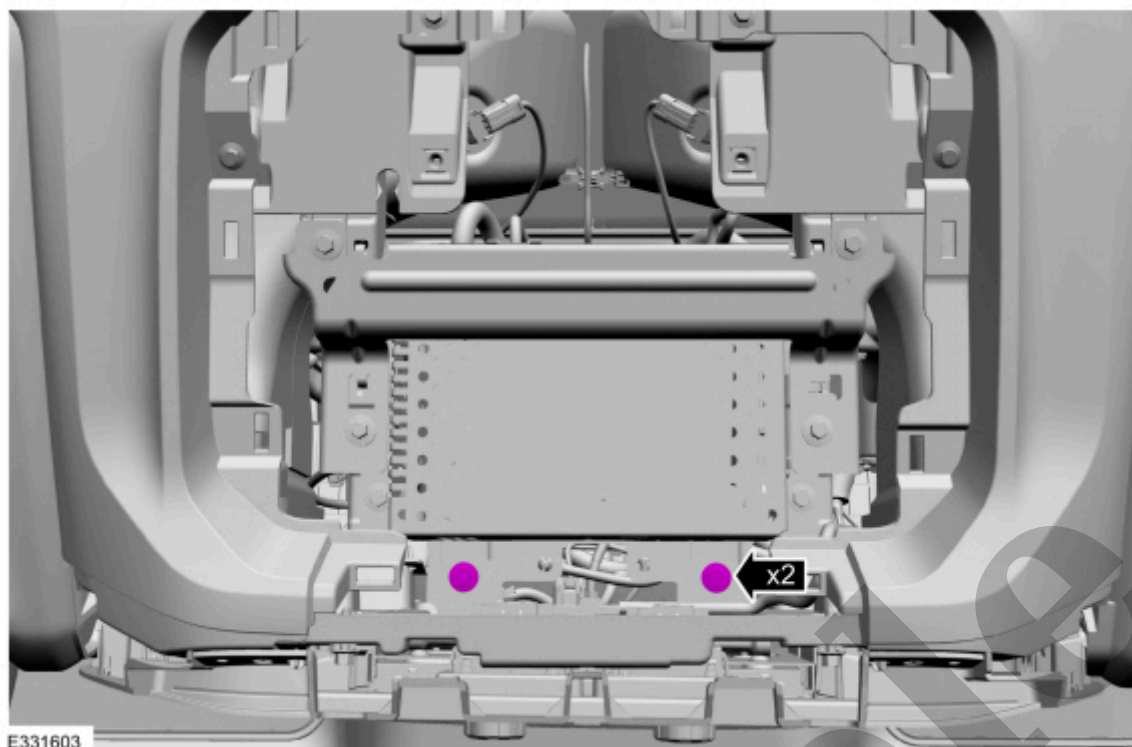

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

27. Remove the bolts, disconnect the electrical connectors and remove the information and entertainment display unit and centerstack trim panel as an assembly.

Torque : 55 lb.in (6.2 Nm)

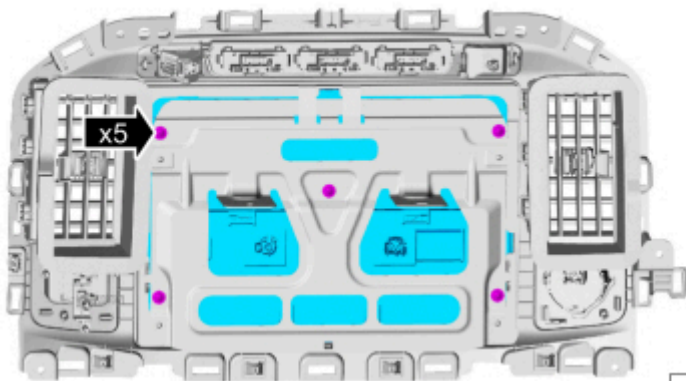


E331643

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

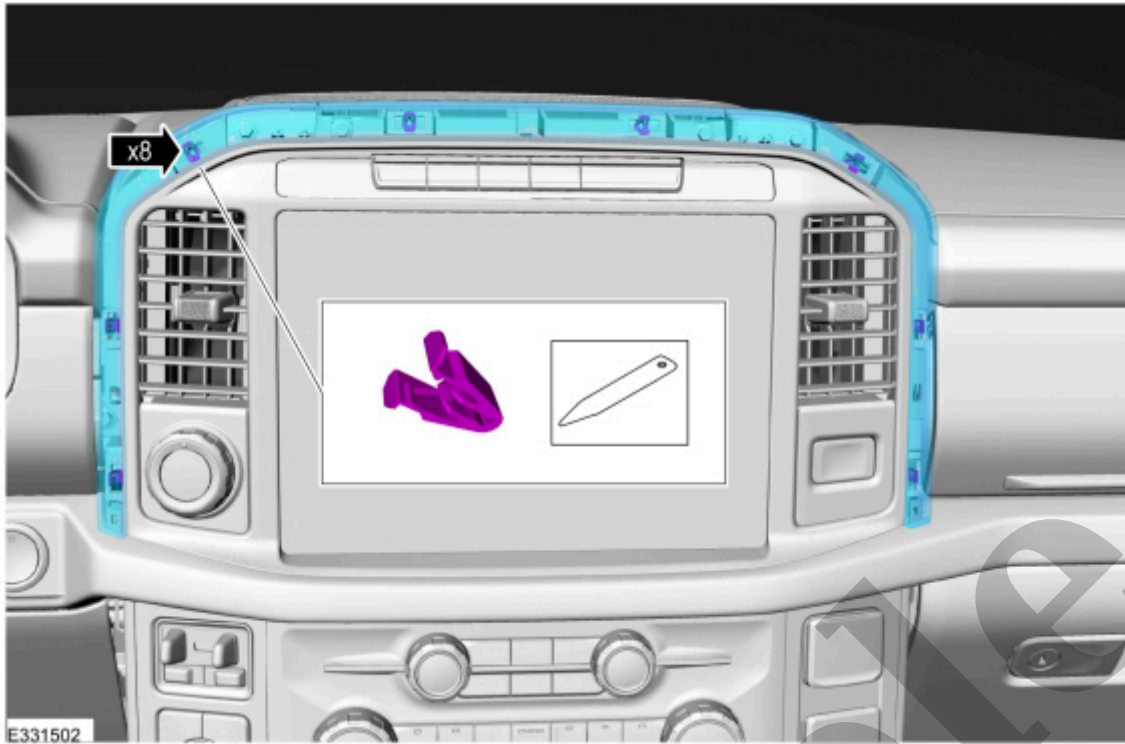



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Release the clips and remove the RH (right-hand) instrument center trim panel.

- On vehicles equipped with push button start disconnect the electrical connector.

Use the General Equipment: Interior Trim Remover

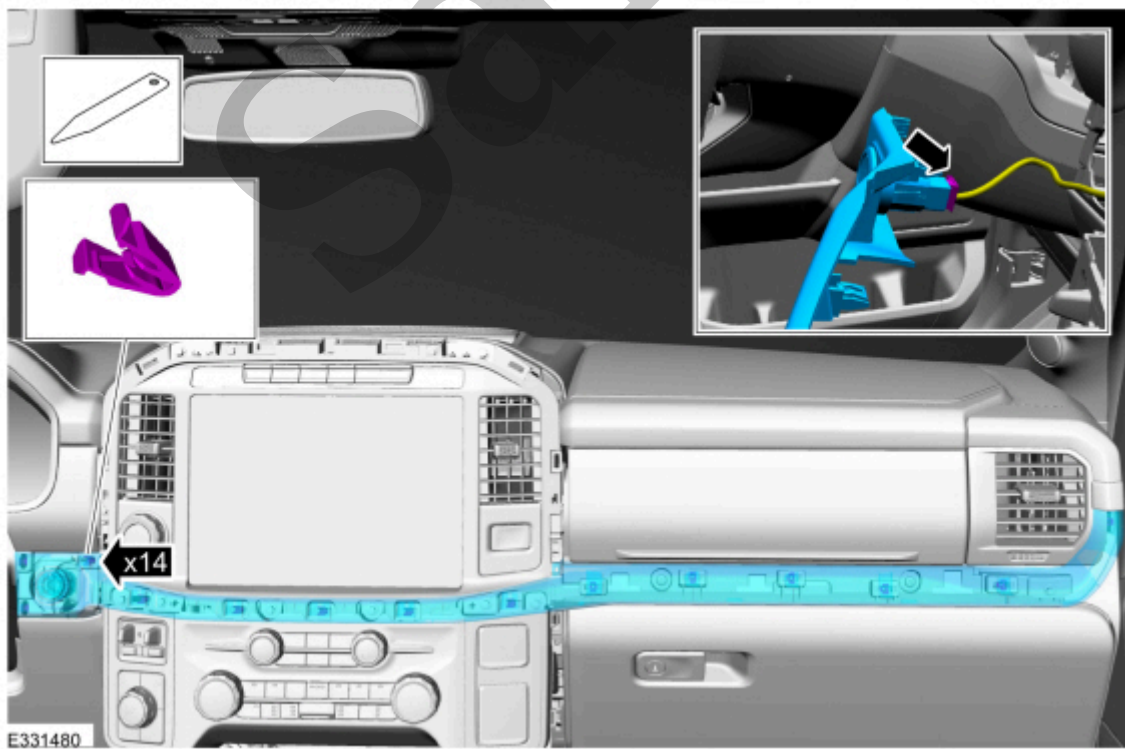

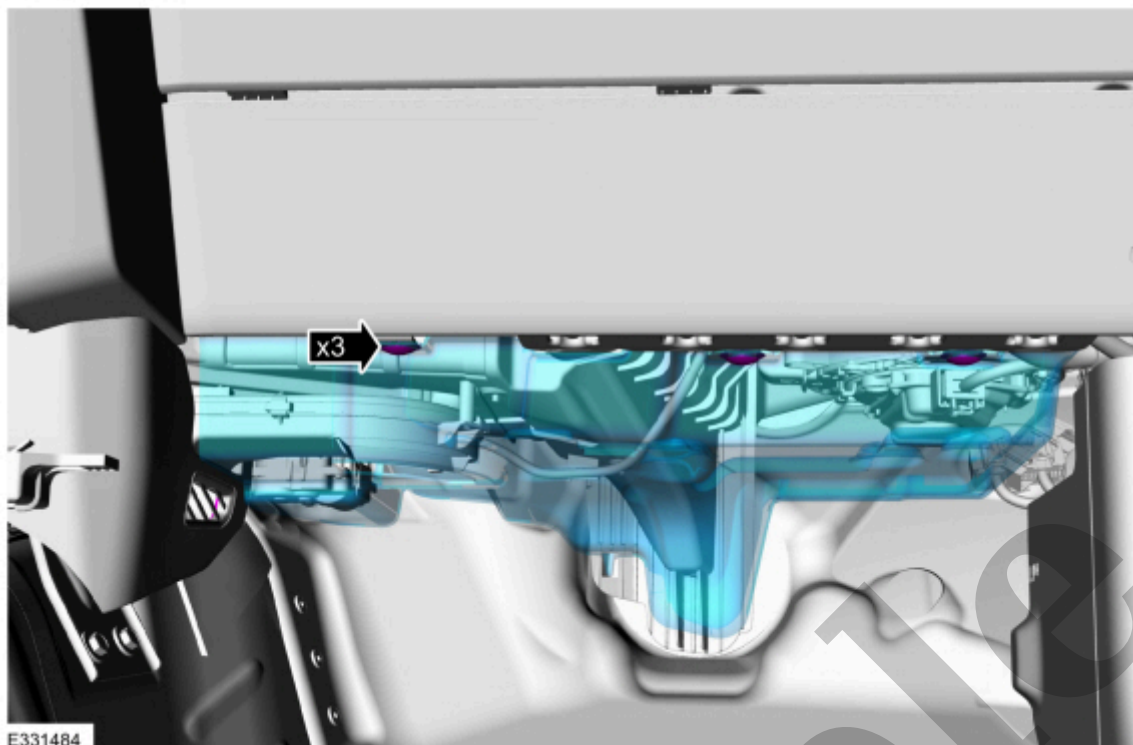


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. On vehicles without a floor console.

Remove the bolt.

Torque : 22 lb.in (2,5 Nm)

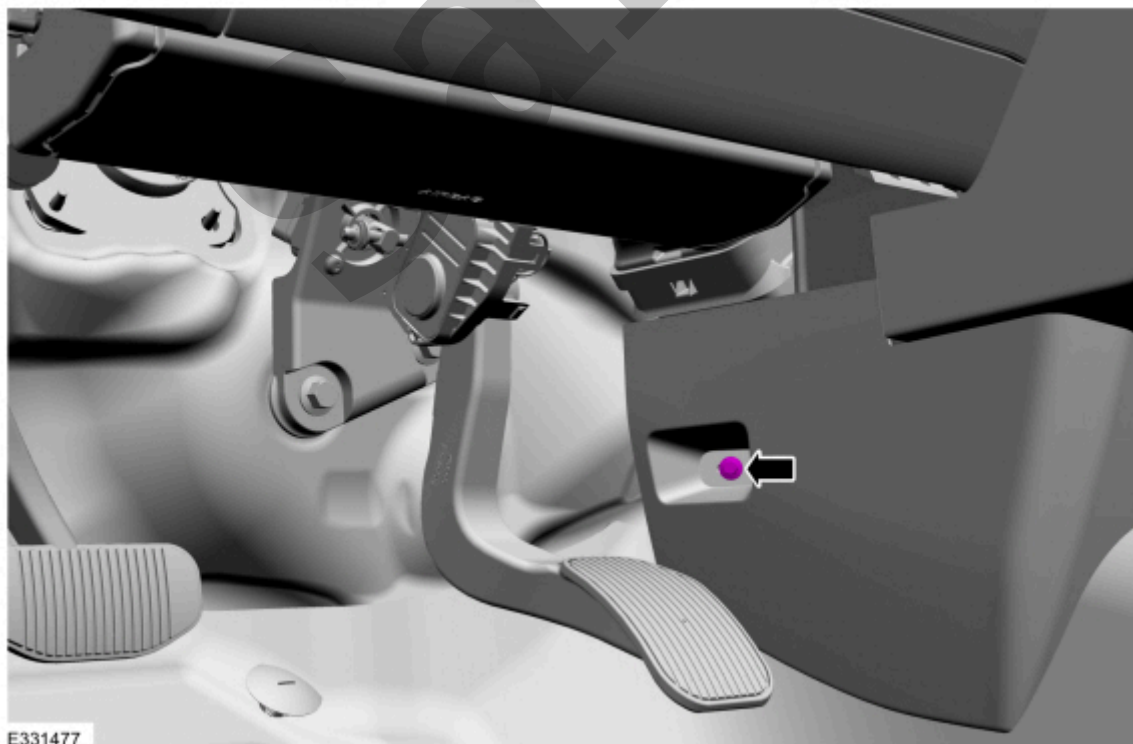


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. On vehicles without a floor console.

Release the clips and remove the RH (right-hand) lower centerstack trim panel.

Use the General Equipment: Interior Trim Remover

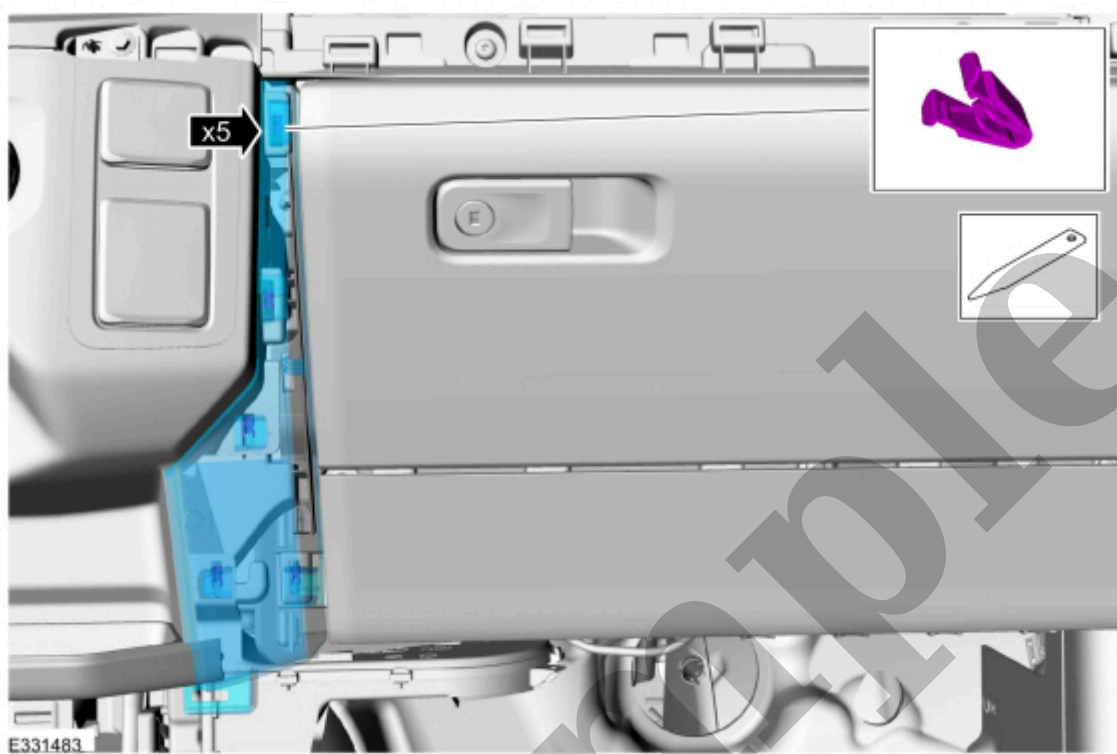

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. On vehicles without a floor console.

Remove the lower centerstack trim panel.

- Remove the bolts.

Torque : 22 lb.in (2.5 Nm)

- Release the clips.
- Disconnect the electrical connectors.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample