

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2012 TOYOTA Camry OEM Service and Repair Workshop Manual

[Go to manual page](#)

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001R4TJ
Model Year Start: 2021	Model: Supra	Prod Date Range: [07/2020 -]
Title: B48 (EMISSION CONTROL): VENTILATION HOSE: REMOVAL; 2021 - 2025 MY Supra [07/2020 -]		

REMOVAL

CAUTION / NOTICE / HINT

CAUTION:

- Hot surfaces.
 - Risk of burning!
 - Perform all work only on components that have cooled down.

PROCEDURE

1. REMOVE NO. 1 ENGINE COVER SUB-ASSEMBLY


Click here [INFO](#)

2. REMOVE AIR CLEANER ASSEMBLY

Click here [INFO](#)

3. REMOVE VENTILATION HOSE

(a) Unlock connector (1) and pull off.

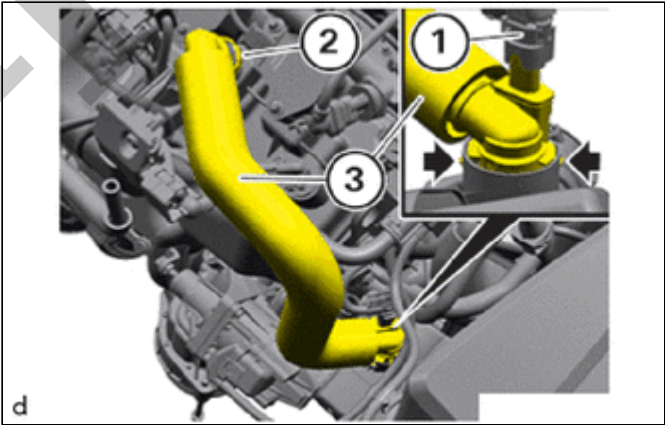

(b) Unlock the lock (2) of the ventilation hose (3) and disconnect the ventilation hose (3) from the cylinder head cover sub-assembly.


(c) Unlock the locks (arrows) and disconnect the ventilation hose (3) from the clean air pipe to the top.




Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001R4SU
Model Year Start: 2021	Model: Supra	Prod Date Range: [07/2020 -]
Title: B48 (EMISSION CONTROL): FUEL TEMPERATURE SENSOR: COMPONENTS; 2021 - 2025 MY Supra [07/2020 -]		

COMPONENTS


ILLUSTRATION

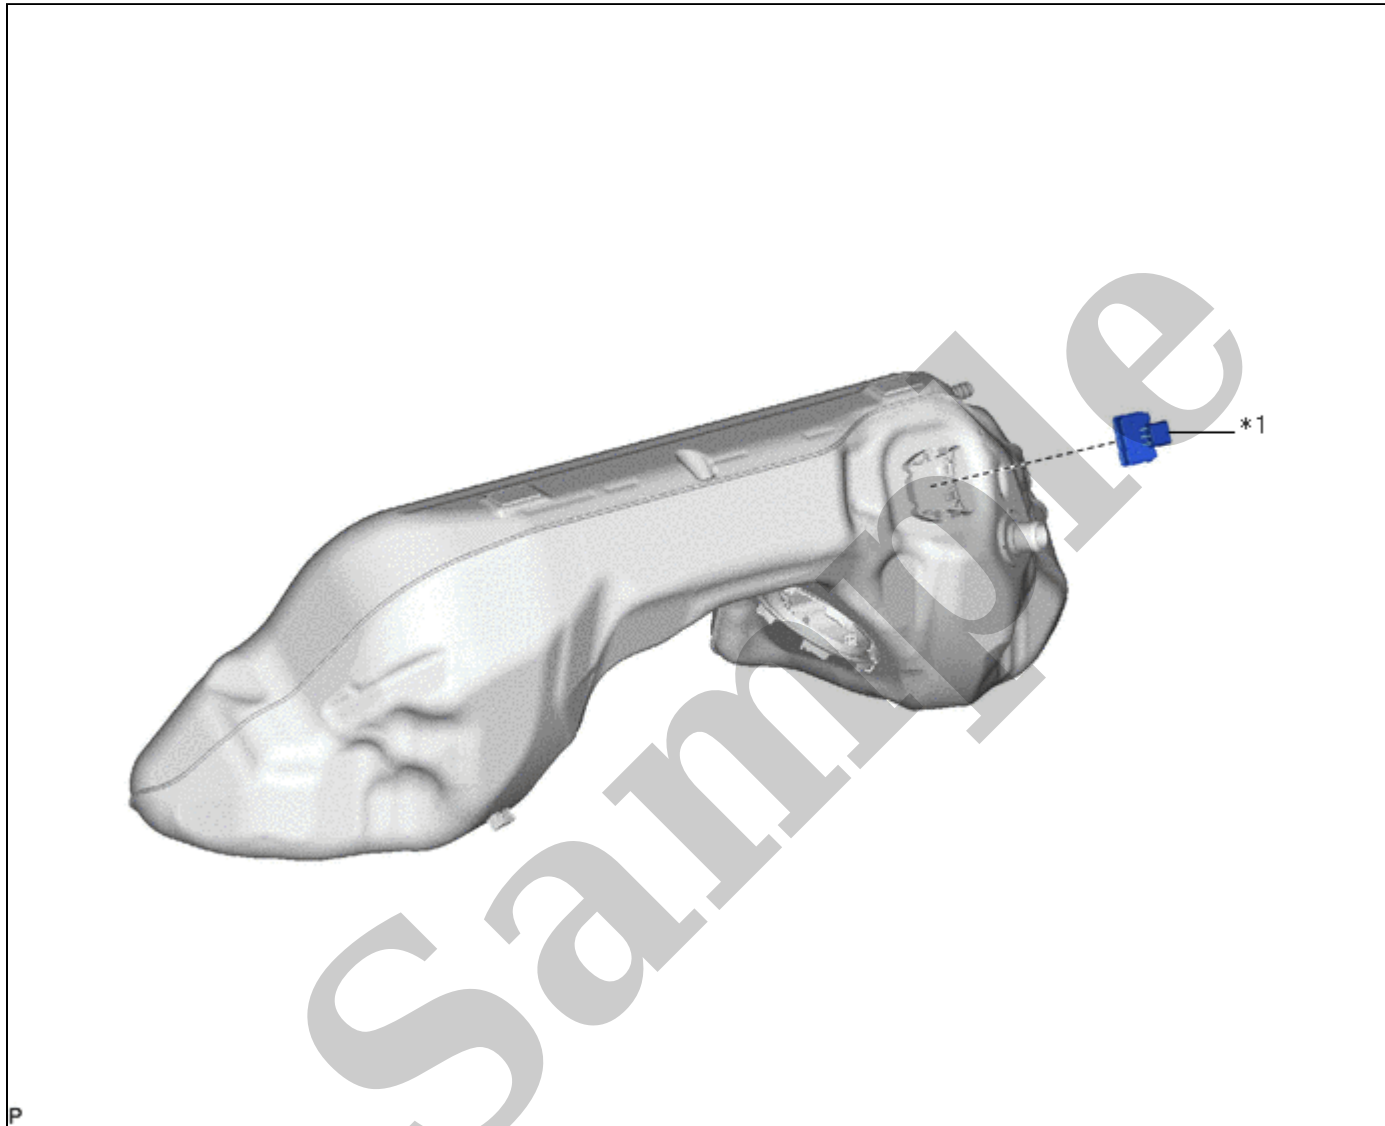


*1	FUEL TEMPERATURE SENSOR	-	-
----	-------------------------	---	---

 

(a) Unlock plug connection (1) and disconnect.

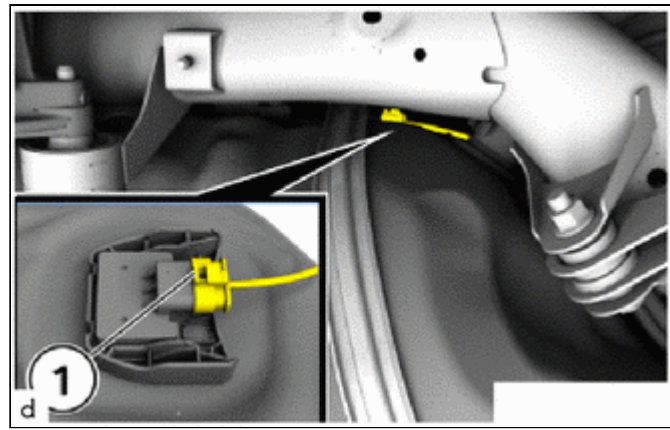


(b) Unlock the locks (1).

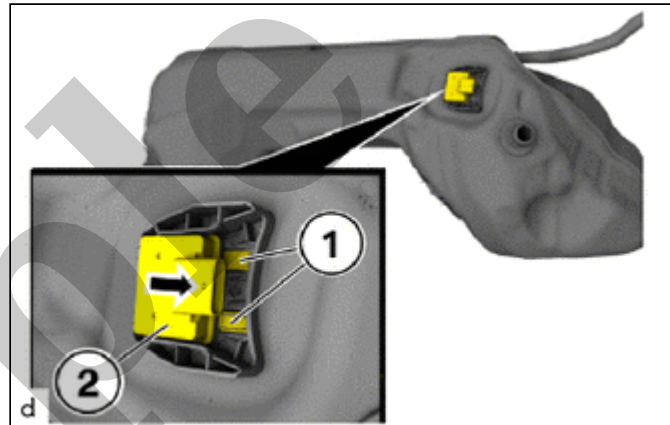

(c) Push the fuel temperature sensor (2) out of the holder in the direction of the arrow.



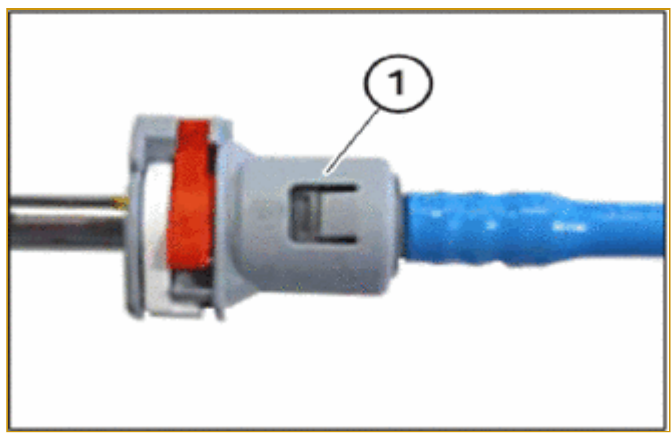


- Check that snap fastener (1) locks correctly into place.

The snap fastener must felt and heard to engage.


A tensile test is not permitted.

- Installing a previousl fuel line:

When an already mounted fuel line is installed, the red lock (1) is already pressed down.

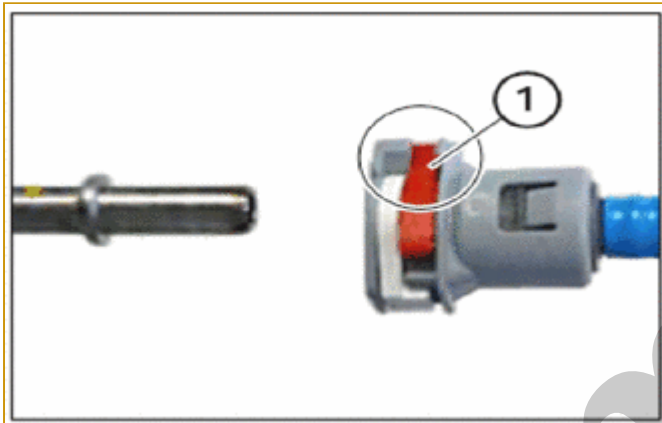

- Push fuel line (2) and fuel line (1) together in direction of arrow until both locks are heard to lock.

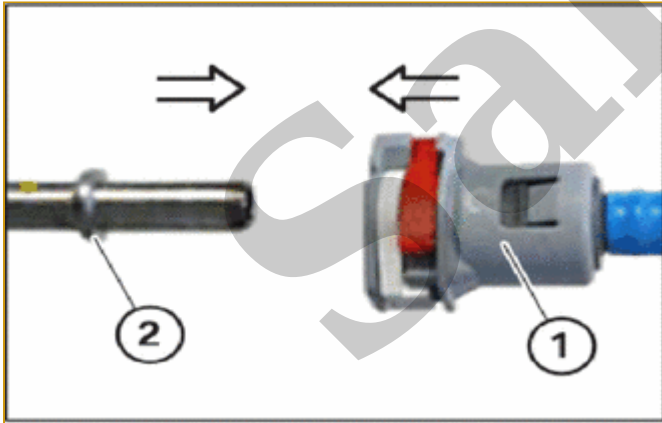

- Check that snap fastener (1) locks correctly into place.

The snap fastener must felt and heard to engage.

A tensile test is not permitted.