

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2013 FORD Mustang OEM Service and Repair Workshop Manual

[Go to manual page](#)

5. Install the headliner.


Refer to: [Headliner - Lowering - Regular Cab](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Headliner - Lowering - SuperCab](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Headliner - Lowering - SuperCrew](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

Copyright © Ford Motor Company

Sample

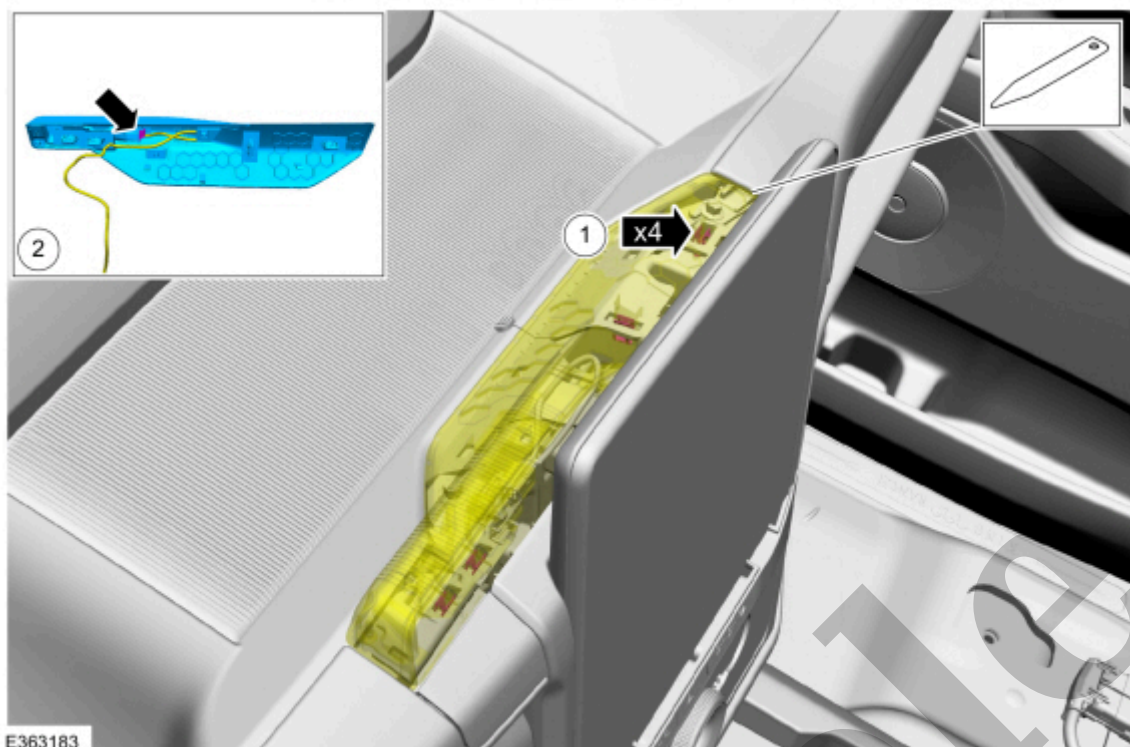


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Remove the bolts.

Torque : 106 lb.in (12 Nm)



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

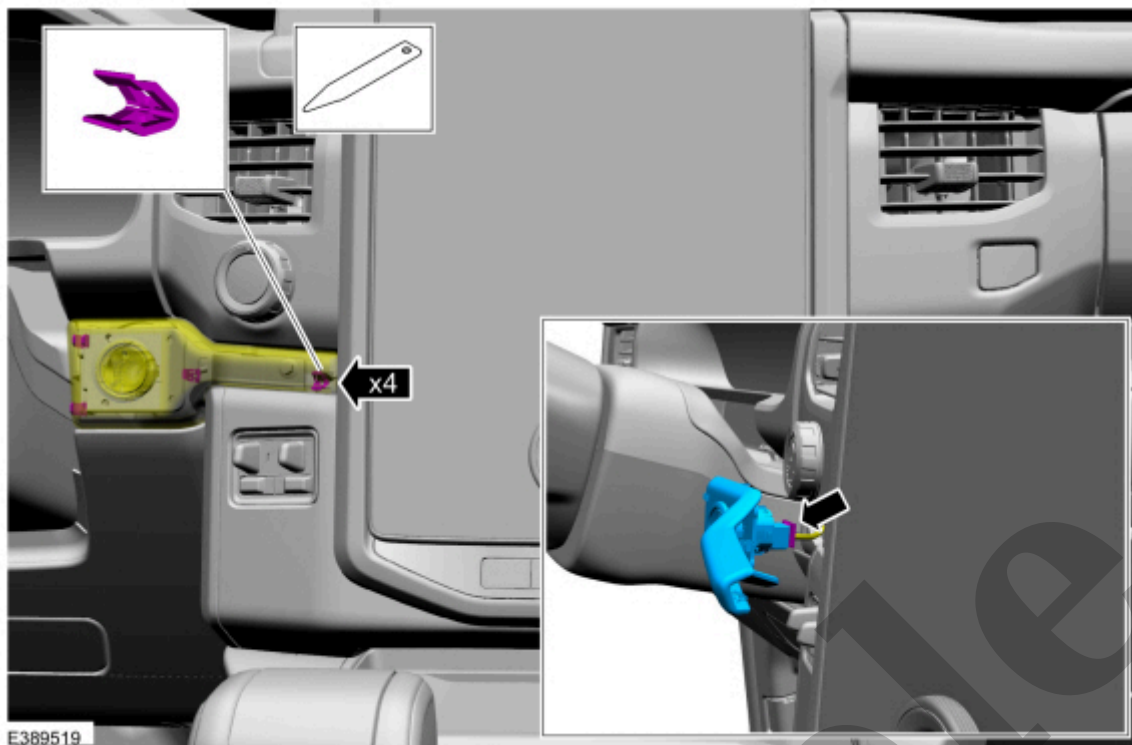

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Remove the screws.

Torque : 22 lb.in (2.5 Nm)




[Click here to learn about symbols, color coding, and icons used in this manual.](#)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8. Remove the screws, release the clips and remove the lower centerstack trim panel assembly.

Use the General Equipment: Interior Trim Remover

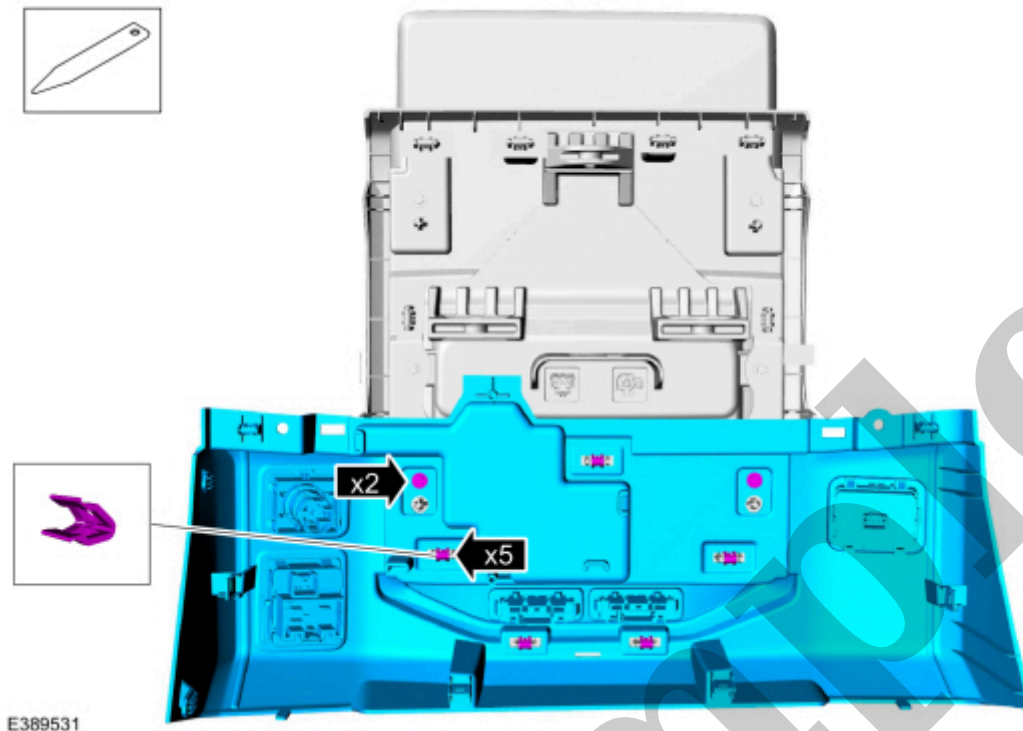

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. Remove the screws and the center display screen bracket.



Center Display Screen - Vehicles With: 8 Inch Center Display Screen/12 Inch Center Display Screen

415-00 Information and Entertainment System - General Information	2022 F-150
Removal and Installation	Procedure revision date: 03/29/2022

Center Display Screen - Vehicles With: 8 Inch Center Display Screen/12 Inch Center Display Screen

Removal

NOTE

Removal steps in this procedure may contain installation details.

All vehicles

1. **NOTE**

12 inch screen shown, 8 inch screen is similar.


Release the clips and remove the upper centerstack bezel.

Use the General Equipment: Interior Trim Remover

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Release the clips and remove the LH (left-hand) instrument center trim panel.

Use the General Equipment: Interior Trim Remover

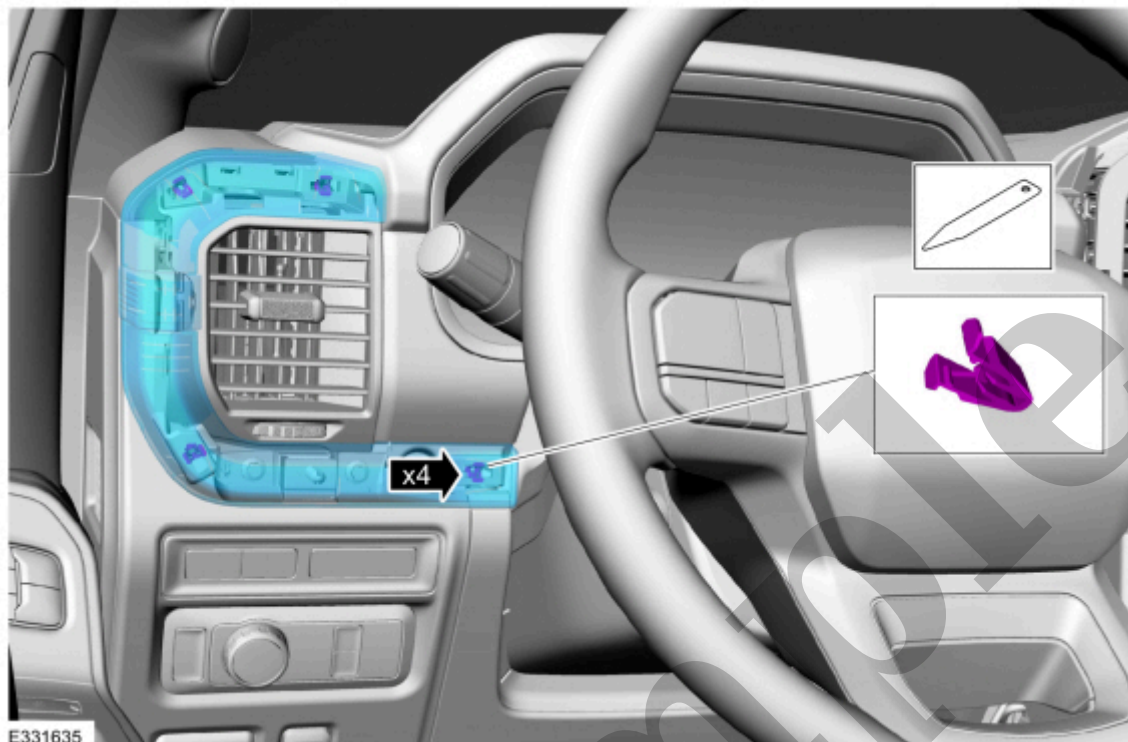

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. Remove the steering column opening lower trim panel.

1. Unclip and lower the steering column opening lower trim panel.
2. Remove the retainers and the steering column opening lower trim panel.




E334787

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Release the tabs and disconnect the gap hider from the upper steering column shroud.

Use the General Equipment: Interior Trim Remover

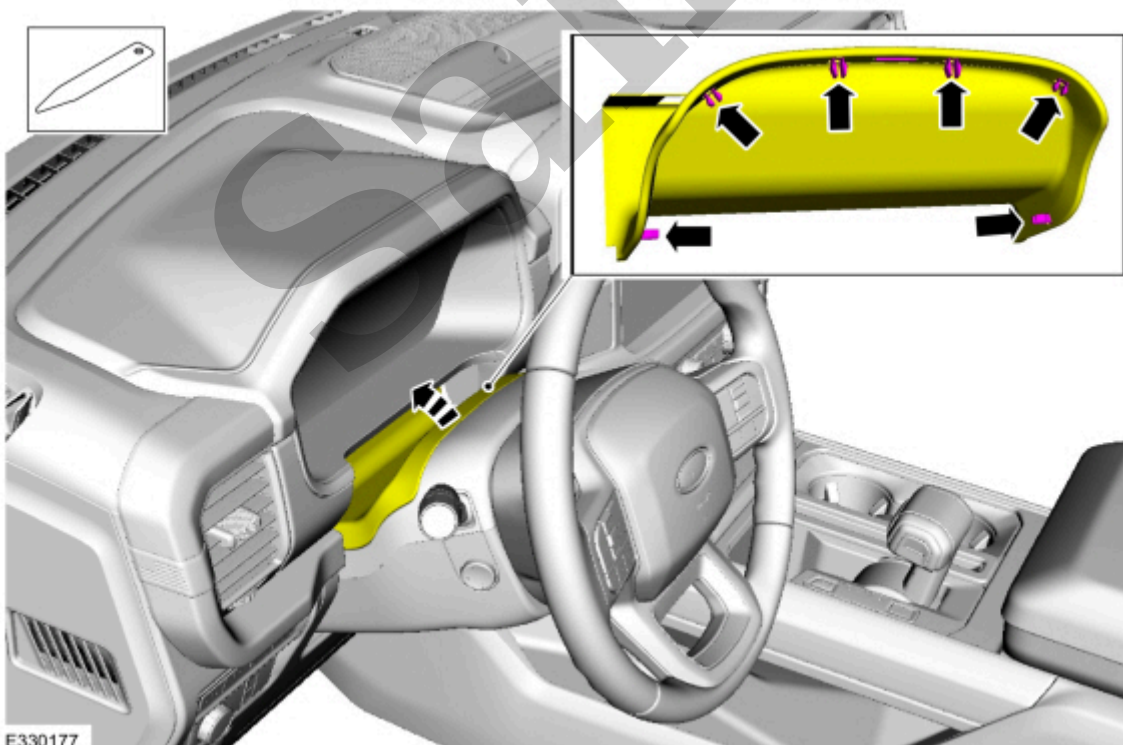

E330177

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Vehicles equipped with a floor console

10. Remove the floor console.


Refer to: [Floor Console](#)(501-12 Instrument Panel and Console, Removal and Installation).

11. Remove the lower centerstack trim panel.

- Remove the bolts.

Torque : 22 lb.in (2.5 Nm)

- Release the clips.
- Disconnect the electrical connectors.

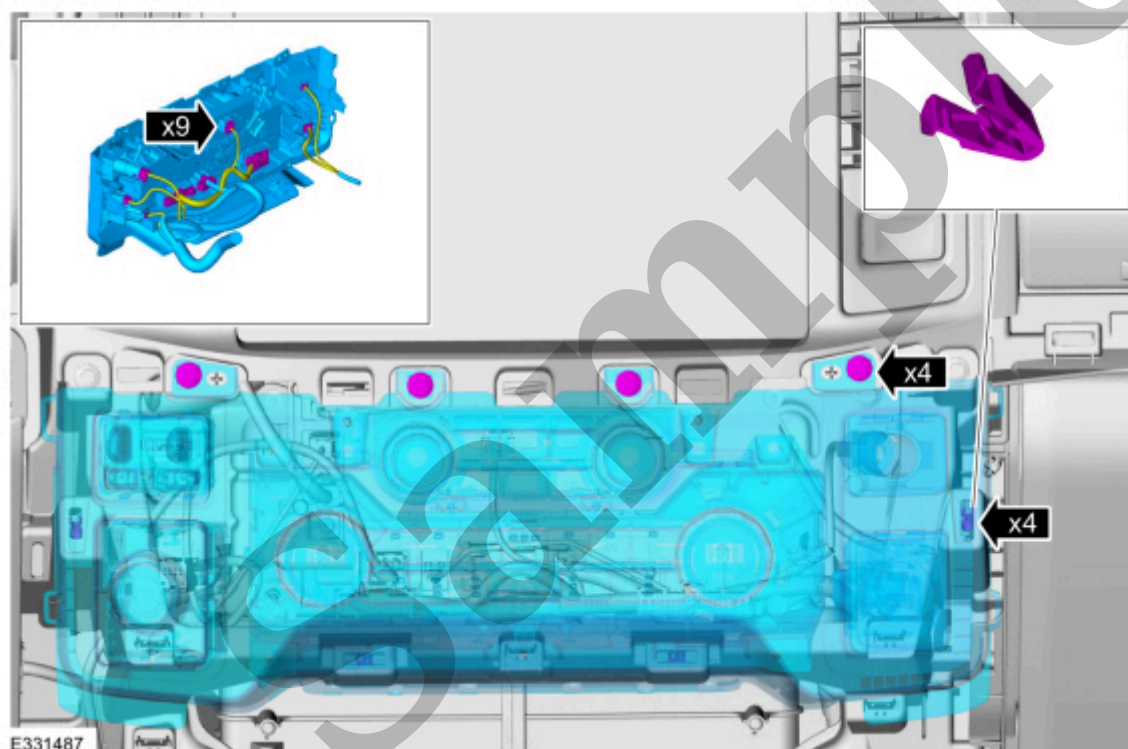


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Vehicles without a floor console

12. Remove the pin-type retainers and the RH (right-hand) lower instrument panel closeout trim panel.


14. Release the clips and remove the instrument panel lower trim panel.

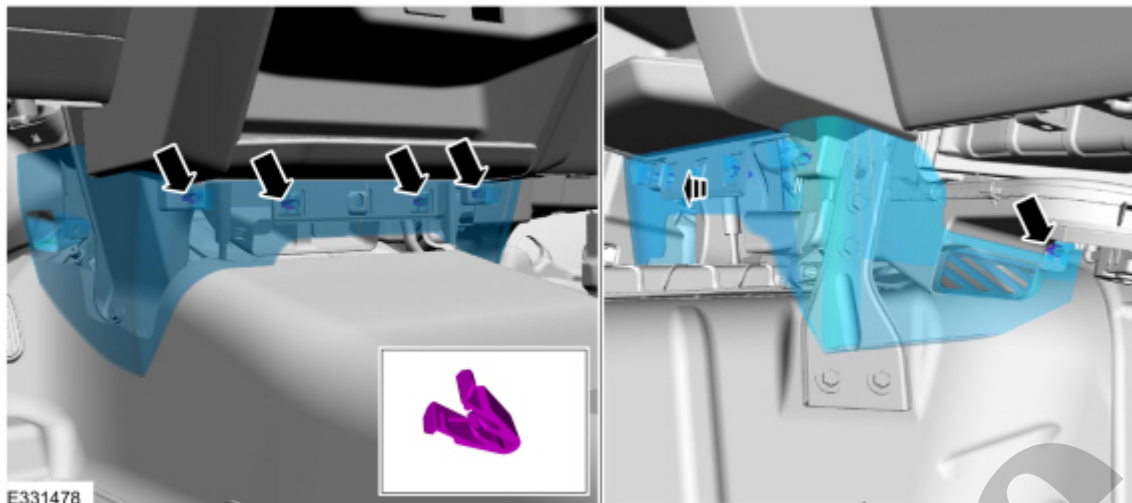

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

15. Release the clips and remove the LH (left-hand) lower centerstack trim panel.

Use the General Equipment: Interior Trim Remover

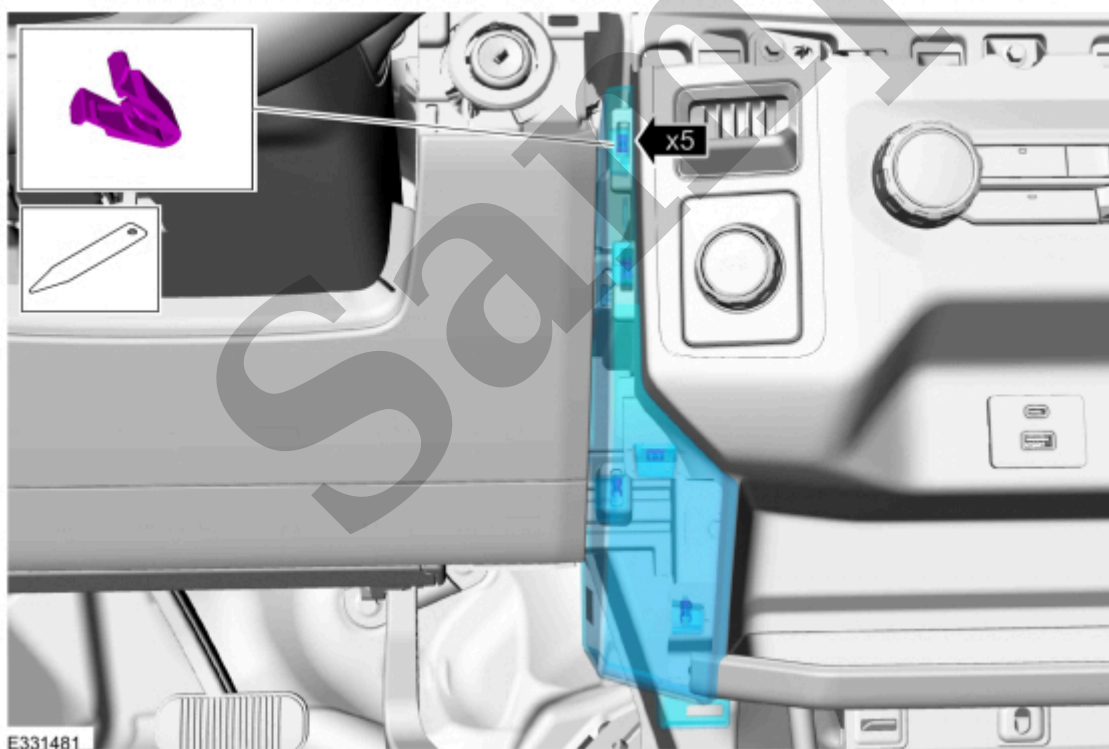

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

16. Release the clips and remove the RH (right-hand) lower centerstack trim panel.

Use the General Equipment: Interior Trim Remover