

Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2013 LEXUS GS OEM Service and Repair Workshop Manual




[Go to manual page](#)

AREA	MEASUREMENT
A	10 mm (0.394 in.)

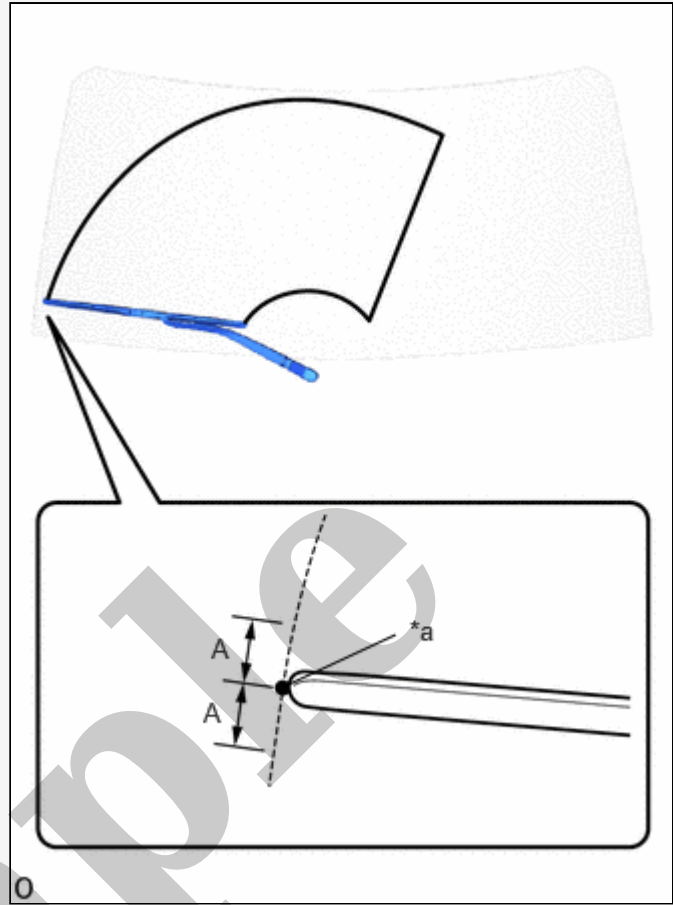
OK:
The wiper blade stops at the position shown in the illustration.






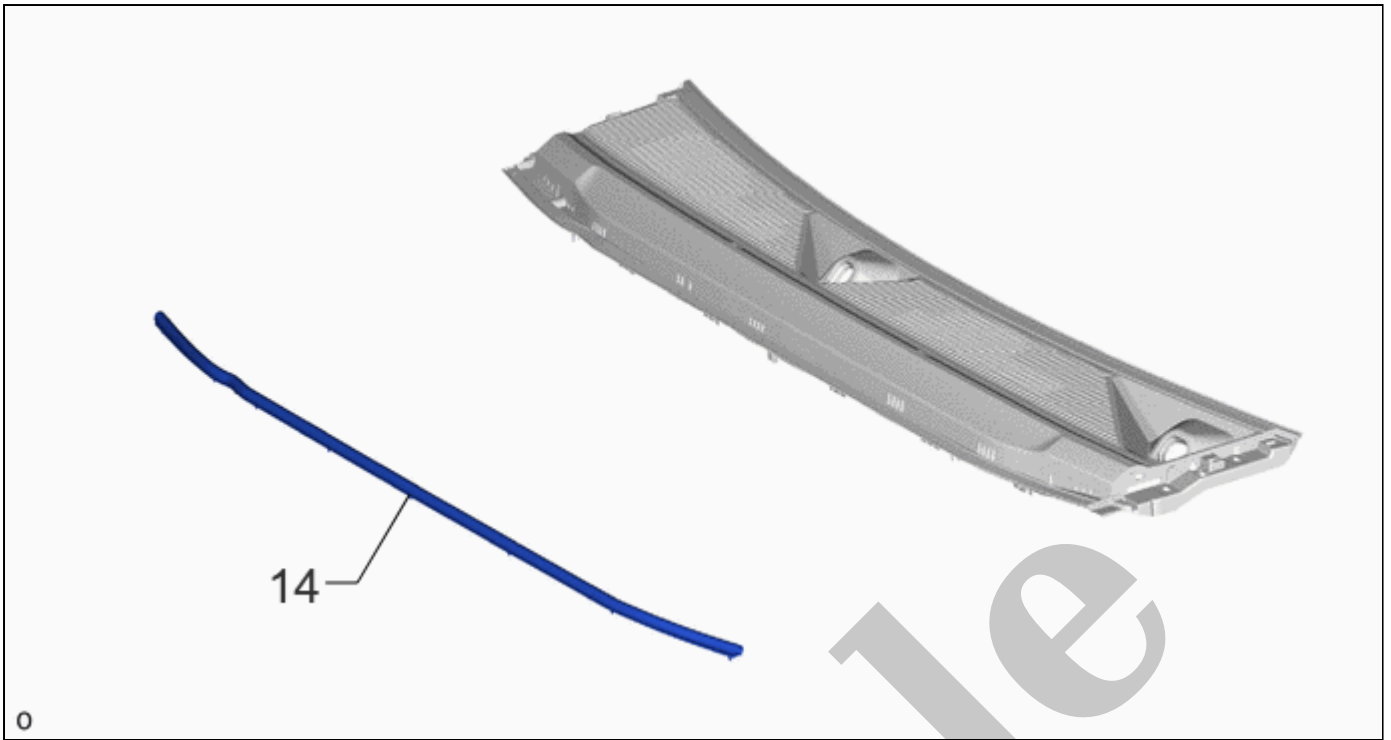
*a Alignment Mark

PROCEDURE		PART NAME CODE			
3	FRONT WIPER ARM AND BLADE ASSEMBLY RH	-	INFO	-	-
4	NO. 2 FRONT FENDER TO COWL SIDE SEAL LH	53869C	-	-	-
5	NO. 2 FRONT FENDER TO COWL SIDE SEAL RH	53868F	-	-	-
6	FRONT FENDER TO COWL SIDE SEAL LH	53867H	INFO	-	-
7	FRONT FENDER TO COWL SIDE SEAL RH	53866J	INFO	-	-
8	WIPER MOTOR MOUNTING SUPPORT SUB-ASSEMBLY	55709D	-	-	-

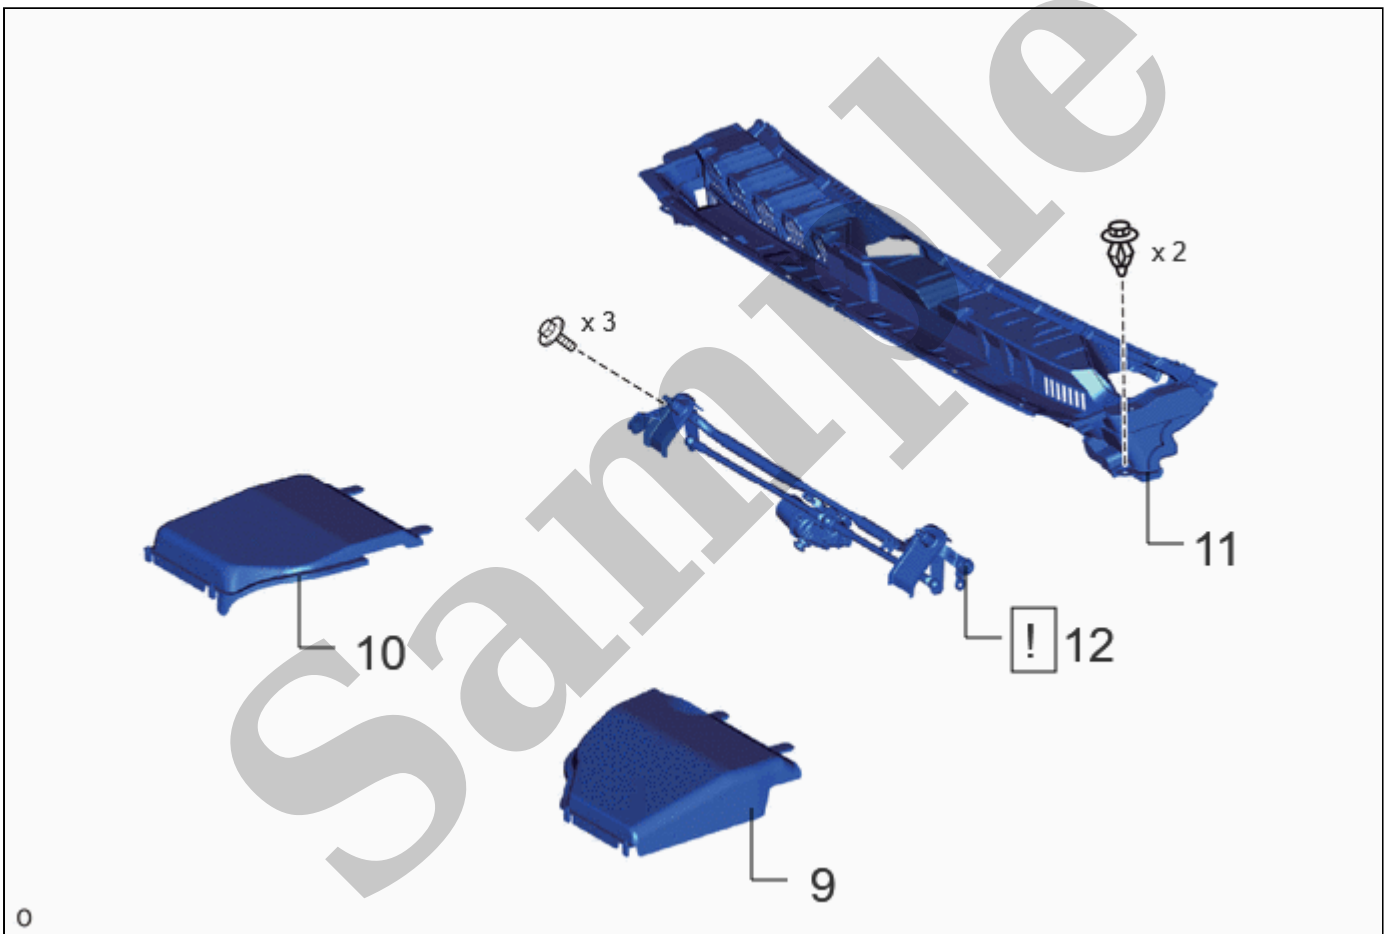•	Non-reusable part	-	-
---	-------------------	---	---



PROCEDURE		PART NAME CODE			
9	ENGINE SIDE COVER LH	51474B	-	-	-
10	ENGINE SIDE COVER RH	51473C	-	-	-
11	COWL TOP VENTILATOR LOUVER SUB-ASSEMBLY	55708	-	-	-
12	WINDSHIELD WIPER MOTOR AND LINK ASSEMBLY	-	INFO	-	-




PROCEDURE		PART NAME CODE			
14	HOOD TO COWL TOP SEAL	53383B	-	-	-

PROCEDURE

1. REMOVE FRONT WIPER ARM HEAD CAP


	<p>HINT:</p> <ul style="list-style-type: none"> • Use the same procedure for the RH and LH sides. • The procedure described below is for the LH side.
--	--

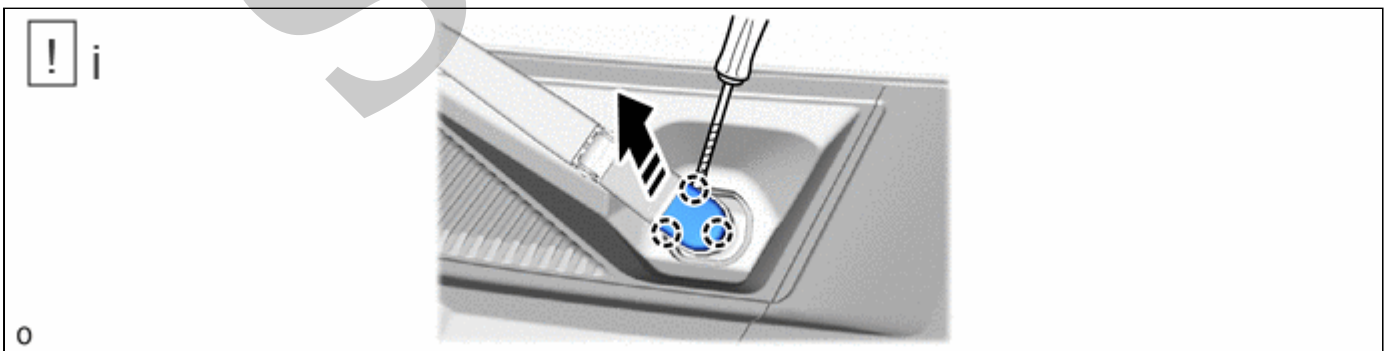

	Remove in this Direction	-	-
--	--------------------------	---	---

(1) Using a screwdriver with its tip wrapped with protective tape, detach the claw as shown in the illustration to remove the front wiper arm head cap.

2. REMOVE FRONT WIPER ARM AND BLADE ASSEMBLY LH


	Place Hand Here		Remove in this Direction
---	-----------------	---	--------------------------



5. REMOVE NO. 2 FRONT FENDER TO COWL SIDE SEAL RH

(a) Use the same procedure described for the LH side.

6. REMOVE FRONT FENDER TO COWL SIDE SEAL LH

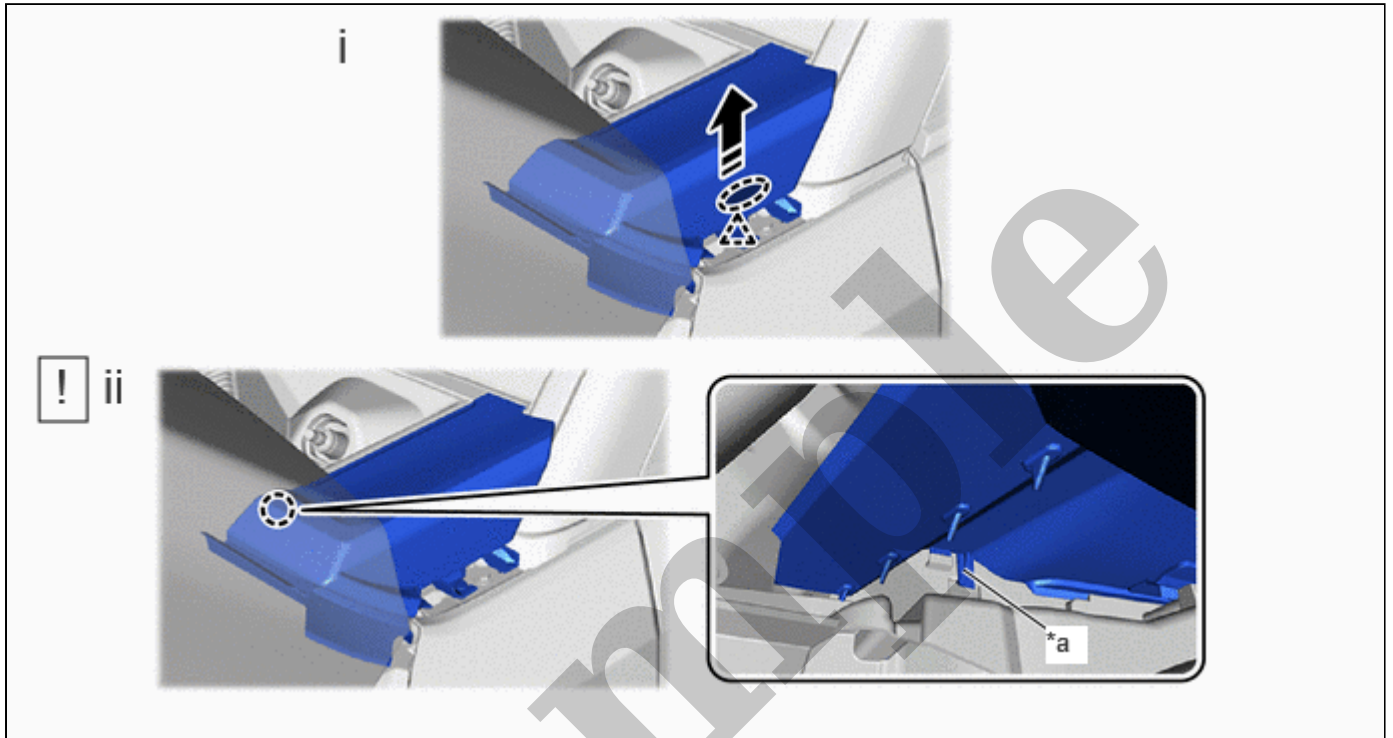(a) for Type A:




*a	Claw A	-	-
	Place Hand Here		Remove in this Direction

- (1) Place your hands at the position shown in the illustration and detach the clip.
- (2) Detach the claw A.

NOTICE:

Do not apply excessive force.

(b) for Type B:

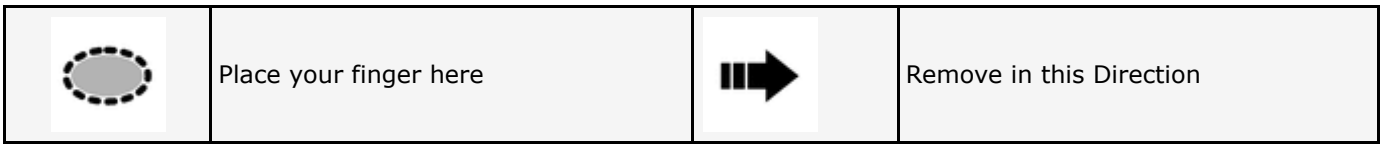

(1) Place your fingers at the position shown in the illustration and detach the claw.

NOTICE:


Do not apply excessive force.

(2) Detach the claw as shown in the illustration.

7. REMOVE FRONT FENDER TO COWL SIDE SEAL RH

(a) Use the same procedure described for the LH side.

8. REMOVE WIPER MOTOR MOUNTING SUPPORT SUB-ASSEMBLY

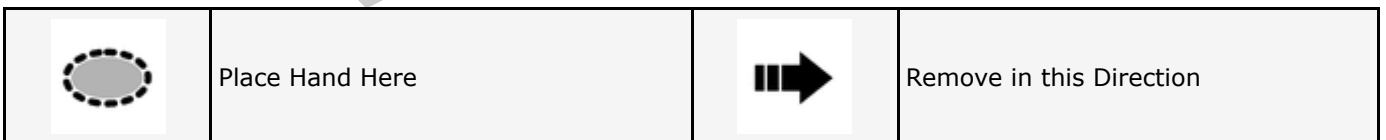



9. REMOVE ENGINE SIDE COVER LH

	Remove in this Direction	-	-
---	--------------------------	---	---


12. REMOVE WINDSHIELD WIPER MOTOR AND LINK ASSEMBLY

	<p>NOTICE: Be careful not to damage the windshield glass when removing the windshield wiper motor and link assembly.</p>
---	---

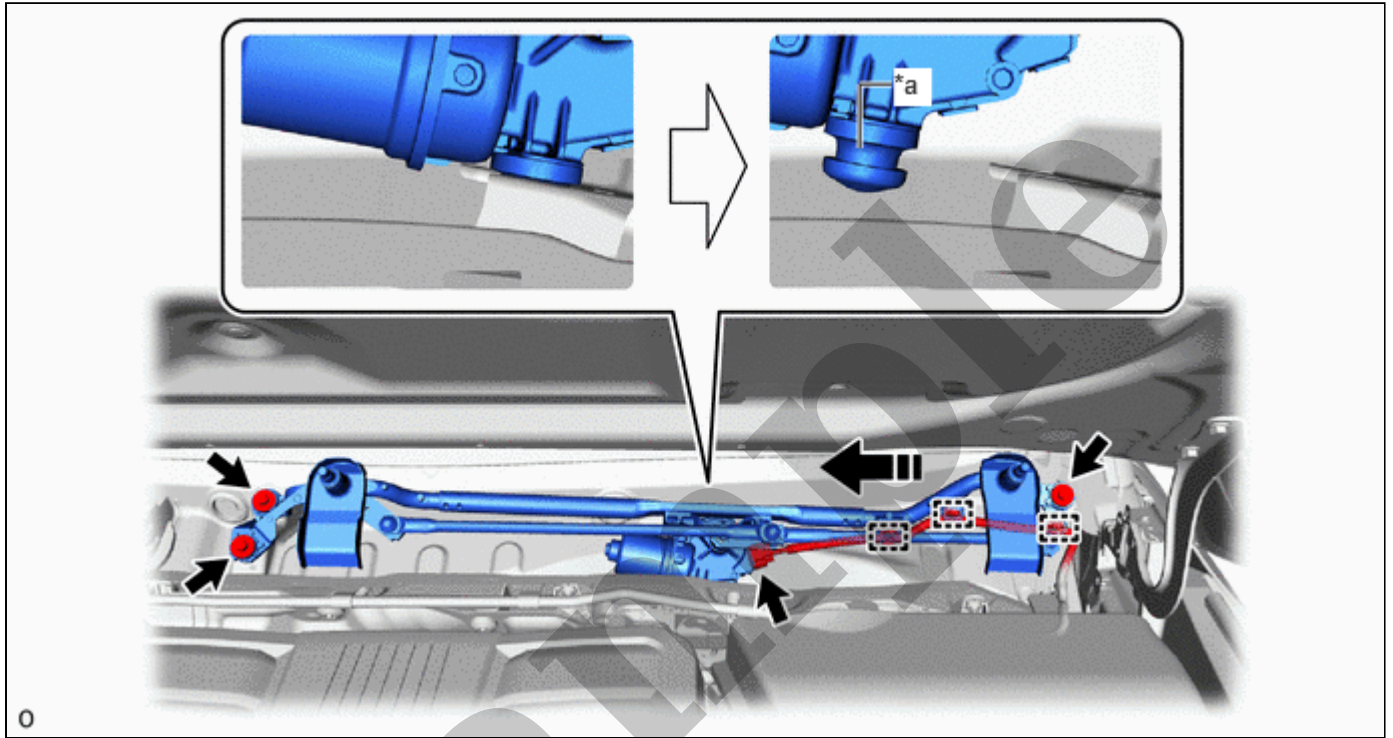

*a	Motor Grommet	-	-
	Remove in this Direction	-	-

13. REMOVE WINDSHIELD WIPER MOTOR ASSEMBLY

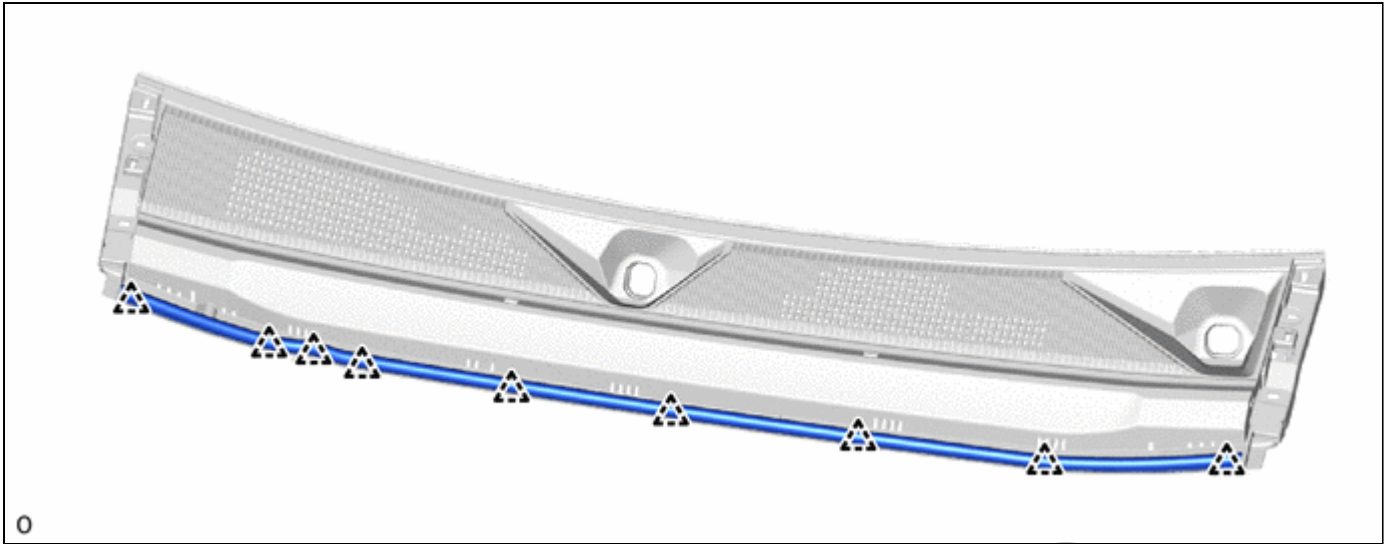

Sample

Last Modified: 10-07-2024	6.11:8.1.0	Doc ID: RM100000002HJ07
Model Year Start: 2024	Model: GX550	Prod Date Range: [12/2023 -]
Title: WIPER / WASHER: FRONT WIPER MOTOR: INSTALLATION; 2024 MY GX550 [12/2023 -]		


INSTALLATION

CAUTION / NOTICE / HINT


NOTICE:




Make sure to hold the front wiper arm while lifting it, as lifting the front wiper arm by the front wiper blade may damage or deform the front wiper blade.

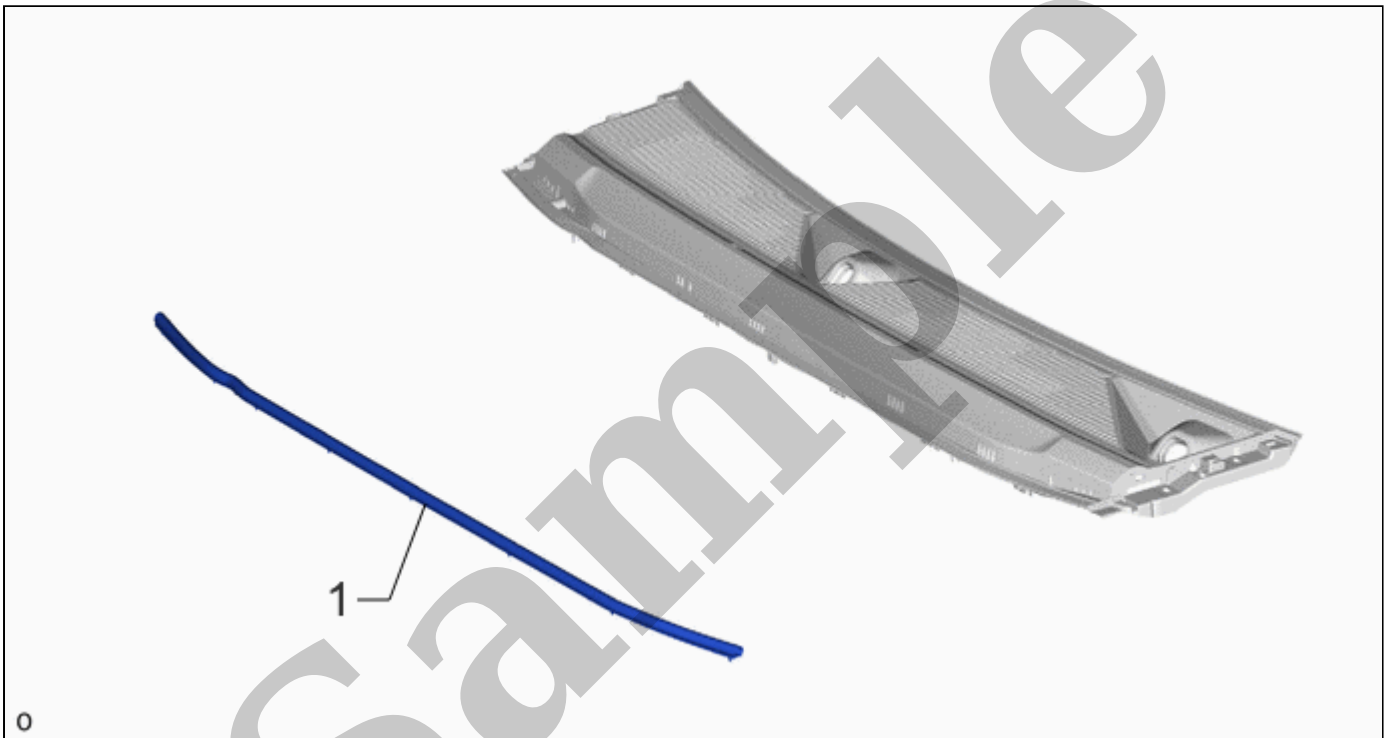COMPONENTS (INSTALLATION)

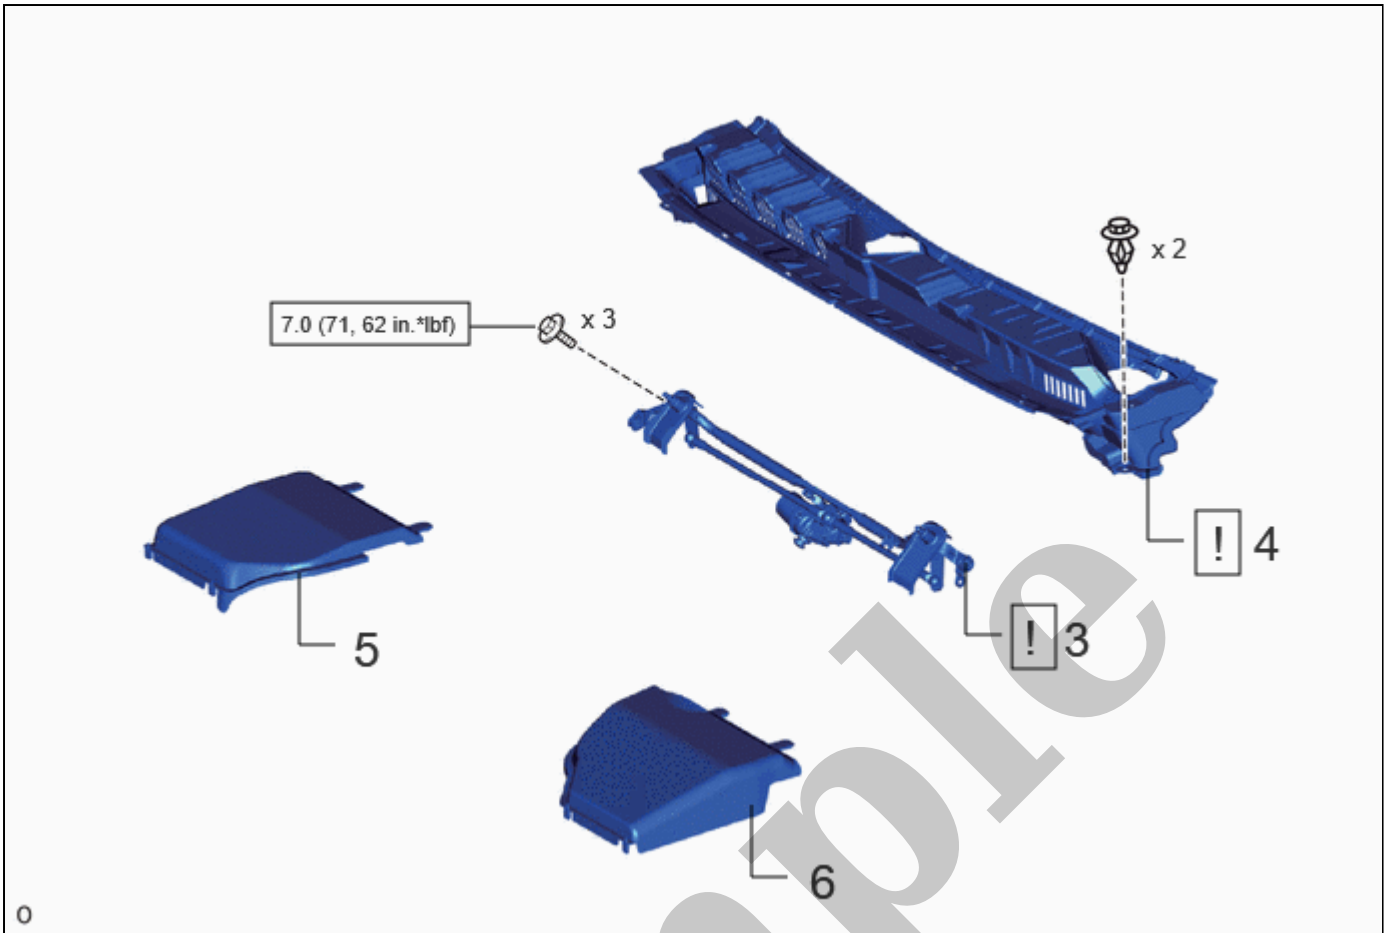

PROCEDURE		PART NAME CODE			
1	HOOD TO COWL TOP SEAL	53383B	-	-	-



PROCEDURE		PART NAME CODE			
3	WINDSHIELD WIPER MOTOR AND LINK ASSEMBLY	-	INFO	-	-
4	COWL TOP VENTILATOR LOUVER SUB-ASSEMBLY	55708	INFO	-	-
5	ENGINE SIDE COVER RH	51473C	-	-	-
6	ENGINE SIDE COVER LH	51474B	-	-	-