

Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2013 VOLVO V40 Cross Country OEM Service and Repair Workshop Manual

[Go to manual page](#)


4. Used when the component is not fully removed from the vehicle but only hung to the side.
5. Used for standard tools and special tools.
6. Used as background color for vehicle components.

REMOVAL

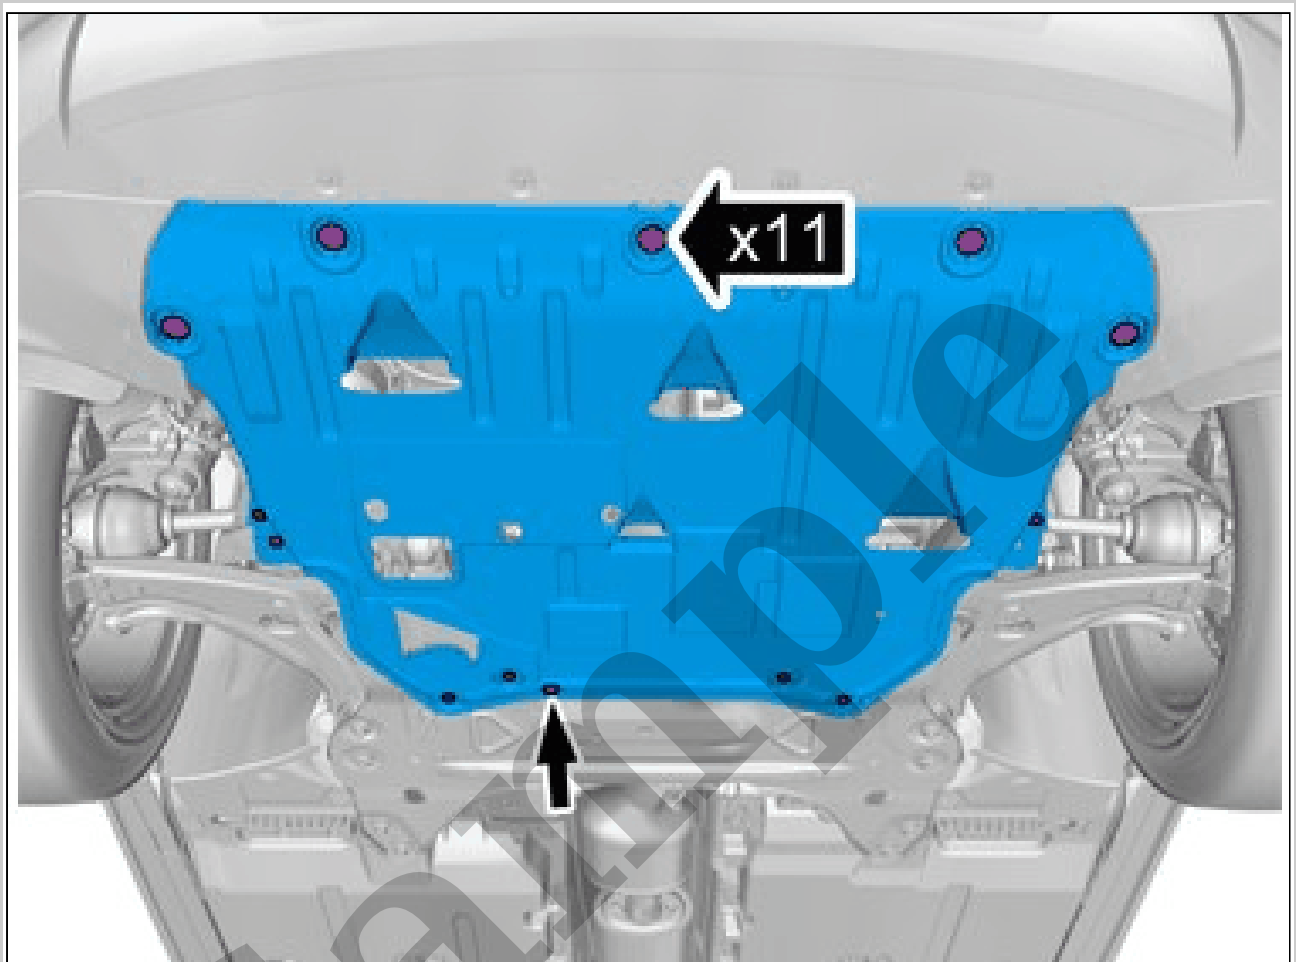


Courtesy of VOLVO CARS CORPORATION

1. Remove the screws.
 2. Remove the clip.
- The part is not to be reused.

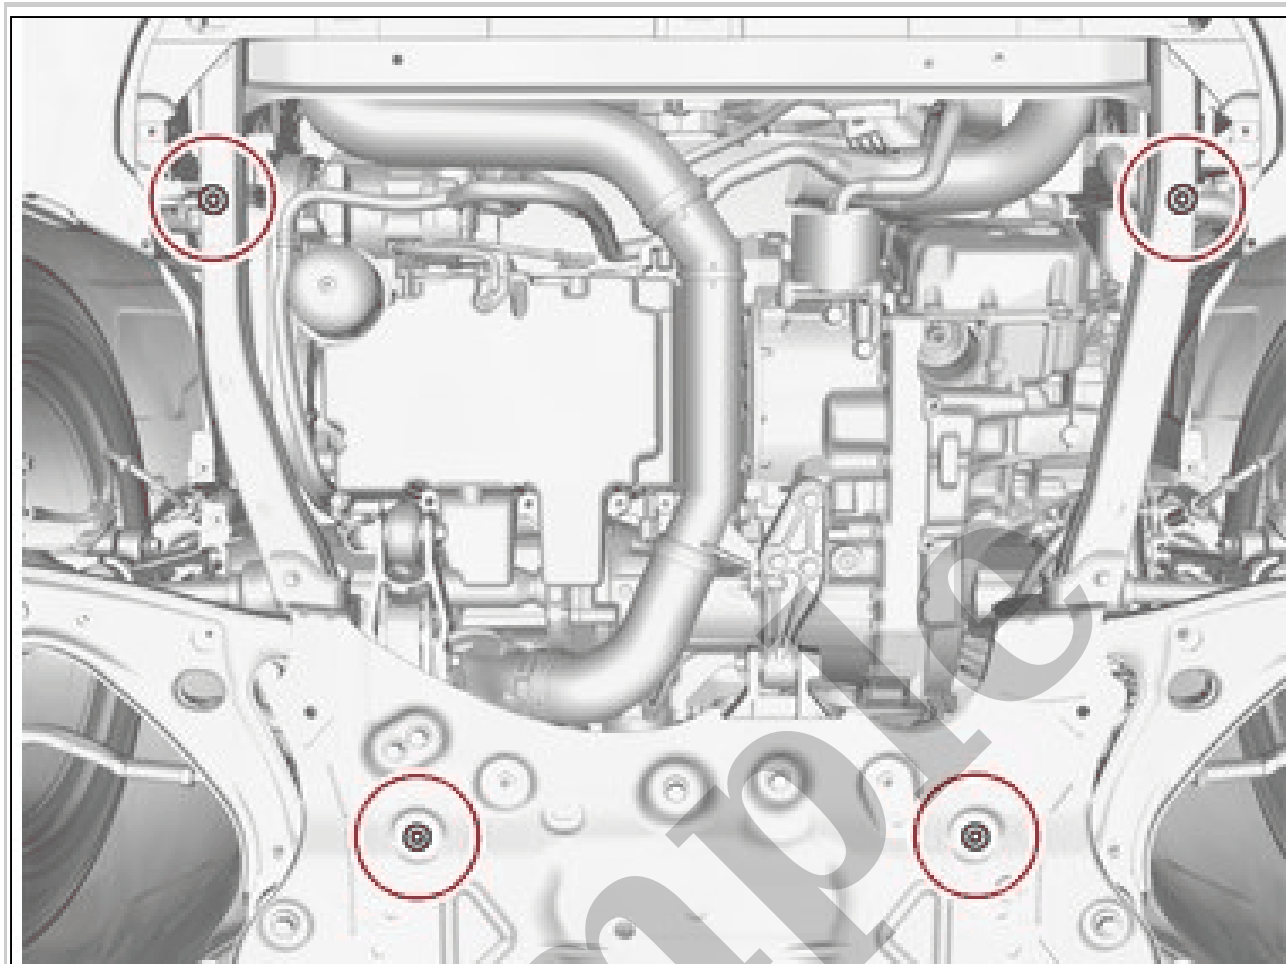


Courtesy of VOLVO CARS CORPORATION

Use: Rust inhibitor, low viscosity,

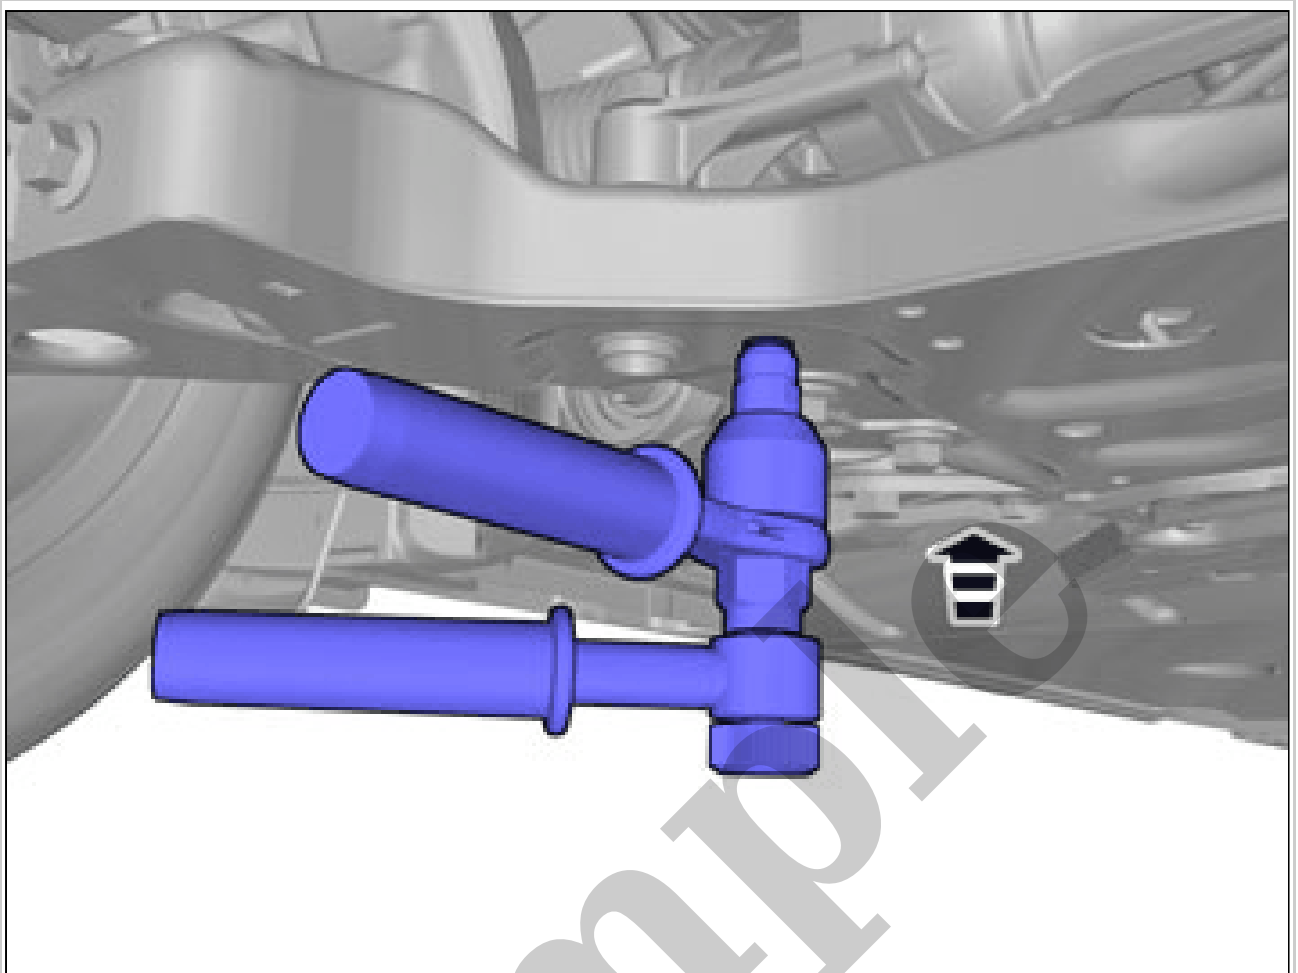

Courtesy of VOLVO CARS CORPORATION

Press the tool against the surface.
Hold the tool at right angles to the surface.

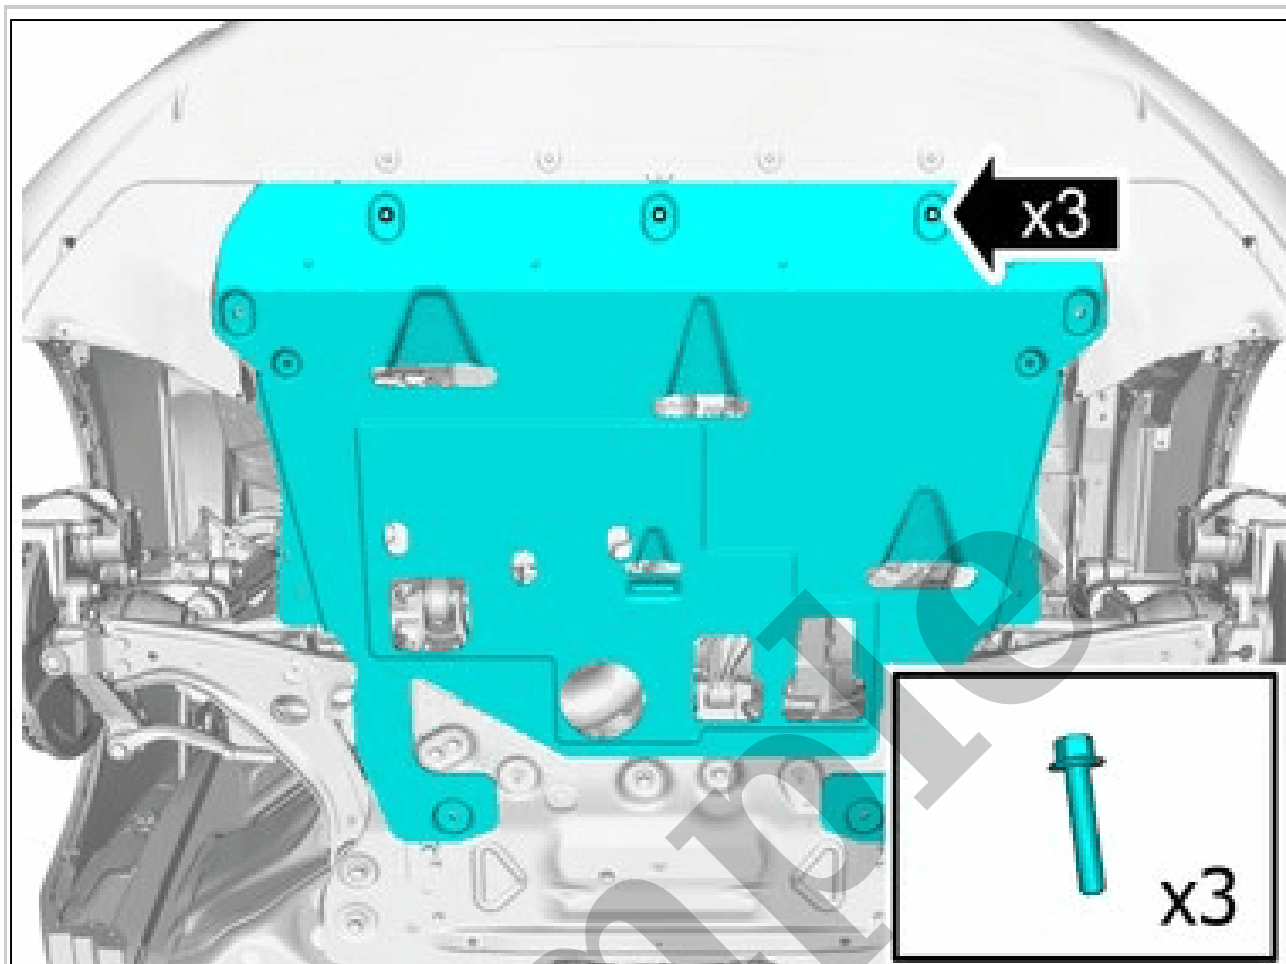


Courtesy of VOLVO CARS CORPORATION

Install components that come with the accessory kit.

Torque: M6, 10Nm



Courtesy of VOLVO CARS CORPORATION

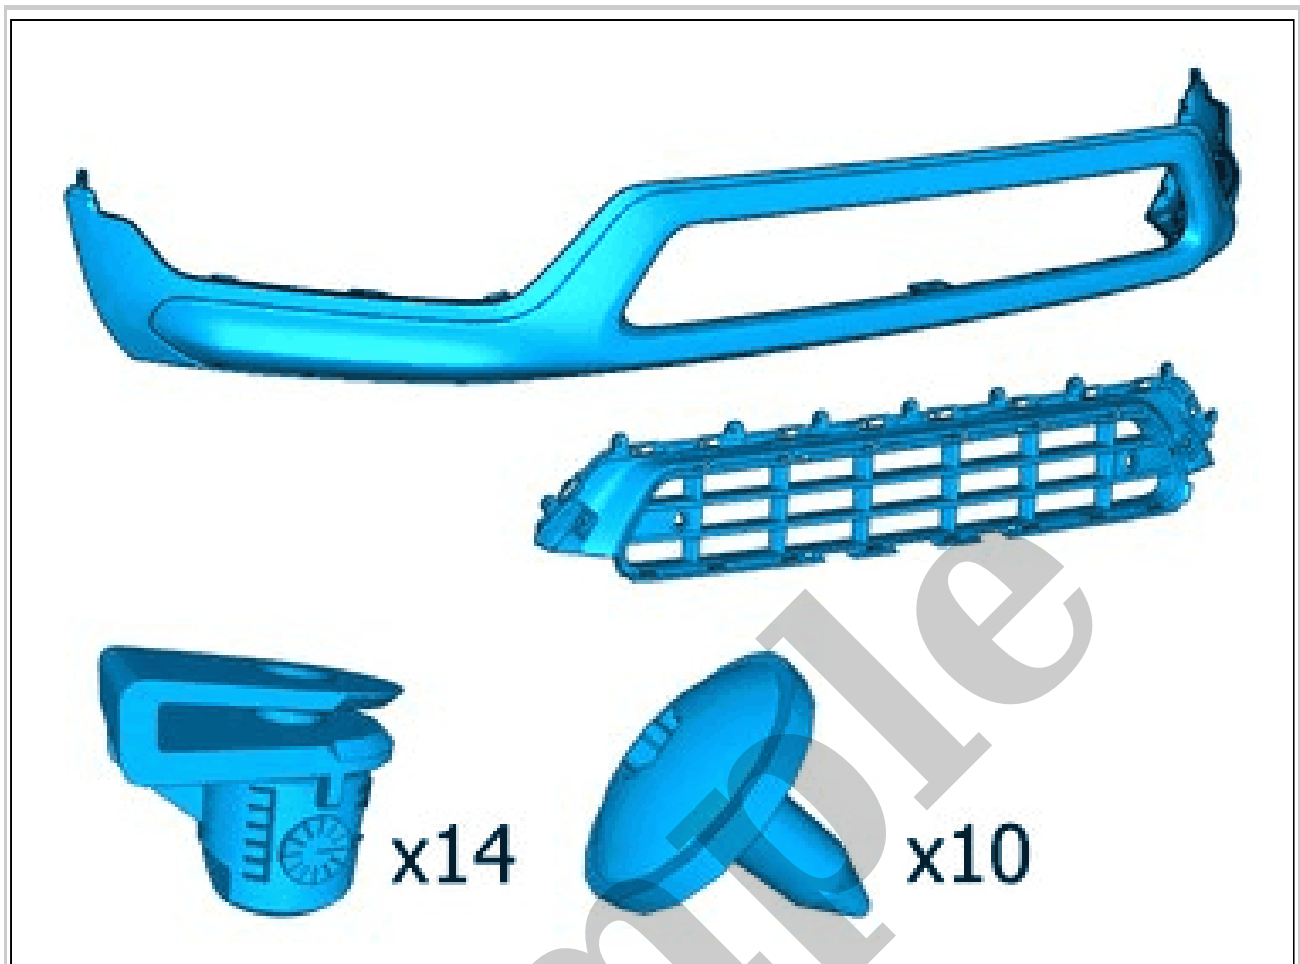


Courtesy of VOLVO CARS CORPORATION

INFORMATION


- Read through all of the instructions before starting installation.
- Notifications and warning texts are for your safety and to minimize the risk of something breaking during installation.
- Ensure that all tools stated in the instructions are available before starting installation.
- Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
- In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

COLOR SYMBOLS

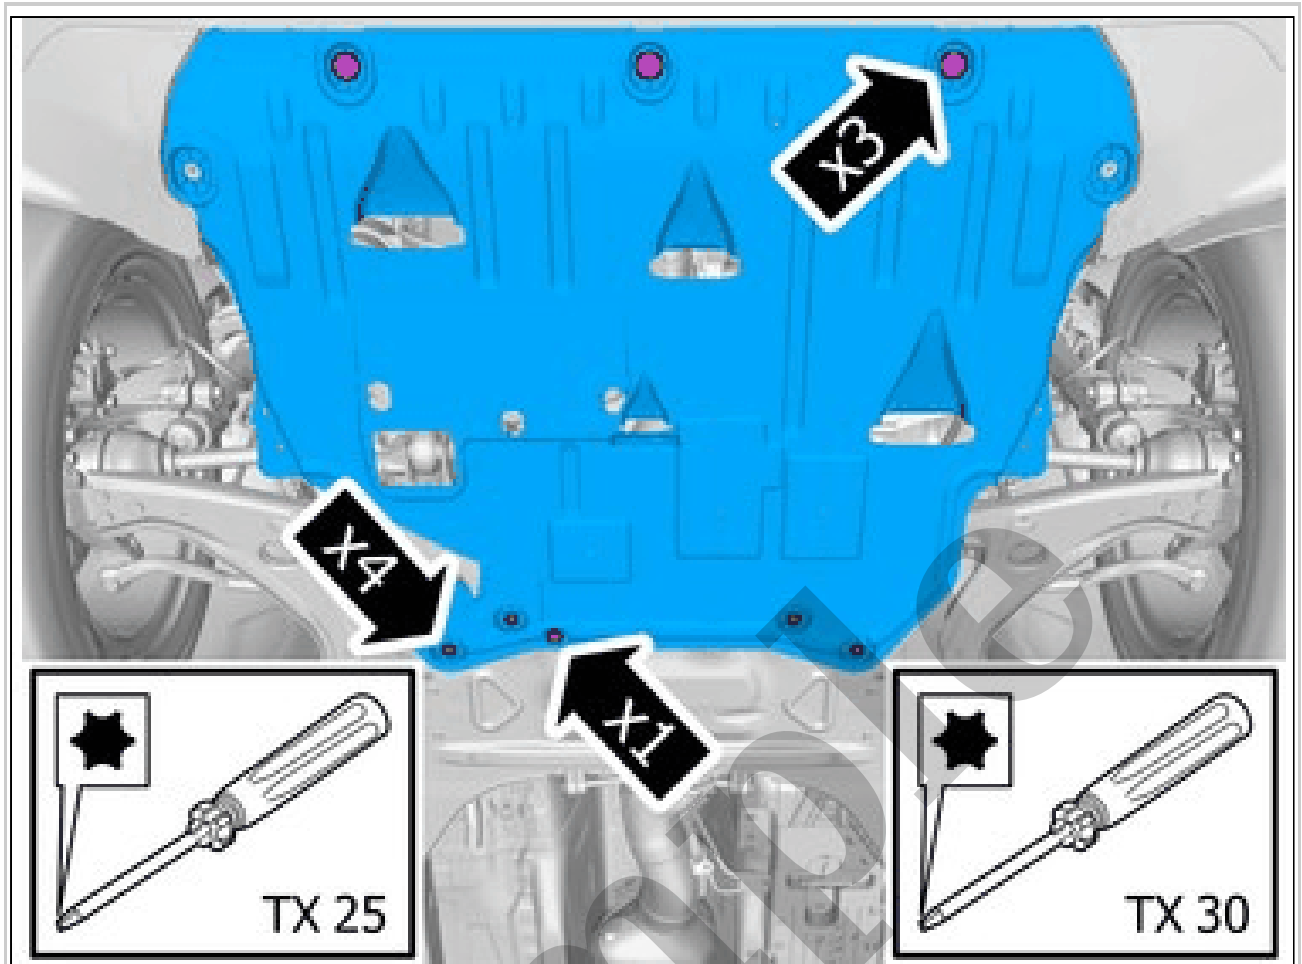


Courtesy of VOLVO CARS CORPORATION

- Remove the screws.
- Remove the clip.
- Remove the marked part.

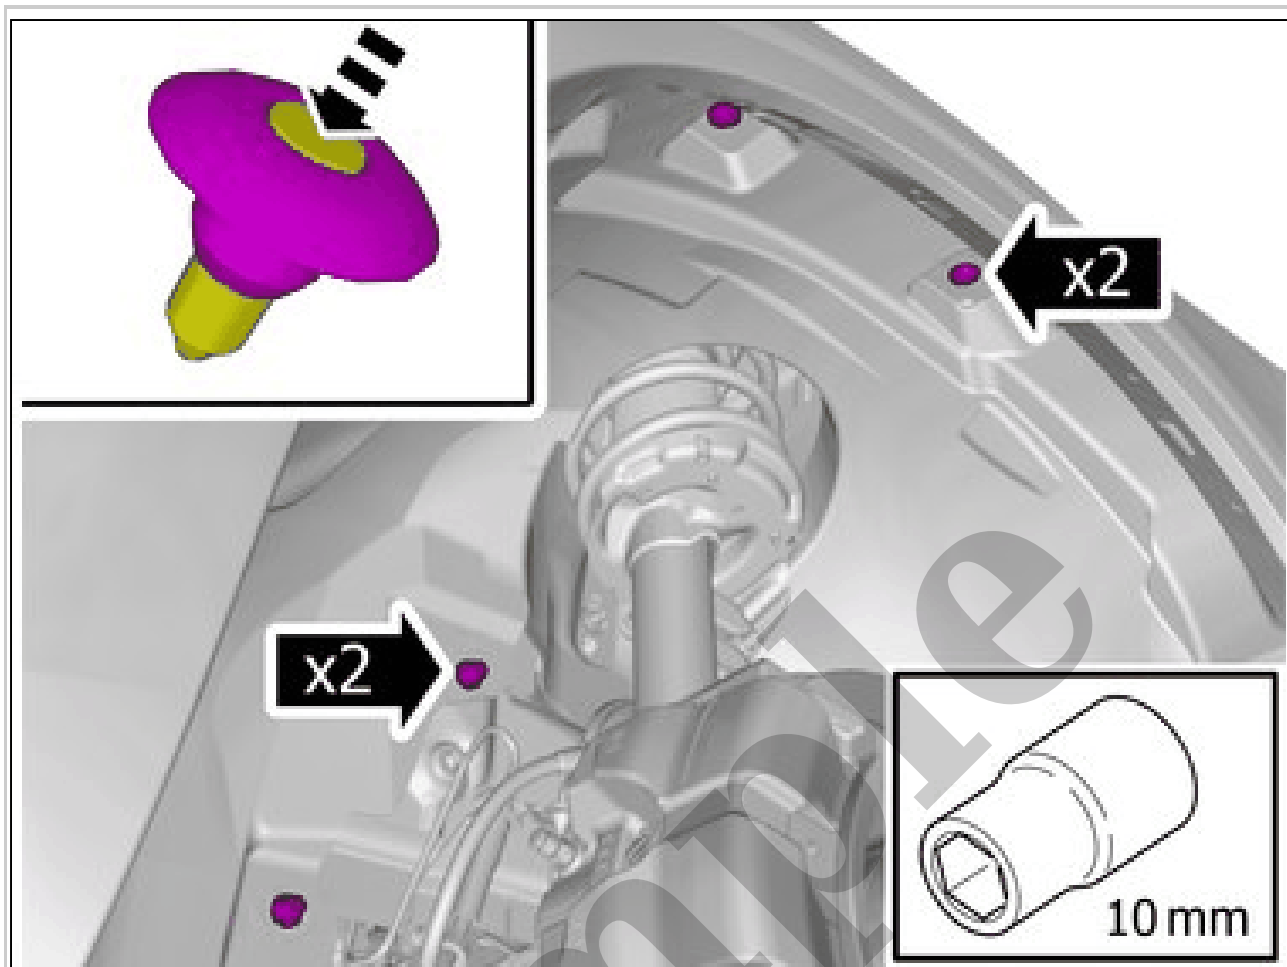

Courtesy of VOLVO CARS CORPORATION

Remove the nuts.
Remove the clips.

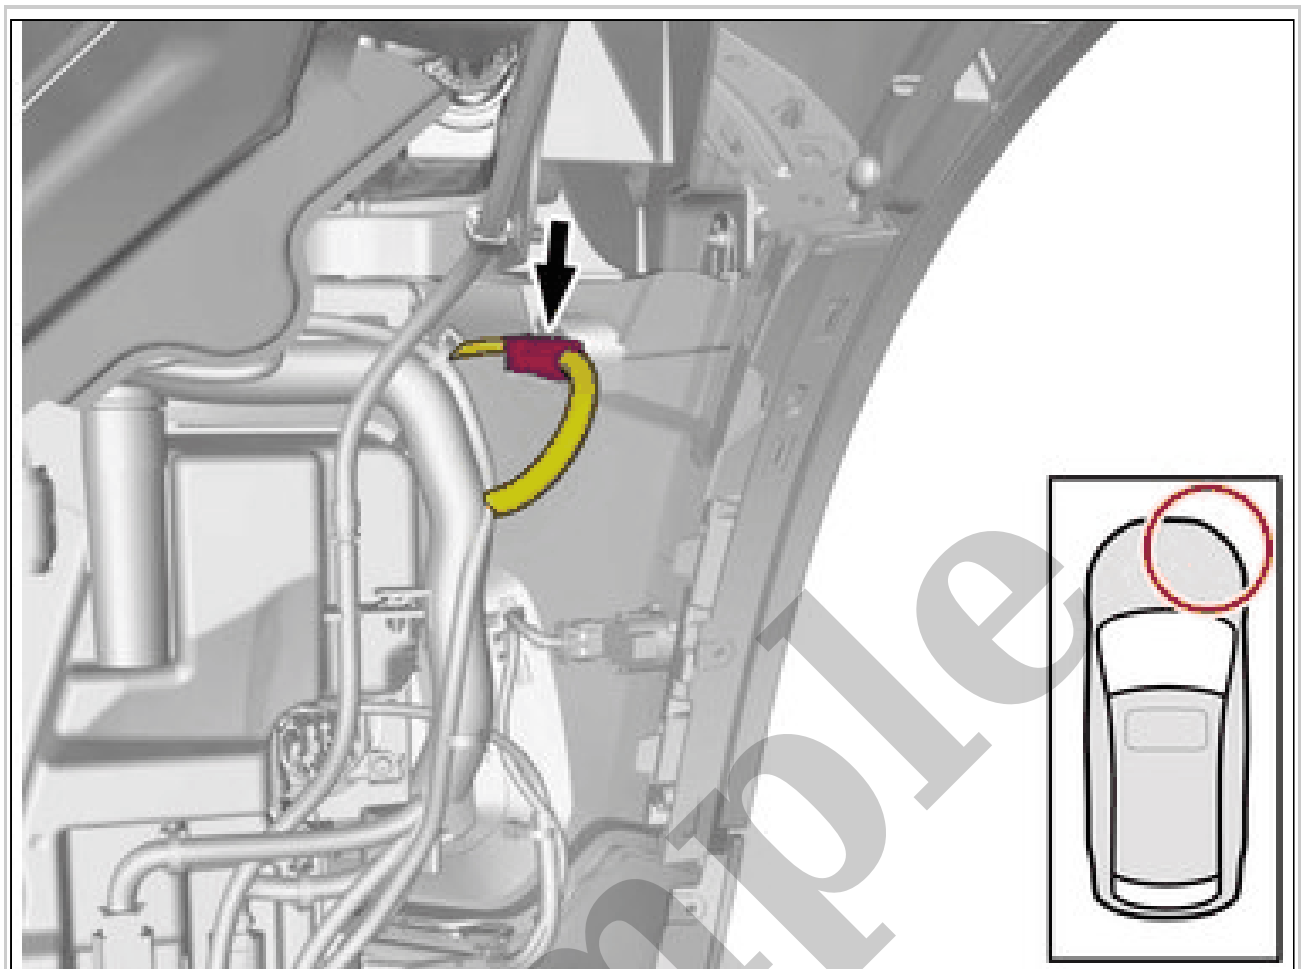

Courtesy of VOLVO CARS CORPORATION

NOTE: *The number of connectors may vary depending on the vehicle's equipment level.*

Disconnect the connector.