

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2014 JEEP Renegade OEM Service and Repair Workshop Manual

[Go to manual page](#)

YOUR CURRENT VEHICLE

B-Pillar Duct

B-PILLAR DUCT


REMOVAL

1. Remove the appropriate front seat ([Refer to Body/Seats, Front/SEAT, Front/Removal and Installation](#)) ([Refer To List 1](#)).
2. Remove the appropriate upper B-pillar trim ([Refer to Body/Interior/PANEL, B-Pillar Trim, Upper/Removal and Installation](#))([Refer To List 2](#)).

1 - Fasteners

2 - Upper C-Pillar Duct

2. Remove the fasteners and remove the upper C-pillar duct from the vehicle.

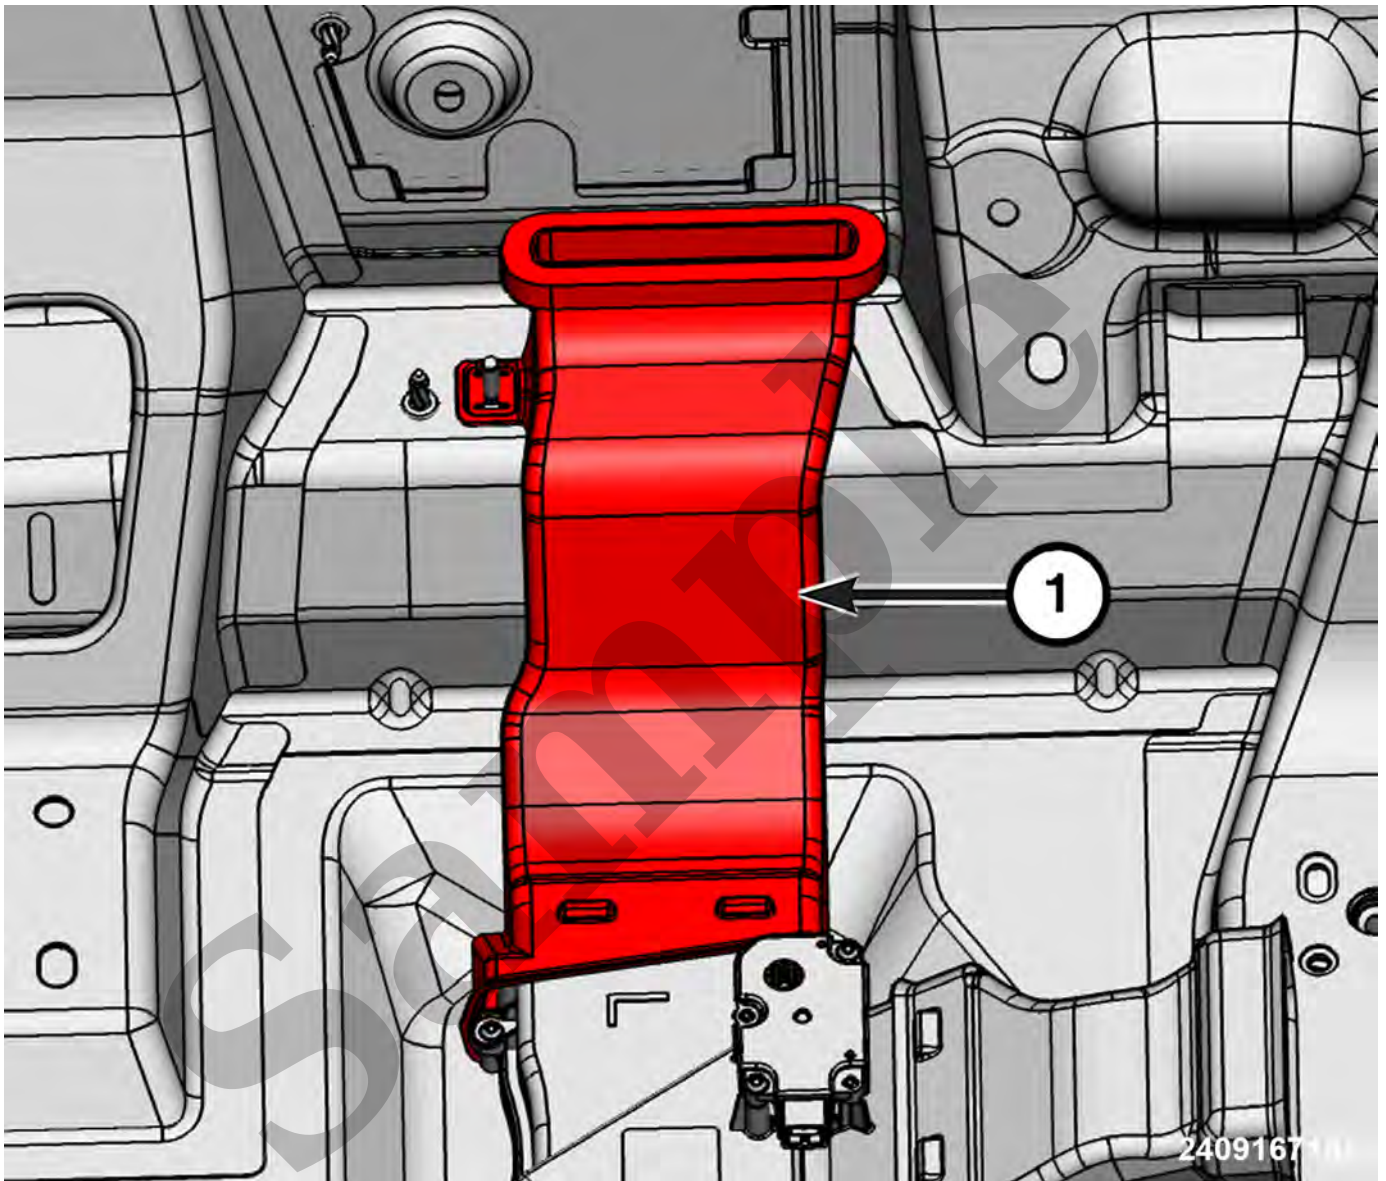

1 - Lower C-Pillar Duct

3. If removing the lower C-pillar duct, remove the appropriate third row seat ([Refer to Body/Seats, Third Row/SEAT, Third Row/Removal and Installation](#))(Refer To List 1).
4. Remove the lower C-pillar duct from the vehicle.

INSTALLATION

YOUR CURRENT VEHICLE

Third Row Distribution Duct


THIRD ROW DISTRIBUTION DUCT

NOTE

Left side shown, right side similar.

REMOVAL

1. Remove the appropriate left or right lower C-pillar duct ([Refer to Heating and Air Conditioning/Distribution/DUCT, Distribution/Removal and Installation](#)) .

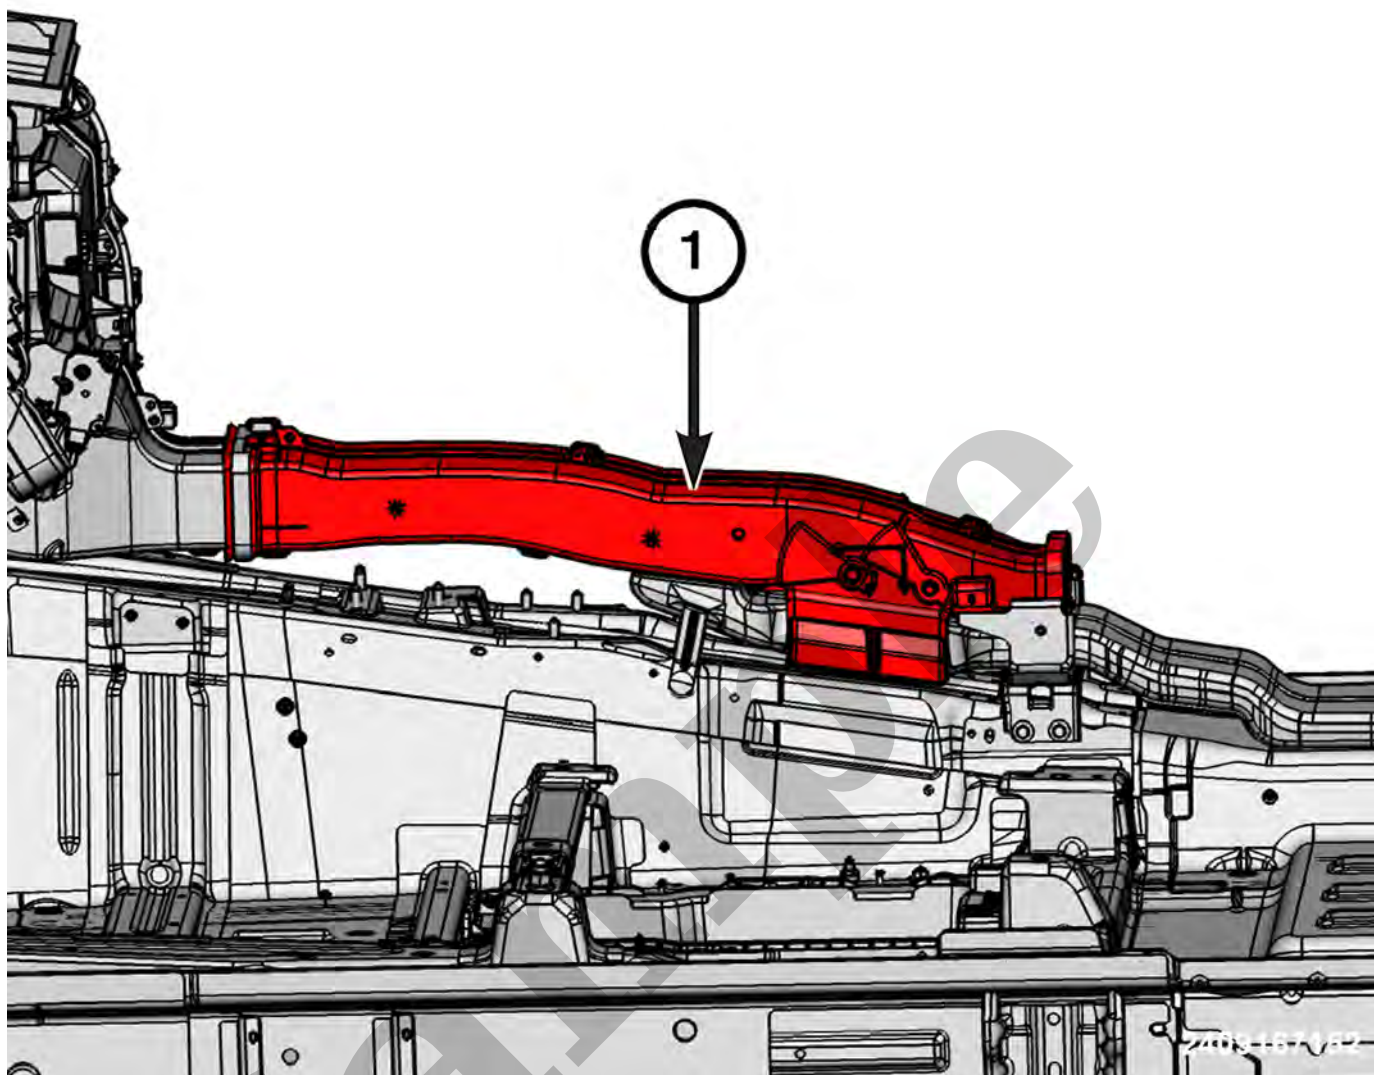

1 - Floor Console Duct

4. Remove the floor console duct from the vehicle.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Tighten the fasteners securely.

Refer To List:

List 1

- [23 - Body / Interior / CONSOLE, Floor / Removal and Installation](#)
- [23 - Body / Interior / CONSOLE, Floor, End Cap / Removal and Installation](#)

- [23 - Body / Seats, Second Row / SEAT, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / SEAT, Third Row / Removal and Installation](#)

Sample

1 - Rear Floor Distribution Duct

2. Remove the rear floor distribution duct.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.

Sample

1 - Third Row Floor Distribution Duct

2. Remove the third row floor distribution duct from the third row distribution duct.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.

Refer To List:

List 1

- [23 - Body / Seats, Front / SEAT, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / SEAT, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / SEAT, Third Row / Removal and Installation](#)

YOUR CURRENT VEHICLE

C-Pillar Air Outlet


C-PILLAR AIR OUTLET

NOTE

Left side shown, right side similar.

NOTE

When performing the repair procedure take the proper precautions to protect the vehicle from any cosmetic damage.

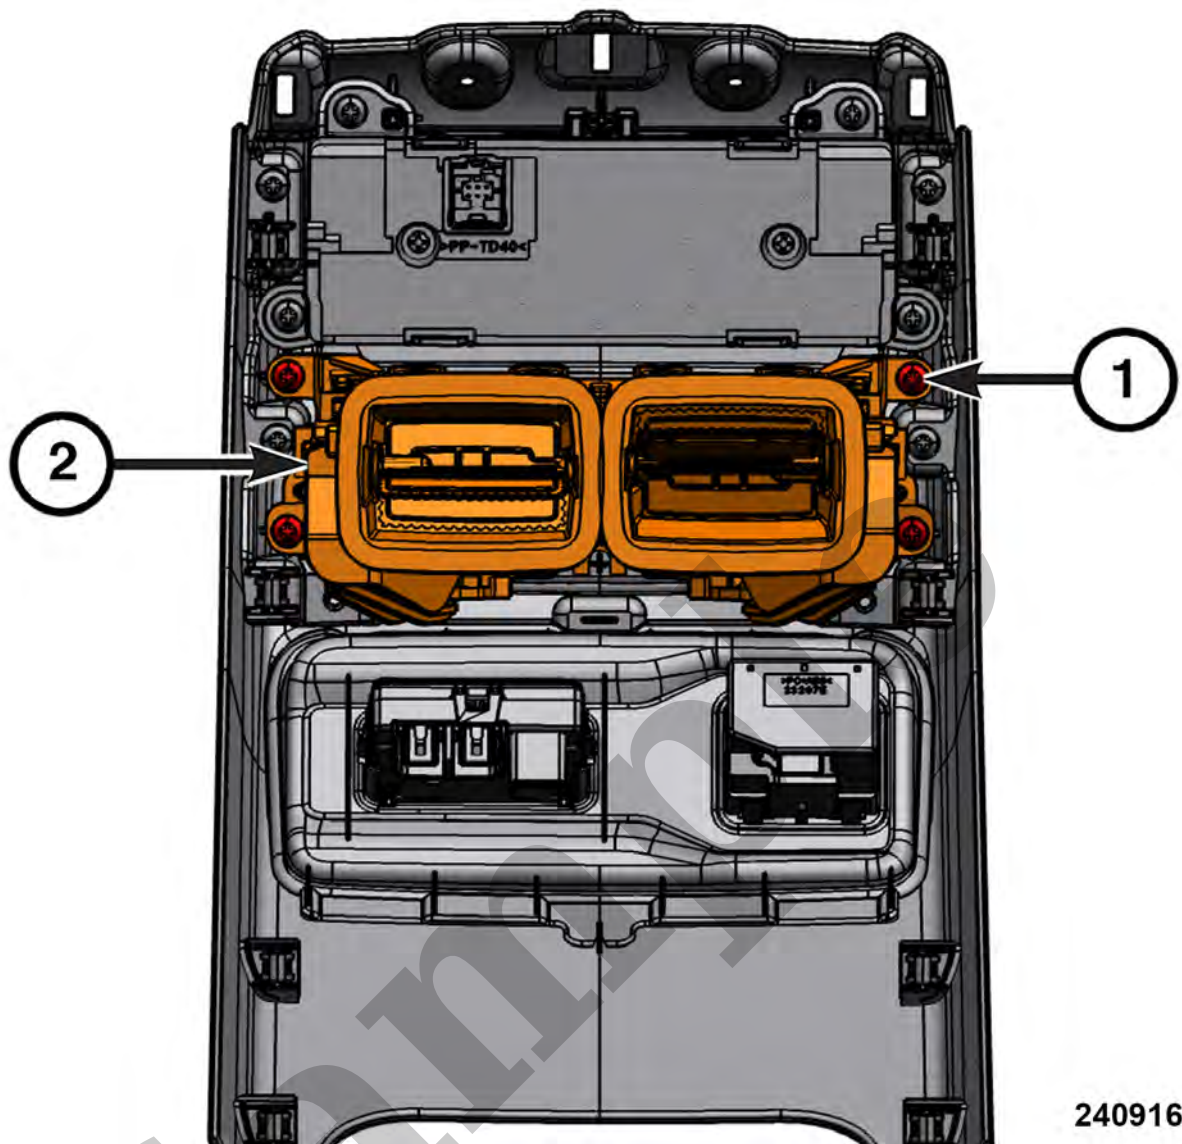

2409167161

1 - Fasteners

2 - End Cap Air Outlets

2. Remove the fasteners that secure end cap air outlets to the floor console end cap.

NOTE

If the foam seal on the end cap air outlets is deformed or damaged, the seal must be replaced.

3. Remove the end cap air outlets from the floor console end cap.

INSTALLATION