

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2014 NISSAN Pathfinder OEM Service and Repair Workshop Manual

[Go to manual page](#)

1. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AC1-F2 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AC1	F3	Low voltage reverse current	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	An error in the DC/DC converter internal system is detected.
			Detection time	2 seconds

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

DC/DC converter output current is stopped

1. PRECONDITIONING

- Press the power switch OFF with the driver's side door open, get out of the vehicle, close the driver's side door and wait for at least 4 minutes.

CAUTION:

Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors while waiting.

- Check that 12 V battery voltage is 11 V or more.

>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Erase “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.
2. Set the vehicle to READY and wait at least 2 seconds.
3. Check “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.

Is DTC detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

1. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AC1-F3 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AC1	F4	Low voltage reverse current	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	An error in the DC/DC converter internal system is detected.
			Detection time	—

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

DC/DC converter output is stopped

Sample

1. PRECONDITIONING

- Press the power switch OFF with the driver's side door open, get out of the vehicle, close the driver's side door and wait for at least 4 minutes.

CAUTION:

Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors while waiting.

- Check that 12 V battery voltage is 11 V or more.

>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Erase “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.
2. Set the vehicle to READY and wait at least 1 second.
3. Check “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.

Is DTC detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

1. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AC1-F4 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AA6	9E	Input voltage sensor/ECU switch	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	DC/DC converter cannot be shut off. Alternatively the shut off time is too long.
			Detection time	—

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

Not applicable

1. PRECONDITIONING

- Press the power switch OFF with the driver's side door open, get out of the vehicle, close the driver's side door and wait for at least 4 minutes.

CAUTION:

Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors while waiting.

- Check that 12 V battery voltage is 11 V or more.

>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Erase “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.
2. Set the vehicle to READY.
3. Check “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.

Is DTC detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END