

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2014 NISSAN Patrol OEM Service and Repair Workshop Manual

[Go to manual page](#)

1. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AA6-A3 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AAD	18	High voltage current sensor error	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	An error in the DC/DC converter internal system is detected.
			Detection time	1 second

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

Not applicable

Sample

1. PRECONDITIONING

- Press the power switch OFF with the driver's side door open, get out of the vehicle, close the driver's side door and wait for at least 4 minutes.

CAUTION:


Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors while waiting.

- Check that 12 V battery voltage is 11 V or more.

>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Erase “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.
2. Set the vehicle to READY and wait at least 1 second.
3. Check “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.

Is DTC detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

1. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AAD-18 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AAD	19	High voltage current sensor error	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	An error in the DC/DC converter internal system is detected.
			Detection time	1 second

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

Not applicable

Sample

1. PRECONDITIONING

- Press the power switch OFF with the driver's side door open, get out of the vehicle, close the driver's side door and wait for at least 4 minutes.

CAUTION:

Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors while waiting.

- Check that 12 V battery voltage is 11 V or more.

>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Erase “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.
2. Set the vehicle to READY and wait at least 1 second.
3. Check “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.

Is DTC detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

1. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AAD-19 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AAD	48	High voltage current sensor error	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	An error in the DC/DC converter internal system is detected.
			Detection time	1 second

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

DC/DC converter output is stopped

1. PRECONDITIONING

- Press the power switch OFF with the driver's side door open, get out of the vehicle, close the driver's side door and wait for at least 4 minutes.

CAUTION:

Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors while waiting.

- Check that 12 V battery voltage is 11 V or more.

>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Erase “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.
2. Set the vehicle to READY and wait at least 1 second.
3. Check “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.

Is DTC detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END