

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2014 NISSAN Primera Sedan OEM Service and Repair Workshop Manual

[Go to manual page](#)

1. PERFORM SELF-DIAGNOSIS OF VCM

 With CONSULT

1. Power switch ON.
2. Check “self-diagnostic result” result in “EV/HEV” using CONSULT.

Is DTC detected?

YES>>

Perform the trouble diagnosis for the detected DTC.

NO>>

[GO TO 2.](#)

2. PERFORM SELF-DIAGNOSIS OF HV BATTERY

 With CONSULT

Check “self-diagnostic result” result in “HIGH VOLTAGE BATTERY” and “HIGH VOLTAGE BATTERY 2” using CONSULT.

Is DTC detected?

YES>>

Perform the trouble diagnosis for the detected DTC.

NO>>

[GO TO 3.](#)

3. PERFORM SELF-DIAGNOSIS OF INVERTER

 With CONSULT

Check “self-diagnostic result” result in “MOTOR CONTROL” using CONSULT.

Is DTC detected?

YES>>

Perform the trouble diagnosis for the detected DTC.

NO>>

[GO TO 4.](#)

4. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AAD-48 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AAD	49	High voltage current sensor error	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	An error in the DC/DC converter internal system is detected.
			Detection time	1 second

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

Not applicable

1. PRECONDITIONING

- Press the power switch OFF with the driver's side door open, get out of the vehicle, close the driver's side door and wait for at least 4 minutes.

CAUTION:

Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors while waiting.

- Check that 12 V battery voltage is 11 V or more.

>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Erase “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.
2. Set the vehicle to READY and wait at least 1 second.
3. Check “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.

Is DTC detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

1. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AAD-49 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AAD	64	High voltage current sensor error	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	An error in the DC/DC converter internal system is detected.
			Detection time	1 second

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

Not applicable

Sample

1. PRECONDITIONING

- Press the power switch OFF with the driver's side door open, get out of the vehicle, close the driver's side door and wait for at least 4 minutes.

CAUTION:

Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors while waiting.

- Check that 12 V battery voltage is 11 V or more.

>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

- Erase “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.
- Set the vehicle to READY.
- Set the vehicle to the conditions below.

Rear window defogger	ON
Blower fan speed	MAX
Wiper	ON

- Check “self-diagnostic result” in “DC/DC CONVERTER” using CONSULT.

Is DTC detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

1. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

 With CONSULT

Perform DTC confirmation procedure again. Refer to [Confirmation Procedure](#).

Is DTC P1AAD-64 detected again?

YES>>

Replace DC/DC converter. Refer to [DC/DC CONVERTER : Disassembly & Assembly](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1AAE	31	Temperature sensor/System error 1	Diagnosis condition	READY, AUTO ACC or power switch ON
			Signal	—
			Threshold	An error in the DC/DC converter internal system is detected.
			Detection time	1 second

POSSIBLE CAUSE

DC/DC converter

FAIL-SAFE

DC/DC converter output current is stopped

Sample