

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2015 Chevrolet Colorado Service and Repair Manual

[Go to manual page](#)

the memory seat module through the serial data circuit where they are stored for memory mirror operation. When the memory seat module receives a memory recall command, the memory seat module will send the go to position commands to the outside mirror switch and passenger window switch. The switches will then drive the appropriate mirror motors to the commanded position sensor settings.

Conditions for Running the DTC

Battery voltage must be between 9–16 V.

Conditions for Setting the DTC

B154A 39

An internal malfunction has been detected by the outside rearview mirror switch while commanding the driver outside rearview mirror UP, DOWN, LEFT or RIGHT.

B154B 39

An internal malfunction has been detected by the passenger window switch while commanding the passenger outside rearview mirror UP, DOWN, LEFT or RIGHT.

Action Taken When the DTC Sets

The affected outside rearview mirror will be inoperative.

Conditions for Clearing the DTC

B154A 39

The driver outside rearview mirror must be replaced before the DTC can be cleared.

B154B 39

The passenger outside rearview mirror must be replaced before the DTC can be cleared.

Reference Information

Schematic Reference

[Outside Rearview Mirror Schematics](#)

Connector End View Reference

[Master Electrical Component List](#)

Description and Operation

[Outside Mirror Description and Operation](#)


5. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Front Side Door Outside Handle Replacement](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

Sample

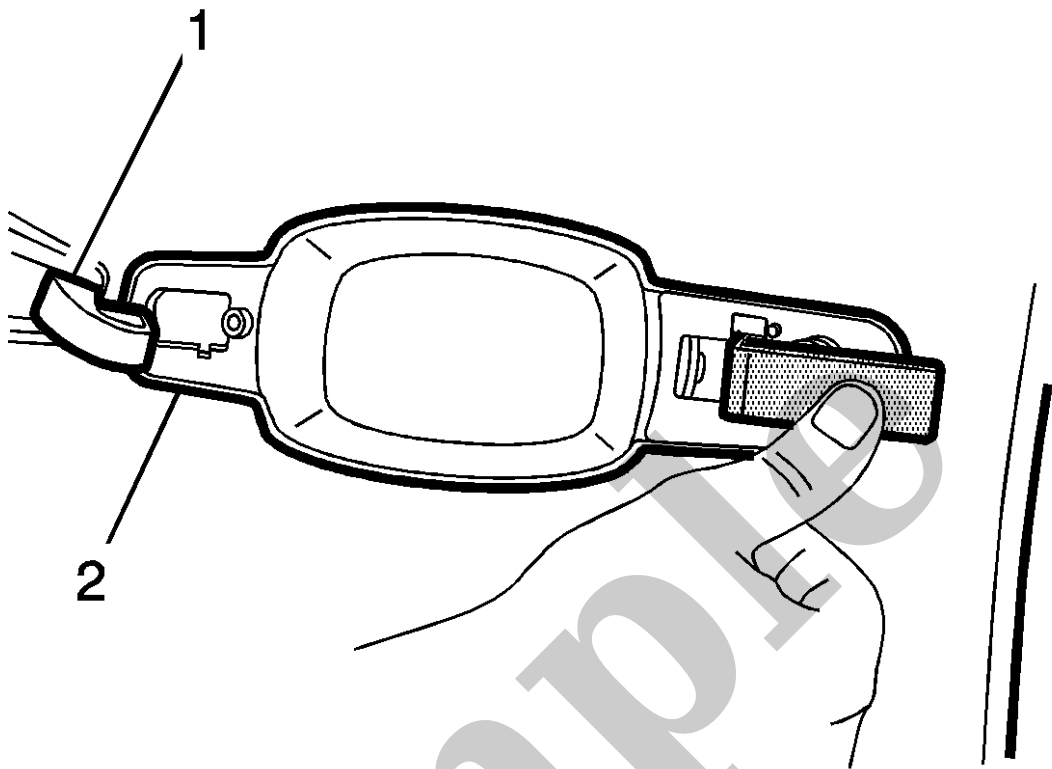


7.

Gentle pull front side door outside handle (1) outward and remove from door (2).

YOUR CURRENT VEHICLE

Rear Window Washer Solvent Container Hose Replacement

Rear Window Washer Solvent Container Hose Replacement (Cadillac)

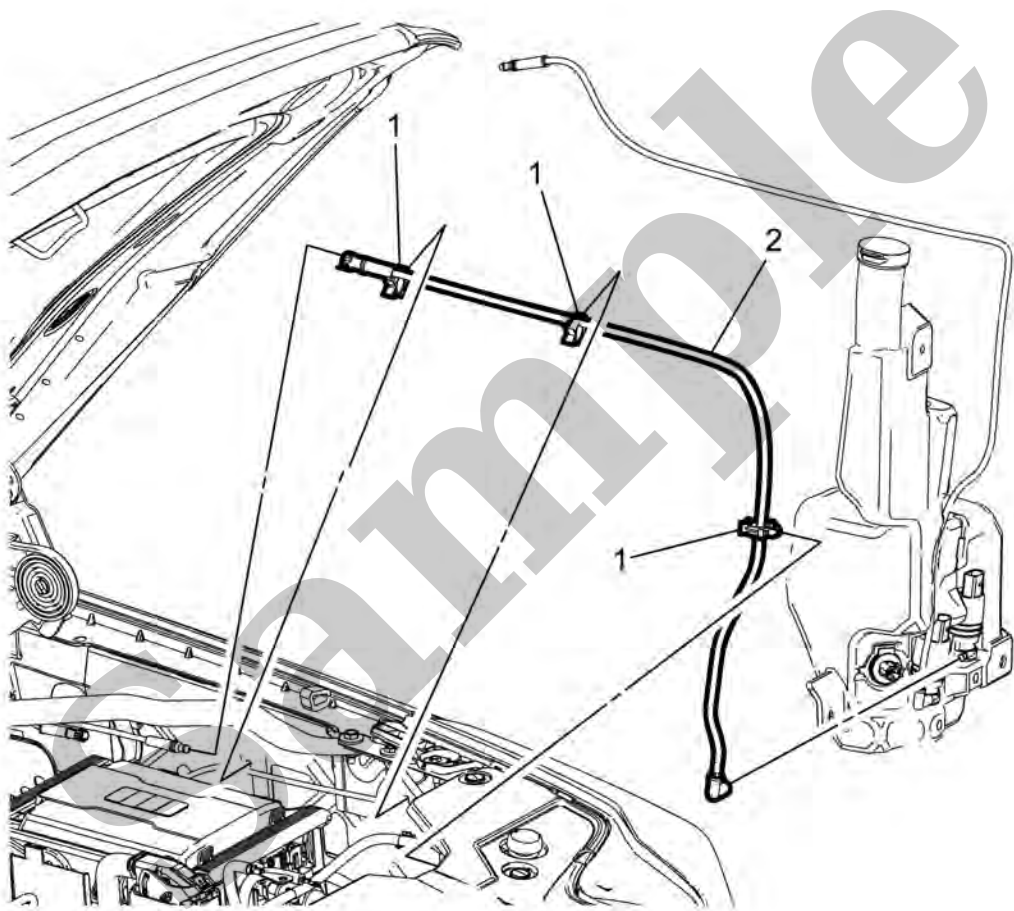

Rear Window Washer Solvent Container Hose Replacement

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the windshield washer solvent container. Refer to Windshield Washer Solvent Container Replacement.</p> <p>2. Disconnect the rear window washer solvent hose connection from the underbody washer hose.</p>	



- The air bag indicator turns ON.
- The adaptive cruise control is inhibited.
- The traction/stability control indicator turns ON.
- The electronic brake control module disables the hill hold and the trailer sway control for the duration of the ignition cycle.

Conditions for Clearing the DTC

- A current DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Reference Information

Schematic Reference

[Antilock Brake System Schematics](#)

Connector End View Reference

[Master Electrical Component List](#)

Description and Operation

[ABS Description and Operation](#)

Electrical Information Reference


- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification


1. Verify DTC B101D is not set current or history in the K36 Inflatable Restraint Sensing and Diagnostic Module.

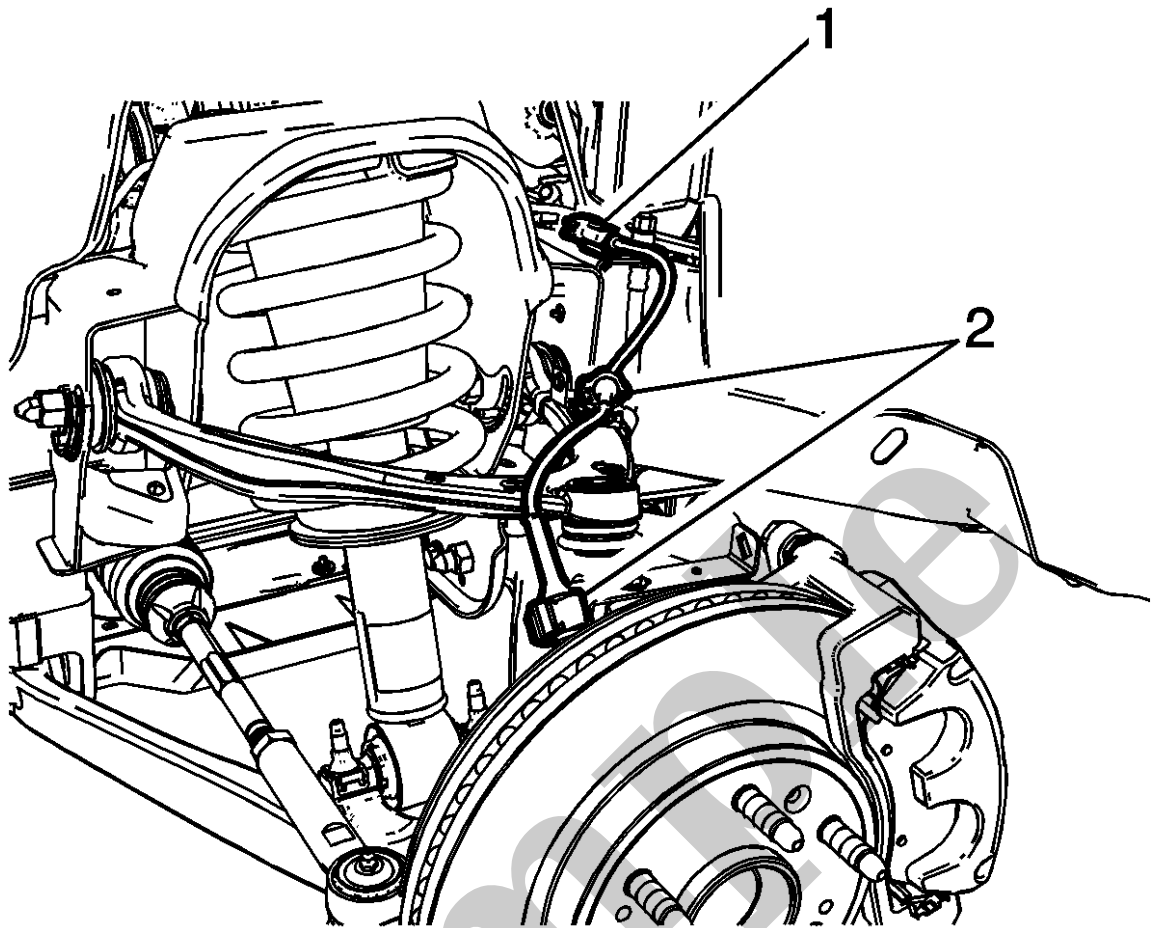

5.


Release the front wheel speed sensor harness electrical connector (1) from the brake hose bracket.

6. Release the front wheel speed sensor harness retainers (2).

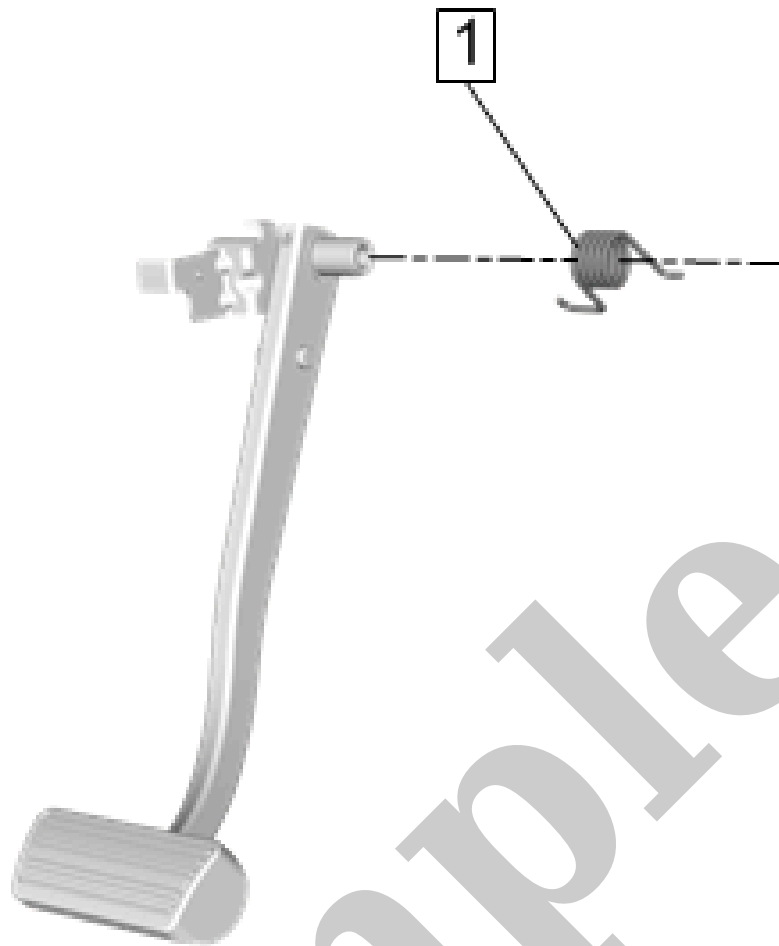

6.

Remove the brake pedal return spring (1) from the brake pedal.

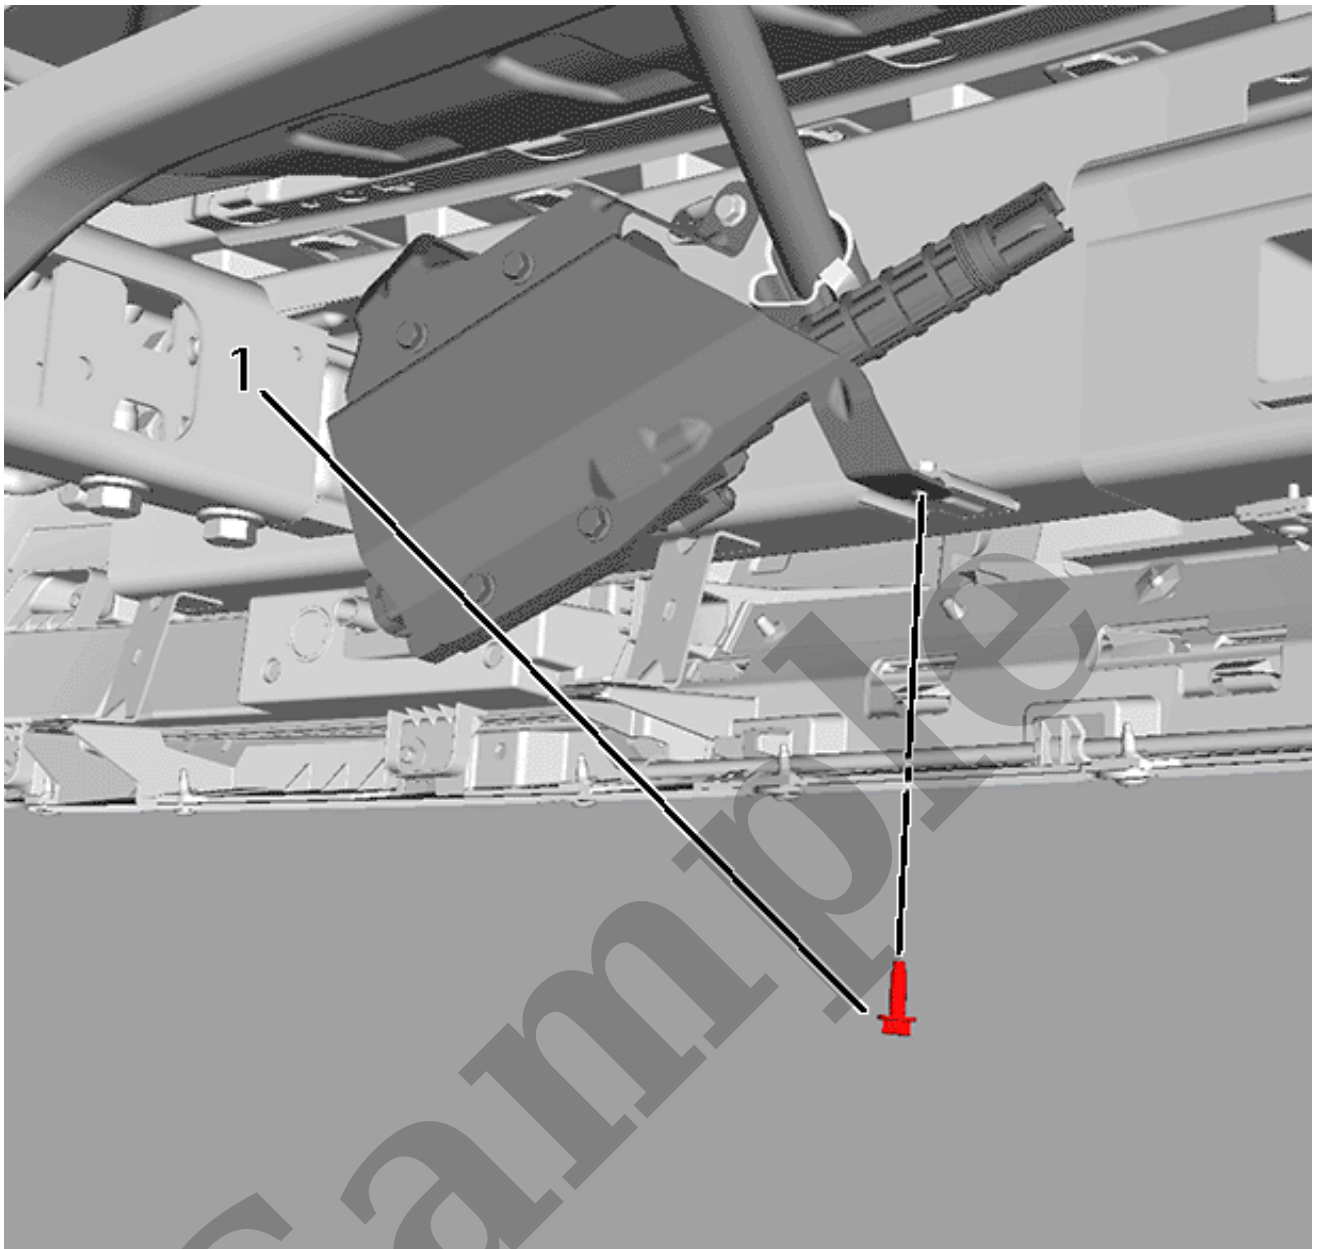

3.

Install the lower electronic parking brake control module bracket bolt (1) and tighten to **9 N·m (80 lb in)** .