


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2015 Ford Edge Service and Repair Manual

[Go to manual page](#)

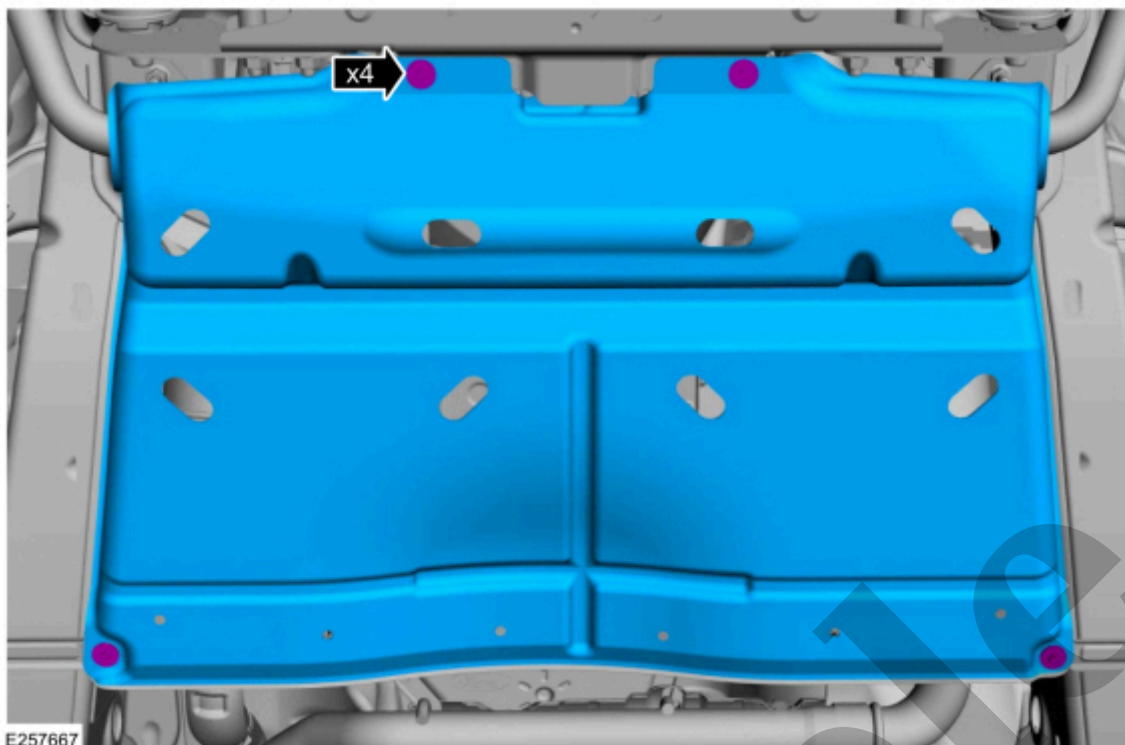


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

22. **NOTE**

If equipped.

Install the underbody shield and fasteners.

**Torque** : 30 lb.ft (40 Nm)

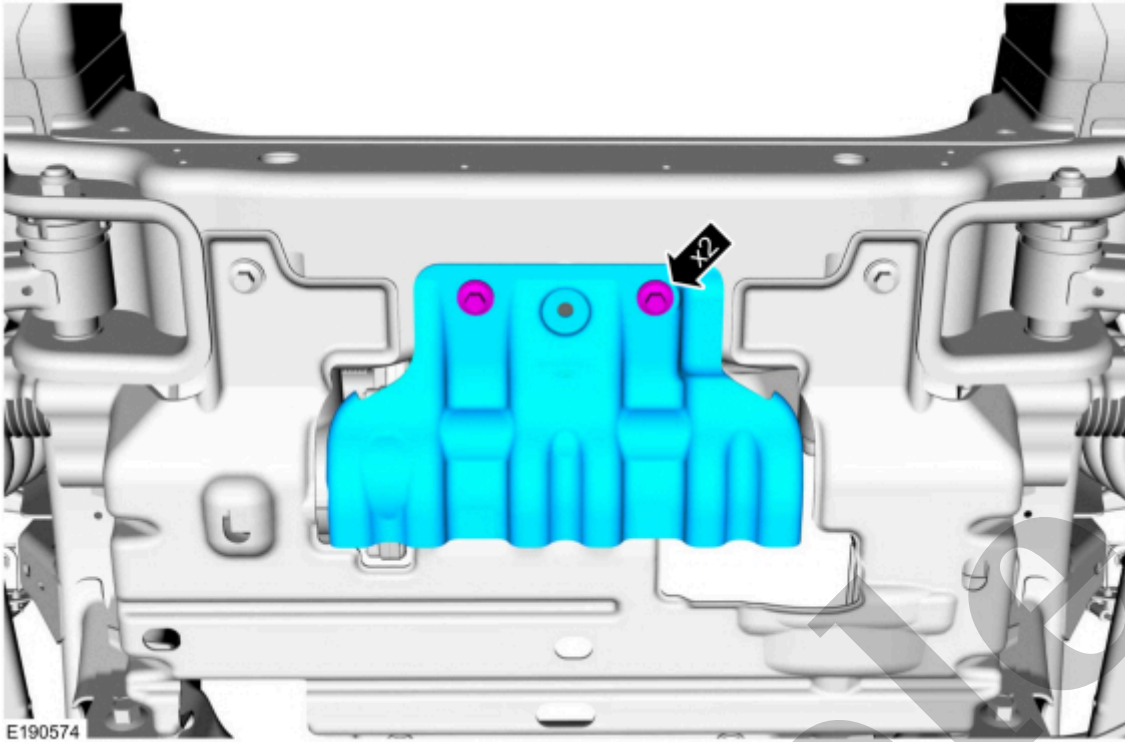

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

24. Connect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

25. Pressurize the fuel system.

Refer to: [Fuel System Pressure Release](#)(310-00E Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).

26. Fill and bleed the engine cooling system.

Refer to: [Engine Cooling System Draining, Vacuum Filling and Bleeding](#)(303-03E Engine Cooling - 5.0L 32V Ti-VCT, General Procedures).

27. Use the Powertrain Control Module (PCM) Misfire Monitor Profile Correction routine in the diagnostic scan tool.

28. Road test the vehicle.

Copyright © Ford Motor Company

Refer to: [Air Cleaner Outlet Pipe](#)(303-12E Intake Air Distribution and Filtering - 5.0L 32V Ti-VCT, Removal and Installation).

2. Air cleaner.

Refer to: [Air Cleaner](#)(303-12E Intake Air Distribution and Filtering - 5.0L 32V Ti-VCT, Removal and Installation).


3. **NOTE**

It is not necessary to clamp off the degas bottle hose with the cooling system drained.


Degas bottle.

Refer to: [Degas Bottle](#)(303-03E Engine Cooling - 5.0L 32V Ti-VCT, Removal and Installation).

6. • Release the clamp and disconnect the upper radiator hose.  
Use the General Equipment: Hose Clamp Remover/Installer
- Release the clamp and remove the radiator to degas bottle hose.  
Use the General Equipment: Hose Clamp Remover/Installer

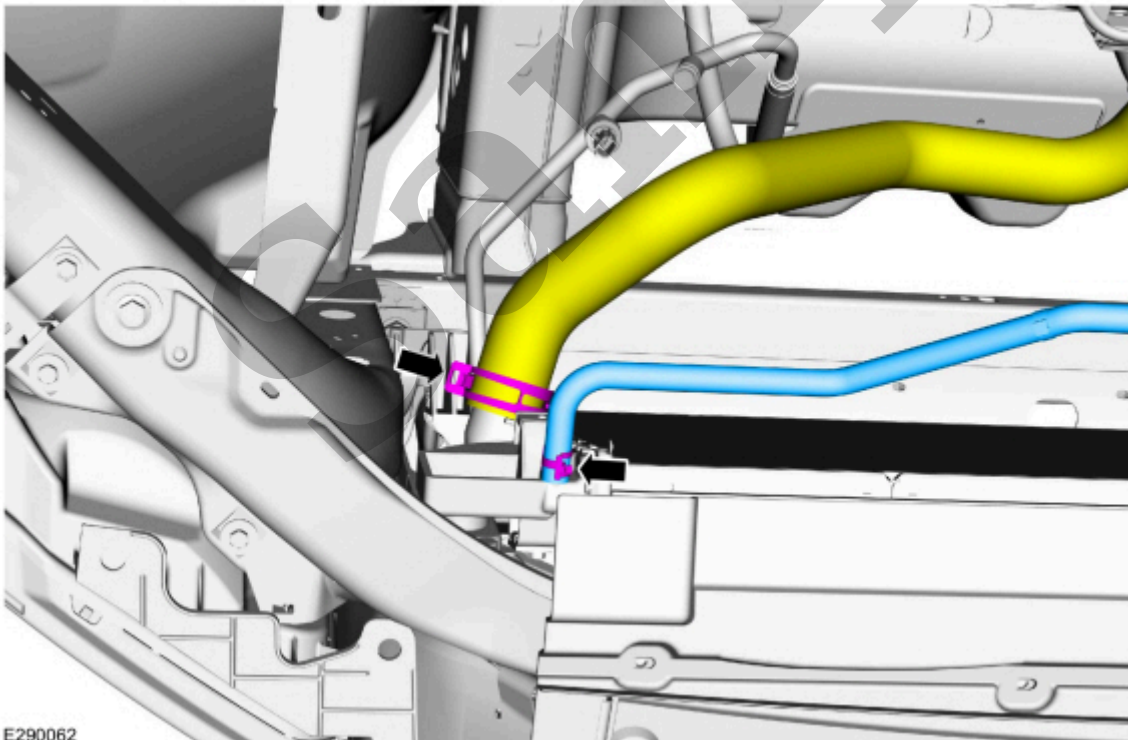


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

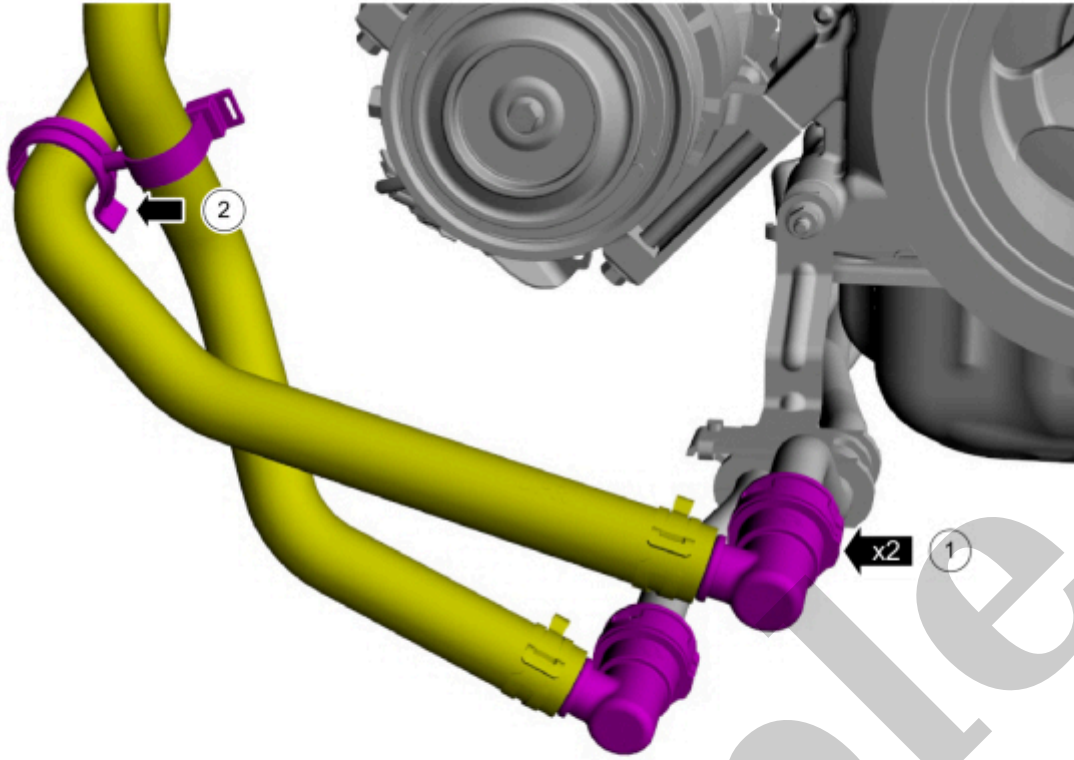

E368370

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. Disconnect the quick release coupling and position the coolant hose aside.

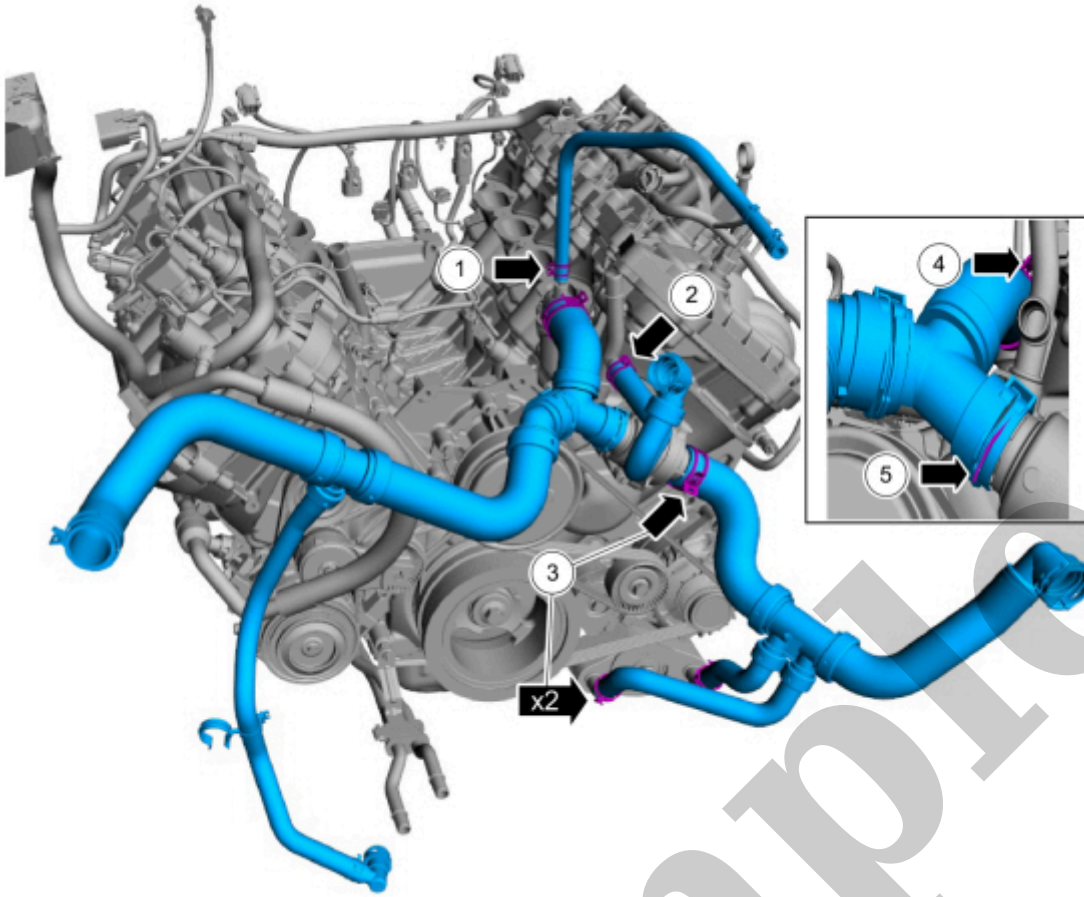

E368378

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

11. Remove the nut and the ground wire eyelet.

5. **NOTE**

It is not necessary to remove the thermostat (housing), the coolant pump and thermostat (housing) can be removed as an assembly.

Coolant pump.

Refer to: [Coolant Pump](#)(303-03E Engine Cooling - 5.0L 32V Ti-VCT, Removal and Installation).

6. Crankshaft front seal.

Refer to: [Crankshaft Front Seal](#)(303-01E Engine - 5.0L 32V Ti-VCT, Removal and Installation).


7. LH (left-hand) valve cover.

Refer to: [Valve Cover LH](#)(303-01E Engine - 5.0L 32V Ti-VCT, Removal and Installation).

8. RH (right-hand) valve cover.

Refer to: [Valve Cover RH](#)(303-01E Engine - 5.0L 32V Ti-VCT, Removal and Installation).


13. Remove the bolts and position the generator aside.

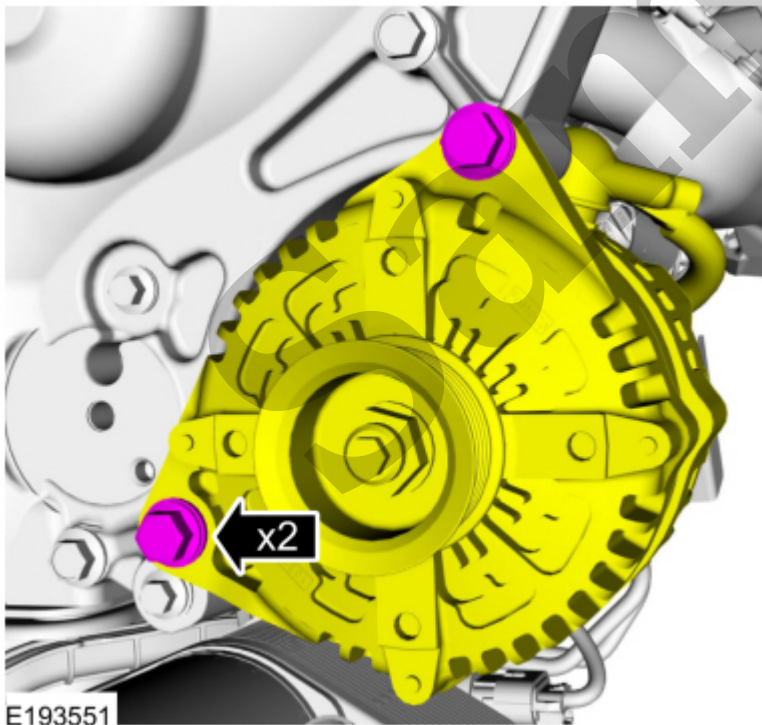

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

14. **NOTE**



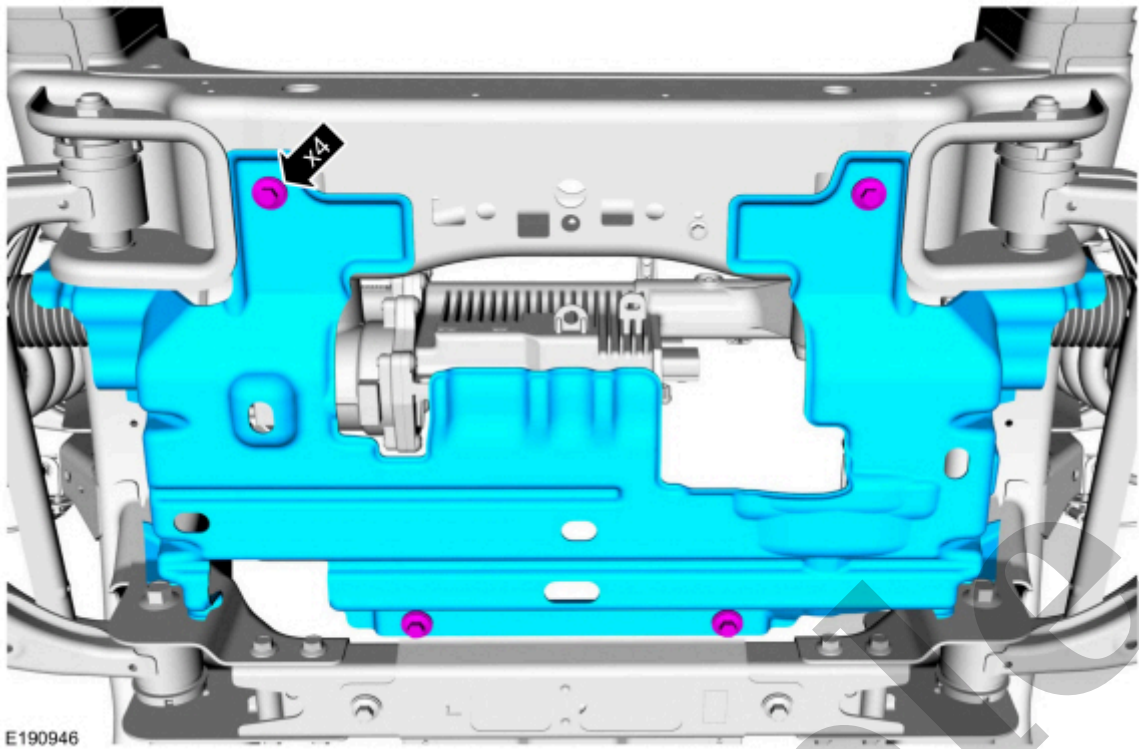


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

16. **NOTE**

If equipped.


Remove the bolts and the underbody shield.




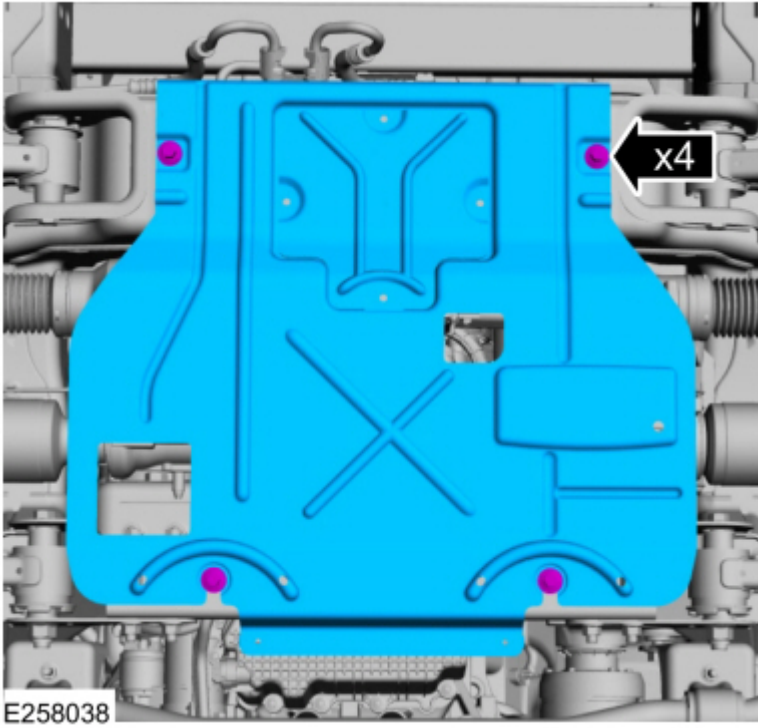

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

18.
  1. Detach the coolant tube retainer.
  2. Remove the nut and position the coolant tube and bracket aside.

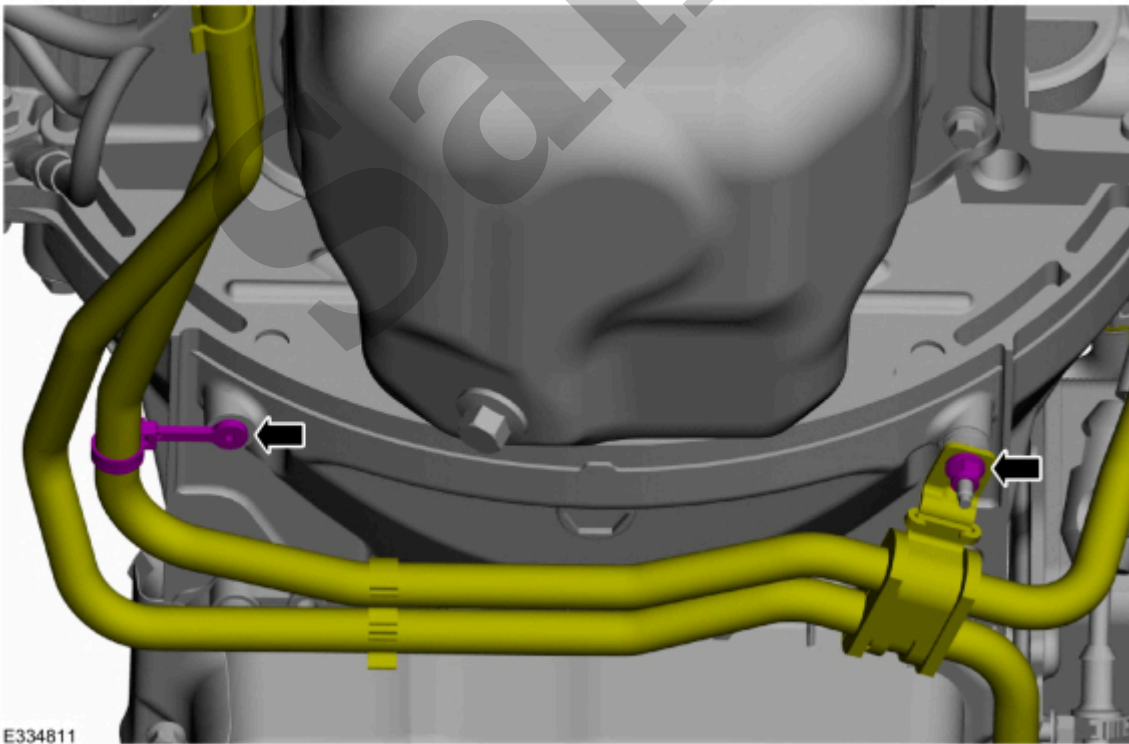

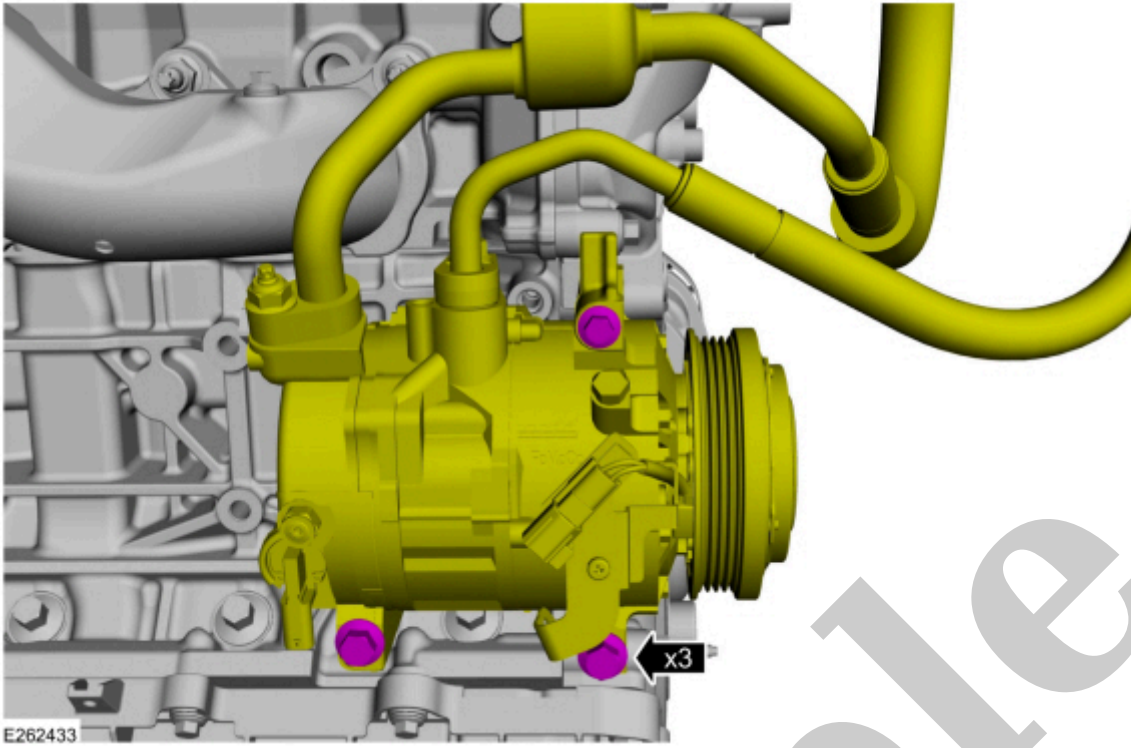

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

22. Remove and discard the engine oil filter.