


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2015 Ford Flex Service and Repair Manual

[Go to manual page](#)

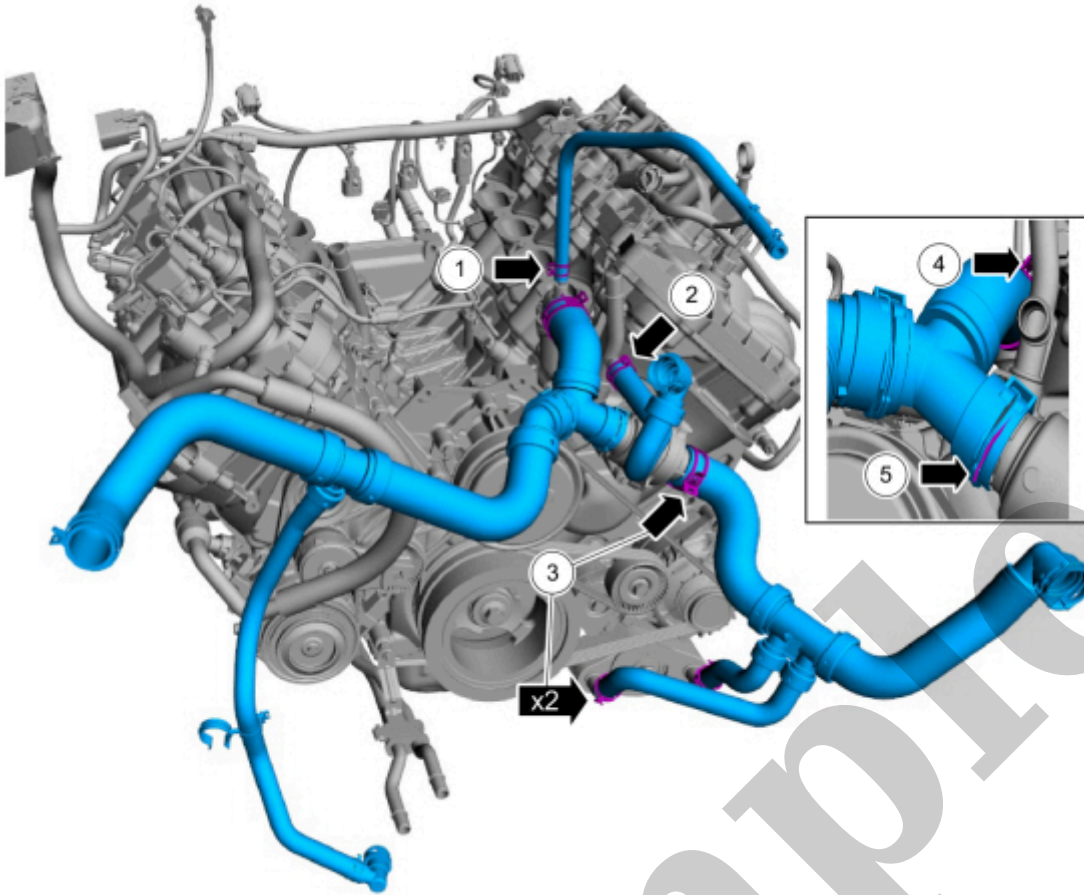


E368378

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


Vehicles equipped with dual generators

45.
 1. Release the clamp and remove the coolant hose.
Use the General Equipment: Hose Clamp Remover/Installer
 2. Disconnect the quick release coupling and remove the coolant hose.
 3. Release the clamp and remove the coolant hose.
Use the General Equipment: Hose Clamp Remover/Installer
 4. Release the clamps and remove the coolant hose.
Use the General Equipment: Hose Clamp Remover/Installer

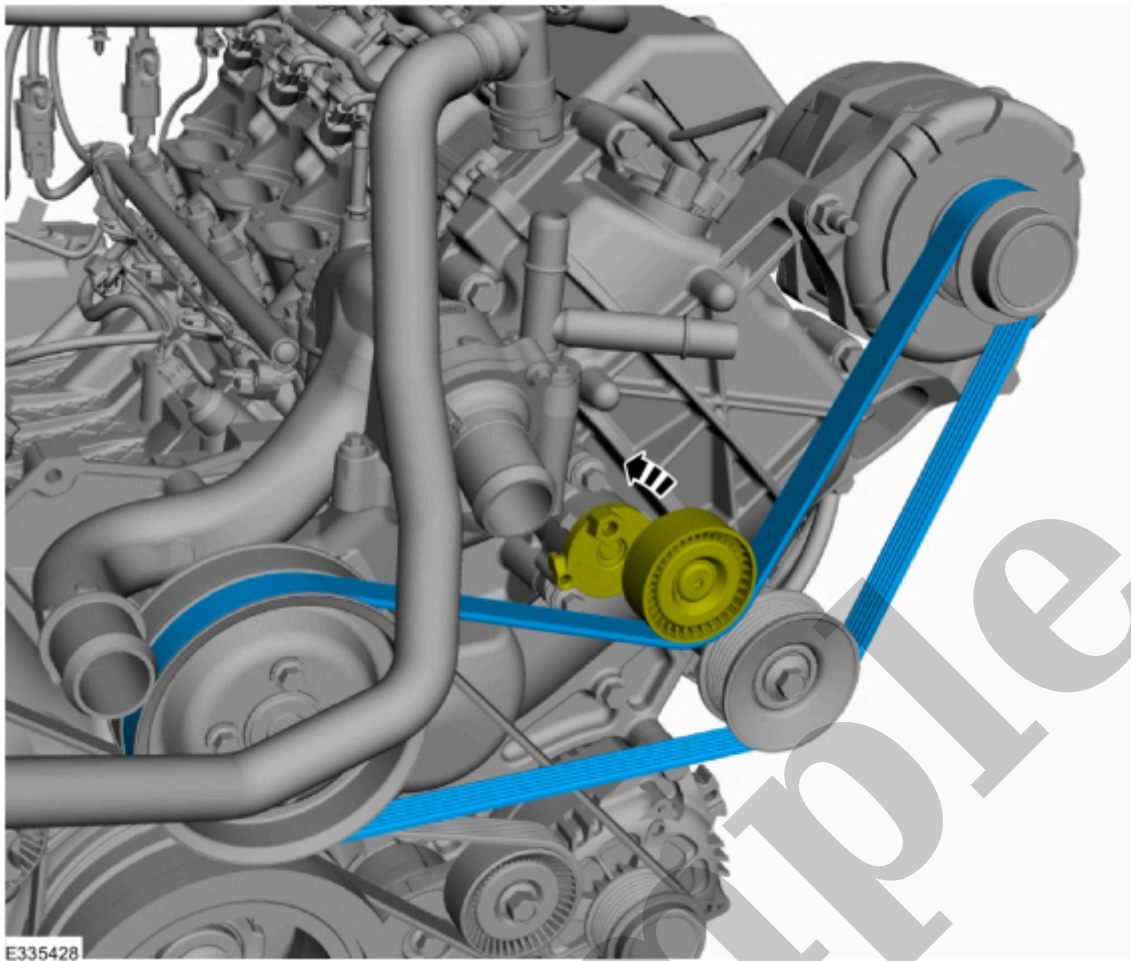


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

47.
 1. Reposition the wiring protective cover.
 2. Remove the nut and the B+ wire.
 3. Depress the tab and disconnect the generator electrical connector.
 4. Remove the bolt and position the wiring harness aside.
 5. Remove the fasteners and the generator.

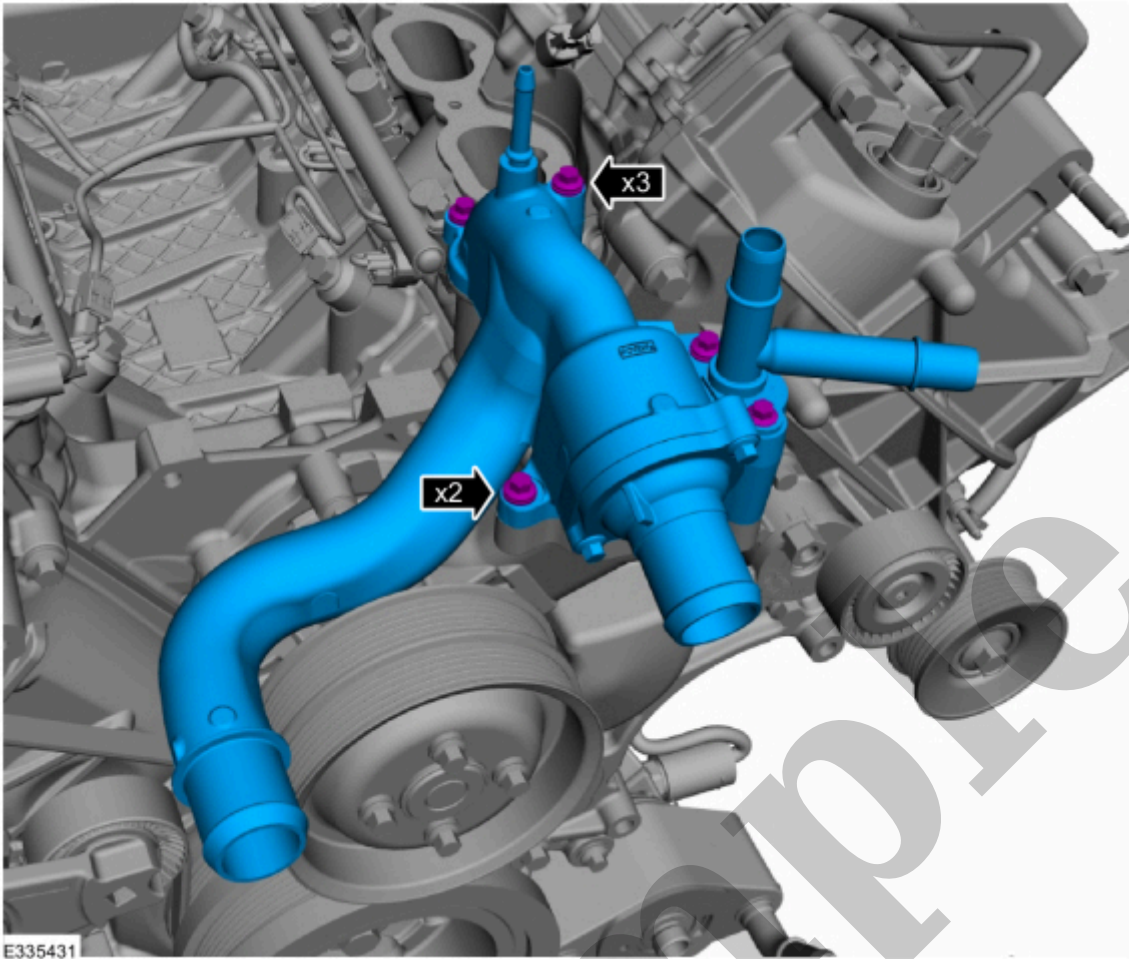

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


49. Remove and discard the thermostat housing gaskets.

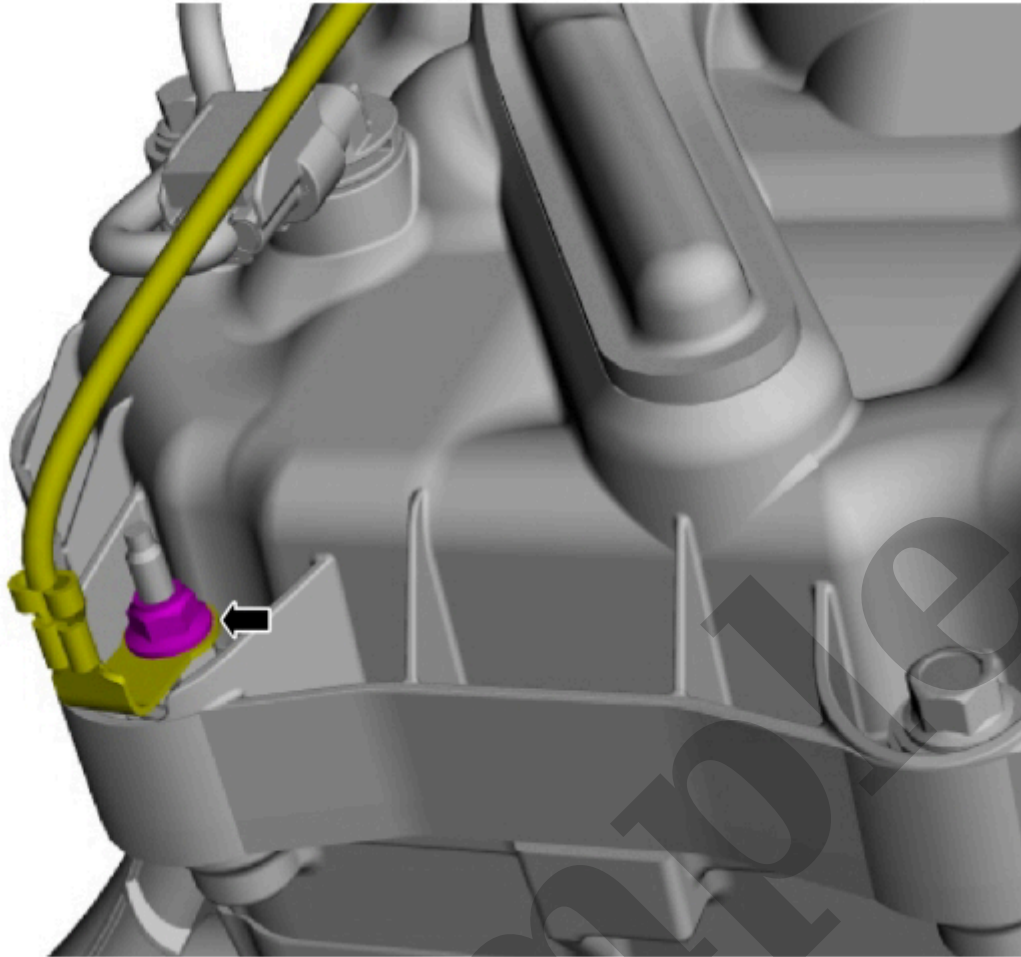

E335426

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


51. Detach the transmission wiring harness retainer.

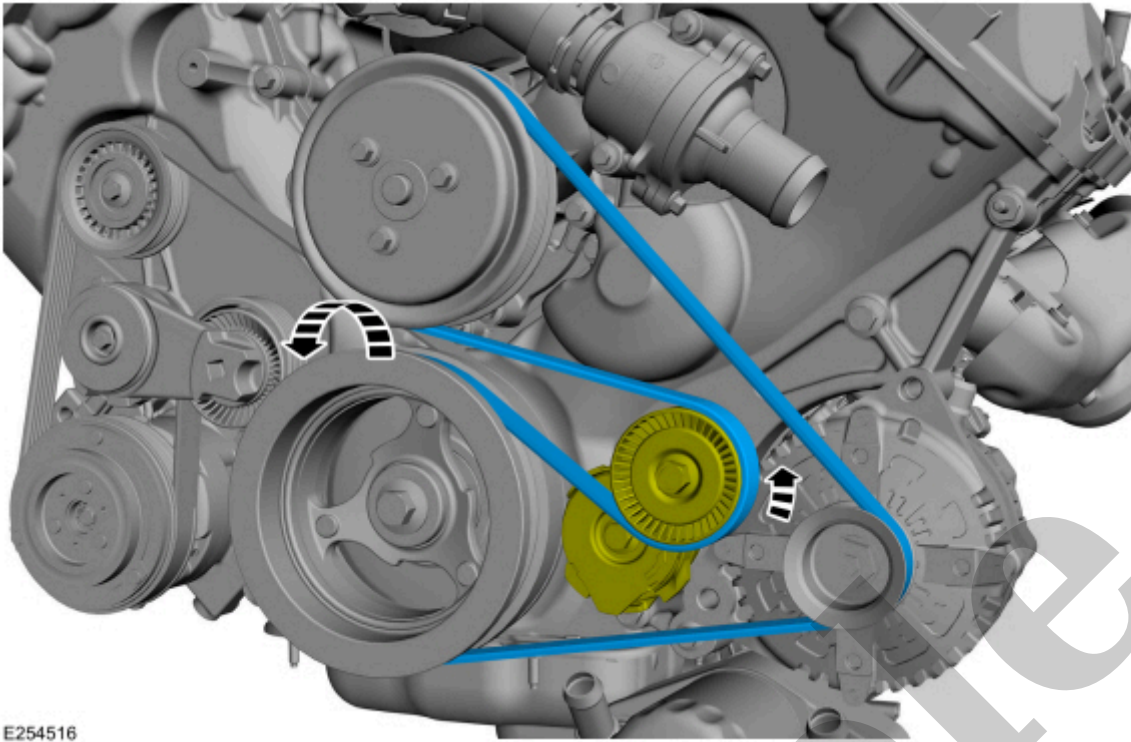

E254516

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


53. Remove the bolt and the accessory drive belt tensioner.

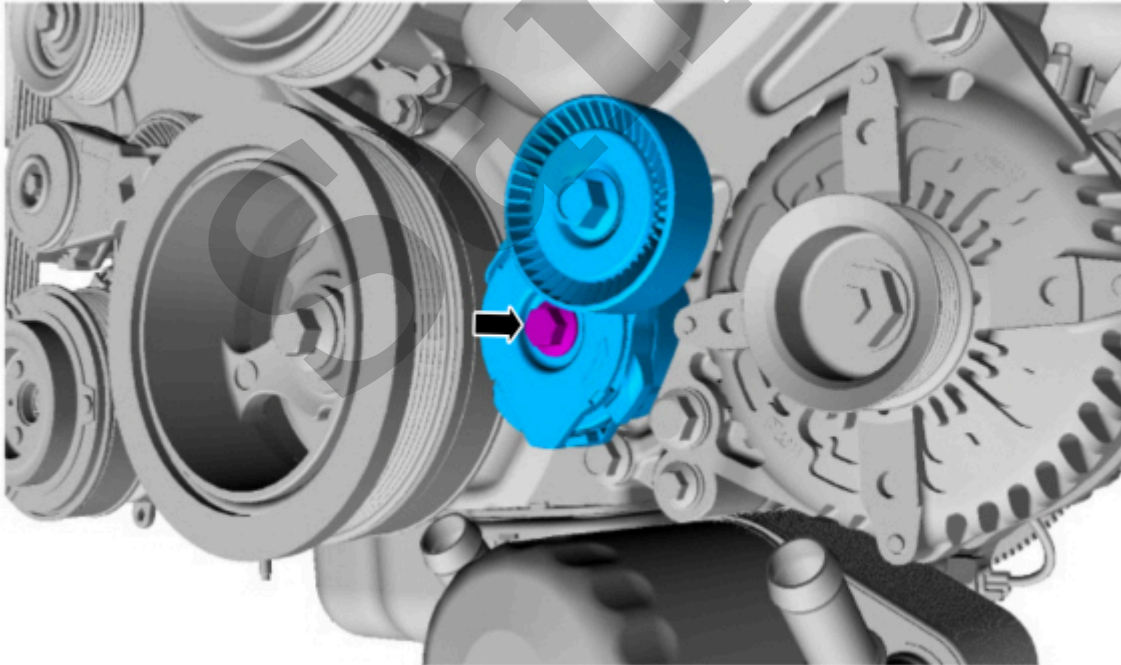

E192486

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

54. Remove bolts and position the generator to access the electrical connections.

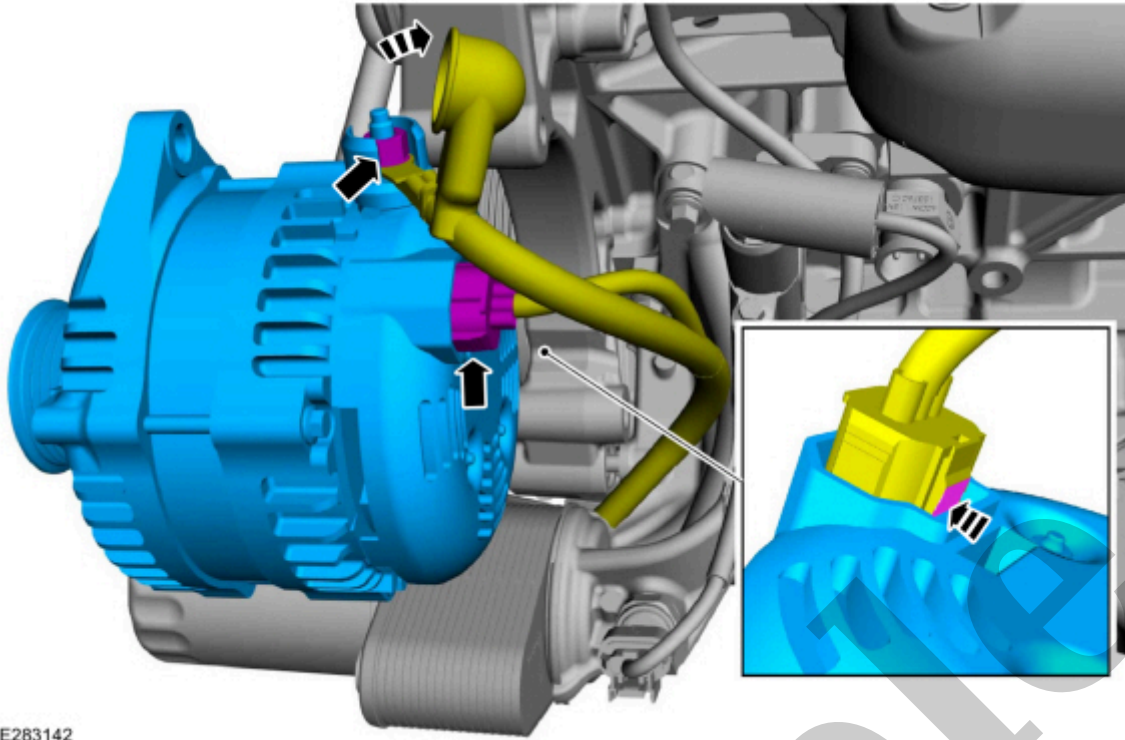


E283142

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

56. **NOTICE**


Only use hand tools when loosening the engine mount through bolts or damage to the engine mount-to-cylinder block bracket can occur.

Remove and discard the LH (left-hand) engine mount through bolt.

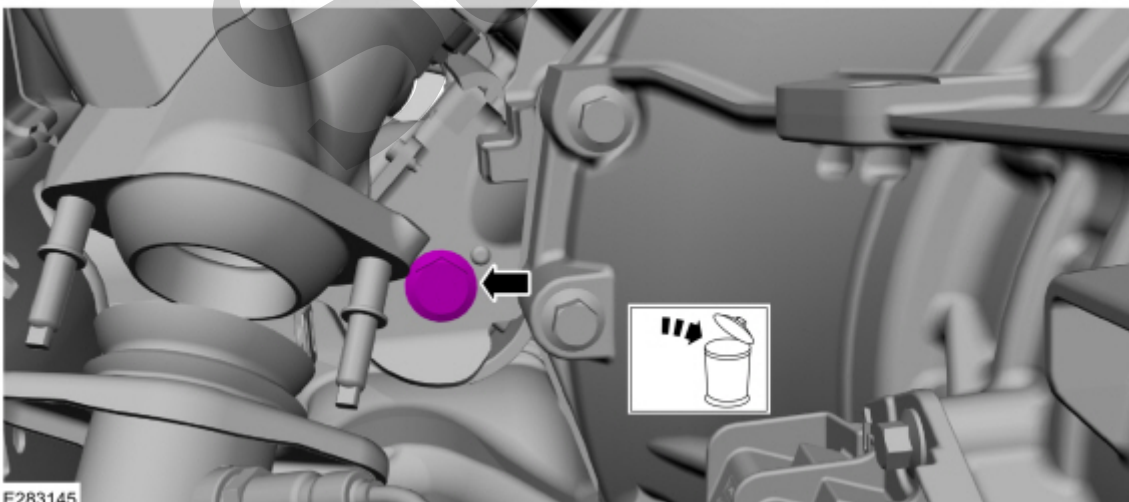


E283145

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

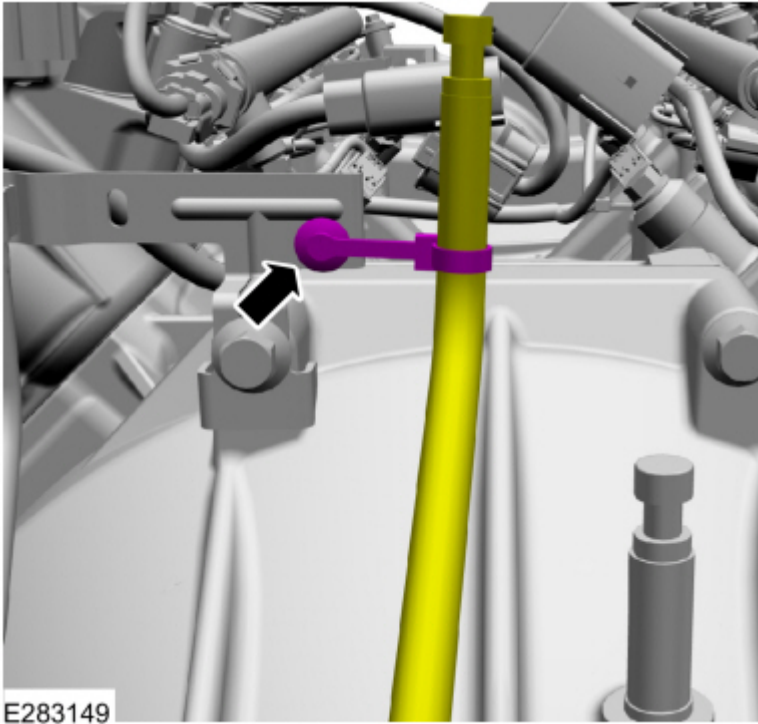


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

59. Remove the upper bellhousing bolts.

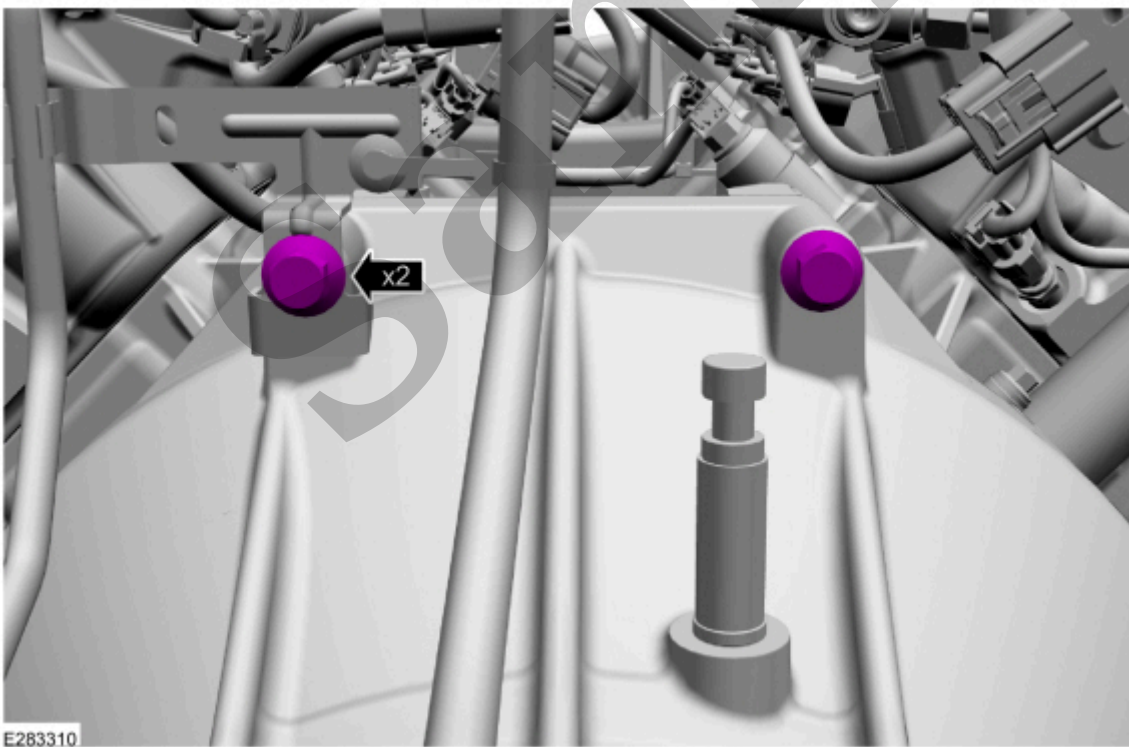

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

60. **Install Special Service Tool** : 303-F047 Lifting Bracket, Engine

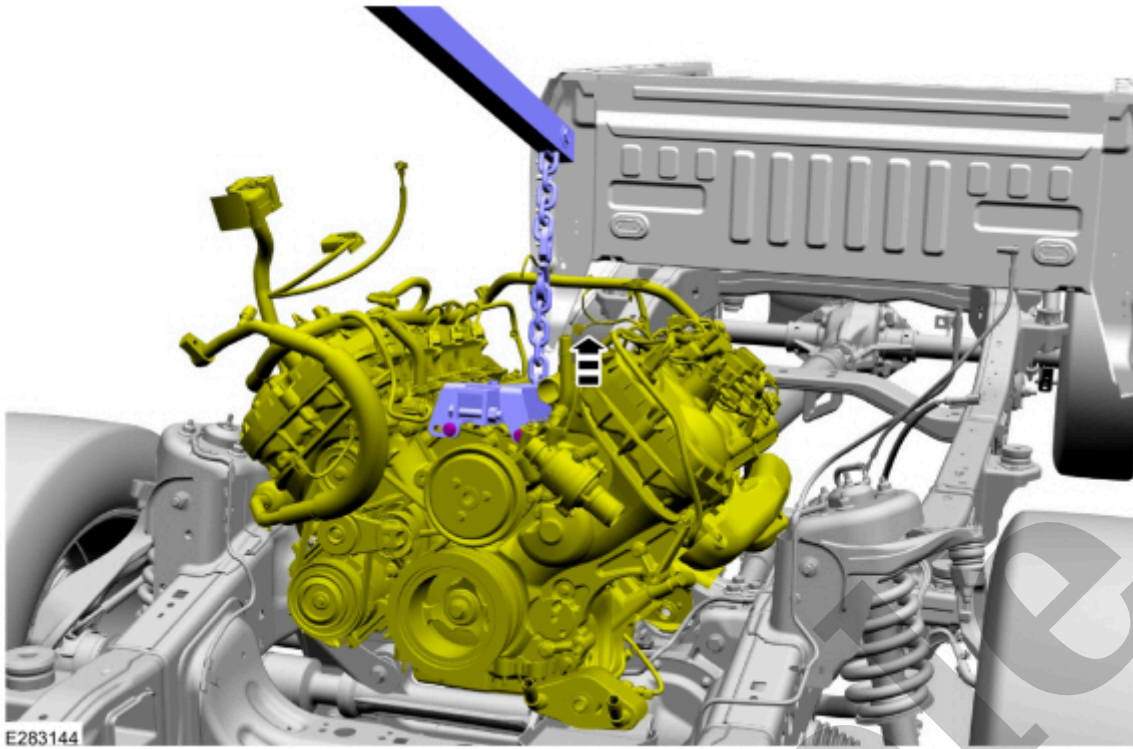


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

62. **NOTICE**

Only use hand tools when removing or installing the engine mount-to-frame bolts or damage to the engine mount-to-frame nut plate can occur.


Remove and discard the LH (left-hand) engine mount-to-frame bolts.

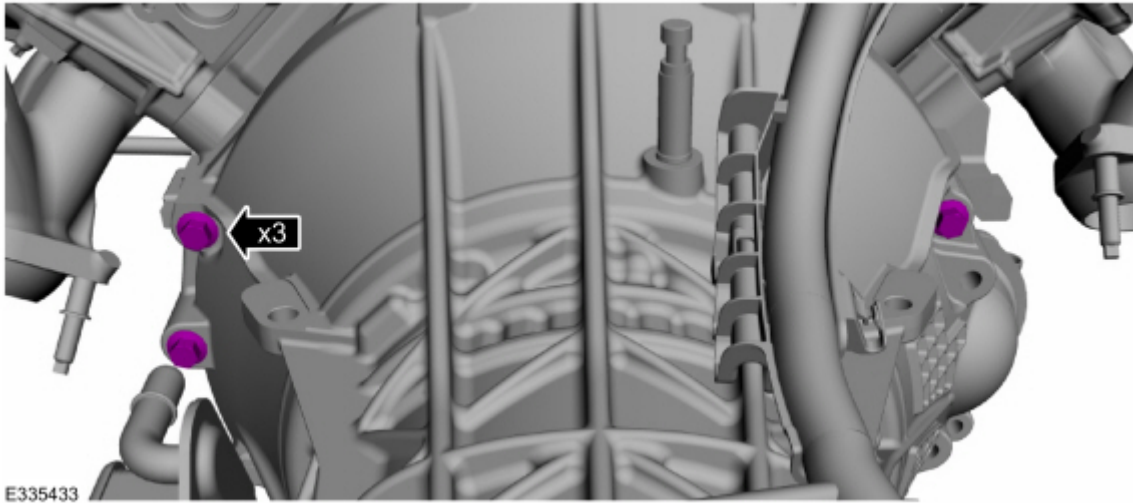

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

65. With the aid of an assistant, use the Heavy Duty Floor Crane to remove the engine assembly from the chassis.

Use the General Equipment: Floor Crane

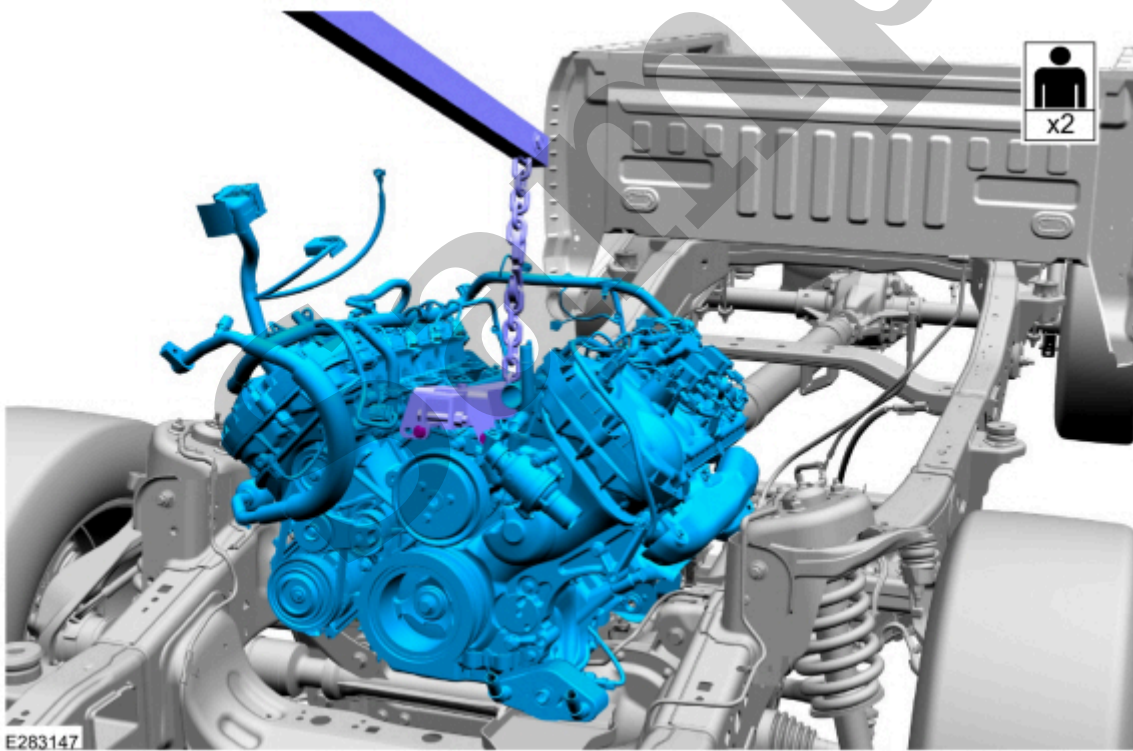

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

66. **NOTE**