

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2015 FORD Mondeo Wagon OEM Service and Repair Workshop Manual

[Go to manual page](#)

1. **NOTE**

Follow the unique instructions or graphic for this step in installation.


Remove the steering wheel.

Refer to: [Steering Wheel](#)(211-04 Steering Column, Removal and Installation).

2. Remove the steering column shrouds.

Refer to: [Steering Column Shrouds](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Disconnect the electrical connector, remove the screws and the clockspring.

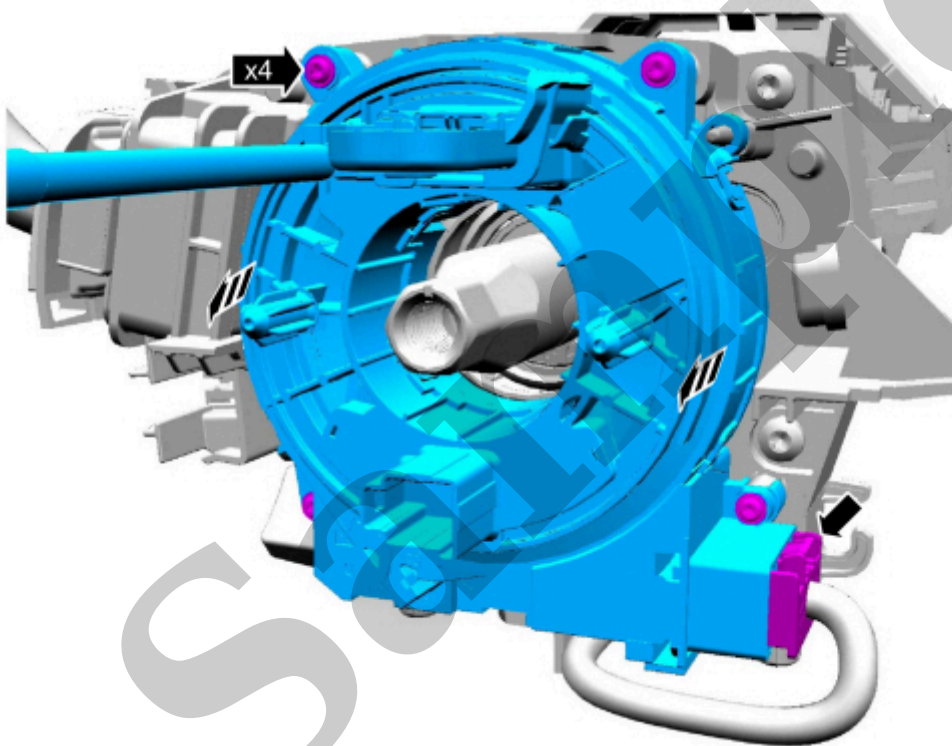

E325945

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

## Installation

1. **NOTICE**

If installing a new clockspring, do not remove the clockspring anti-rotation key until the steering wheel is installed. If the anti-rotation key has been removed before installing the steering wheel, the



# Driver Airbag - Vehicles With: Adaptive Steering

<i>501-20B Supplemental Restraint System</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 10/2/2020</i>

## Driver Airbag - Vehicles With: Adaptive Steering

### Removal

#### WARNING

The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.

#### 1. WARNING


Before beginning any service procedure in this manual, refer to health and safety warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Pyrotechnic Device Health and Safety Precautions](#)(100-00 General Information, Description and Operation).

2. Depower the SRS (supplemental restraint system) .

Refer to: [Supplemental Restraint System \(SRS\) Depowering](#)(501-20B Supplemental Restraint System, General Procedures).


3. At the side of the steering wheel, locate the hole and insert a 3 mm (0.125 inch) hex bit.

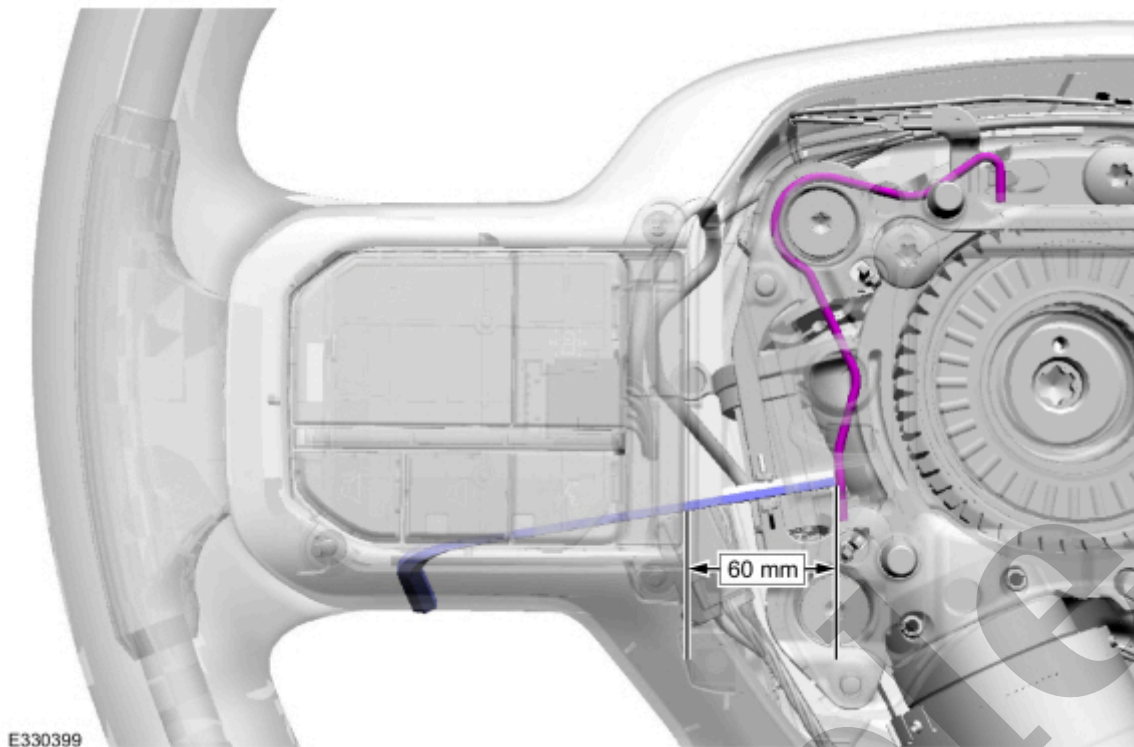

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5.
  1. Push in on the steering wheel spring clip to release the driver airbag retainer.
  2. Pull the driver airbag out and partially separate it from the steering wheel.



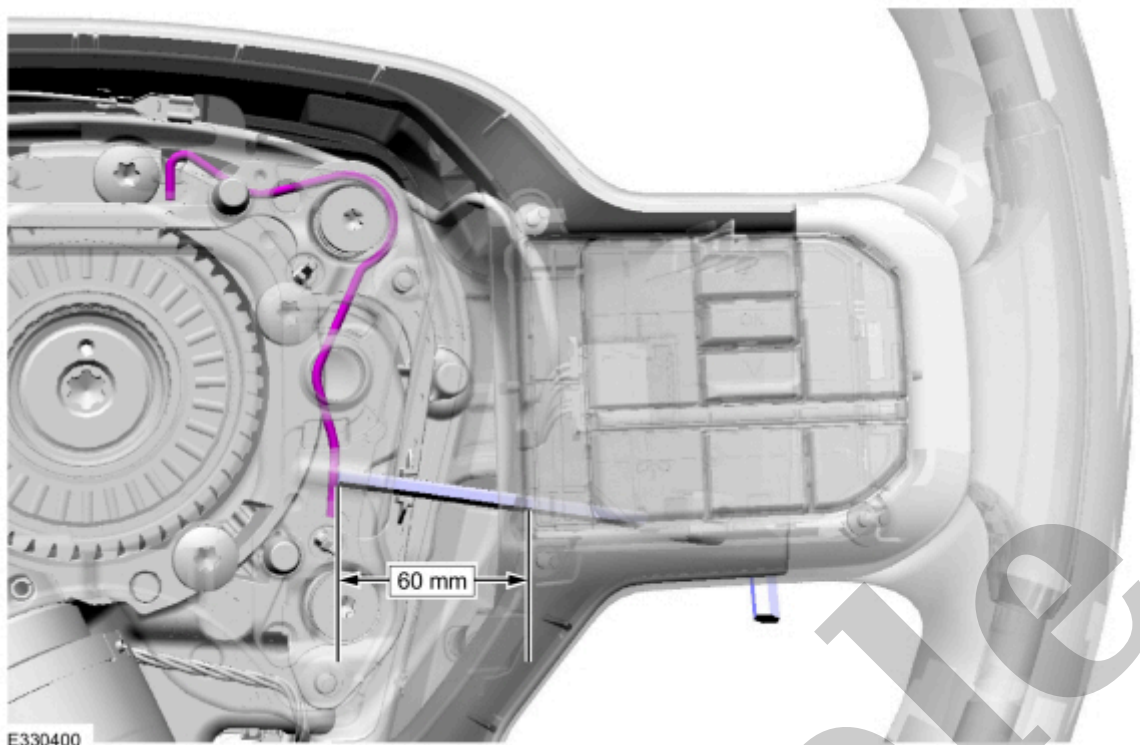


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8.
  1. Push in on the steering wheel spring clip to release the driver airbag retainer.
  2. Pull the driver airbag out and partially separate it from the steering wheel.



E330206

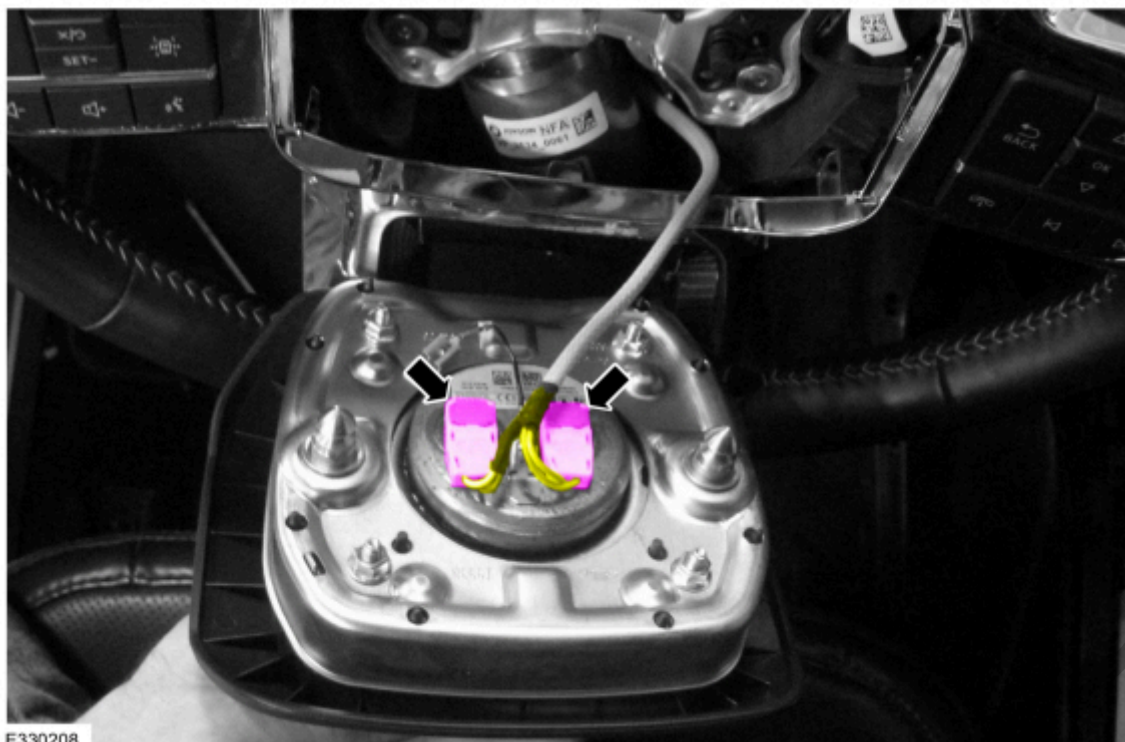

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Align the driver airbag to the steering wheel and push in, engaging the driver airbag retainers to the spring clips.



[Click here to learn about symbols, color coding, and icons used in this manual.](#)



## Driver Airbag - Vehicles Without: Adaptive Steering

<b>501-20B Supplemental Restraint System</b>	<b>2022 F-150</b>
<b>Removal and Installation</b>	<b>Procedure revision date: 10/2/2020</b>

### Driver Airbag - Vehicles Without: Adaptive Steering

#### Removal

##### **WARNING**

The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.

##### 1. **WARNING**

Before beginning any service procedure in this manual, refer to health and safety warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.


Refer to: [Pyrotechnic Device Health and Safety Precautions](#)(100-00 General Information, Description and Operation).

##### 2. Depower the SRS (supplemental restraint system) .

Refer to: [Supplemental Restraint System \(SRS\) Depowering](#)(501-20B Supplemental Restraint System, General Procedures).

3.
  1. Turn the steering wheel clockwise through 90 degrees.
  2. Pivot the spring clip disengaging it from the steering wheel.




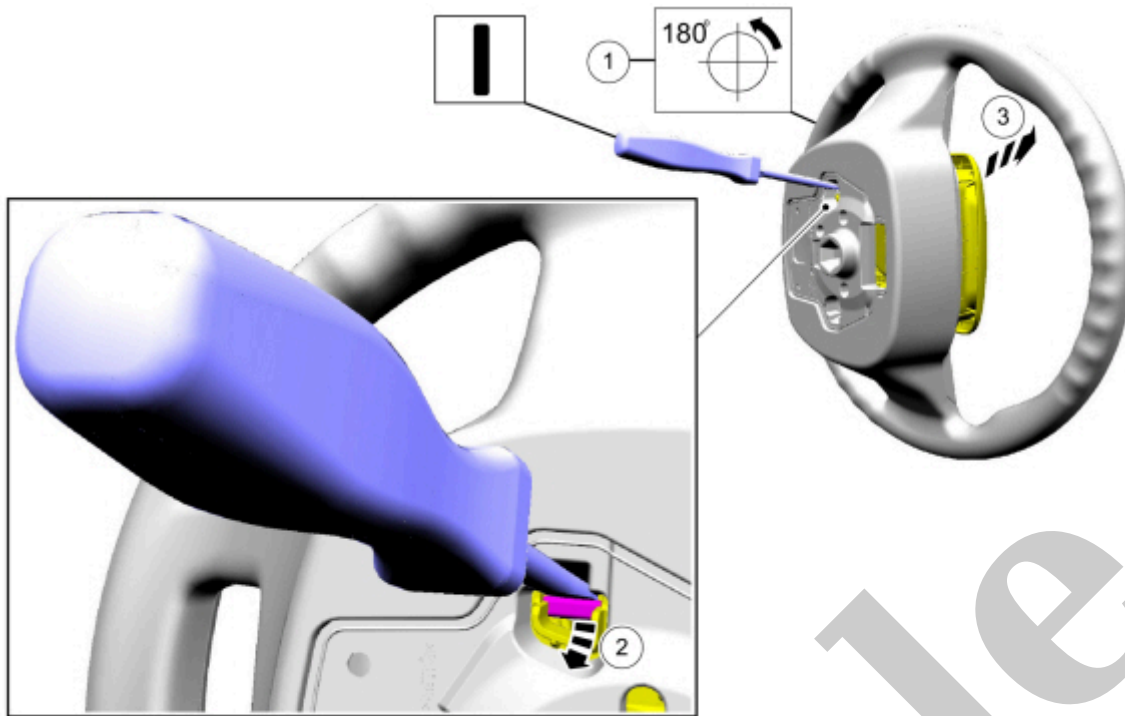

E326460

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Disconnect the driver airbag electrical connectors and remove the driver airbag.

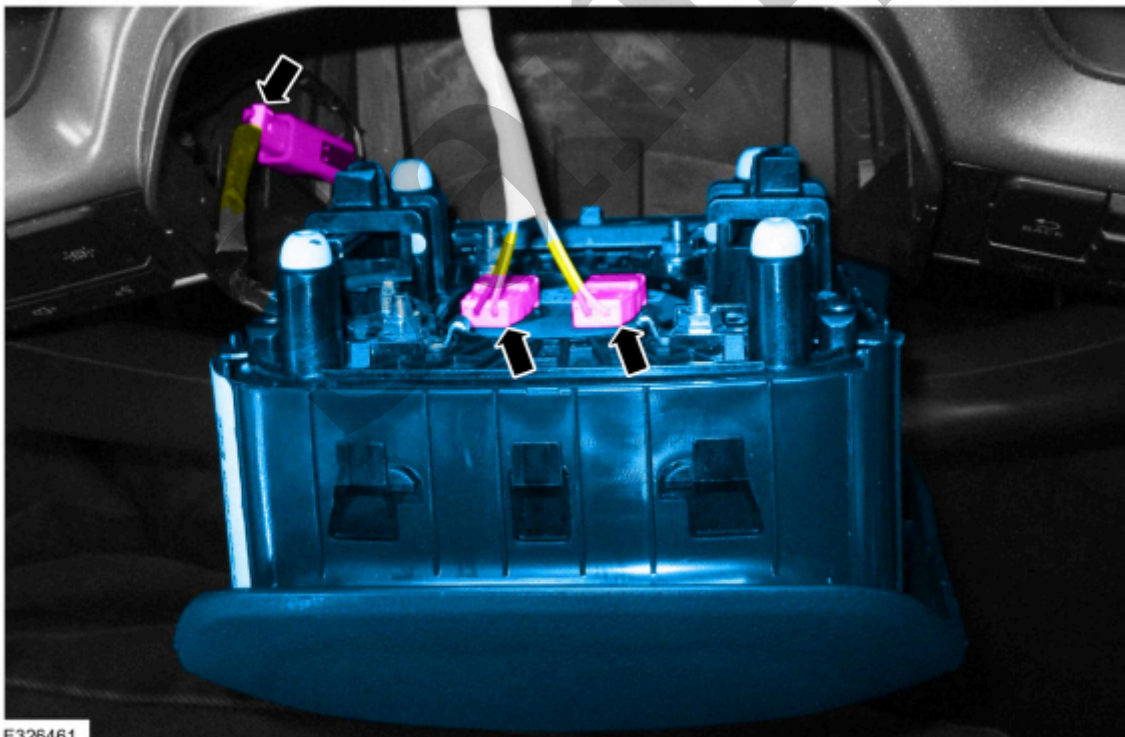

E326461

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

## Installation





E326462

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Repower the SRS (supplemental restraint system) .


Refer to: [Supplemental Restraint System \(SRS\) Repowering](#)(501-20B Supplemental Restraint System, General Procedures).

Copyright © Ford Motor Company

Refer to: [Supplemental Restraint System \(SRS\) Depowering](#)(501-20B Supplemental Restraint System, General Procedures).

3. Remove the bolts and position the driver knee airbag out from the instrument panel.

**Torque** : 93 lb.in (10.5 Nm)

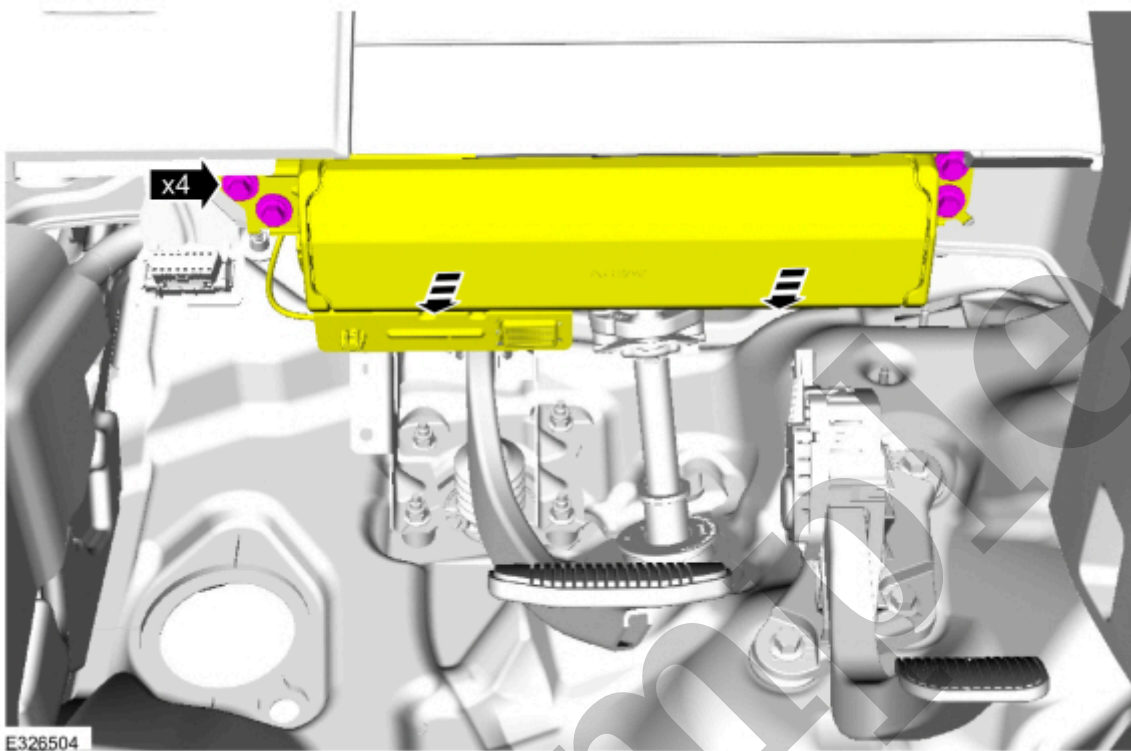

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. Remove the driver knee airbag.
  1. Raise the locking tabs of the driver knee airbag electrical connector.
  2. Disconnect the driver knee airbag electrical connector.
  3. Disconnect the interior lamp electrical connector and detach the pin-type retainer.