


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2015 Ford Mustang Service and Repair Manual

[Go to manual page](#)

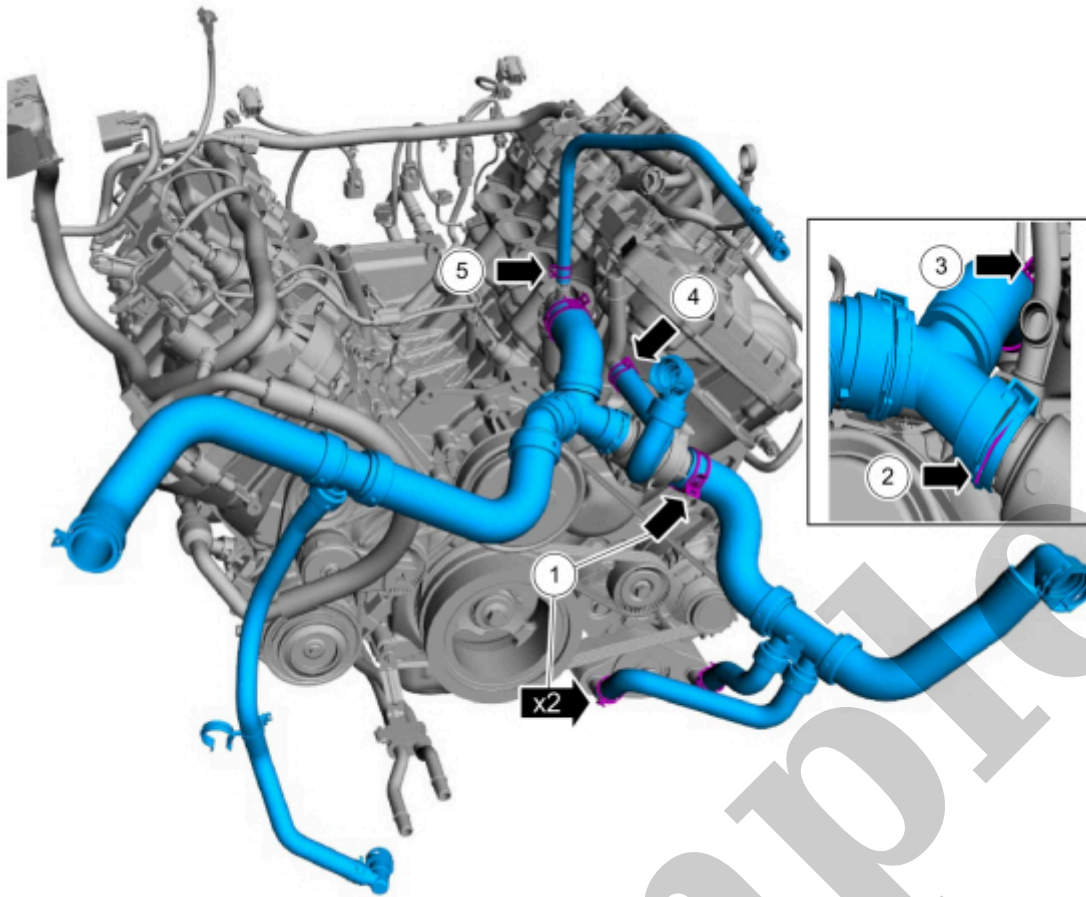


E368428

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

All vehicles

29. 1. Connect the heater hose.
2. Attach the coolant hose retainers.

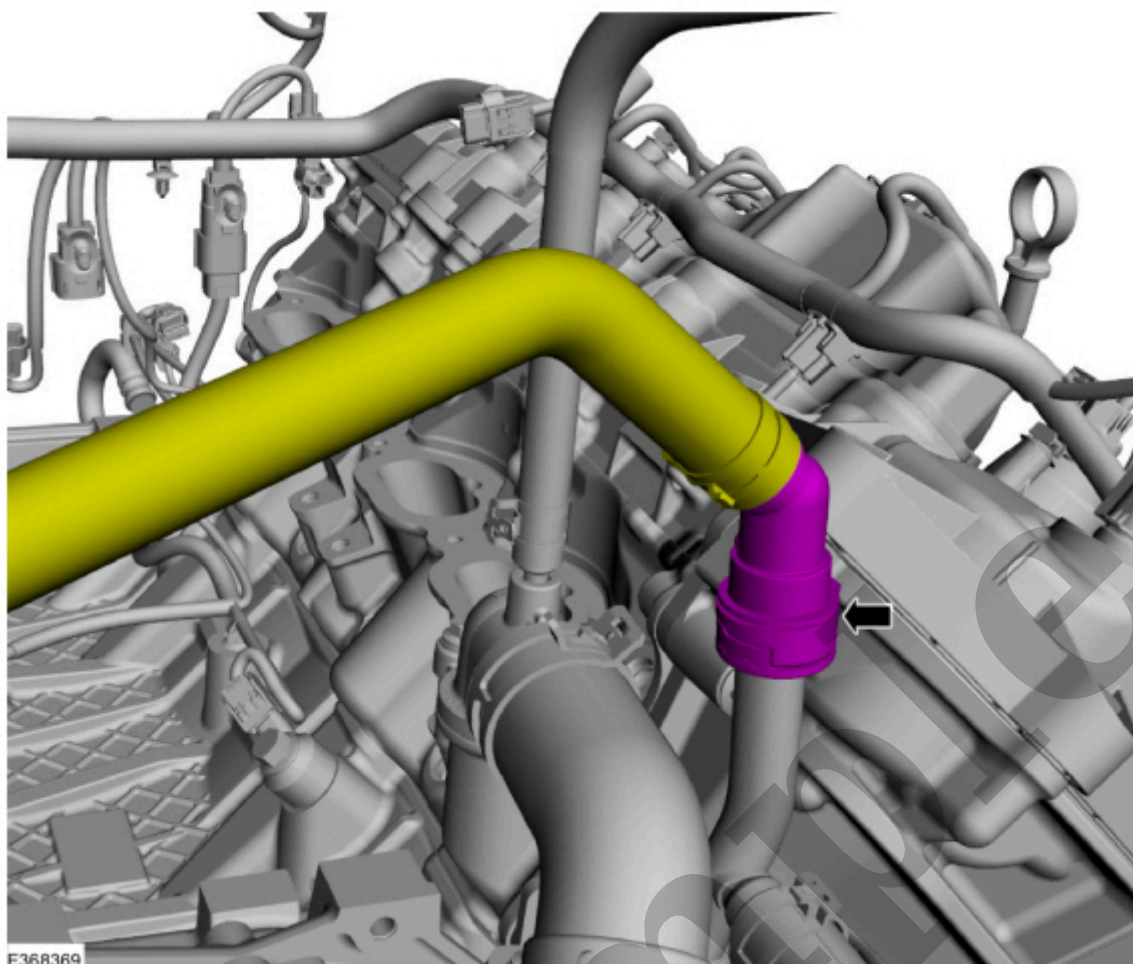

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

31. **NOTICE**


In stage 3, if the torque required to tighten any flare nut on the new high-pressure fuel tube reaches or exceeds 55 lb.ft (50 Nm), then that high pressure fuel tube must be discarded and replaced with another new high-pressure fuel tube.

Torque :

Stage 1: Tighten the high-pressure fuel tube flare nuts to : 71 lb.in (8 Nm)

Stage 2: Tighten the high-pressure fuel tube flare nuts to : 89 lb.in (10 Nm)


Stage 3: Tighten the high-pressure fuel tube flare nuts an additional : 25°

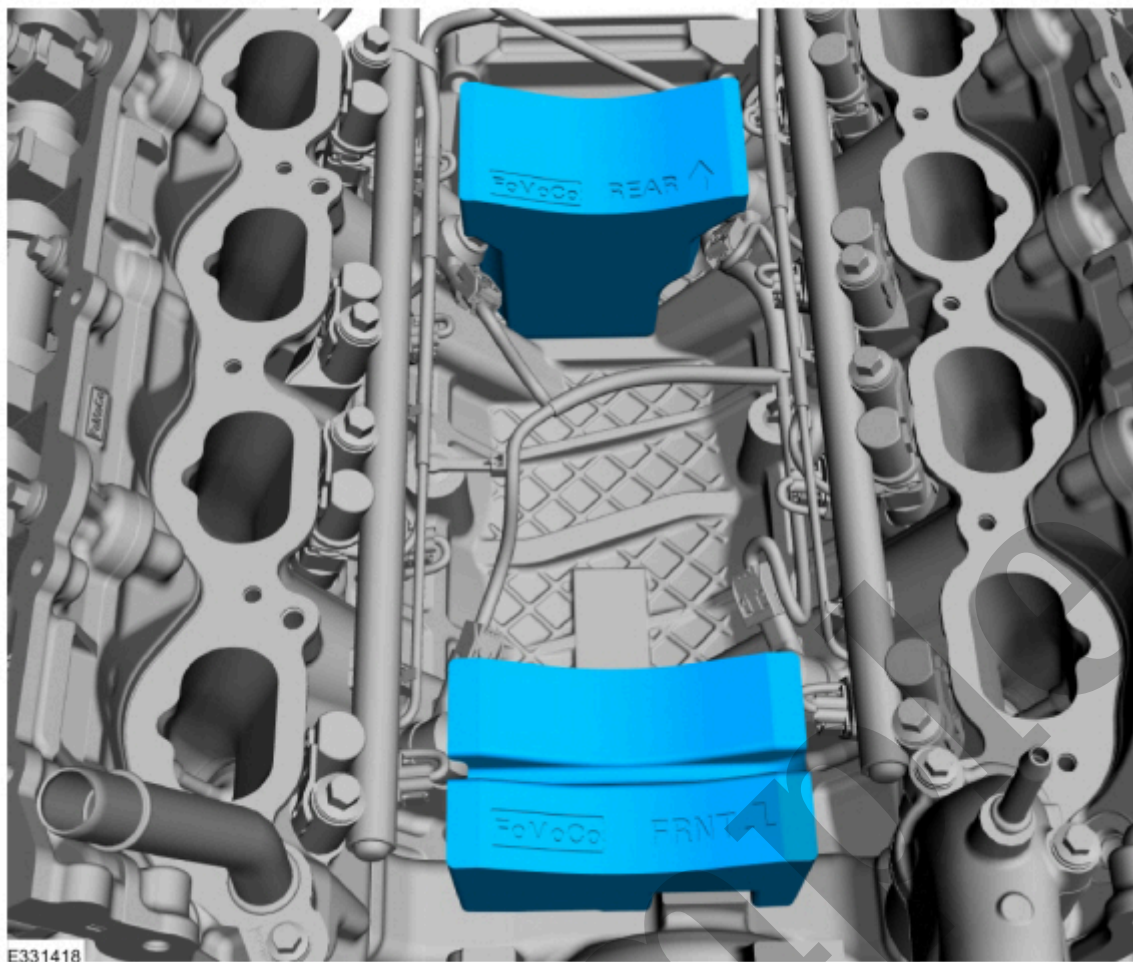

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

33. Install the LH (left-hand) bellhousing bolt.

Torque : 35 lb.ft (48 Nm)

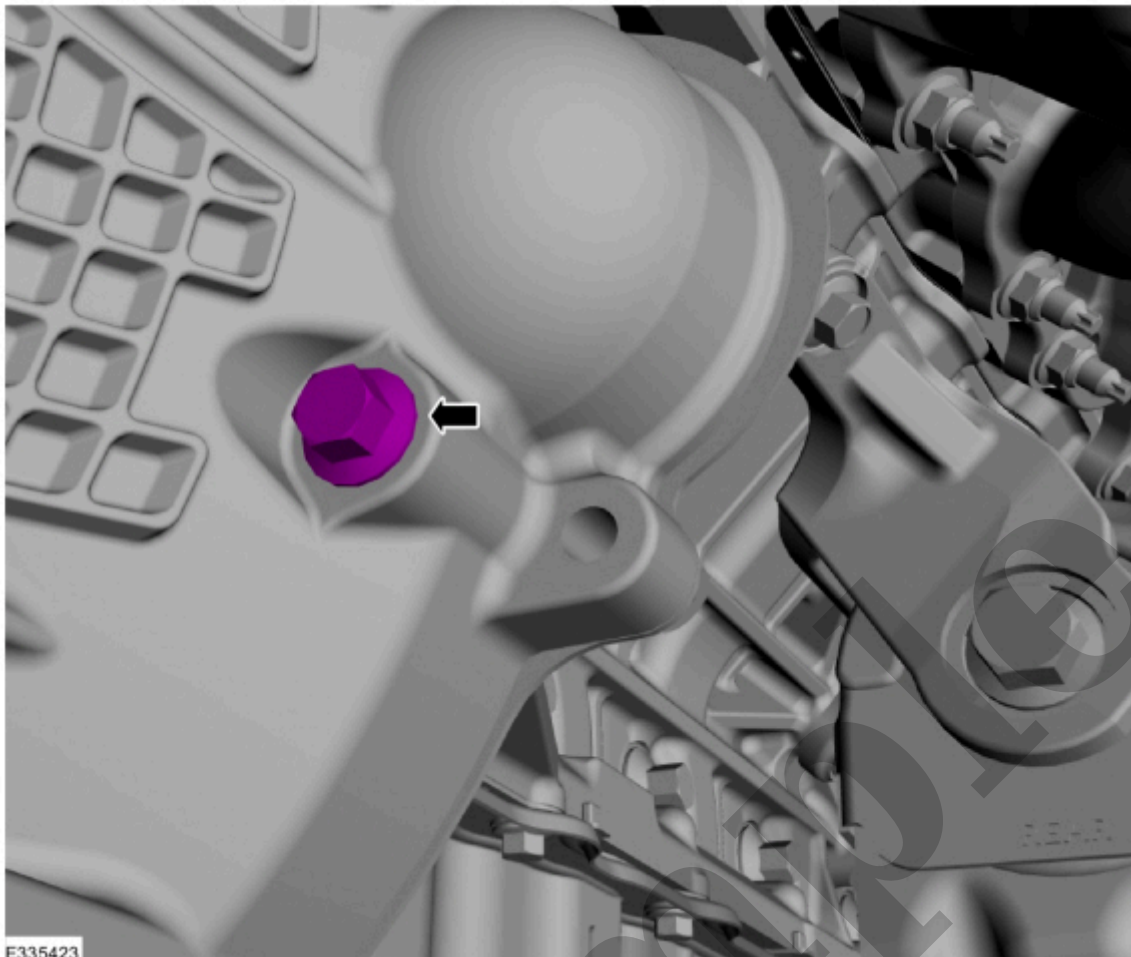

E335423

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

35. Install the lower bellhousing bolts.


Torque : 35 lb.ft (48 Nm)



E335422

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Torque : 111 lb.ft (150 Nm)

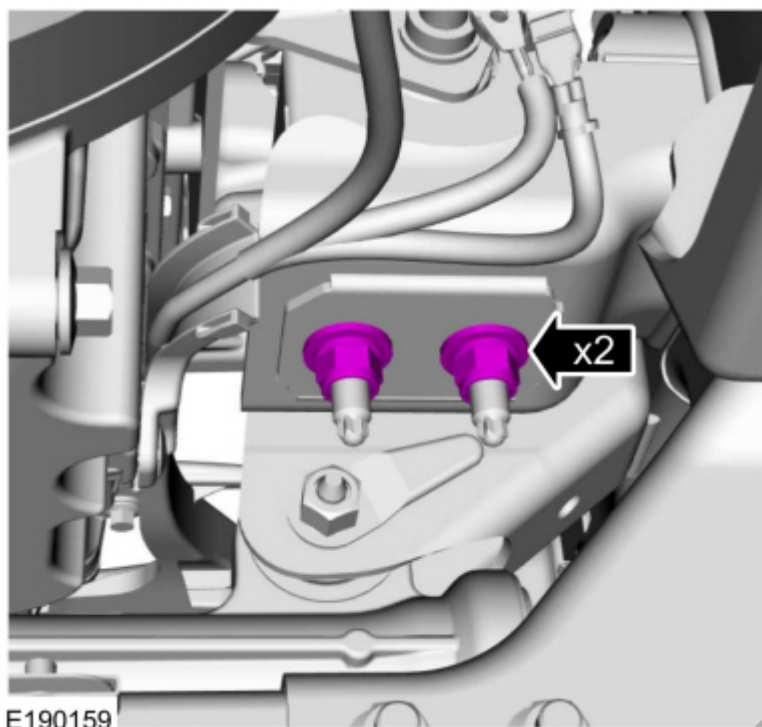


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

38. **NOTICE**

Only use hand tools when installing the transmission mount-to-crossmember nuts or damage to the transmission mount can occur.


Tighten the transmission mount-to-crossmember nuts.

Torque : 85 lb.ft (115 Nm)

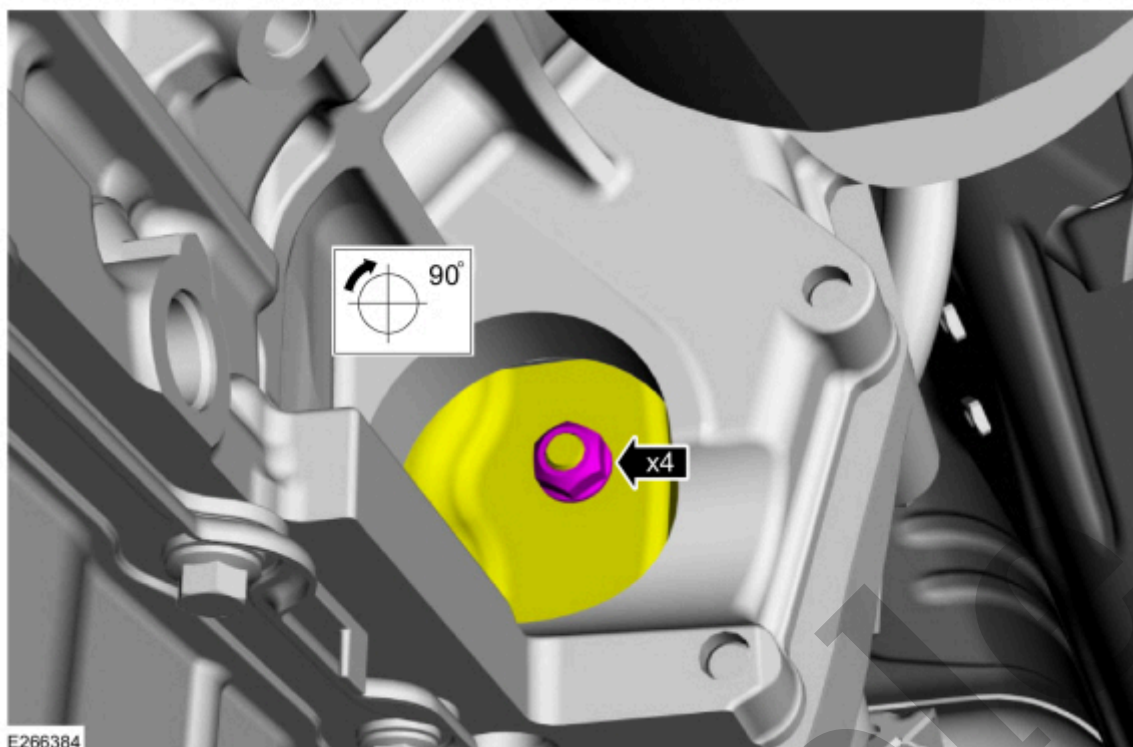

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

40. Install the cylinder block opening cover.

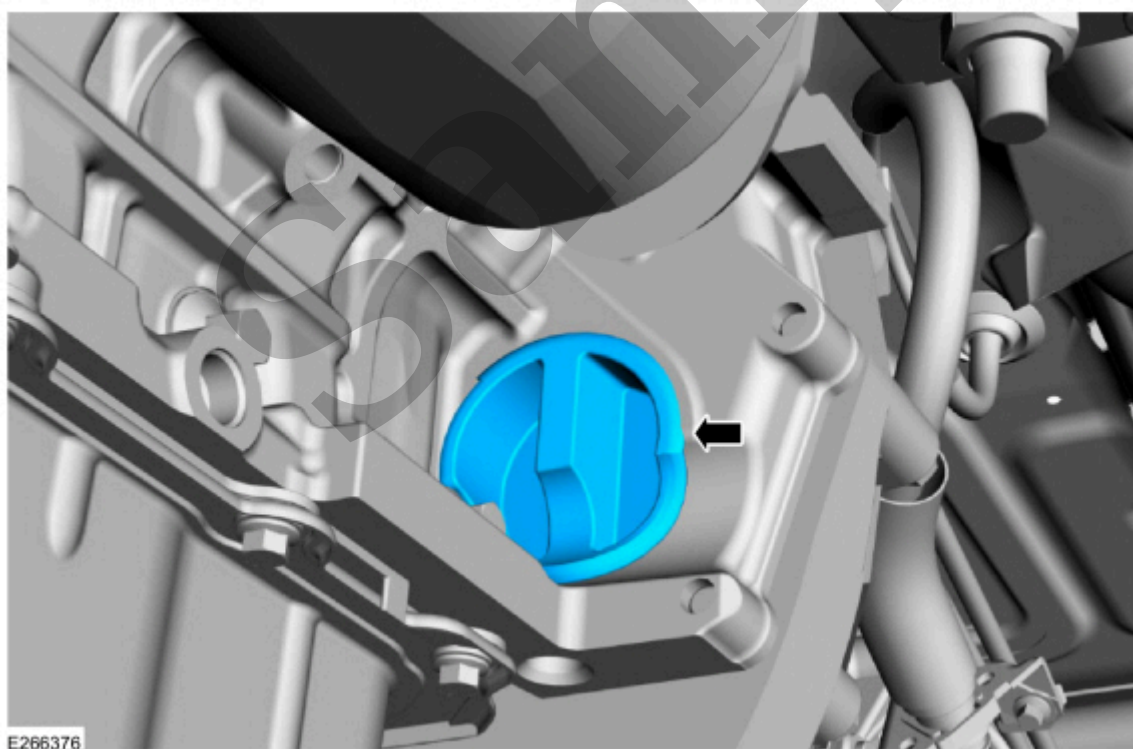

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

43. Tighten the nuts.

Torque :

1: 30 lb.ft (40 Nm)

2: 30 lb.ft (40 Nm)

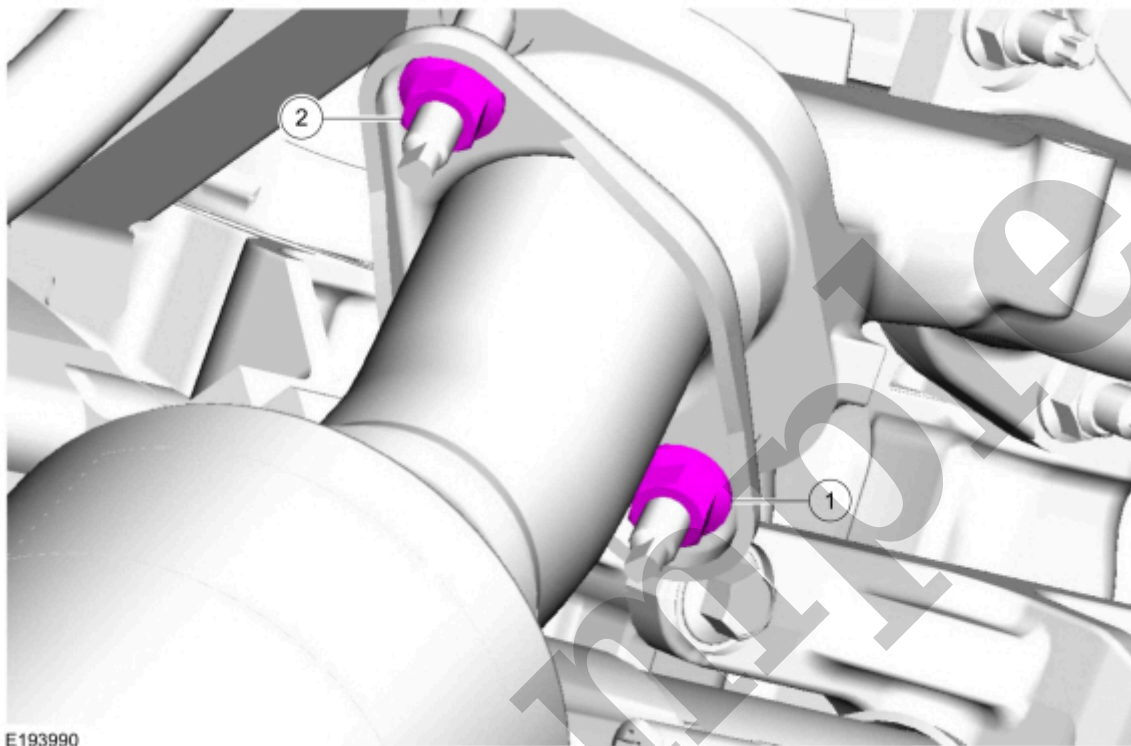


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

44. Tighten the nuts.

Torque :

1: 30 lb.ft (40 Nm)

2: 30 lb.ft (40 Nm)

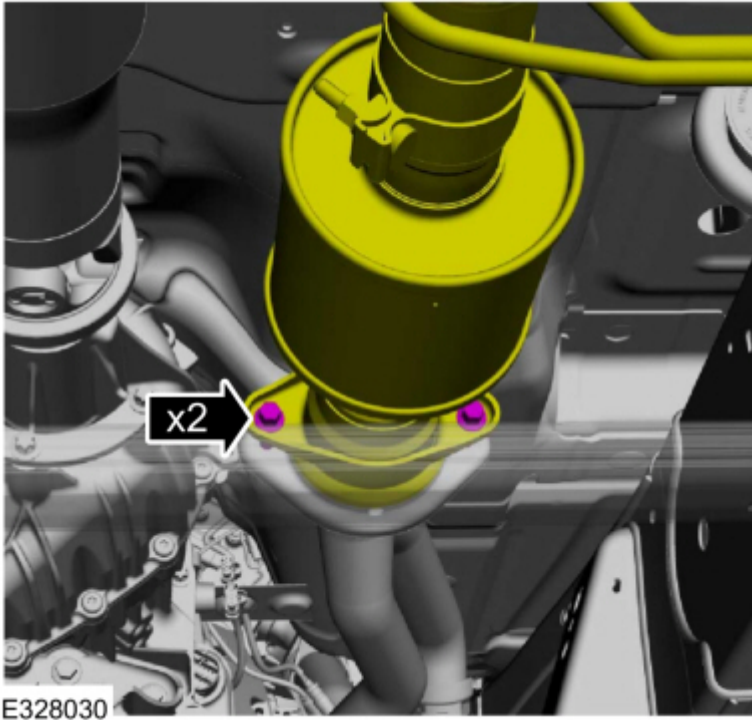

E328030

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

46. If equipped, install the front driveshaft.


Refer to: [Front Driveshaft](#)(205-01 Driveshaft, Removal and Installation).

47. Install a new the engine oil filter.

Refer to: [Engine Oil Draining and Filling](#)(303-01E Engine - 5.0L 32V Ti-VCT, General Procedures).

48. Install the LH (left-hand) heat shield and the bolts.

Torque : 177 lb.in (20 Nm)

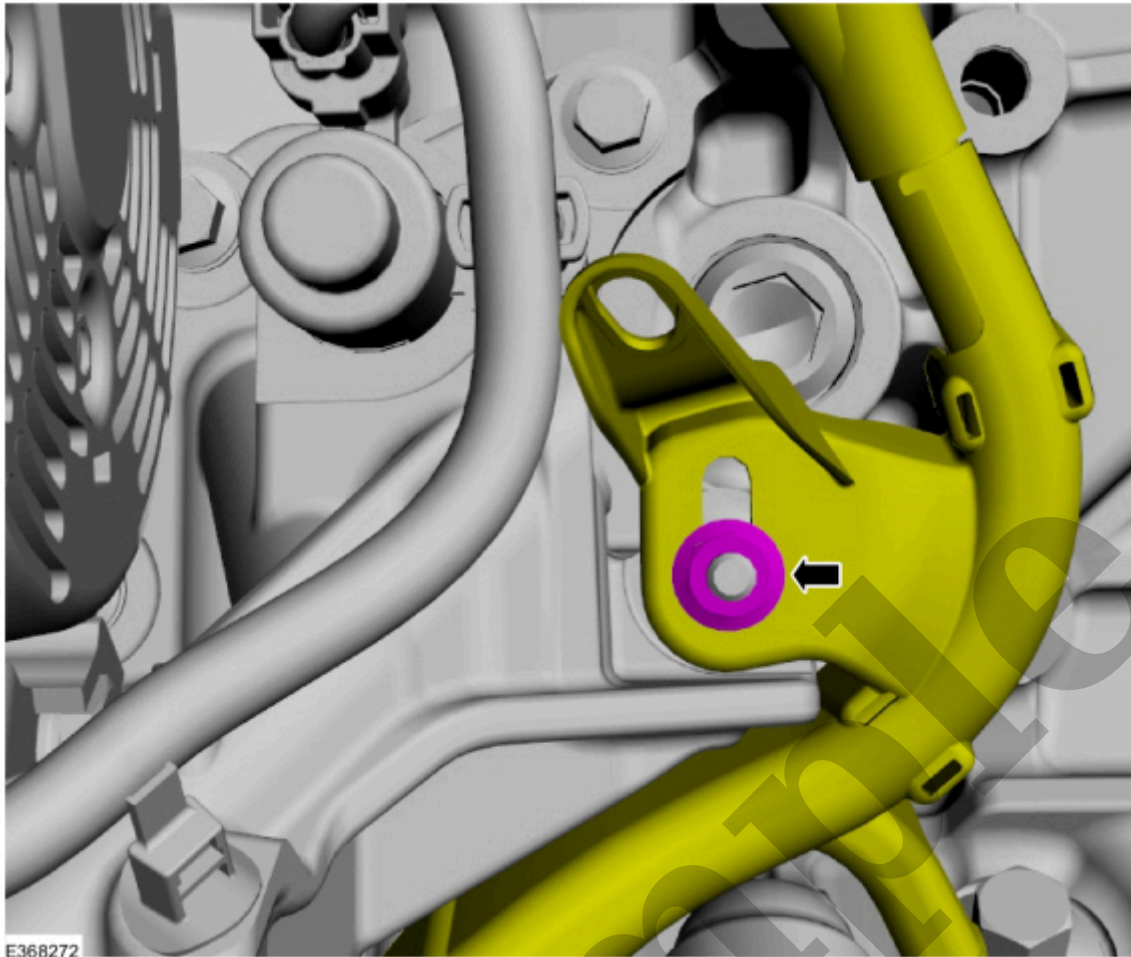

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

51.
 1. Connect the A/C (air conditioning) compressor electrical connectors.
 2. Attach the wiring harness retainer.
 3. Install the pin-type retainer.

