


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2015 JEEP Wrangler OEM Service and Repair Workshop Manual

[Go to manual page](#)

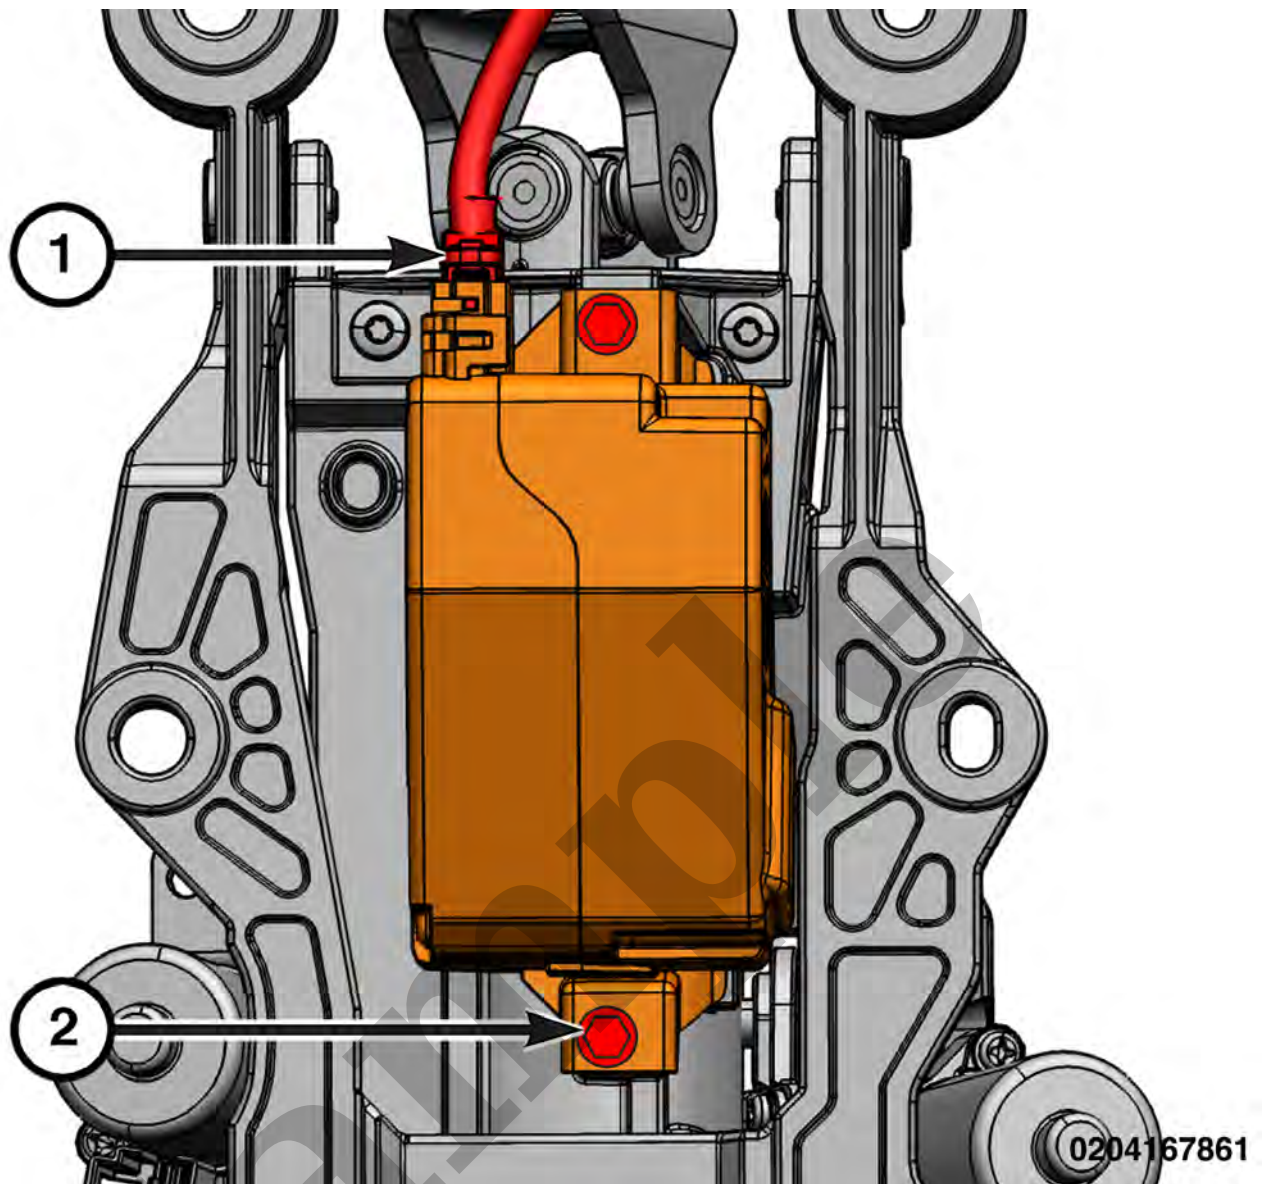


1 - Wire Harness Connector

2 - Electronic Steering Lock (ESL) Module Bolts

14. If equipped, disconnect the Electronic Steering Lock (ESL) module wire harness connector.
15. Pull the steering column shaft through the bulkhead pass through and remove the steering column.


CALLOUT	DESCRIPTION	SPECIFICATION	COMMENT
1	Steering Column Boot Nuts	8 N·m (71 In. Lbs.)	—

Sample

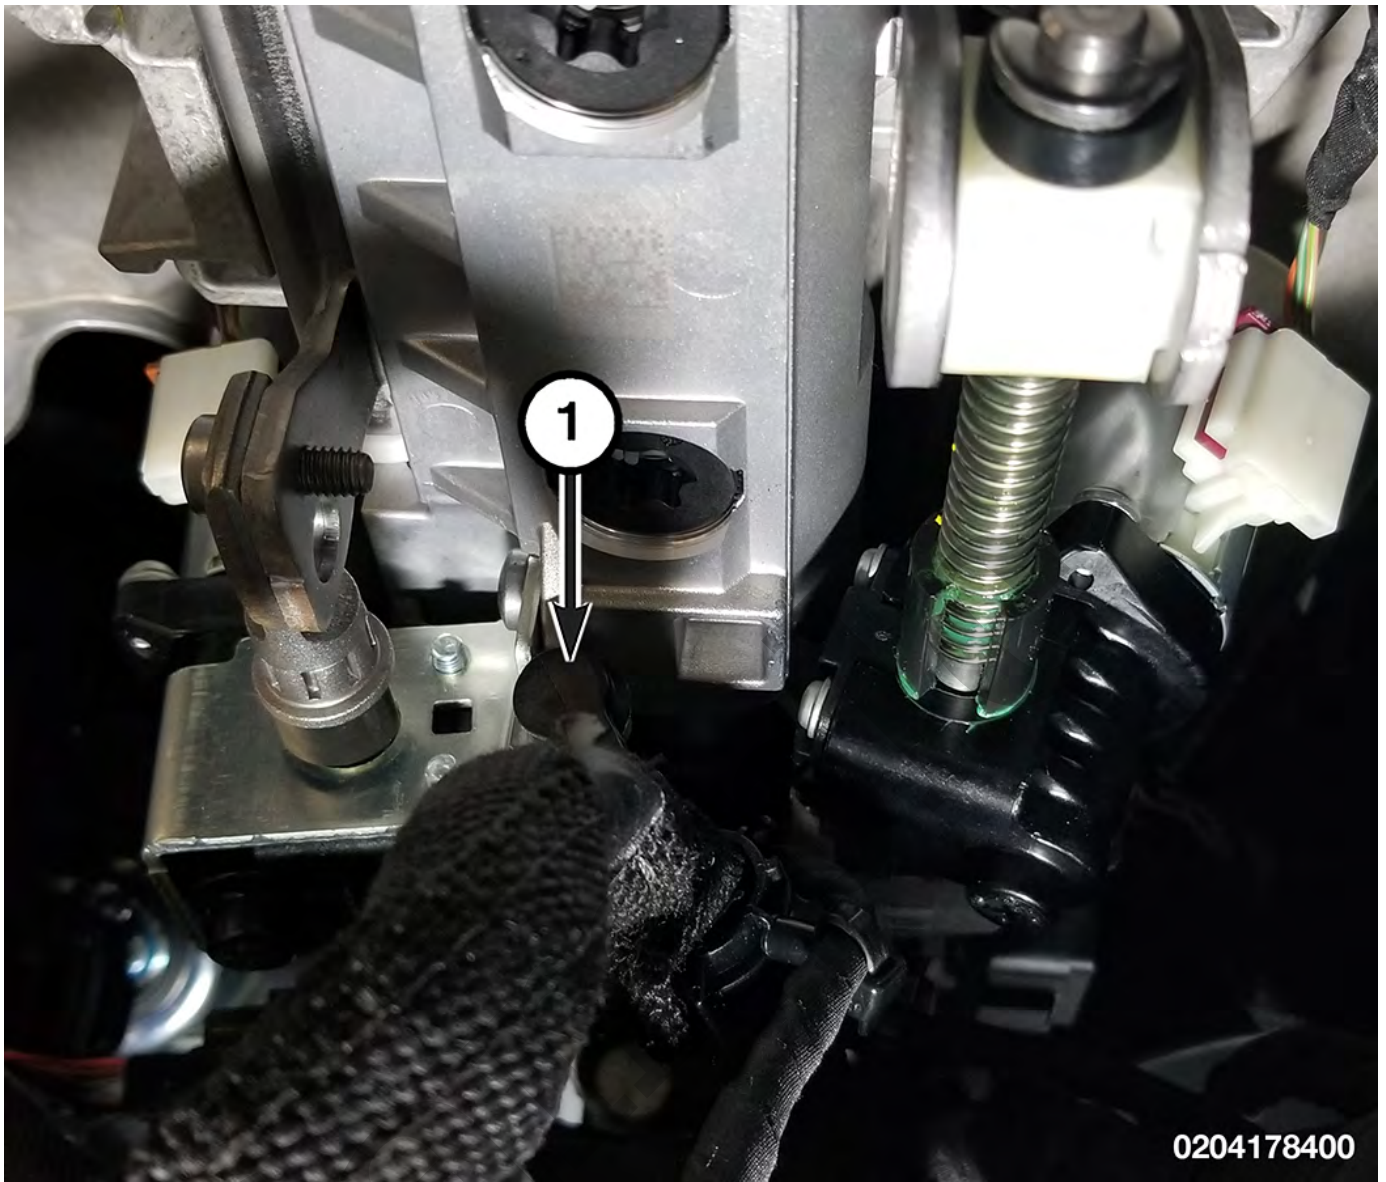

1 - Wire Harness Routing Clip

8. Disconnect the wire harness routing clip.

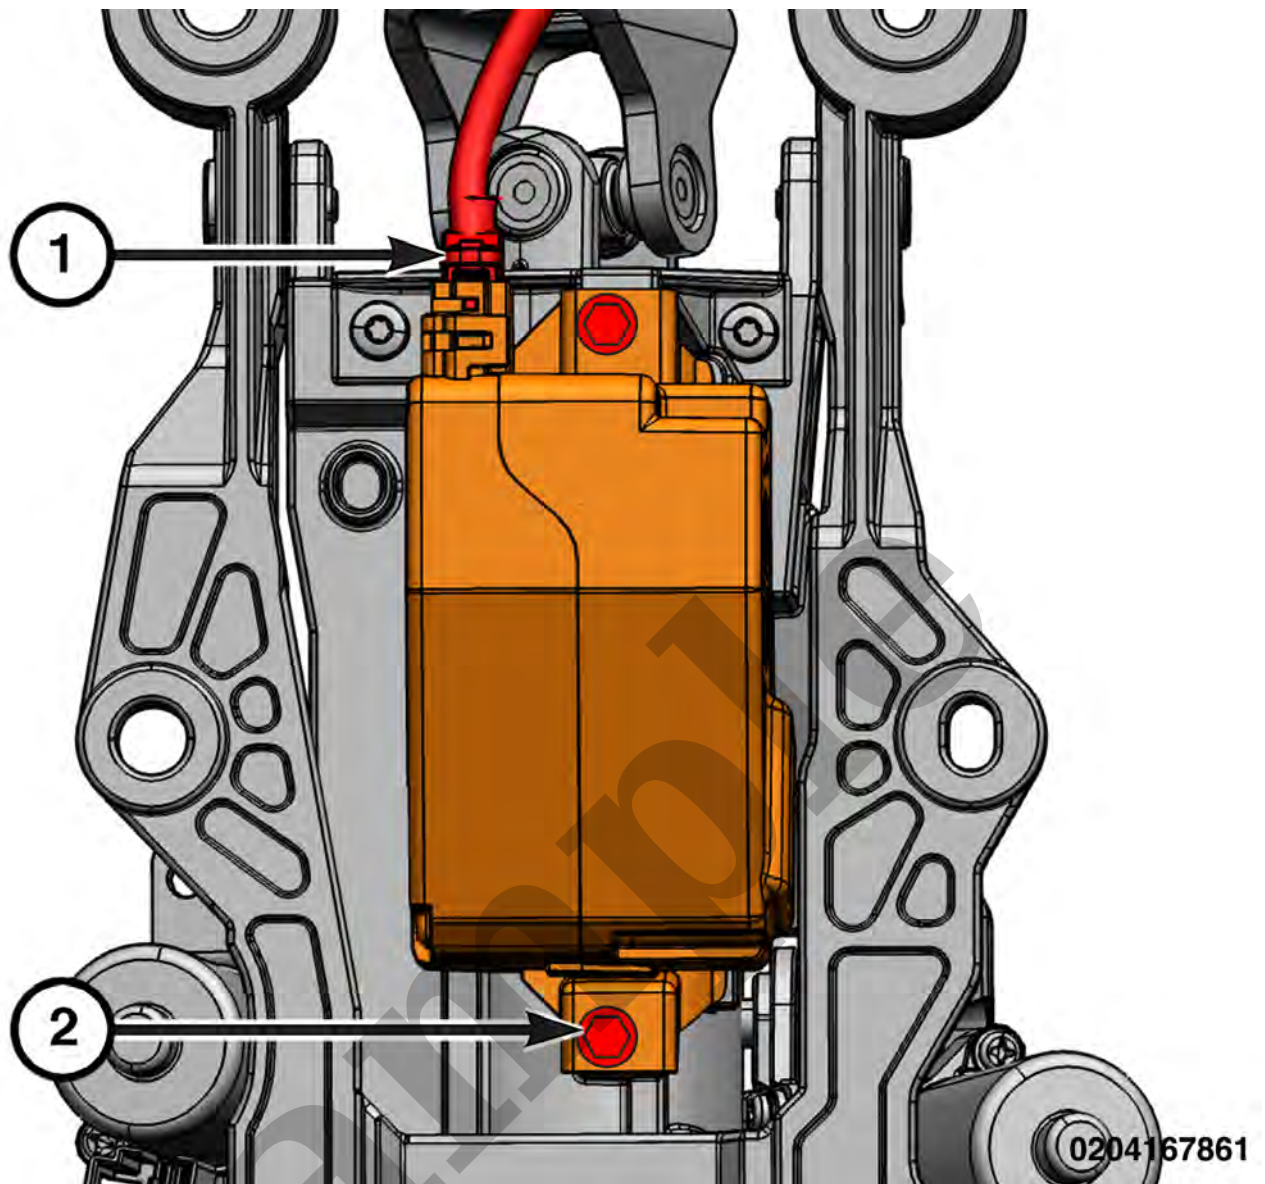

1 - Wire Harness Connector


2 - Electronic Steering Lock (ESL) Module Bolts

12. If equipped, disconnect the Electronic Steering Lock (ESL) module wire harness connector.

13. Pull the steering column shaft through bulkhead pass through and remove the steering column.

CALLOUT	DESCRIPTION	SPECIFICATION	COMMENT
1	Steering Column Boot Nuts	8 N·m (71 In. Lbs.)	—

Sample

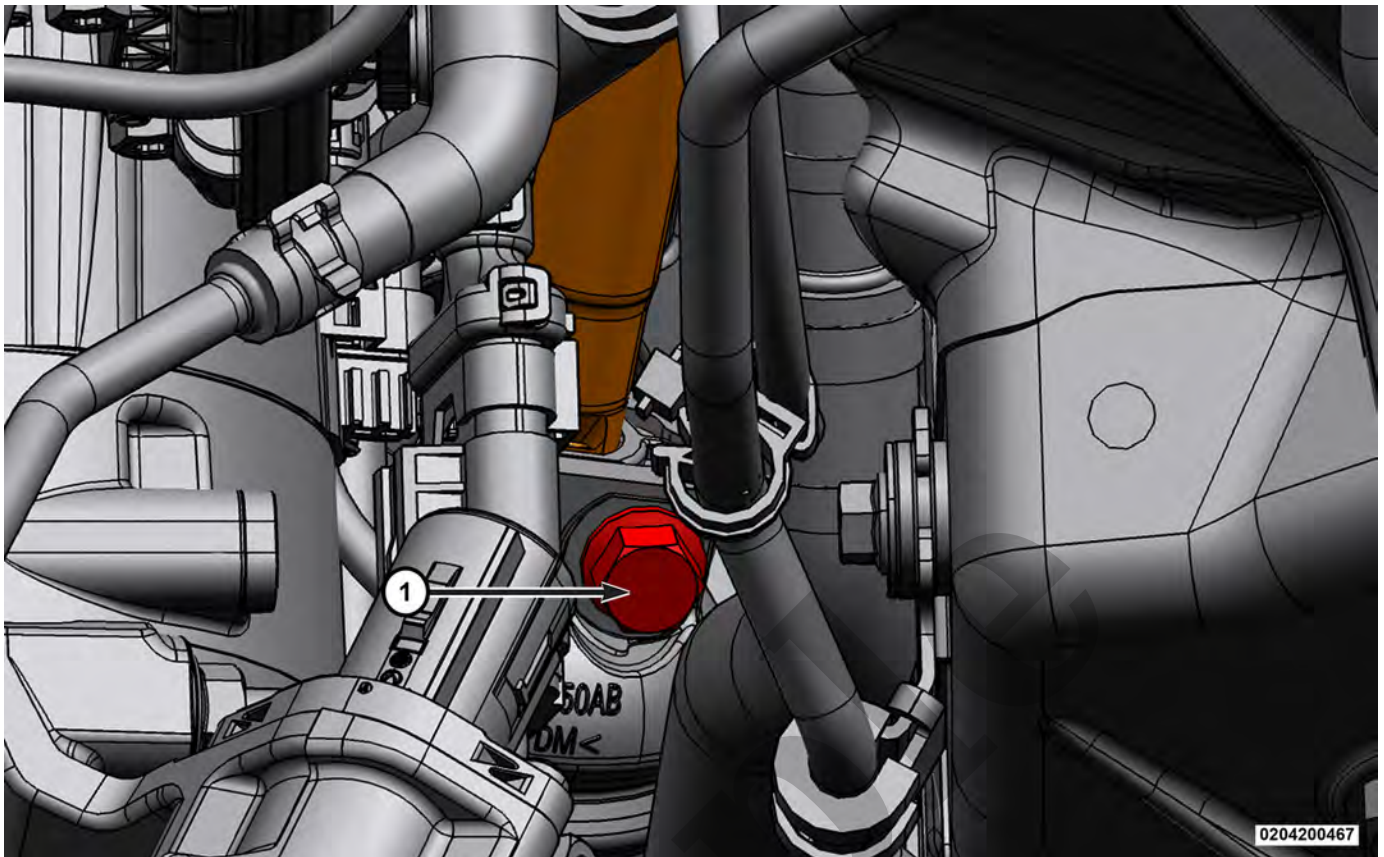

1 - Upper Steering Column Shaft Coupling Pinch Bolt

11. Remove and **DISCARD** the upper steering column shaft coupling pinch bolt and disengage the intermediate shaft from the steering column shaft coupling.
12. Remove the intermediate shaft.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.

- Install a **NEW** upper steering column shaft coupling pinch bolt.
- Install a **NEW** intermediate shaft pinch bolt.


Refer To List:

List 1

- [09 - Engine, 2.0L / Air Intake System / AIR CLEANER / Removal and Installation](#)
- [09 - Engine, 3.6L / Air Intake System / AIR CLEANER / Removal and Installation](#)
- [09 - Engine, 5.7L / Air Intake System / AIR CLEANER / Removal and Installation](#)

List 2

- [09 - Engine, 2.0L / Air Intake System / TUBE, Intake Air / Removal and Installation](#)

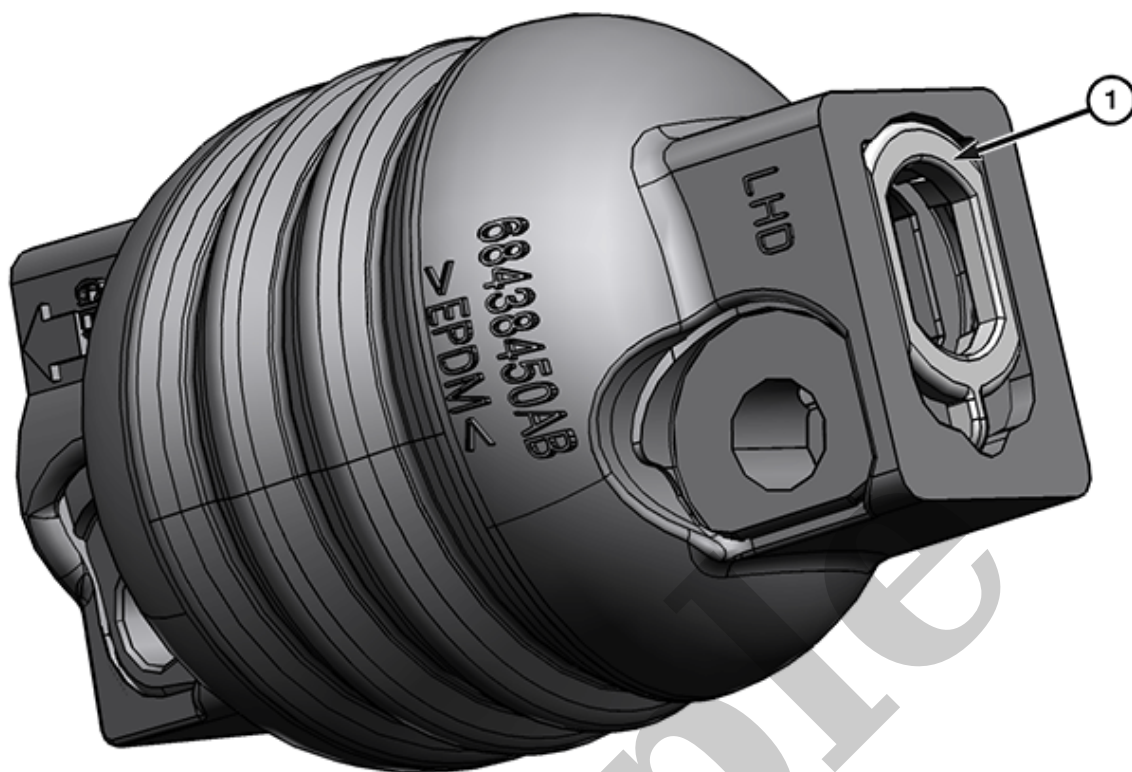

0204199743

1 - Intermediate Shaft Coupling White Clip

7. Be sure to keep the intermediate shaft coupling white clip in place as shown.

CALLOUT	DESCRIPTION	SPECIFICATION	COMMENT
1	Steering Column Boot Nuts	8 N·m (71 In. Lbs.)	—


Refer To List:

List 1

- [09 - Engine, 2.0L / Air Intake System / AIR CLEANER / Removal and Installation](#)
- [09 - Engine, 3.6L / Air Intake System / AIR CLEANER / Removal and Installation](#)
- [09 - Engine, 5.7L / Air Intake System / AIR CLEANER / Removal and Installation](#)

List 2

- [09 - Engine, 2.0L / Air Intake System / TUBE, Intake Air / Removal and Installation](#)
- [09 - Engine, 3.6L / Air Intake System / TUBE, Intake Air / Removal and Installation](#)
- [09 - Engine, 5.7L / Air Intake System / TUBE, Intake Air / Removal and Installation](#)

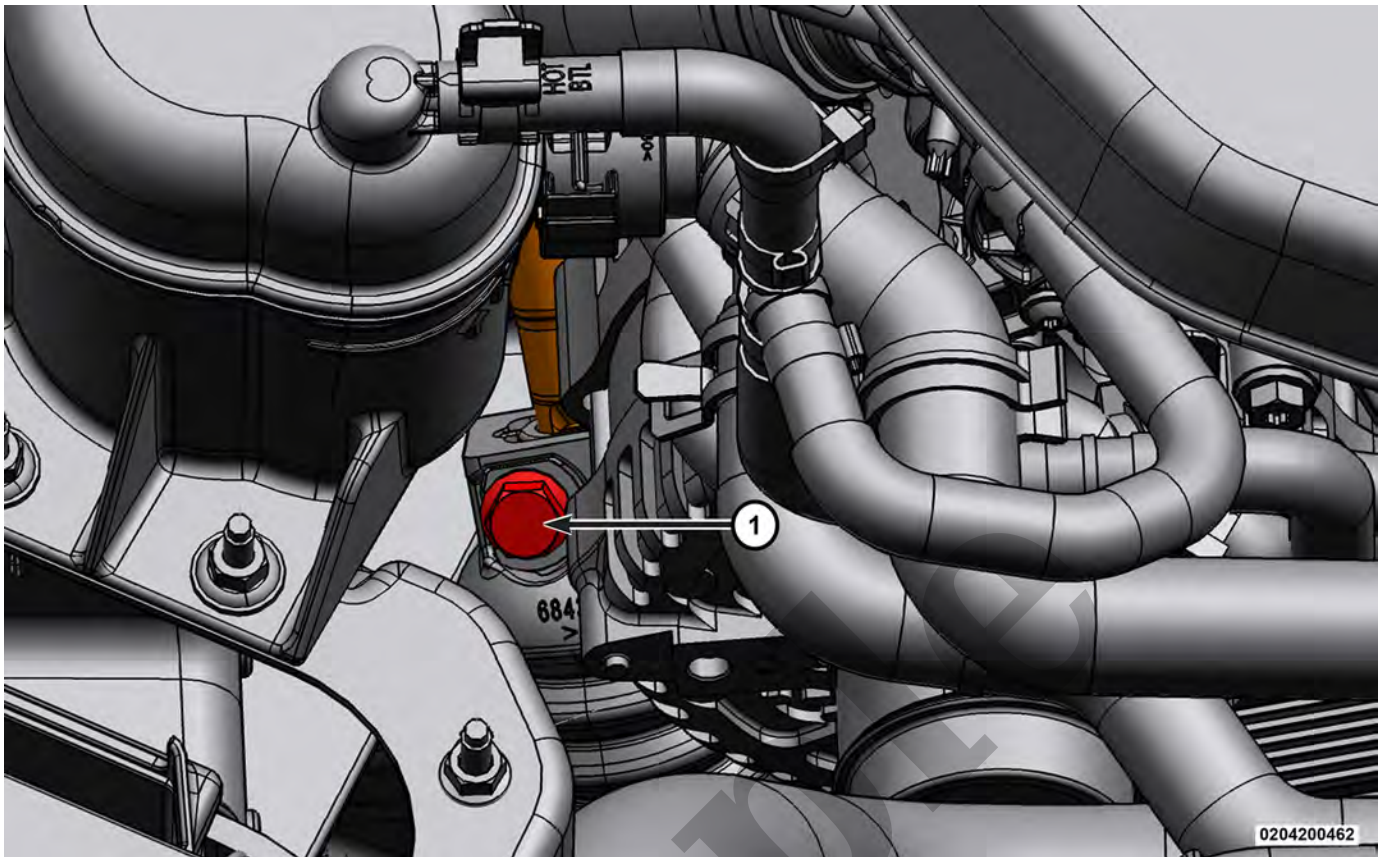

1 - Upper Steering Column Shaft Coupling Pinch Bolt

9. Remove and **DISCARD** the upper steering column shaft coupling pinch bolt and disengage the intermediate shaft from the steering column shaft coupling.
10. Remove the intermediate shaft.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.

- Install a **NEW** upper steering column shaft coupling pinch bolt.
- Install a **NEW** intermediate shaft pinch bolt.

Refer To List:

List 1

- [09 - Engine, 2.0L / Air Intake System / AIR CLEANER / Removal and Installation](#)
- [09 - Engine, 3.6L / Air Intake System / AIR CLEANER / Removal and Installation](#)
- [09 - Engine, 5.7L / Air Intake System / AIR CLEANER / Removal and Installation](#)

List 2

- [09 - Engine, 2.0L / Air Intake System / TUBE, Intake Air / Removal and Installation](#)