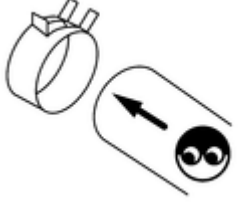
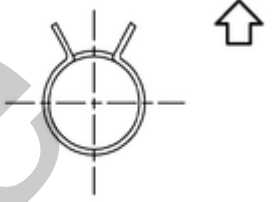
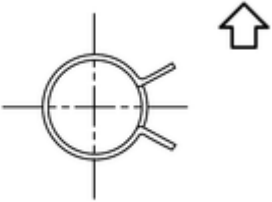
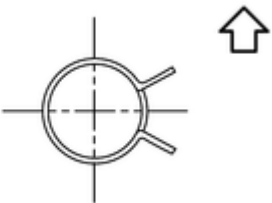
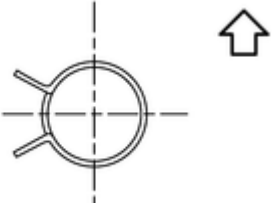



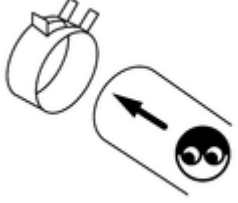
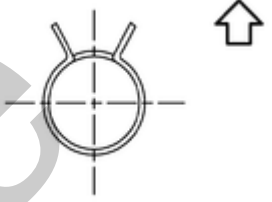
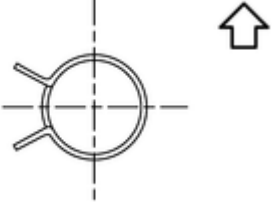
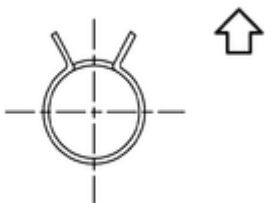
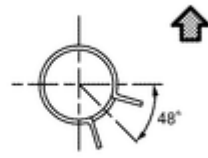
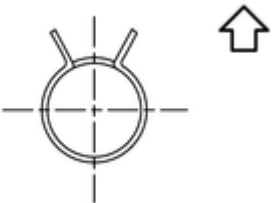
Your Ultimate Source for OEM Repair Manuals





FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2015 Nissan GT-R Service and Repair Manual


[Go to manual page](#)

<p>Location of hose</p>	<p>Hose end</p>	<p>Direction of Paint mark</p>	<p>Direction of hose clamp tabs</p>  <p>RPR-001824646-28-PCIA0366ZZ</p> <p>←: Vehicle upper</p> <p>← Vehicle front</p>
	<p>In-vehicle charger side</p>	<p>Vehicle upper</p>	 <p>RPR-001824646-33-PCIA0362ZZ</p>
	<p>In-vehicle charger side</p>	<p>Vehicle rear</p>	 <p>RPR-001824646-41-PCIA0360ZZ</p>
<p>DC/DC converter inlet hose</p>	<p>DC/DC converter side</p>	<p>Vehicle rear</p>	 <p>RPR-001824646-43-PCIA0360ZZ</p>
<p>Traction motor inlet hose (DC/DC converter side)</p>	<p>DC/DC converter side</p>	<p>Vehicle rear</p>	 <p>RPR-001824646-04-PCIA0364ZZ</p>
	<p>Traction motor inlet hose (traction motor side)</p>	<p>Vehicle right</p>	 <p>NOTE: Clamp is glued to hose.</p>

Location of hose	Hose end	Direction of Paint mark	<p>Direction of hose clamp tabs</p>  <p>RPR-001824646-28-PCIA0366ZZ</p> <p>←: Vehicle upper</p> <p>← Vehicle front</p>
Traction motor inlet hose	Traction motor inverter side	Vehicle upper	 <p>RPR-001824646-27-PCIA0362ZZ</p>
	Traction motor inside	Vehicle rear	 <p>RPR-001824646-30-PCIA0364ZZ</p>
Radiator hose lower (between traction motor inverter and electric water pump)	Traction motor inverter side	Vehicle upper	 <p>RPR-001824646-31-PCIA0362ZZ</p>
	Electric water pump side	Vehicle rear left	 <p>RPR-001824646-01-000363832</p>
Radiator hose lower	Electric water pump side	Vehicle upper	 <p>RPR-001824646-03-PCIA0362ZZ</p>

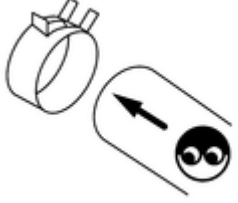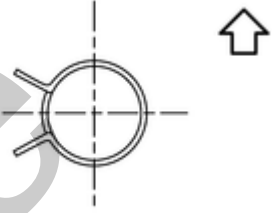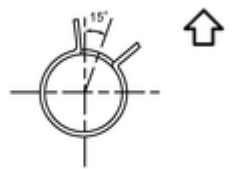
Location of hose	Hose end	Direction of Paint mark	<p>Direction of hose clamp tabs</p>  <p>RPR-001824646-28-PCIA0366ZZ</p> <p>← Vehicle upper</p> <p>← Vehicle front</p>
	Radiator side	Vehicle left	 <p>RPR-001824646-34-PCIA0364ZZ</p>
Traction motor inlet hose (traction motor side)	Traction motor inside	Vehicle upper right	 <p>RPR-001824646-02-000363833</p>
	Traction motor inlet hose (DC/DC converter side)	Vehicle upper	<p> NOTE: Clamp is glued to hose.</p>

- The direction of the hose clamp tabs must be within $\pm 30^\circ$ (b) of the indicated position (A).

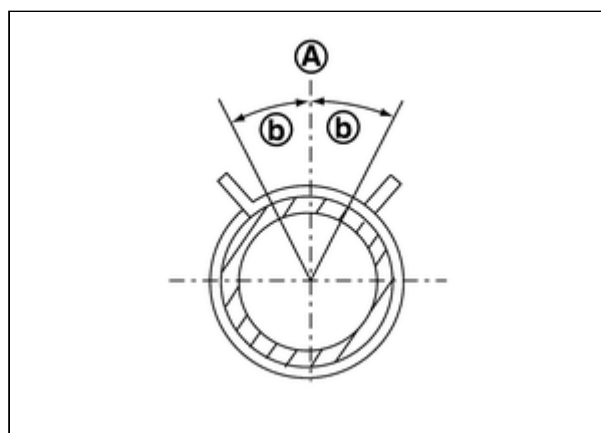

RPR-001824646-38-PBIA4295ZZ

- When installing hose clamp (1), check that the distance "A" between the end of the radiator hose paint mark (2) and the hose clamp is within the specified range.

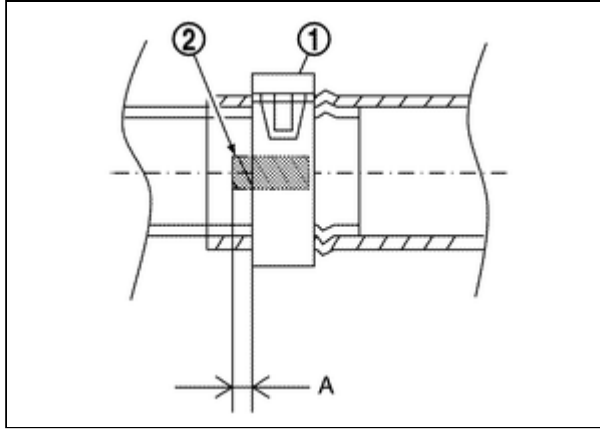

RPR-001824646-39-SBIA0241ZZ

Dimension "A"

: (+1) - (-1) mm [(+0.04) - (-0.04) in]

Sample

INSPECTION AFTER INSTALLATION

- Confirm that the reservoir tank cap is tightened.
- With a suitable tool, check that there is no leaks of coolant. Refer to [Inspection](#).
- Start the electric pump, and check the joints for coolant leaks.


Sample

RADIATOR : Exploded View

RDE-001824644



Front side

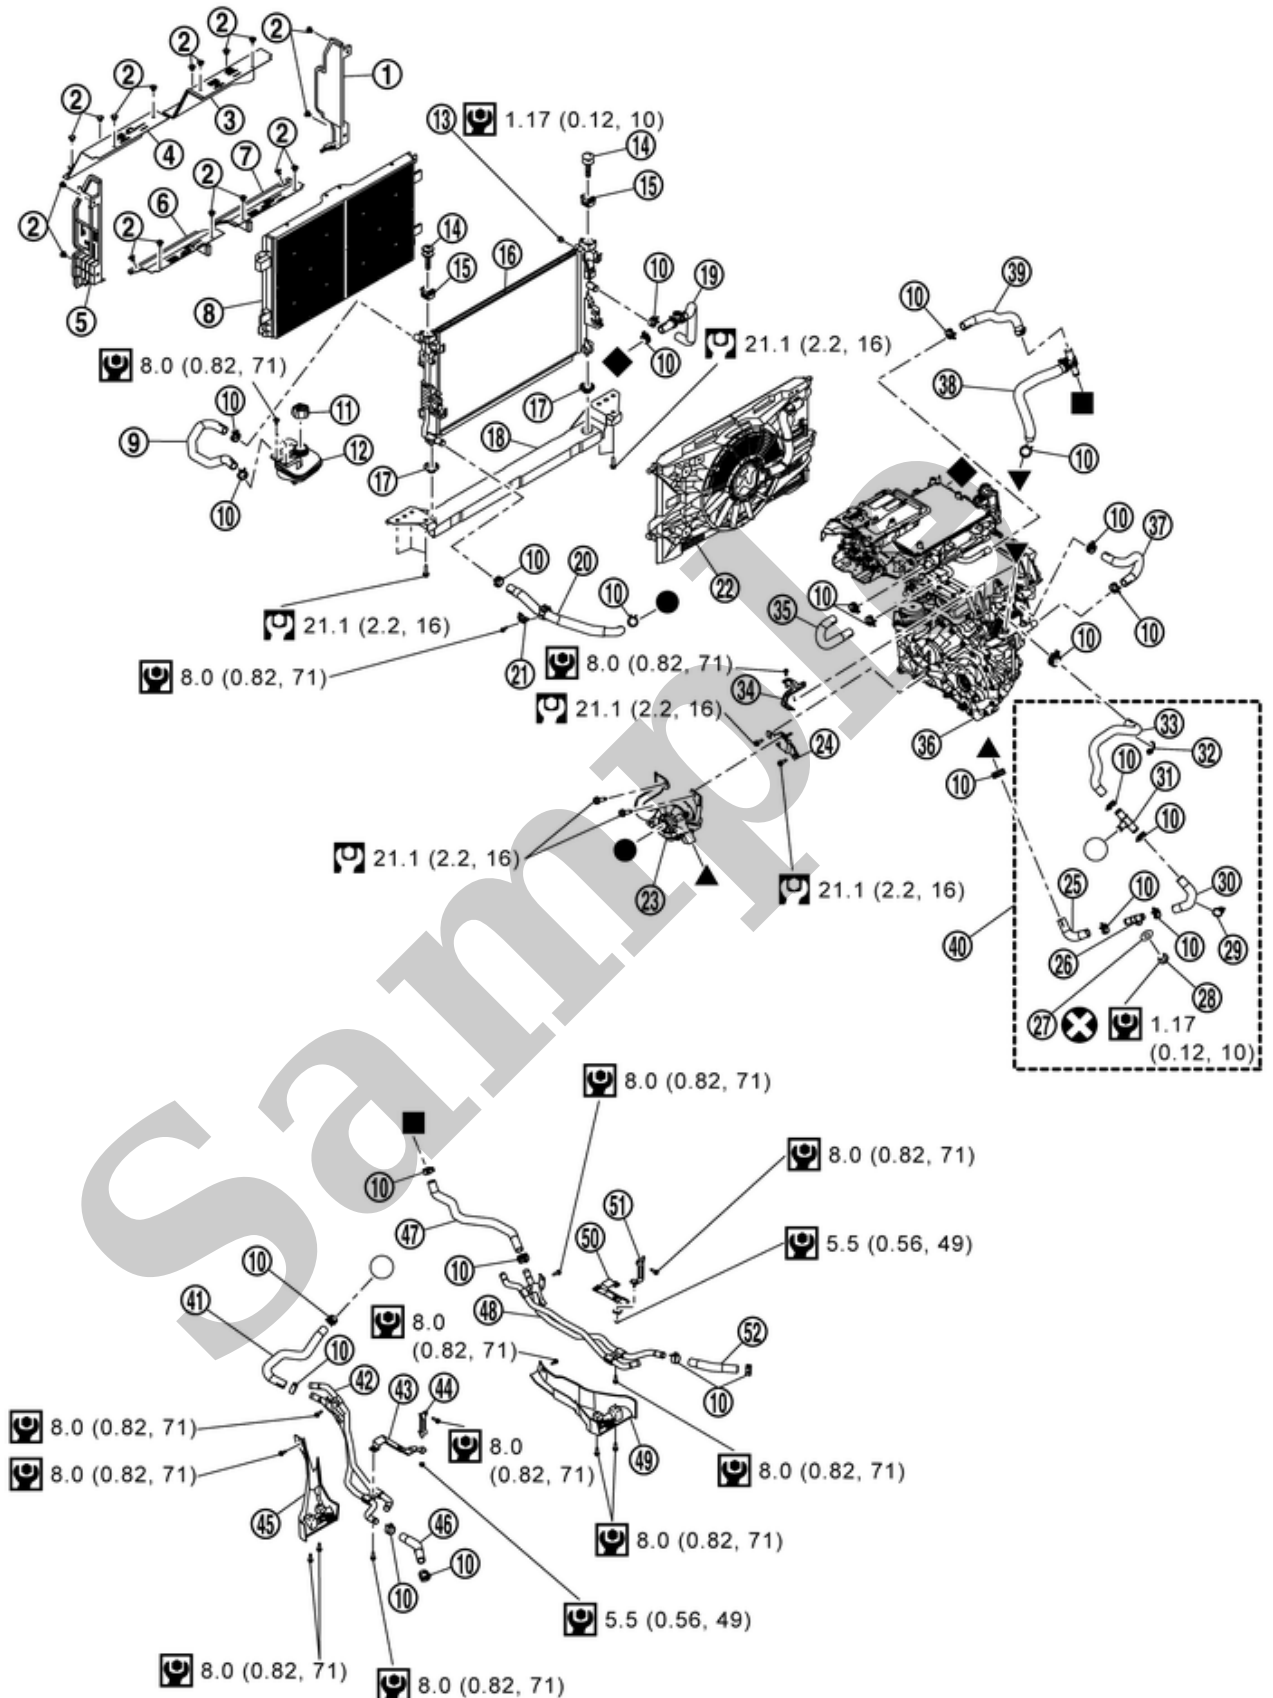SEC. 214




RDE-001824644-01-000399658

①	Radiator air guide	②	Clip	③	Radiator air guide upper right
④	Radiator air guide upper left	⑤	Radiator air guide left	⑥	Radiator air guide lower left
⑦	Radiator air guide lower right	⑧	Chipping guard	⑨	Radiator reservoir tank hose
⑩	Clamp	⑪	Reservoir tank cap	⑫	Reservoir tank

⑬	Air bleeder	⑭	Radiator upper mounting lock	⑮	Radiator upper mounting
⑯	Radiator	⑰	Radiator lower mounting	⑱	Radiator core support lower
⑲	Radiator outlet hose	⑳	Radiator hose lower	㉑	Radiator hose lower bracket
㉒	Radiator cooling fan shroud	㉓	Electric water pump	㉔	Electric water pump bracket
㉕	Radiator hose lower (Between traction motor inverter and electric water pump 1)*1	㉖	Radiator hose lower connector	㉗	O-ring
㉘	Drain plug	㉙	Clip 1	㉚	Radiator hose lower (Between traction motor inverter and electric water pump 2)*1
㉛	Radiator hose lower pipe *2	㉜	Clip 2	㉝	Radiator hose lower (Between traction motor inverter and electric water pump 3)*3
㉞	Bracket	㉟	DC/DC converter inlet hose	㊱	Traction motor
㊲	Traction motor inlet hose	㊳	Traction motor inlet hose (Traction motor side)	㊴	Traction motor inlet hose (DC/DC converter side)
㊵	Radiator hose lower [Between inverter(front) and electric water pump] ASSY	㊶	Water hose 1	㊷	Electric water pump inlet tube ASSY left
㊸	Water hose bracket 2	㊹	Water hose bracket 1	㊺	Electric water pump inlet tube ASSY cover left
㊻	Water hose 2	㊼	Water hose 3	㊽	Electric water pump inlet tube ASSY right
㊾	Electric water pump inlet tube ASSY cover right	㊿	Water hose bracket3	①	Water hose bracket 4
②	Water hose 4				
*1	②⑤,③①,③③ are supplied as an assembly				
	: N·m (kg-m, in-lb)				
	: N·m (kg-m, ft-lb)				
●,▲,■,▼,◆,○: Shows the connection between the same marks					

Rear side

SEC. 214

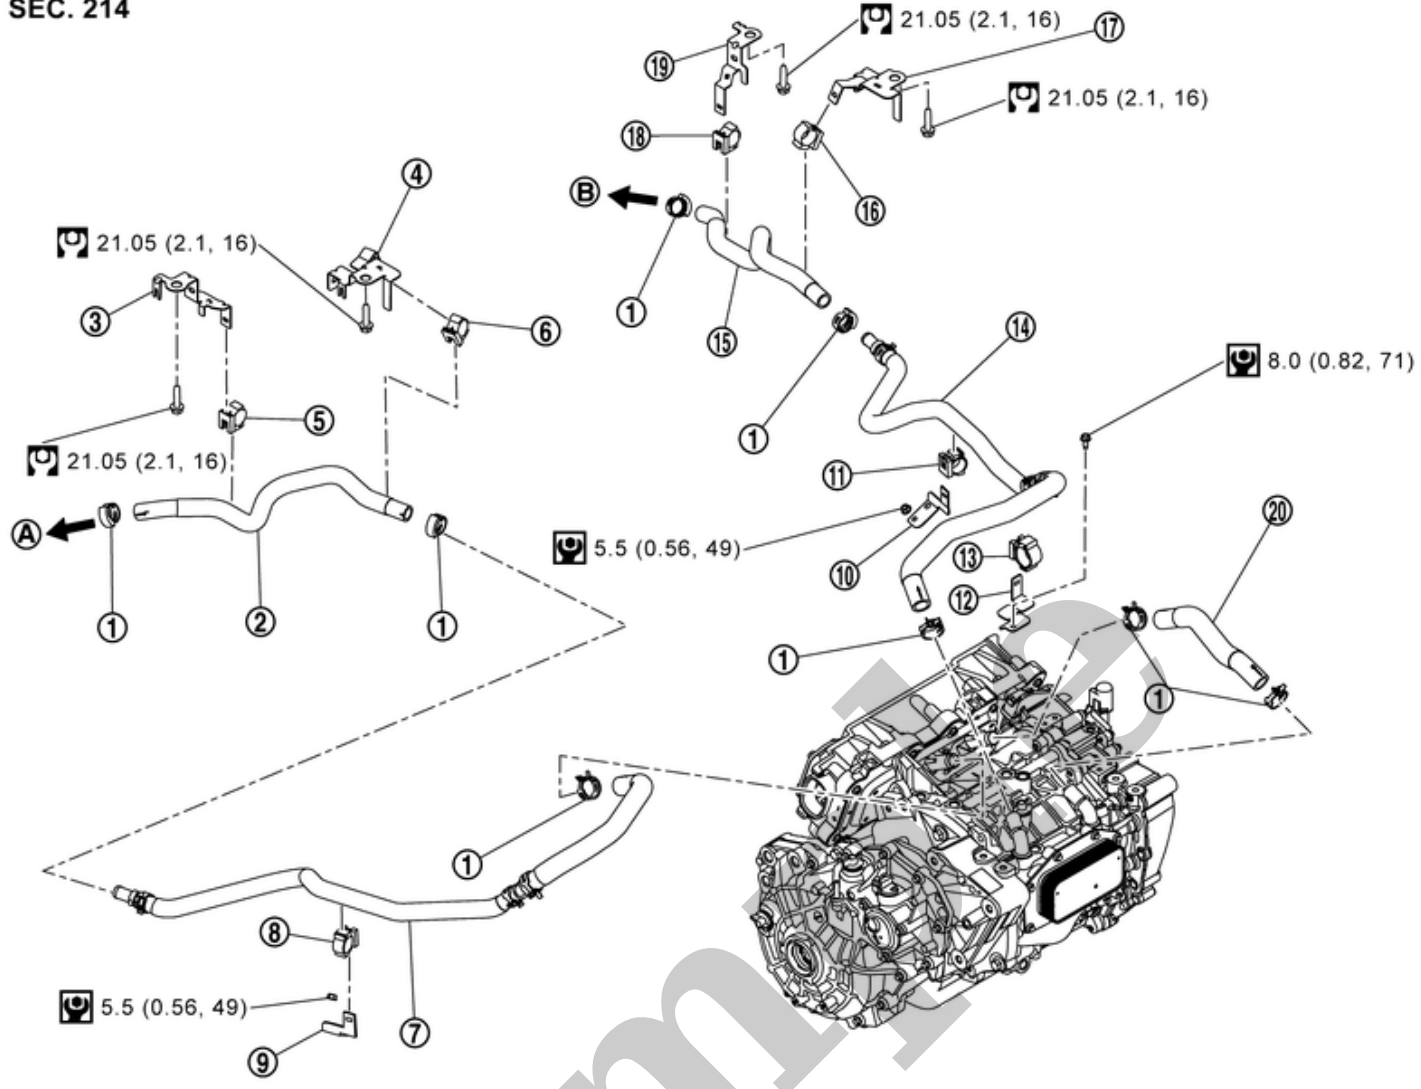

RDE-001824644-02-000400254

①	Clamp	②	Water hose [inverter (rear) inlet] 2	③	Bracket 1
④	Bracket 2	⑤	Clip 1	⑥	Clip 2
⑦	Water hose [inverter (rear) inlet] 1	⑧	Clip 3	⑨	Bracket 3
⑩	Bracket 4	⑪	Clip 4	⑫	Bracket 5
⑬	Clip 5	⑭	Water hose (oil cooler outlet) 1	⑮	Water hose (oil cooler outlet) 2
⑯	Bracket 7	⑰	Bracket 6	⑱	Clip 7
⑲	Bracket 7	⑳	Water hose [inverter (rear) inlet - oil cooler]		
Ⓐ	To Li-ion battery	Ⓑ	To Li-ion battery		
	: N·m (kg-m, in-lb)				
	: N·m (kg-m, ft-lb)				


REMOVAL

water line front side

WARNING:

Never remove the reservoir tank cap if the drive motor or other high voltage part is hot. Hot coolant may spout out from the radiator, causing serious injury.

- 1 Remove high voltage supply unit from vehicle. Refer to [HIGH VOLTAGE POWER DELIVERY ASSEMBLY : Exploded View](#).
- 2 Discharge A/C refrigerant gas. Refer to [Recycle Refrigerant](#).
- 3 Remove A/C piping mounting bolts (A) and remove piping.

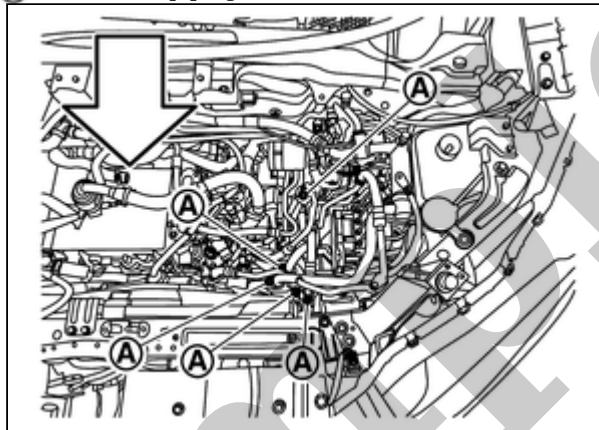


RPR-001980266-05-000346997



: Vehicle front

- 4 Remove harness connector (A).

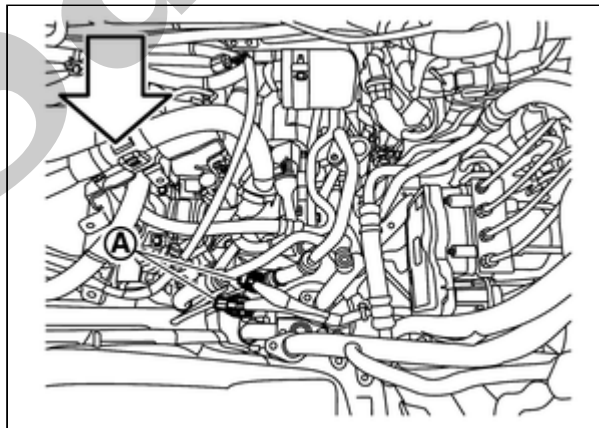

RPR-001980266-06-000346998



: Vehicle front

- 5 Remove front bumper. Refer to [Removal & Installation](#).
- 6 Remove active grill shutter. Refer to [Removal & Installation](#).
- 7 Remove radiator air guides upper on both sides.
- 8 Remove radiator air guides lower on both sides.
- 9 Remove radiator air guides on both sides.