

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2015 TOYOTA Fortuner OEM Service and Repair Workshop Manual

[Go to manual page](#)

(g) Feed out V-band clamp (2) and remove.

(h) Pull out exhaust manifold converter sub-assembly (3) towards the bottom and remove.

7. REMOVE WIDE RANGE AIR FUEL RATIO SENSOR


Click here [INFO](#)

8. REMOVE OXYGEN SENSOR

Click here [INFO](#)



Sample

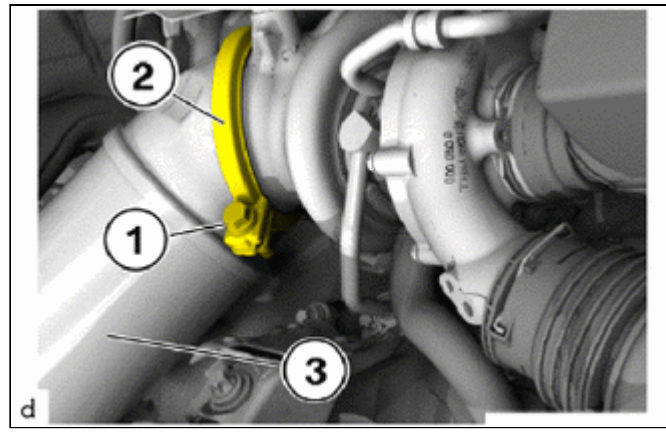

(d) Replace the exhaust pipe clamp (2).


(e) Feed in and install exhaust pipe clamp (2).

(f) Tighten down screw (1).

Torque:

13 N·m {133 kgf·cm, 10 ft·lbf}

(g) Replace nut (1).

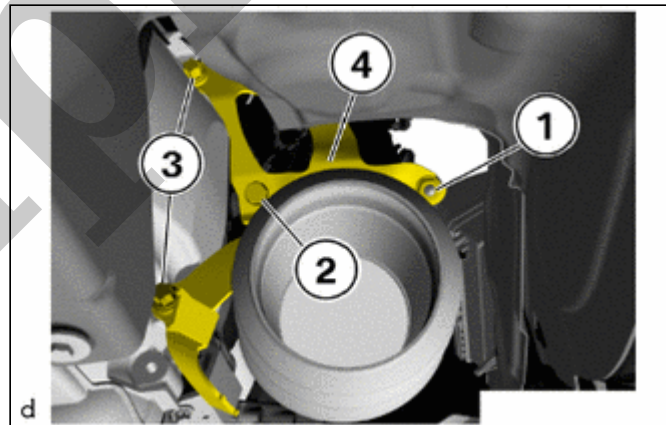

(h) Replace the screw (2).

(i) Replace the screw (3).

(j) Tighten the nut (1) and bolts (2) and (3) on the holder (4) of the exhaust manifold converter sub-assembly.

Torque:

19 N·m {194 kgf·cm, 14 ft·lbf}


(k) Connect the vacuum line.

4. INSTALL EXHAUST PIPE ASSEMBLY

Click here [INFO](#)

5. CONNECT OXYGEN SENSOR

(a) Position the cable (1) and fasten it at the holders (arrows).

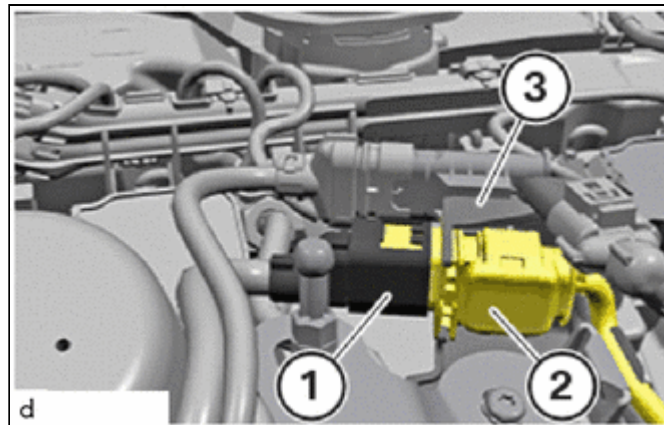

(c) Connect connectors (1) and lock.

(1) The connector (1) must engage audibly.

7. INSTALL NO. 1 ENGINE COVER SUB-ASSEMBLY

Click here [INFO](#)

8. CONNECT POSITIVE BATTERY CABLE

Click here [INFO](#)



 
Sample



N*m (kgf*cm, ft.*lbf): Specified torque

-

Non-reusable part



Sample