

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2016 Ford C-Max Service and Repair Manual


[Go to manual page](#)

Sample

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the accessory drive belt is correctly seated on all pulleys.

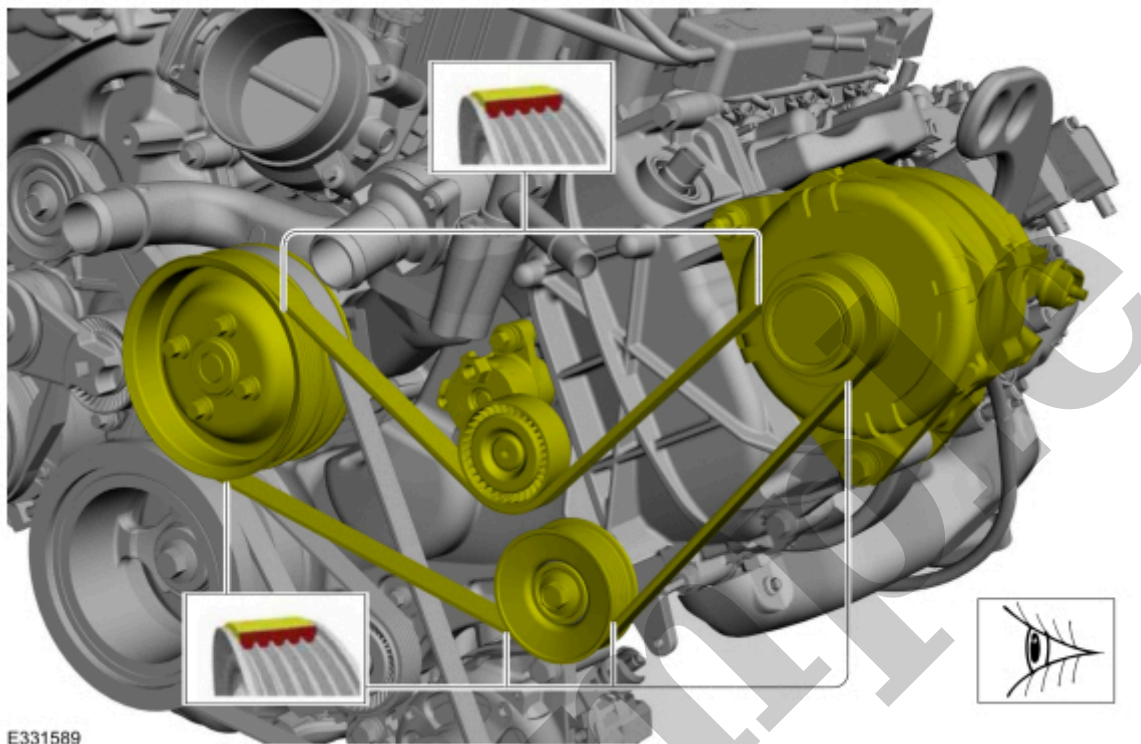

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Copyright © Ford Motor Company

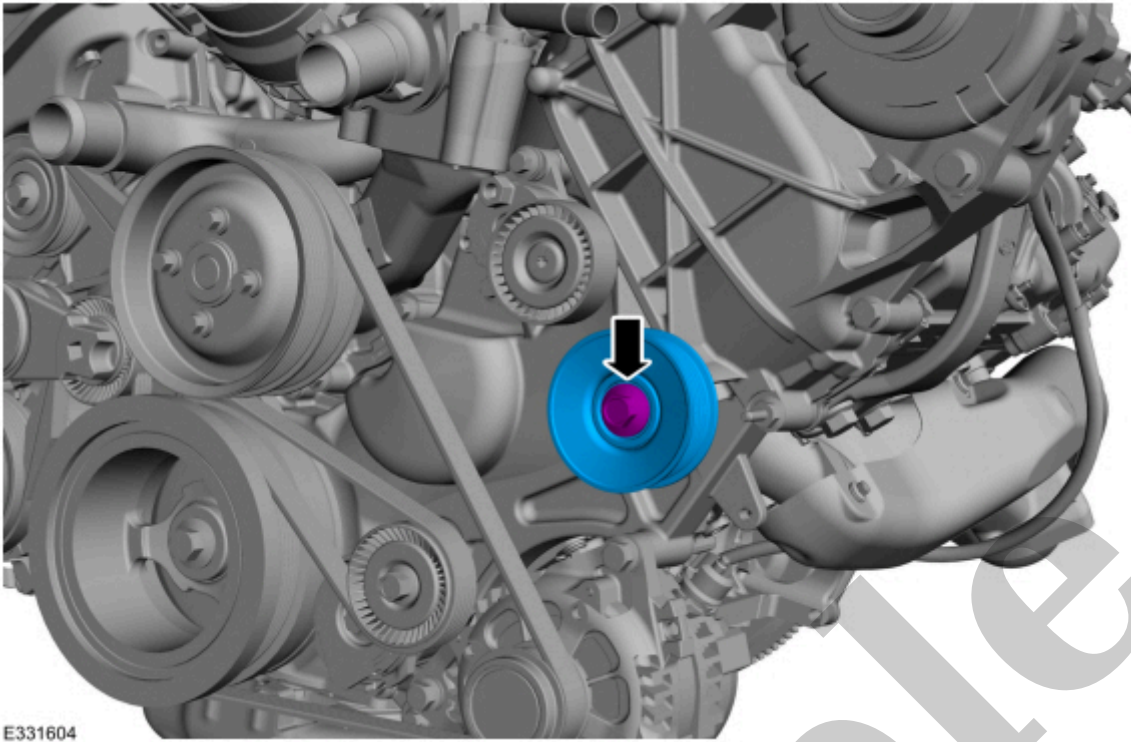


E331604

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

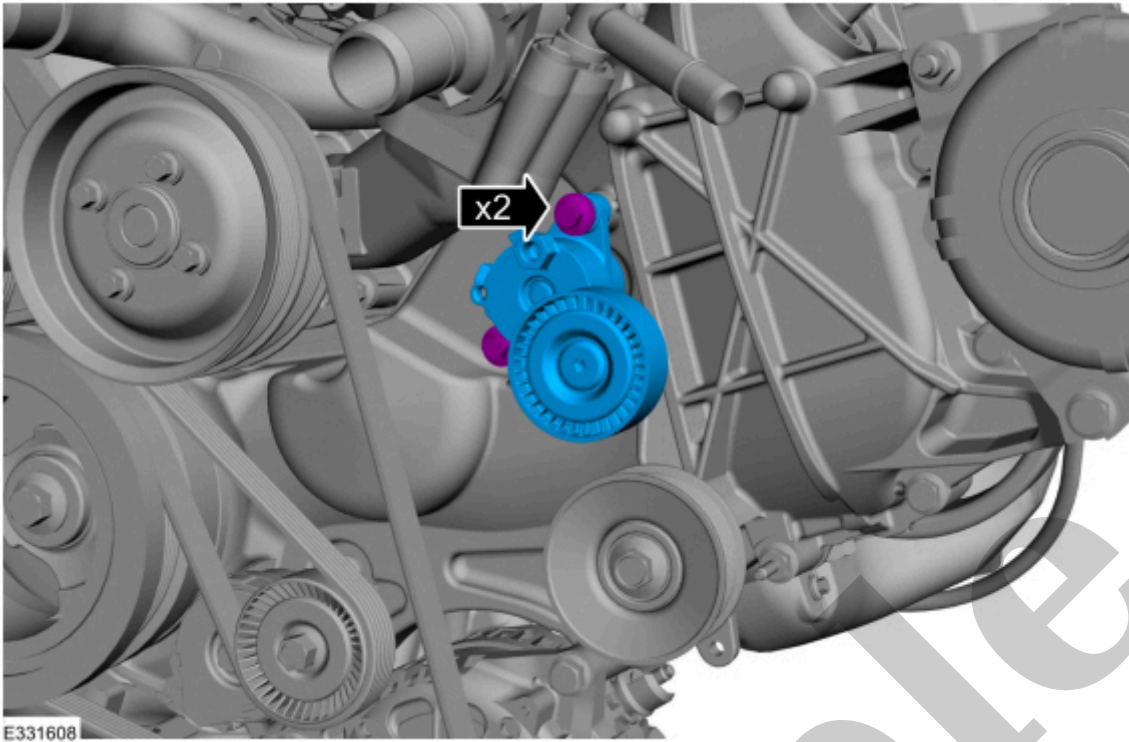

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the accessory drive belt is correctly seated on all pulleys, before removing tensioner pin if new tensioner is installed.

Accessory Drive Belt Tensioner

303-05E Accessory Drive - 5.0L 32V Ti-VCT	2022 F-150
Removal and Installation	Procedure revision date: 04/19/2020

Accessory Drive Belt Tensioner

Removal

NOTE

Removal steps in this procedure may contain installation details.

1. Remove the accessory drive belt.

Refer to: [Accessory Drive Belt](#)(303-05E Accessory Drive - 5.0L 32V Ti-VCT, Removal and Installation).

Refer to: [Accessory Drive Belt - Vehicles With: Dual Generators](#)(303-05E Accessory Drive - 5.0L 32V Ti-VCT, Removal and Installation).


2. Remove the bolt and the accessory drive belt tensioner.

Torque : 35 lb.ft (47 Nm)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Copyright © Ford Motor Company

Sample

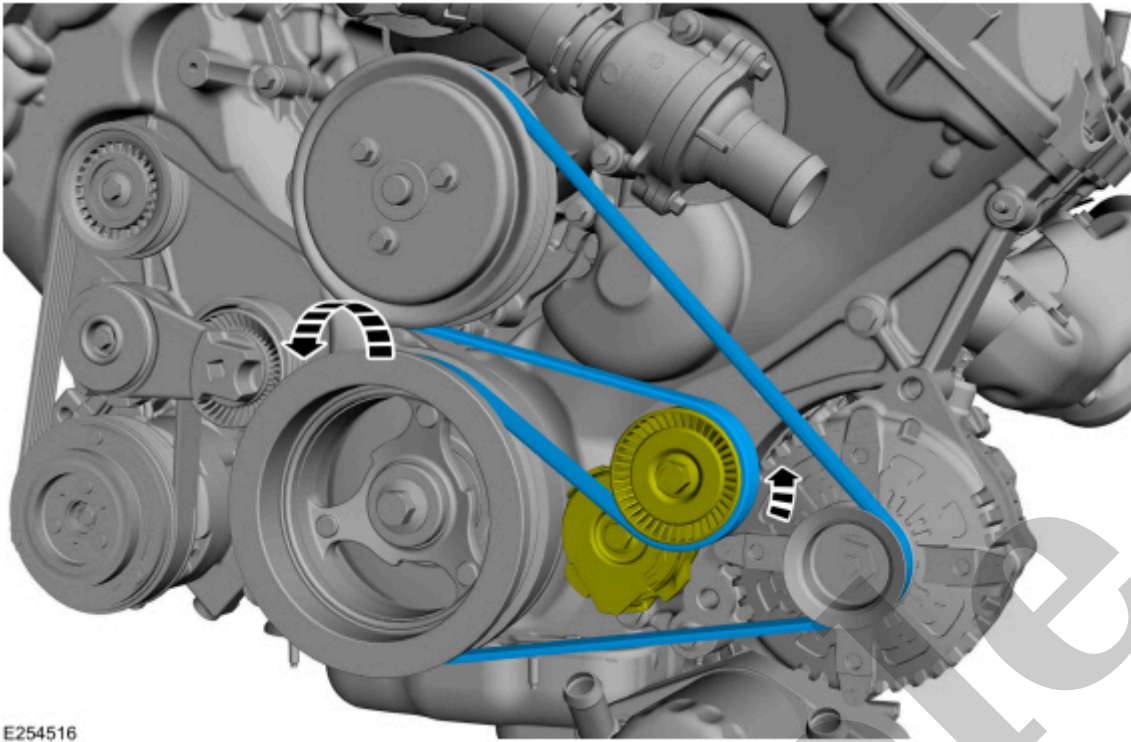


E254516

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the accessory drive belt is correctly seated on all pulleys.

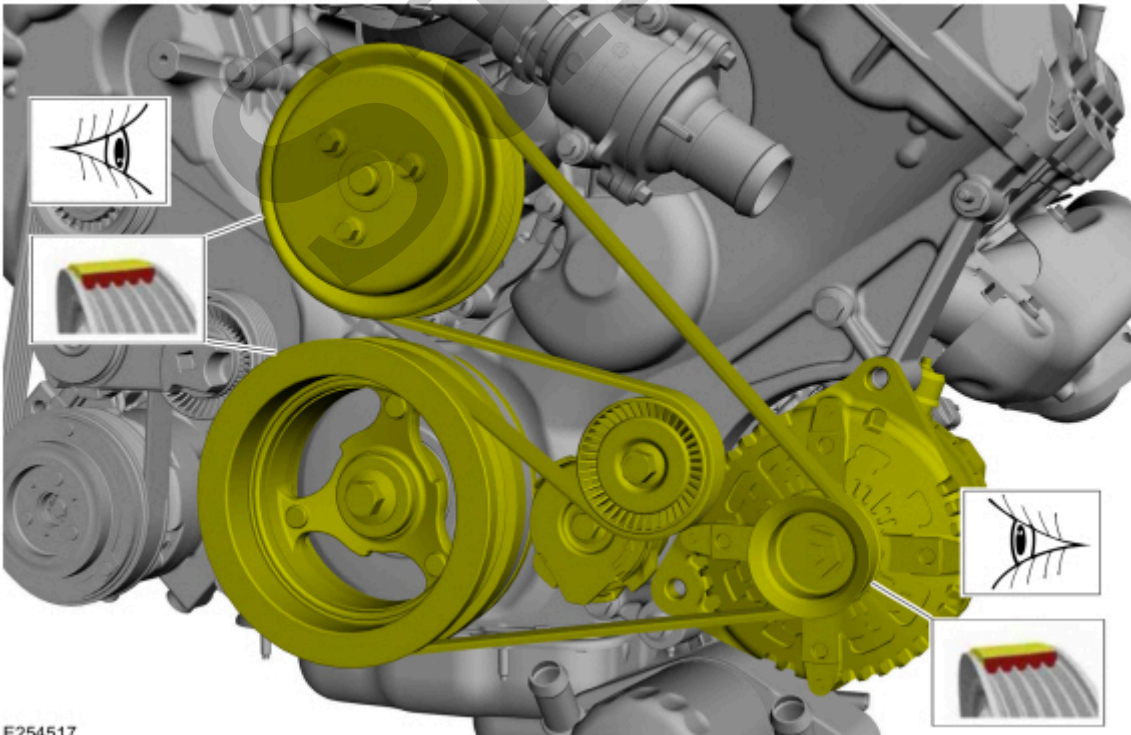

E254517

Air Conditioning (A/C) Compressor Belt Idler Pulley

<i>303-05E Accessory Drive - 5.0L 32V Ti-VCT</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 11/26/2020</i>

Air Conditioning (A/C) Compressor Belt Idler Pulley

Removal

NOTE

Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.

Refer to: [Jacking and Lifting - Overview](#)(100-02 Jacking and Lifting, Description and Operation).

2. Rotate the A/C (air conditioning) compressor belt tensioner clockwise and position the belt aside.

Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the A/C (air conditioning) compressor belt is correctly seated on all pulleys.

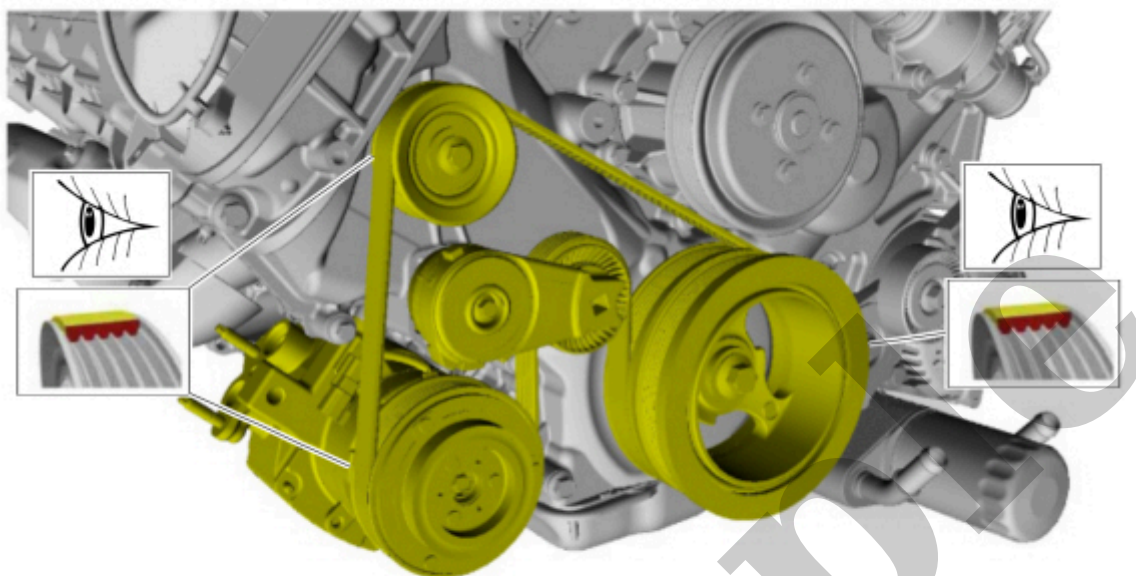

E192495

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Copyright © Ford Motor Company