


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


## 2016 Ford Transit-350 Service and Repair Manual


[Go to manual page](#)

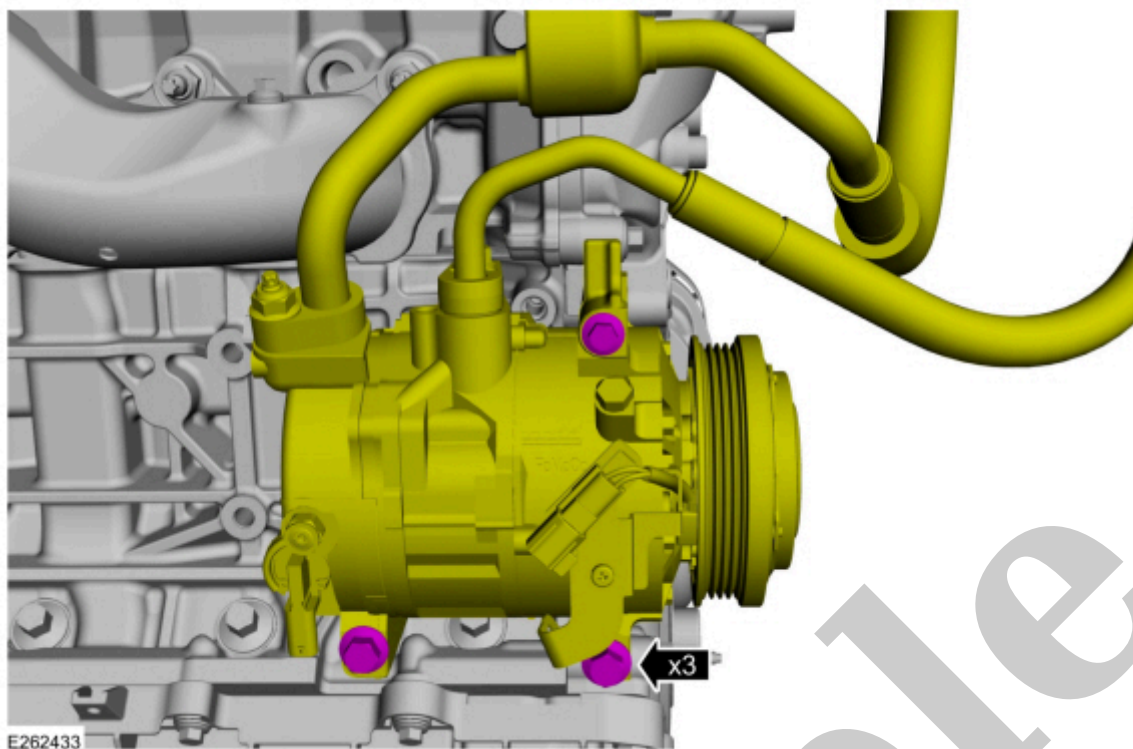

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

11.
  1. Detach the coolant tube retainer.
  2. Remove the nut and position the coolant tube and bracket aside.

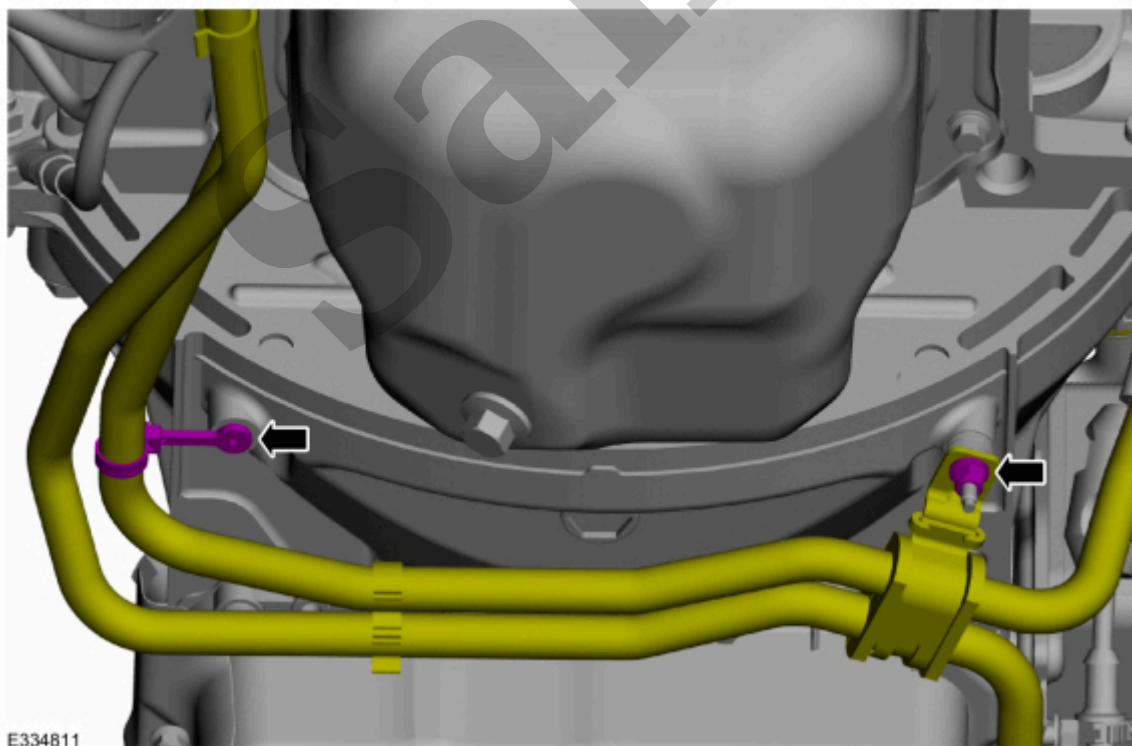

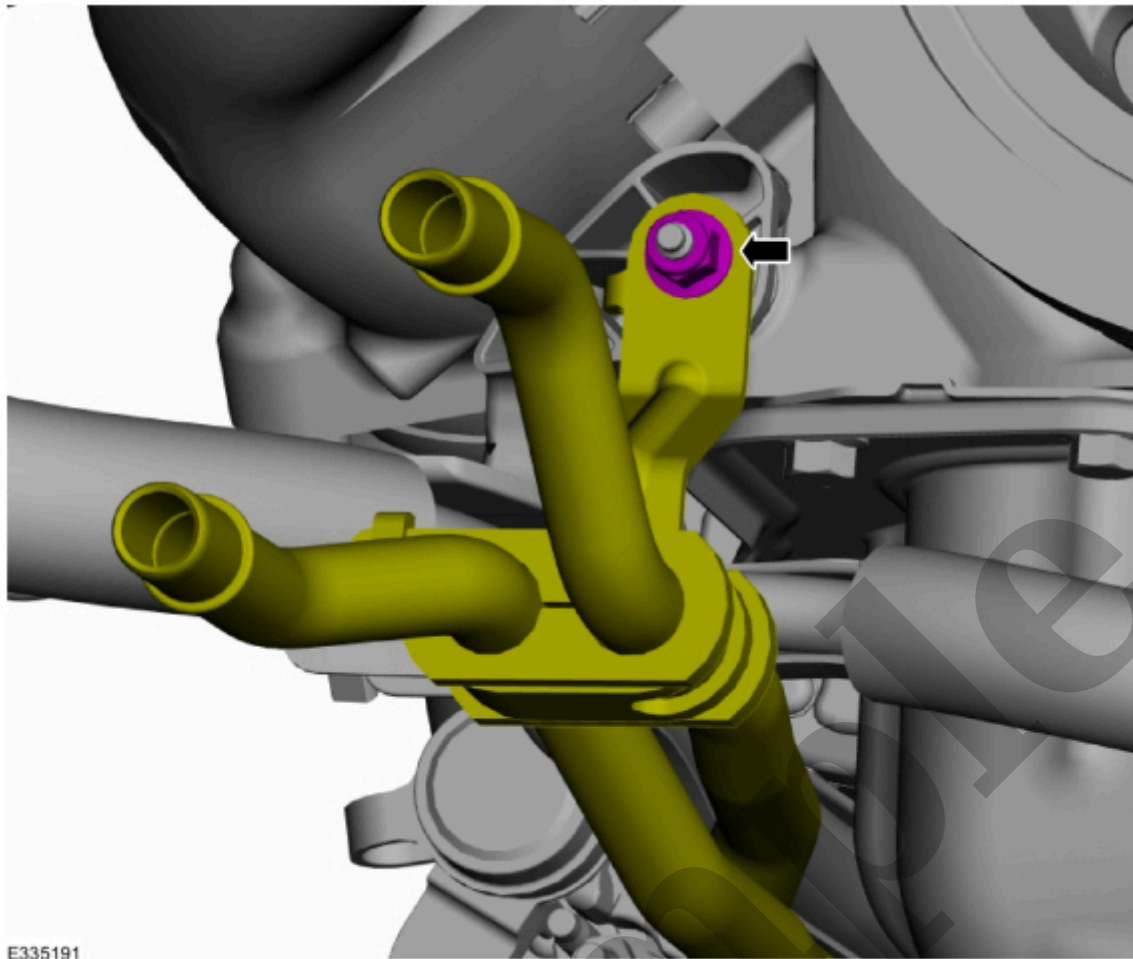

E335191

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

14. Remove the following items:

1. Refer to: [Starter Motor](#)(303-06E Starting System - 5.0L 32V Ti-VCT, Removal and Installation).
2. If equipped.  
Refer to: [Front Driveshaft](#)(205-01 Driveshaft, Removal and Installation).

15. **NOTICE**

Only use hand tools when removing the engine mount nuts, stud bolts or damage to the engine mount can occur.

Remove and discard the RH (right-hand) engine mount nuts.


- Remove the engine mount studs.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

17. **NOTICE**

Only use hand tools when removing the transmission mount-to-crossmember nuts or damage to the transmission mount can occur.

Loosen the transmission mount-to-crossmember nuts.

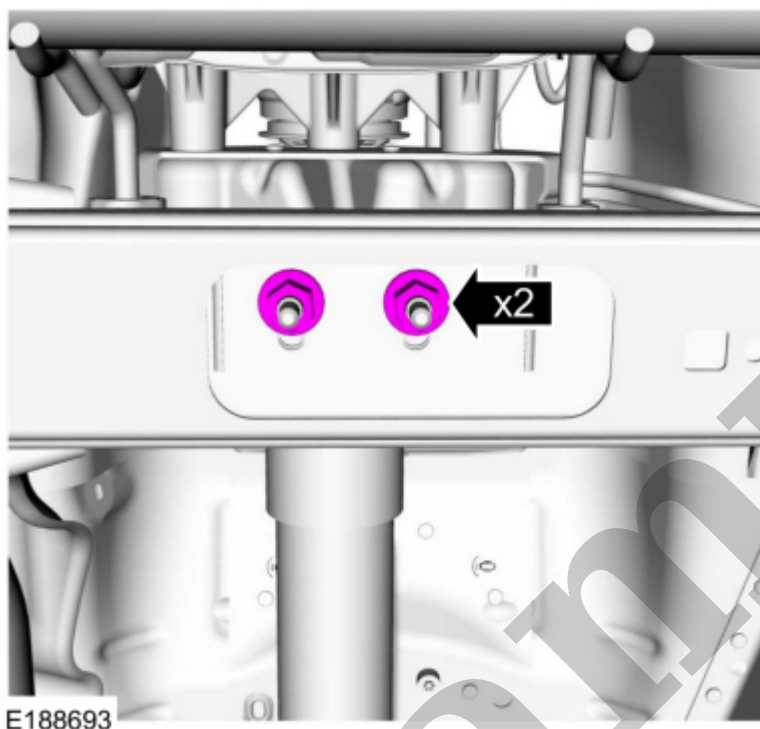

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


18. **NOTICE**

Only use hand tools when loosening the engine mount through bolts or damage to the engine mount-to-cylinder block bracket can occur.

Remove and discard the LH (left-hand) engine mount through bolt.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

20.
  1. Position an adjustable stand and wood block under transmission bellhousing.  
Use the General Equipment: Vehicle/Axle Stands  
Use the General Equipment: Wooden Block
  2. Raise the adjustable stand 63.5 mm (2.5 in).

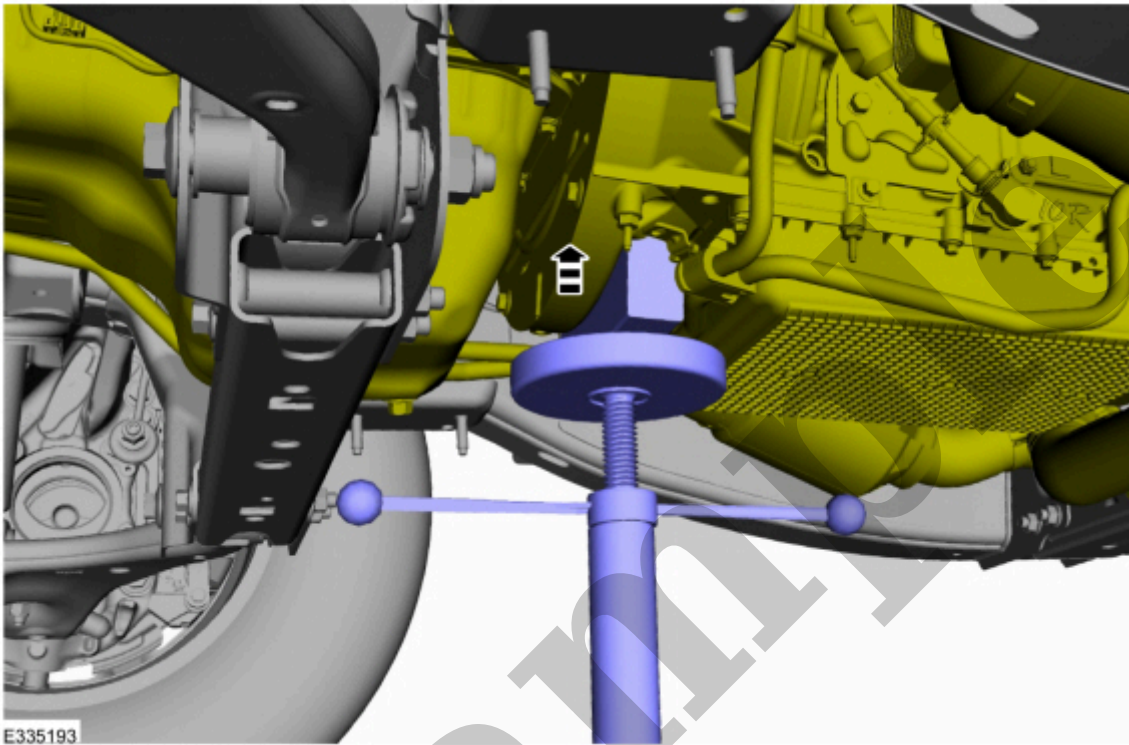


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

21. Remove and discard the RH (right-hand) engine mount bracket-to-engine bolts.
  1. Remove the RH (right-hand) engine mount and bracket as an assembly.
  2. Clean the engine mount bracket-to-cylinder block and engine mount-to-frame mating surfaces of any dirt or foreign material prior to installation.

Use the General Equipment: Wooden Block

- Remove the stand and wood block.

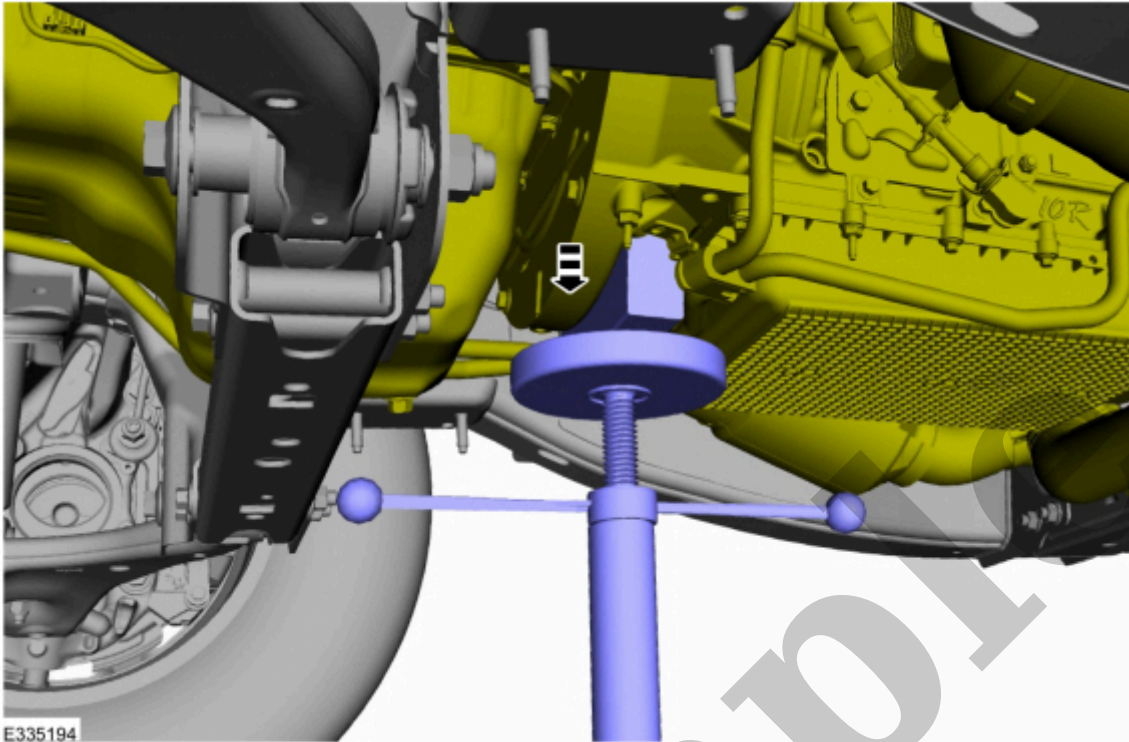


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Position the stabilizer bar and install the new nuts.

***Torque*** : 41 lb.ft (55 Nm)



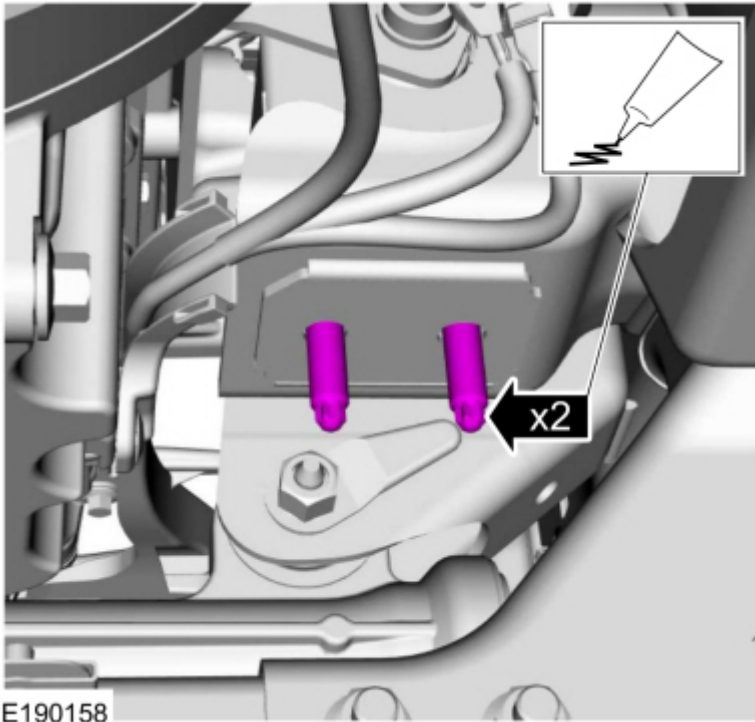


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

#### 5. NOTICE

Only use hand tools when installing the engine mount nuts or damage to the engine mount can occur.

Install the new RH (right-hand) engine mount nuts.

**Torque** : 111 lb.ft (150 Nm)

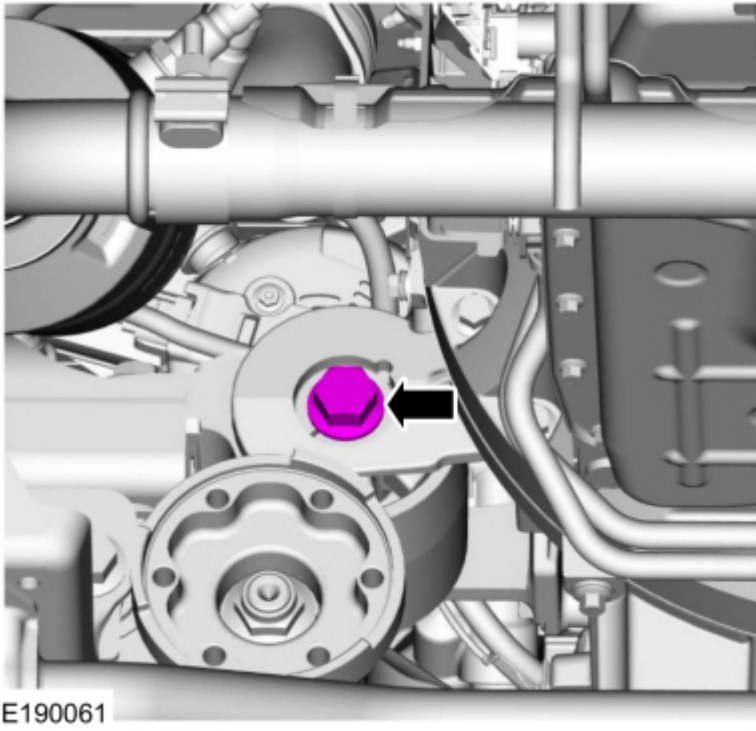

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


#### 7. NOTICE

Only use hand tools when installing the transmission mount-to-crossmember nuts or damage to the transmission mount can occur.

Tighten the transmission mount-to-crossmember nuts.

**Torque** : 85 lb.ft (115 Nm)



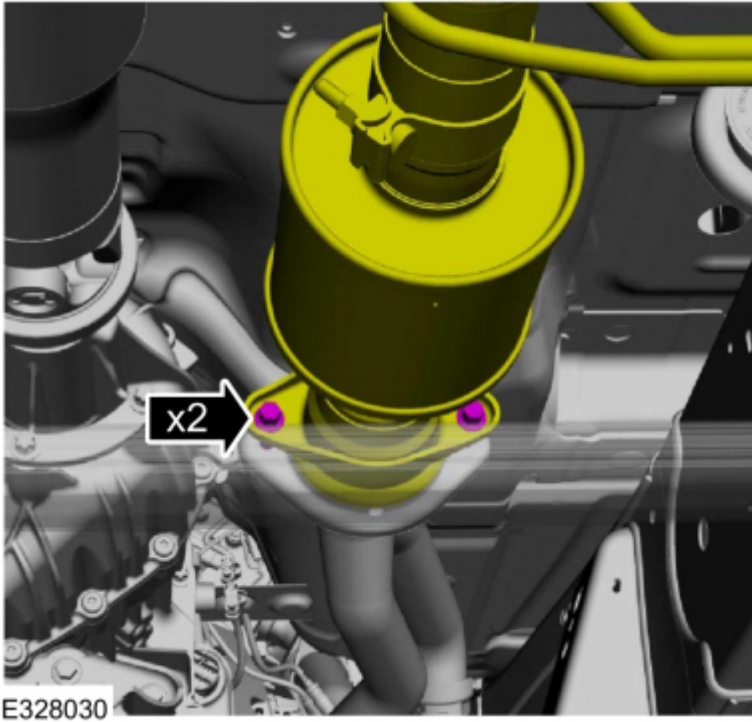

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. Install the following items:


1. If equipped.

Refer to: [Front Driveshaft](#)(205-01 Driveshaft, Removal and Installation).

2. Refer to: [Starter Motor](#)(303-06E Starting System - 5.0L 32V Ti-VCT, Removal and Installation).

10. Position the coolant tubes and install the nut.

**Torque** : 106 lb.in (12 Nm)

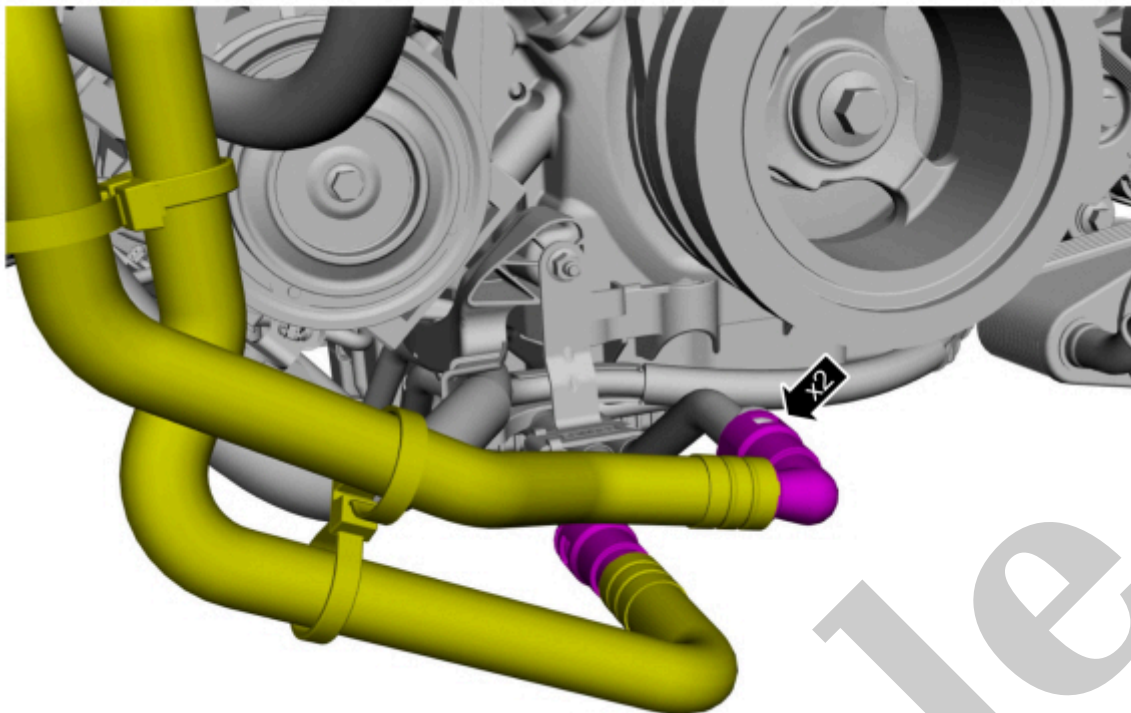


E261671

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

12. 1. Position the coolant tubes and bracket and install the nut.

***Torque*** : 119 lb.in (13.5 Nm)

2. Attach the coolant tube retainer.

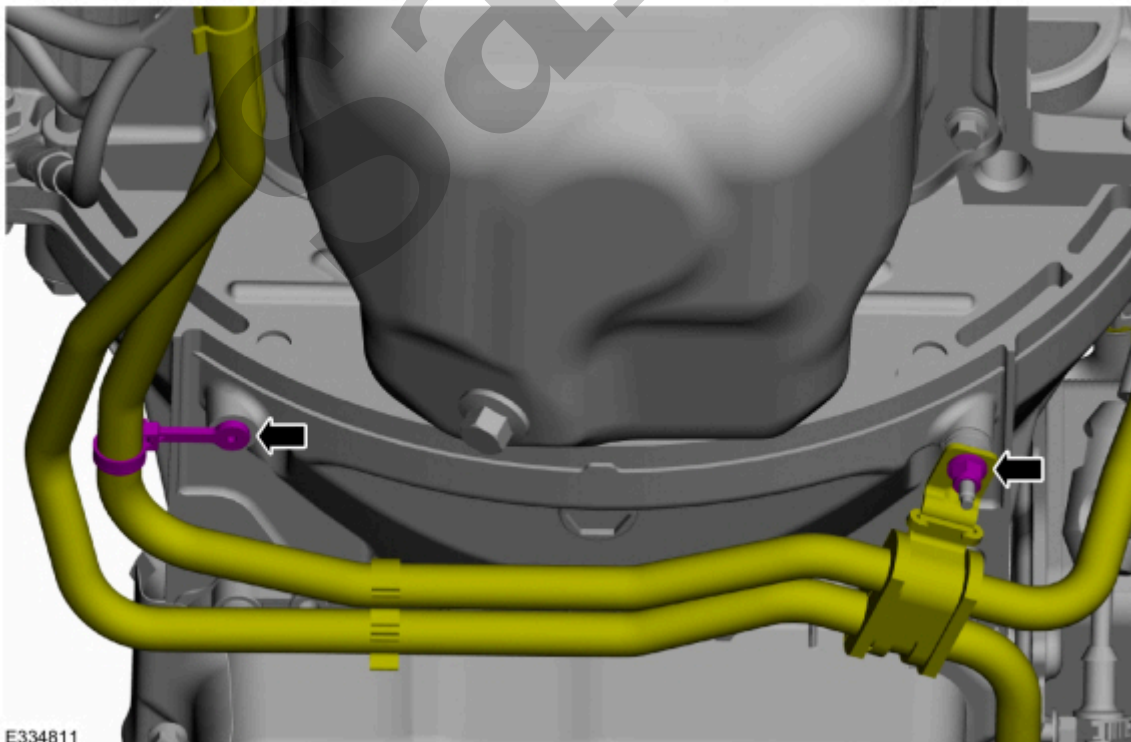

E334811