

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2016 NISSAN Primera Sedan OEM Service and Repair Workshop Manual

[Go to manual page](#)

DTC Display contents of CONSULT	Fail-safe condition
C21F9-64: Vehicle speed sensor	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR • I-DA <p>*1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue</p>
C21FA-A2:Power supply circuit	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue</p>
C21FA-A3:Power supply circuit	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue</p>
C21FB-64:Chassis control module	None
C21FC-78:GEAR POSITION	None
C21FD-62:VCM	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue</p>
C21FE-76:NP RANGE	None
U1327-52: MAC key update	-
U1327-54: MAC key update	-
U1D98-86: Vehicle speed sensor	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1

<p style="text-align: center;">DTC</p> <p style="text-align: center;">Display contents of CONSULT</p>	<p style="text-align: center;">Fail-safe condition</p>
	<ul style="list-style-type: none"> • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
<p>U1D99-82:ADAS control unit</p>	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function <p>*: ProPILOT Assist 2.0 display is blue</p>
<p>U1D9A-82:ADAS control unit</p>	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function <p>*: ProPILOT Assist 2.0 display is blue</p>
<p>U1D9A-83:ADAS control unit</p>	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function <p>*: ProPILOT Assist 2.0 display is blue</p>
<p>U1D9A-87:ADAS control unit</p>	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1D9B-82:ADAS control unit	The following systems are canceled. <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1D9B-83:ADAS control unit	The following systems are canceled. <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1D9B-87:ADAS control unit	The following systems are canceled. <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1D9C-82:Side radar rear RH	None
U1D9E-82:ADAS control unit	The following systems are canceled. <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1D9E-83:ADAS control unit	The following systems are canceled. <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1D9E-87:ADAS control unit	The following systems are canceled. <ul style="list-style-type: none"> • Lane keep function *

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • Lane change support function • Overtaking support function • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1DA1-82:BCM	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR • I-DA *1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue
U1DA1-83:BCM	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR • I-DA

DTC Display contents of CONSULT	Fail-safe condition
	*1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue
U1DA1-87:BCM	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-LI • I-BSI *1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue
U1DA3-82:EPS control unit	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR *1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue
U1DA4-82:Head UP Display unit	The following systems are canceled. <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1DA4-83:Head UP Display unit	The following systems are canceled. <ul style="list-style-type: none"> • Lane keep function * • Lane change support function • Overtaking support function • Route driving support function *: ProPILOT Assist 2.0 display is blue
U1DA4-87:Head UP Display unit	None
U1DA5-82:Chassis control module	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR *1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue
U1DA7-82:ABS actuator and electric unit (control unit)	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
U1DA7-83:ABS actuator and electric unit (control unit)	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
U1DA7-87:ABS actuator and electric unit (control unit)	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR • I-DA

DTC Display contents of CONSULT	Fail-safe condition
	*1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue
U1AD8-82:Steering angle sensor	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR *1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue
U1AD8-83:Steering angle sensor	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR *1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue
U1AD8-87:Steering angle sensor	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode