

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2016 NISSAN Qashqai OEM Service and Repair Workshop Manual

[Go to manual page](#)

<p style="text-align: center;">DTC</p> <p style="text-align: center;">Display contents of CONSULT</p>	<p style="text-align: center;">Fail-safe condition</p>
	<ul style="list-style-type: none"> • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
<p>U1DB7-83:EPS C/U</p>	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
<p>U1DB7-87:EPS C/U</p>	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
U1DB8-82:Sonar control unit	None
U1DB8-83:Sonar control unit	None
U1DB8-87:Sonar control unit	None
U1DB9-82:ABS actuator and electric unit	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function ^{*1} • Lane keep function ^{*2} • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
U1DB9-83:ABS actuator and electric unit	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function ^{*1} • Lane keep function ^{*2} • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
U1DB9-87:ABS actuator and electric unit	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR • I-DA <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
U1DBA-82:ABS actuator and electric unit	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green</p> <p>*2: ProPILOT Assist 2.0 display is blue</p>
U1DBA-83: ABS actuator and electric unit	<p>The following systems are canceled.</p>

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue</p>
U1DBA-87:ABS actuator and electric unit	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR <p>*1: ProPILOT Assist 2.0 display is green *2: ProPILOT Assist 2.0 display is blue</p>
U1EC0-57: BCM	The following systems are canceled.
U1EC1-57: ADAS_control unit	<ul style="list-style-type: none"> • ProPILOT Park
U1EC4-87: CAN communication error	<ul style="list-style-type: none"> • Camera image not displayed. • MOD (Moving Object Detection) function is cancel.
U1EC5-87: CAN communication error	-
U1EC6-87: CAN communication error	<ul style="list-style-type: none"> • Camera image not displayed.

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • MOD (Moving Object Detection) function is cancel.
U1EC7-87:CAN communication error	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle-to-vehicle distance control mode • Steering wheel assistance function • Conventional (fixed speed) cruise control mode • AEB • RAB • I-FCW • I-LI • I-BSI • TSR • I-DA
U1ECE-57: Chassis control module	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • ProPILOT Park
U1ED6-57: Sonar control unit	
U1ED8-57: VCM	
U2118-82:CAN communication error (Intelligent Key)	None
U2118-83:CAN communication error (Intelligent Key)	None
U2141-87:CAN communication error (TCM)	<ul style="list-style-type: none"> • Rear/front view is black screen (Bird-eye/Side view is displayed). • Rear view is not displayed even if shift lever is in R position. • MOD function does not operate.
U2143-57: CAN comm err (VCM/HCM)	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle speed & vehicle-to-vehicle control function • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI

DTC Display contents of CONSULT	Fail-safe condition
	<ul style="list-style-type: none"> • TSR • I-DA
U2143-82: CAN comm err (VCM/HCM)	The following systems are canceled.
U2143-83: CAN comm err (VCM/HCM)	<ul style="list-style-type: none"> • ProPILOT Park
U2143-87: CAN comm err (VCM/HCM)	<ul style="list-style-type: none"> • Rear/front view is black screen (Bird-eye/Side view is displayed). • Rear view is not displayed even if shift lever is in R position. • The following systems are canceled. <ul style="list-style-type: none"> ◦ MOD (Moving Object Detection) function ◦ Vehicle speed & vehicle-to-vehicle control function ◦ Lane keep function *1 ◦ Lane keep function *2 ◦ Lane change support function ◦ Overtaking support function ◦ Route driving support function ◦ AEB ◦ RAB ◦ I-LI ◦ I-BSI
U2148-82: CAN comm err (brake control unit)	The following systems are canceled.
U2148-83: CAN comm err (brake control unit)	<ul style="list-style-type: none"> • ProPILOT Park
U2148-87: CAN comm err (brake control unit)	<ul style="list-style-type: none"> • The screen does not disappear even when the vehicle speed 10 km/h (6.2 MPH) or more. • The following systems are canceled. <ul style="list-style-type: none"> ◦ MOD (Moving Object Detection) function ◦ Vehicle speed & vehicle-to-vehicle control function ◦ Lane keep function *1 ◦ Lane keep function *2 ◦ Lane change support function ◦ Overtaking support function ◦ Route driving support function ◦ AEB ◦ RAB

<p style="text-align: center;">DTC</p> <p style="text-align: center;">Display contents of CONSULT</p>	<p style="text-align: center;">Fail-safe condition</p>
	<ul style="list-style-type: none"> ○ I-FCW ○ I-LI ○ I-BSI ○ TSR ○ I-DA
<p>U214E-87: CAN comm err (combination meter)</p>	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • MOD (Moving Object Detection) function • Vehicle speed & vehicle-to-vehicle control function • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • I-LI • I-BSI
<p>U214F-57: CAN comm err (BCM)</p>	<ul style="list-style-type: none"> • Camera image not displayed. • The following systems are canceled. <ul style="list-style-type: none"> ○ MOD (Moving Object Detection) function ○ Vehicle speed & vehicle-to-vehicle control function ○ Lane keep function *1 ○ Lane keep function *2 ○ Lane change support function ○ Overtaking support function ○ Route driving support function ○ AEB ○ RAB ○ I-FCW ○ I-LI ○ I-BSI ○ TSR ○ I-DA

DTC Display contents of CONSULT	Fail-safe condition
U214F-82: CAN comm err (BCM)	The following systems are canceled. <ul style="list-style-type: none"> • ProPILOT Park
U214F-83: CAN comm err (BCM)	
U214F-87: CAN comm err (BCM)	<ul style="list-style-type: none"> • Camera image not displayed. • MOD (Moving Object Detection) function is cancel.
U2152-57: CAN comm err (ADAS control unit)	-
U2152-82: CAN comm err (ADAS control unit)	The following systems are canceled. <ul style="list-style-type: none"> • ProPILOT Park
U2152-83: CAN comm err (ADAS control unit)	
U2152-87: CAN comm err (ADAS control unit)	-
U2154-87: CAN comm err (MIU)	<ul style="list-style-type: none"> • Camera image not displayed. • MOD (Moving Object Detection) function is cancel.
U2155-82: CAN comm err (parking brake)	The following systems are canceled. <ul style="list-style-type: none"> • ProPILOT Park
U2155-83: CAN comm err (parking brake)	
U2156-82: CAN comm err (steering angle sensor)	
U2156-83: CAN comm err (steering angle sensor)	
U2156-87: CAN comm err (steering angle sensor)	The following systems are canceled. <ul style="list-style-type: none"> • Vehicle speed & vehicle-to-vehicle control function • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR • I-DA
U2159-82: CAN comm err (steering control unit)	The following systems are canceled. <ul style="list-style-type: none"> • ProPILOT Park
U2159-83: CAN comm err (steering control unit)	
U2159-87: CAN comm err (steering control unit)	-

DTC Display contents of CONSULT	Fail-safe condition
U215B-87: CAN comm err (IPDM E/R)	<ul style="list-style-type: none"> • Rear view is not displayed even if shift lever is in R position. • The following systems are canceled. <ul style="list-style-type: none"> ◦ Lane keep function *2 ◦ Lane change support function ◦ Overtaking support function ◦ Route driving support function ◦ RAB
U2165-57: CAN comm err (sonar)	<p>The following systems are canceled.</p> <ul style="list-style-type: none"> • Vehicle speed & vehicle-to-vehicle control function • Lane keep function *1 • Lane keep function *2 • Lane change support function • Overtaking support function • Route driving support function • AEB • RAB • I-FCW • I-LI • I-BSI • TSR • I-DA
U2165-82: CAN comm err (sonar)	<p>The following systems are canceled.</p>
U2165-83: CAN comm err (sonar)	<ul style="list-style-type: none"> • ProPILOT Park
U2165-87: CAN comm err (sonar)	<ul style="list-style-type: none"> • Parking sensor error is displayed. • The following systems are canceled. <ul style="list-style-type: none"> ◦ Lane keep function *2 ◦ Lane change support function ◦ Overtaking support function ◦ Route driving support function ◦ RAB
U2176-57: CAN comm err (CCM)	<ul style="list-style-type: none"> • Rear/front view is black screen (Bird-eye/Side view is displayed).