


 
Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2016 Toyota Corolla US Service Manual

[Go to manual page](#)

*1	NO. 1 ENGINE UNDER COVER ASSEMBLY	*2	FRONT FENDER SPLASH FRONT SHIELD LH
*3	FRONT FENDER SPLASH FRONT SHIELD RH	*4	NO. 6 RADIATOR HOSE
*5	RADIATOR LOWER AIR GUIDE PLATE	*6	RADIATOR RESERVE TANK CAP SUB-ASSEMBLY
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-



Sample

Last Modified: 07-26-2024

6.11:8.1.0

Doc ID: RM100000001JDAJ

Model Year Start: 2020


Model: Supra

Prod Date Range: [03/2019 -]

Title: B58 (COOLING): COOLANT (for High Temperature): COMPONENTS; 2020 - 2025 MY Supra [03/2019 -]

COMPONENTS

ILLUSTRATION

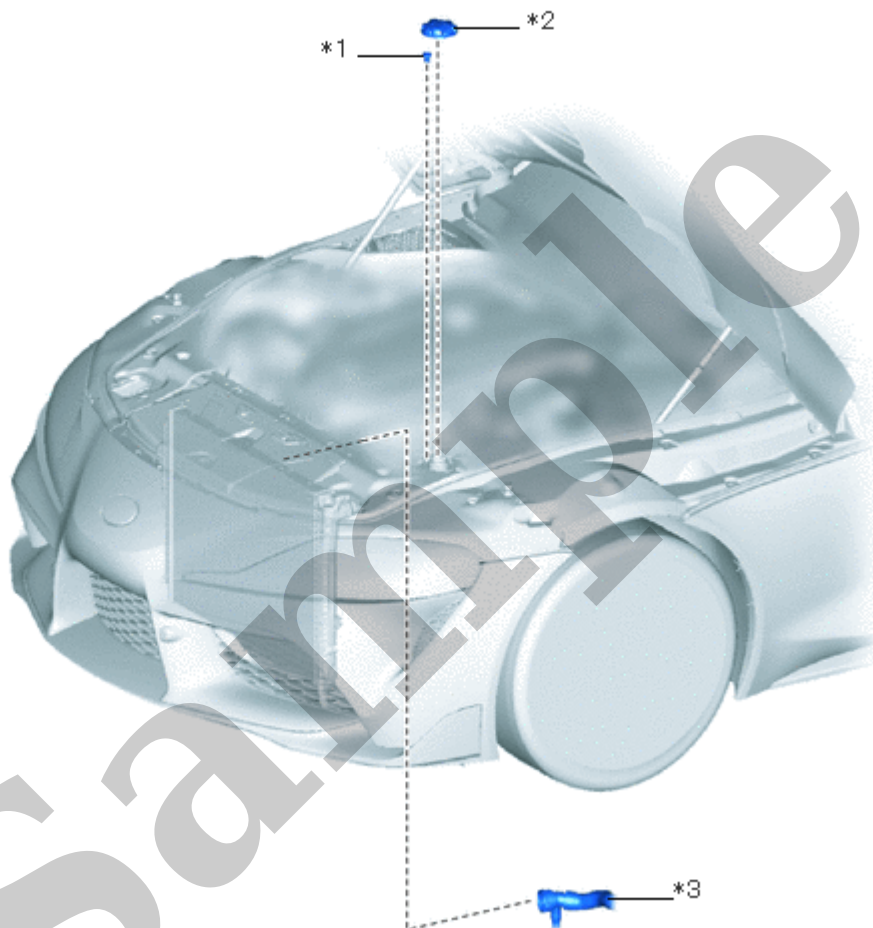


*1	BLEEDER SCREW	*2	RESERVE TANK CAP SUB-ASSEMBLY
*3	NO. 1 RADIATOR HOSE	-	-



Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001JDAN
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: B58 (COOLING): WATER PUMP: COMPONENTS; 2020 - 2025 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

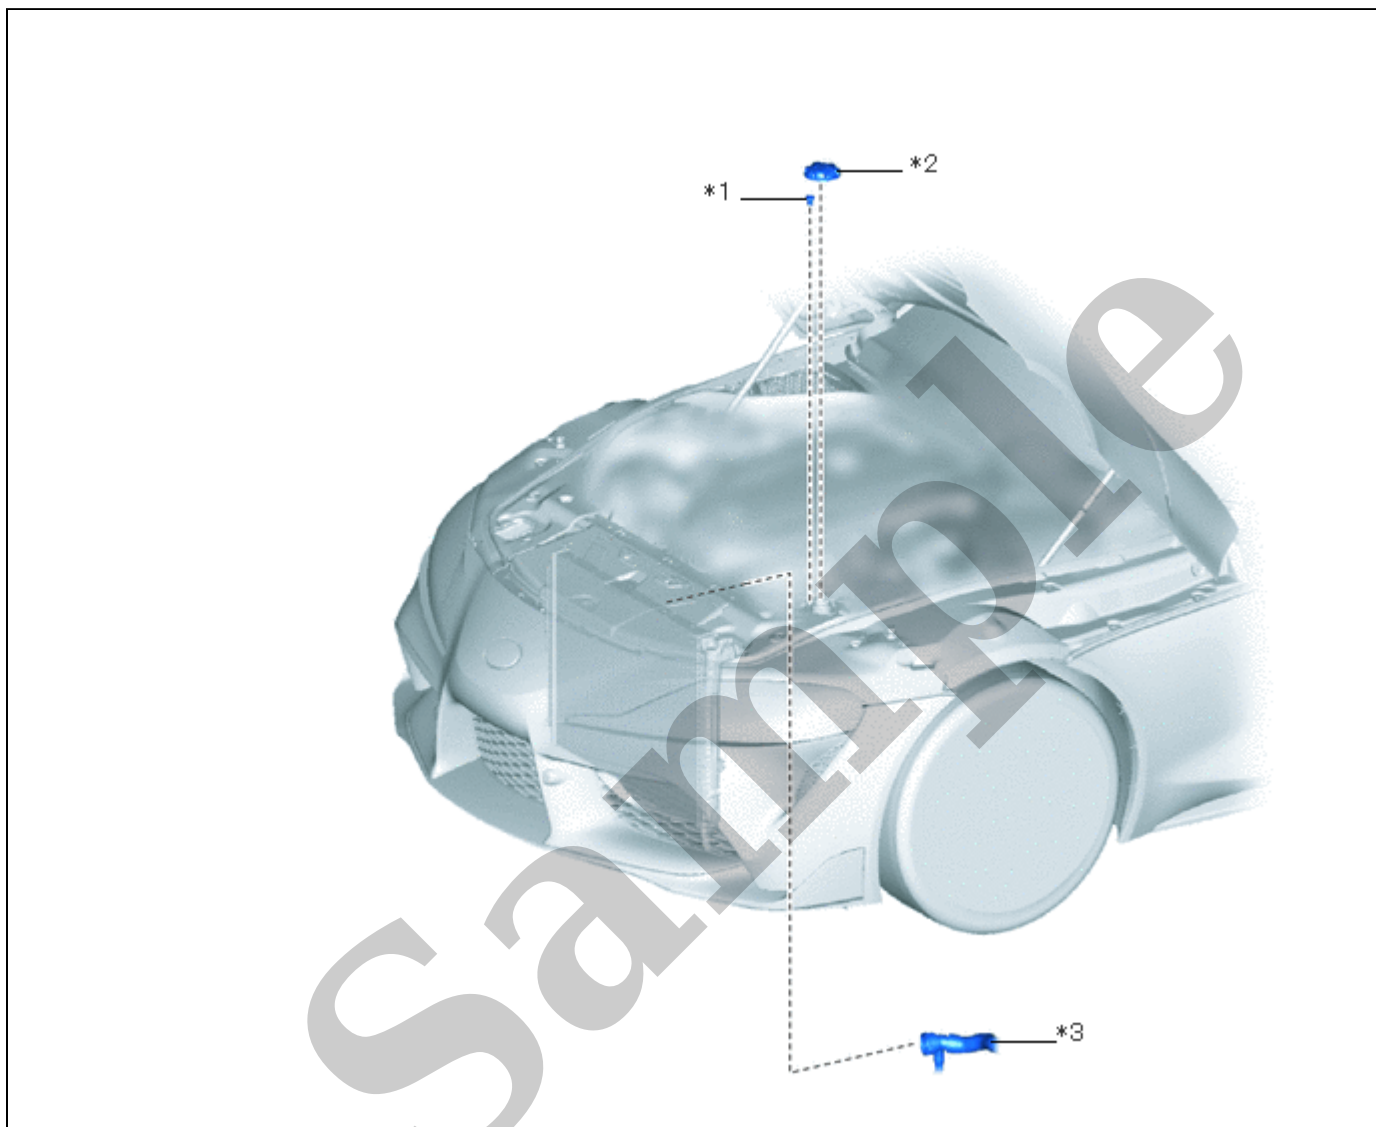

*1	BLEEDER SCREW	*2	RESERVE TANK CAP SUB-ASSEMBLY
*3	NO. 1 RADIATOR HOSE	-	-

ILLUSTRATION

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001JDAO
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: B58 (COOLING): WATER PUMP: REMOVAL; 2020 - 2025 MY Supra [03/2019 -]		

REMOVAL

CAUTION / NOTICE / HINT

CAUTION:

- Hot fluids.

Risk of scalding!

- Conduct all work in the vehicle wearing appropriate personal protective equipment only.

- Hot surfaces.

Risk of burning!

- Perform all work only on components that have cooled down.

PROCEDURE

1. REMOVE NO. 2 AIR CLEANER HOSE

Click here [INFO](#)

2. REMOVE FRONT SUSPENSION MEMBER LOWER PROTECTOR

Click here [INFO](#)

3. DRAIN ENGINE COOLANT (for High Temperature)

Click here [INFO](#)

4. REMOVE FAN AND GENERATOR V BELT


Click here [INFO](#)

5. REMOVE ENGINE WATER PUMP ASSEMBLY

NOTICE:

Collect and dispose of emerging fluids. Observe country-specific waste disposal regulations.

(a) Loosen T30 bolts (2).

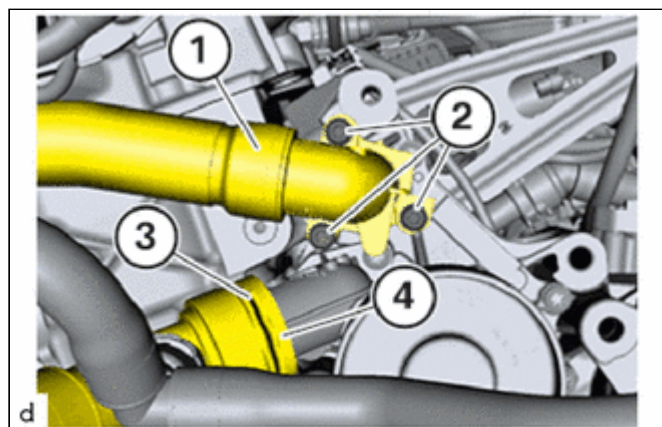

(b) Pull the No. 2 water by-pass hose (1) out of the engine water pump assembly and set aside.

(c) Unlock the lock (3).