


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2016 Toyota Prius Service and Repair Manual


[Go to manual page](#)

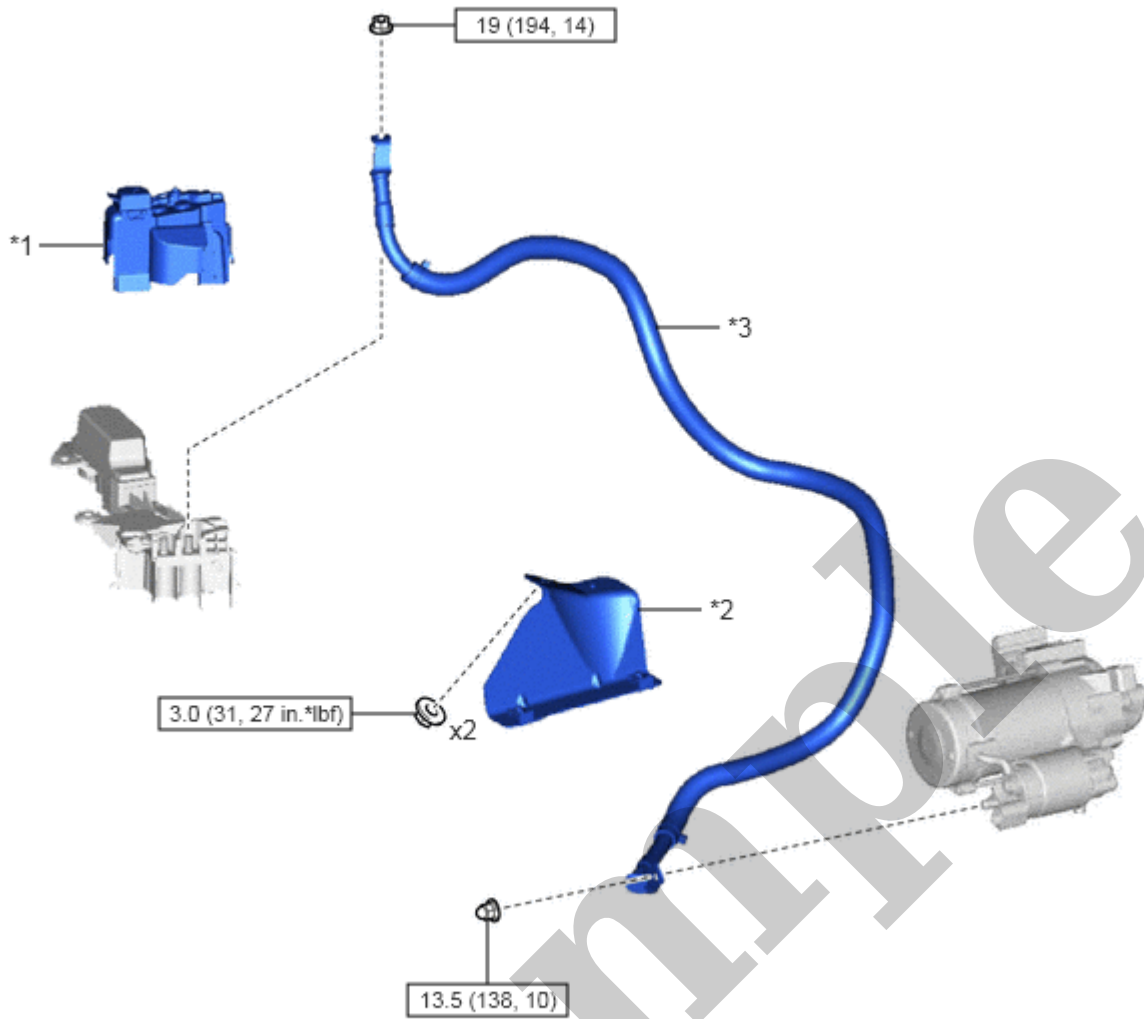

d


*1	TERMINAL COVER	*2	NO. 2 FRONT FLOOR HEAT INSULATOR
*3	STARTER WIRING ASSEMBLY	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-



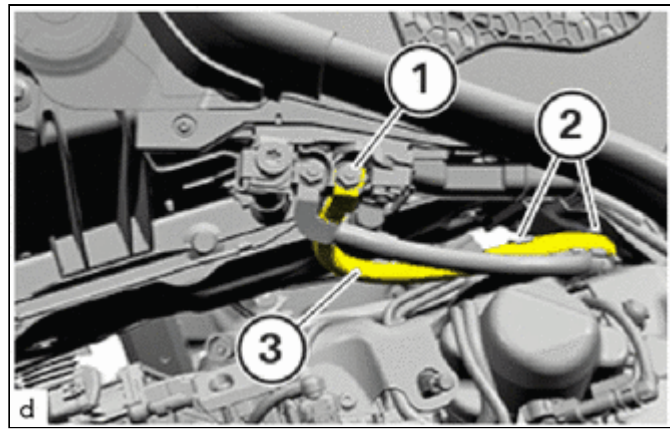


(d) Loosen clamps (2).

(e) Feed out starter wiring assembly (3) and put to one side.

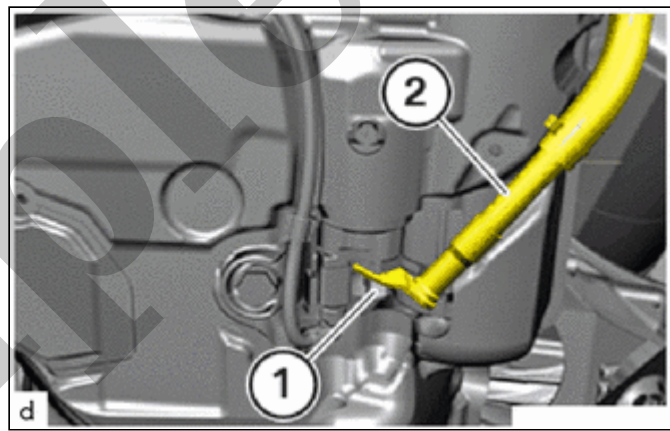

(f) Unfasten nut (1).

(g) Thread out starter wiring assembly (2) and set it aside.

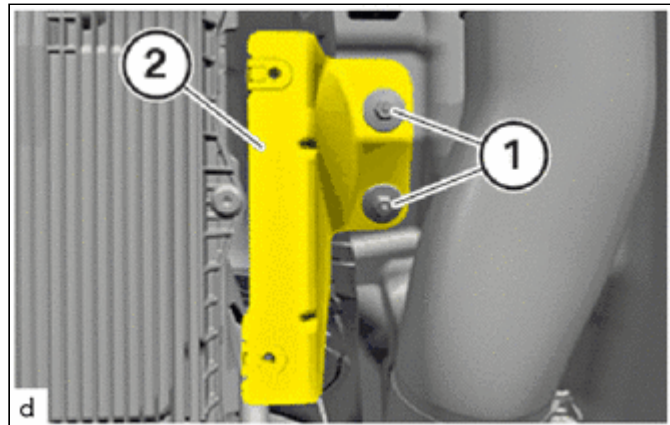

(h) Loosen nuts (1).

(i) Guide the No. 2 front floor heat Insulator (2) out and remove it.

(j) Release the clamps (arrows).

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001JD20
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: B58 (STARTING): STARTER WIRING ASSEMBLY: INSTALLATION; 2020 - 2025 MY Supra [03/2019 -]		

INSTALLATION


PROCEDURE

1. INSTALL STARTER WIRING ASSEMBLY

CAUTION:


- Improper routing of the positive battery cable.
- Risk of short circuits!
 - Route the positive battery cable without abrasions and do not trap.

(a) Insert and install the starter wiring assembly (1).

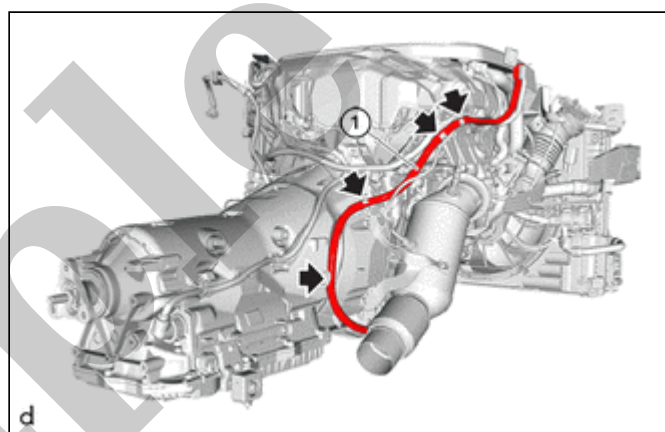

(b) Secure the clamps (arrows).

(c) Insert and install the No. 2 front floor heat Insulator (2).

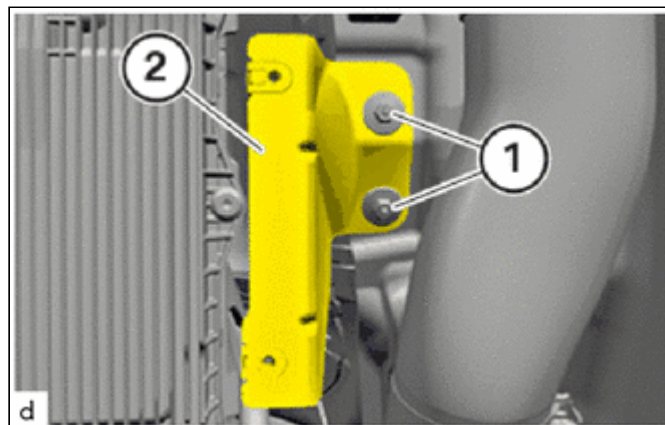

(d) Tighten nuts (1).

Torque:

3.0 N·m {31 kgf·cm, 27 in·lbf}

(e) Position the starter wiring assembly (2) to the starter assembly.

Click here [INFO](#)

3. INSTALL NO. 1 ENGINE COVER SUB-ASSEMBLY

Click here [INFO](#)

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Click here [INFO](#)



Sample