


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## **2017 FORD Tourneo Connect OEM Service and Repair Workshop Manual**


[Go to manual page](#)

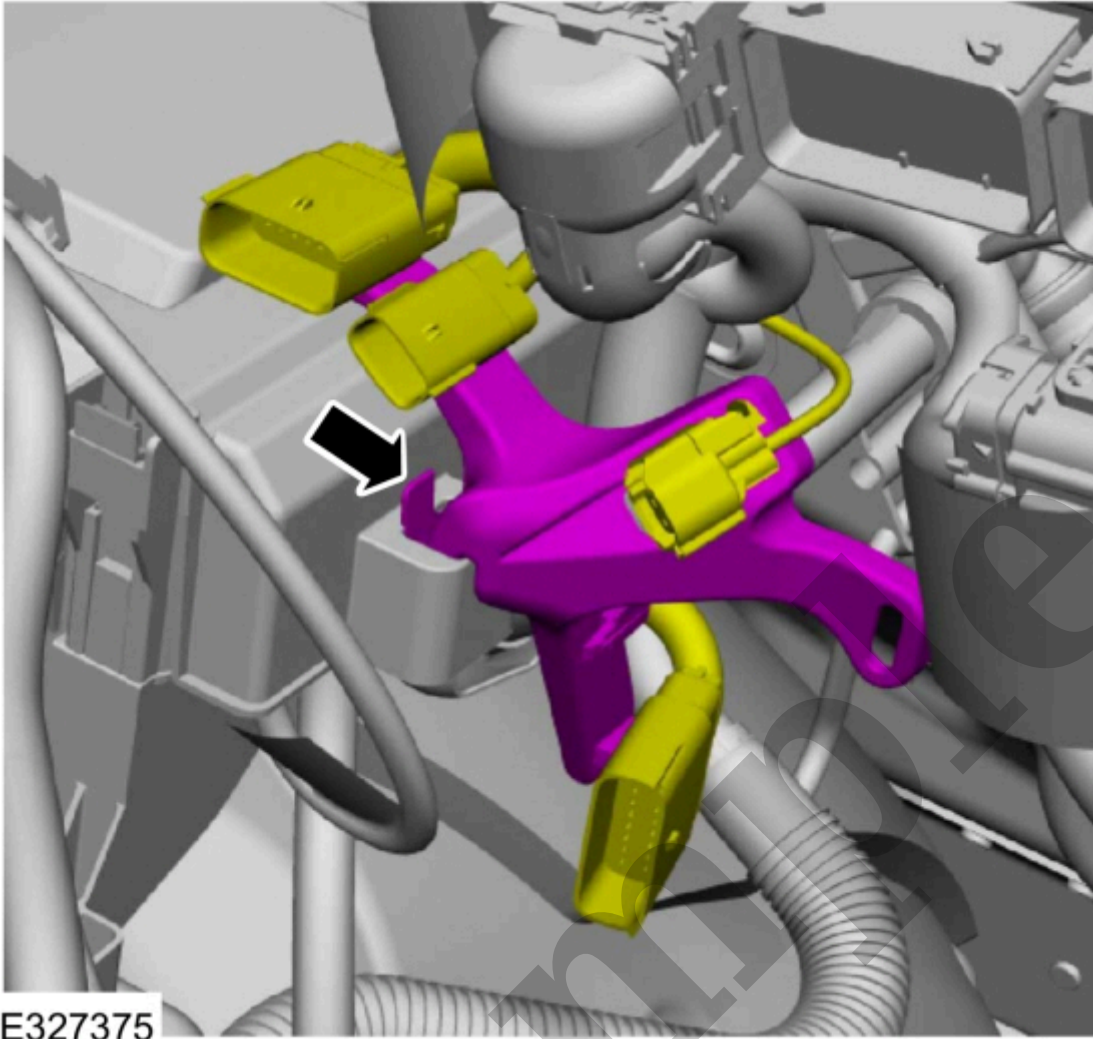

E327375

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

14. Remove the power distribution cover.

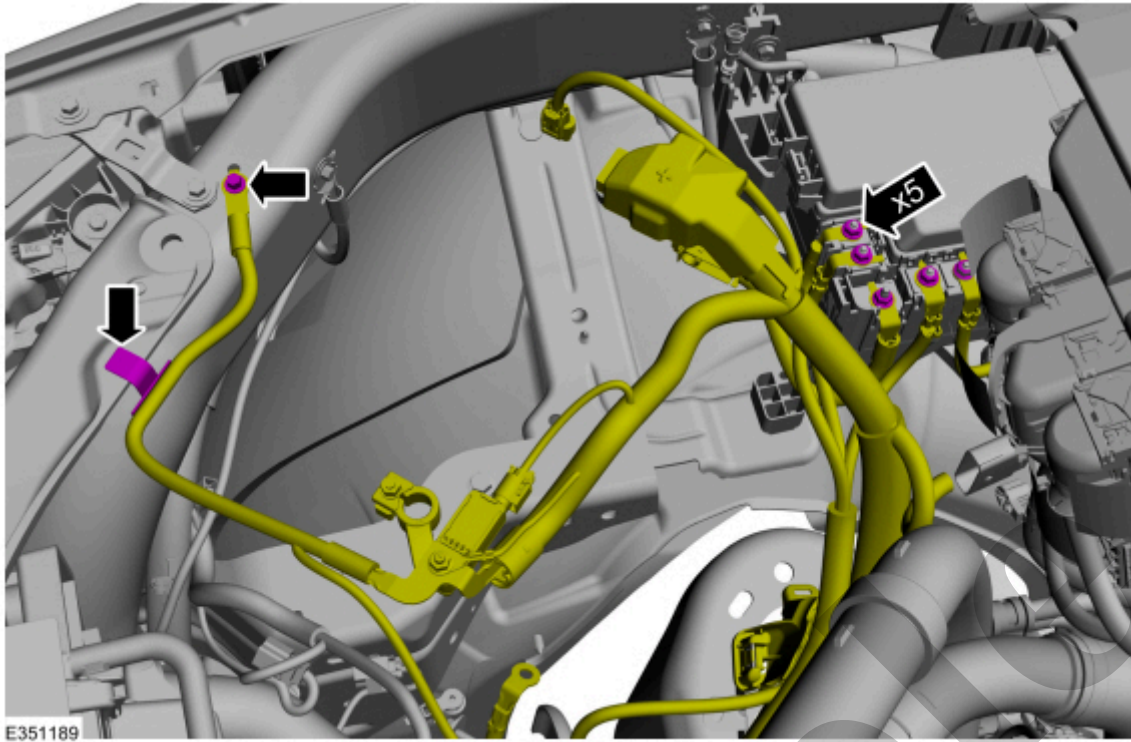

E351189

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

16. Remove the air cleaner assembly and outlet pipe.

Refer to: [Air Cleaner](#)(303-12D Intake Air Distribution and Filtering - 3.5L V6 PowerBoost (CN), Removal and Installation).


Refer to: [Air Cleaner Outlet Pipe](#)(303-12D Intake Air Distribution and Filtering - 3.5L V6 PowerBoost (CN), Removal and Installation).

17. **NOTE**

Make sure to cover any open ports to prevent debris from entering the system.


Remove the nut and disconnect the A/C (air conditioning) coupling.

**Torque** : 159 lb.in (18 Nm)

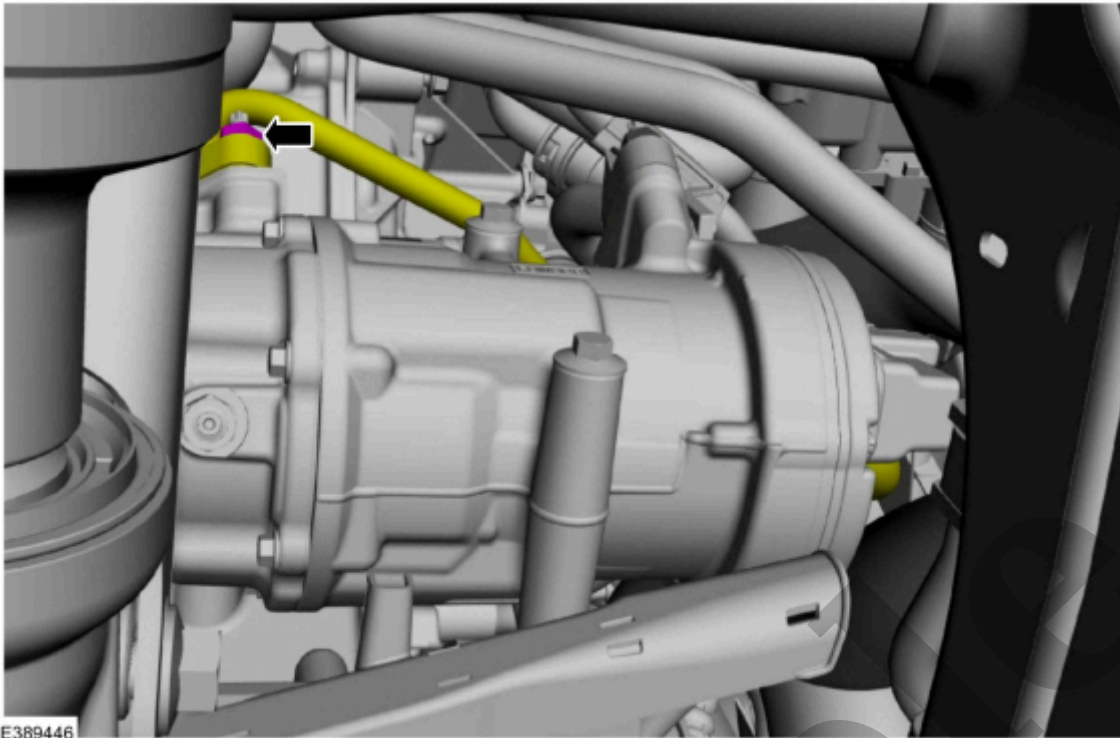

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


19. Disconnect the CAC (charge air cooler) electrical connector and wire retainer.

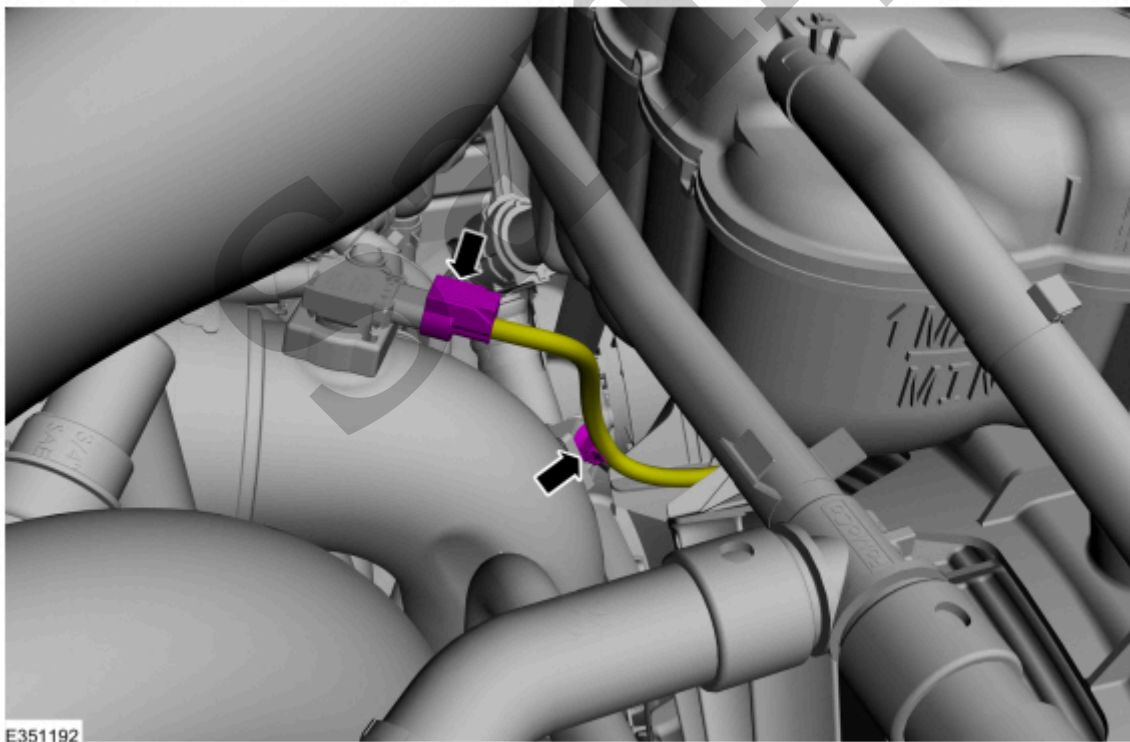

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


20. Remove the nuts, the wiring ground terminal and detach the wiring harness retainer.



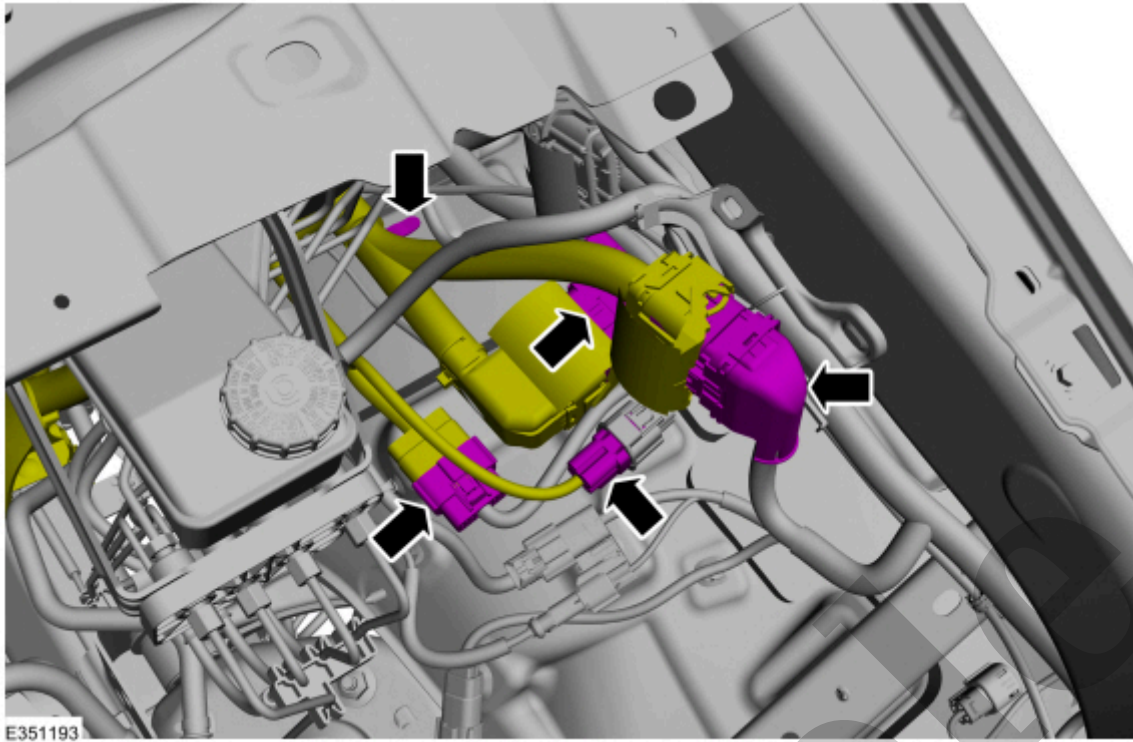

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

22. • Disconnect the LH (left-hand) body wiring harness connectors.
- Detach the wiring retainer and position aside.

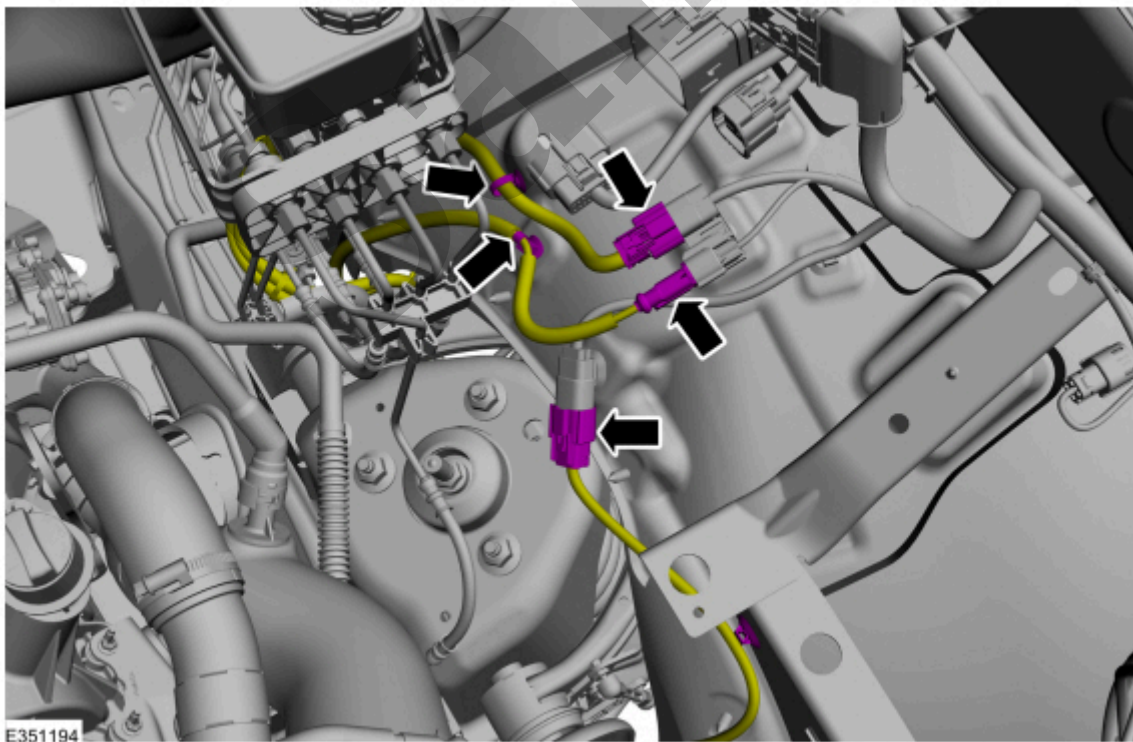

26. **NOTE**


If equipped.

Remove the underbody shield.

***Torque :***

1: 30 lb.ft (40 Nm)

2: 71 lb.in (8 Nm)

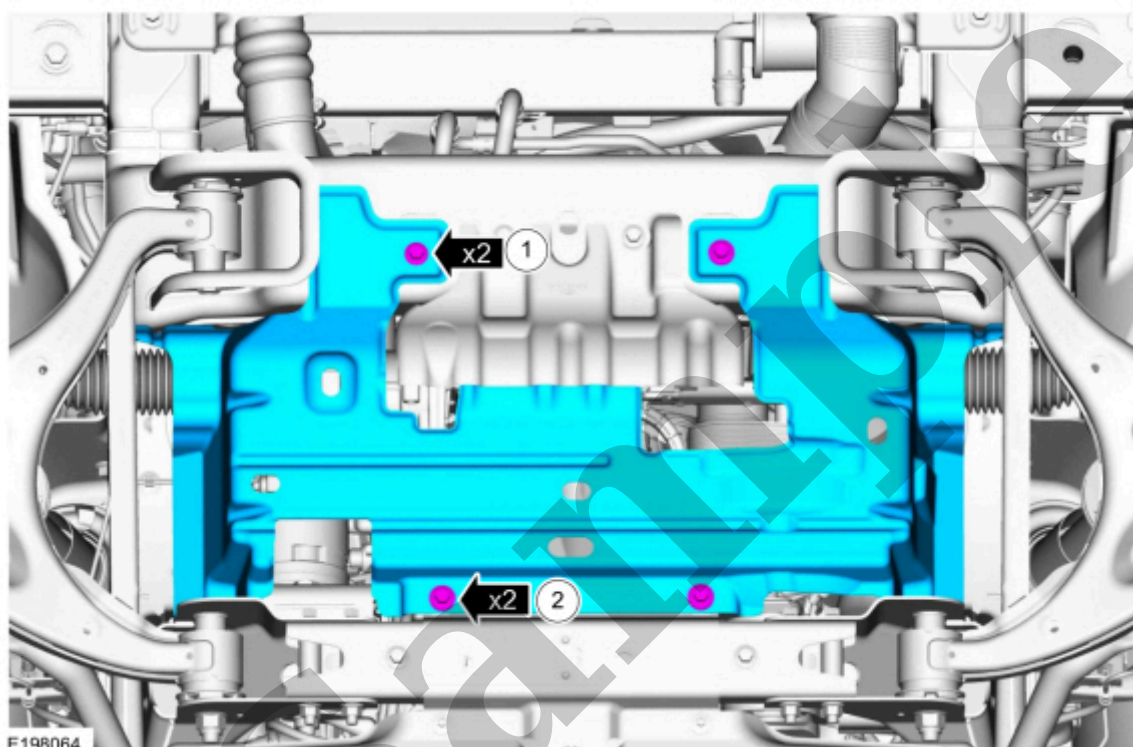

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

27. Remove the underbody shield.

***Torque :*** 71 lb.in (8 Nm)


29. **NOTE**

Place the transmission selector lever in Neutral after removing cable.

- Remove the bolt.

***Torque*** : 177 lb.in (20 Nm)

- Pull out and position aside the selector lever cable.

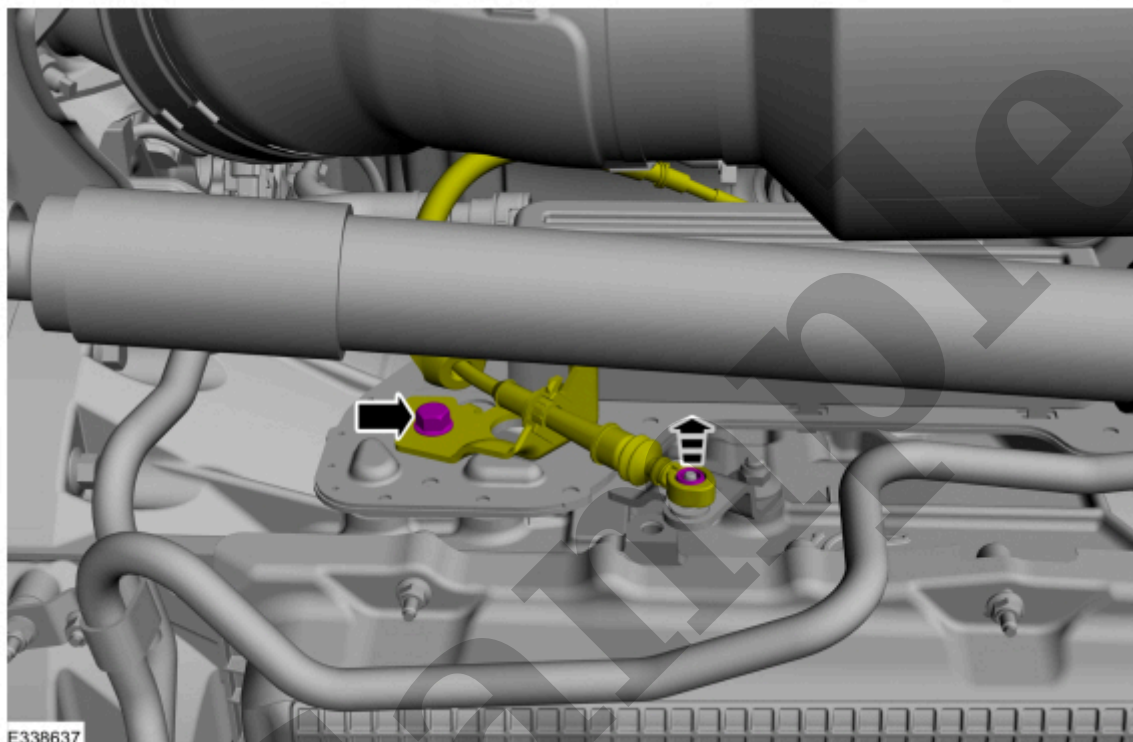


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

30. **NOTE**

Place the transmission selector lever in Neutral after removing cable.

Install the shift bracket bolt.

32. Disconnect hose from evaporative emission canister to body and position aside.

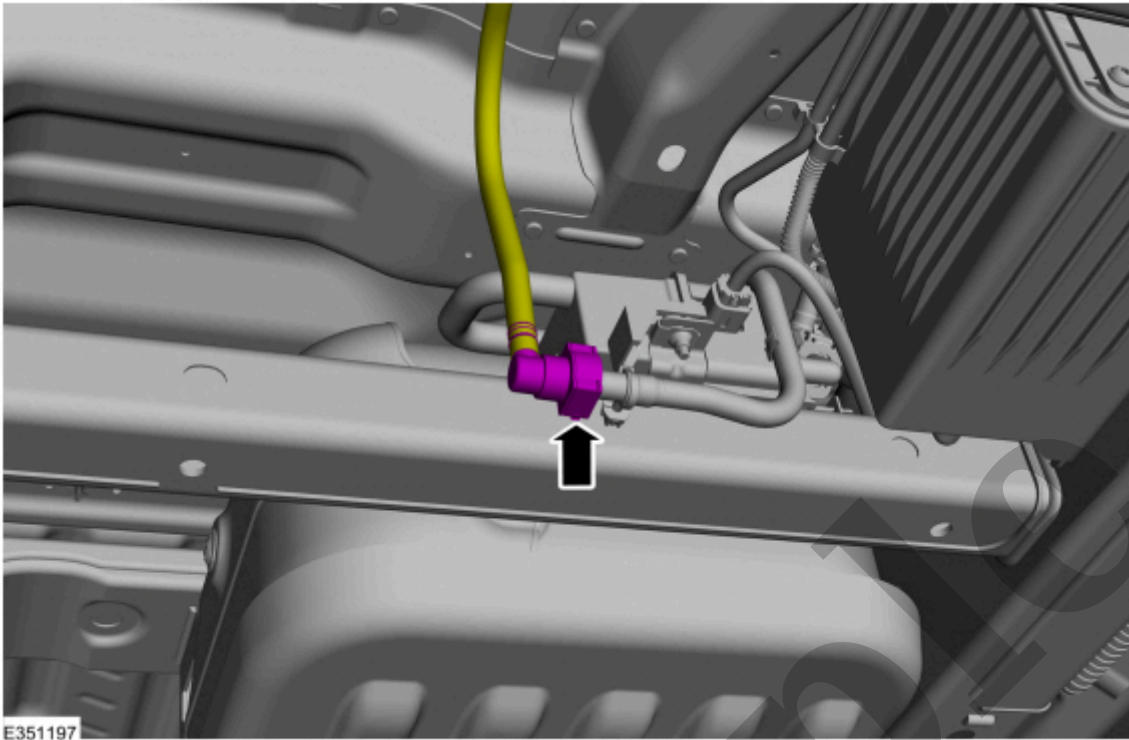

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

33. **WARNING**

Do not reuse steering column shaft bolts. This may result in fastener failure and steering column shaft detachment or loss of steering control. Failure to follow this instruction may result in serious injury to vehicle occupant(s).


Separate the steering column lower shaft.

- Remove and discard the steering column shaft bolt.

***Torque*** : 41 lb.ft (55 Nm)


- Separate the steering column lower shaft coupler from the steering column upper shaft.



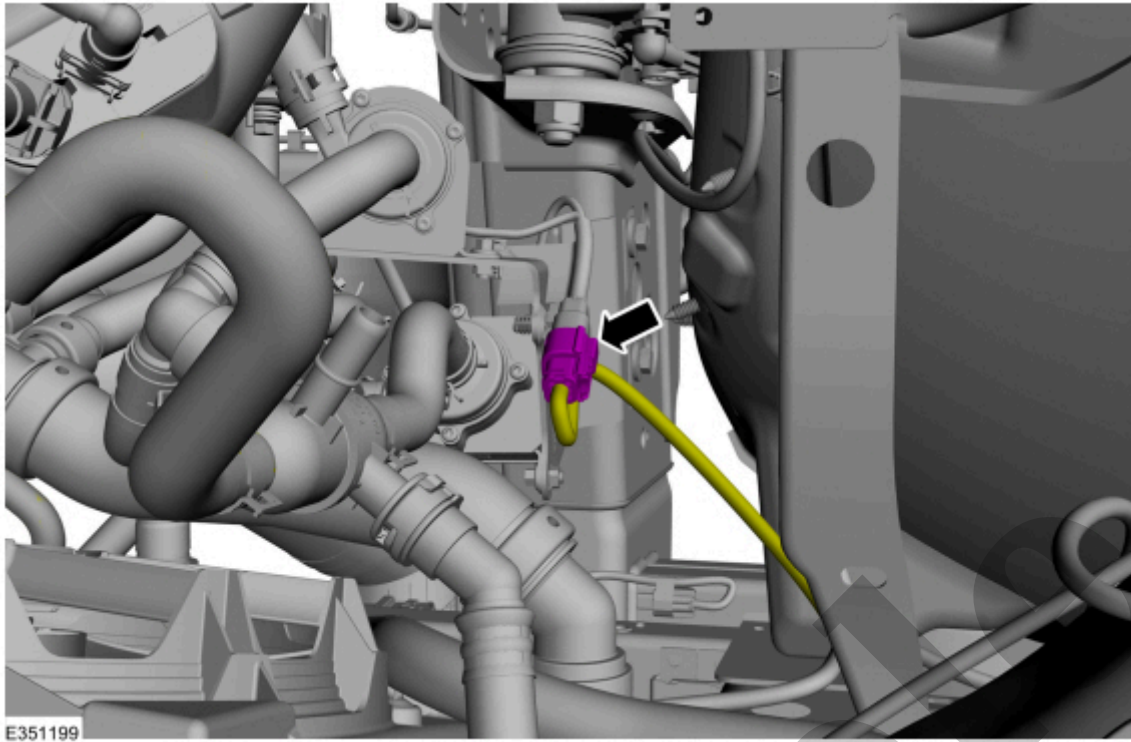


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

36. Disconnect the engine vent hose.

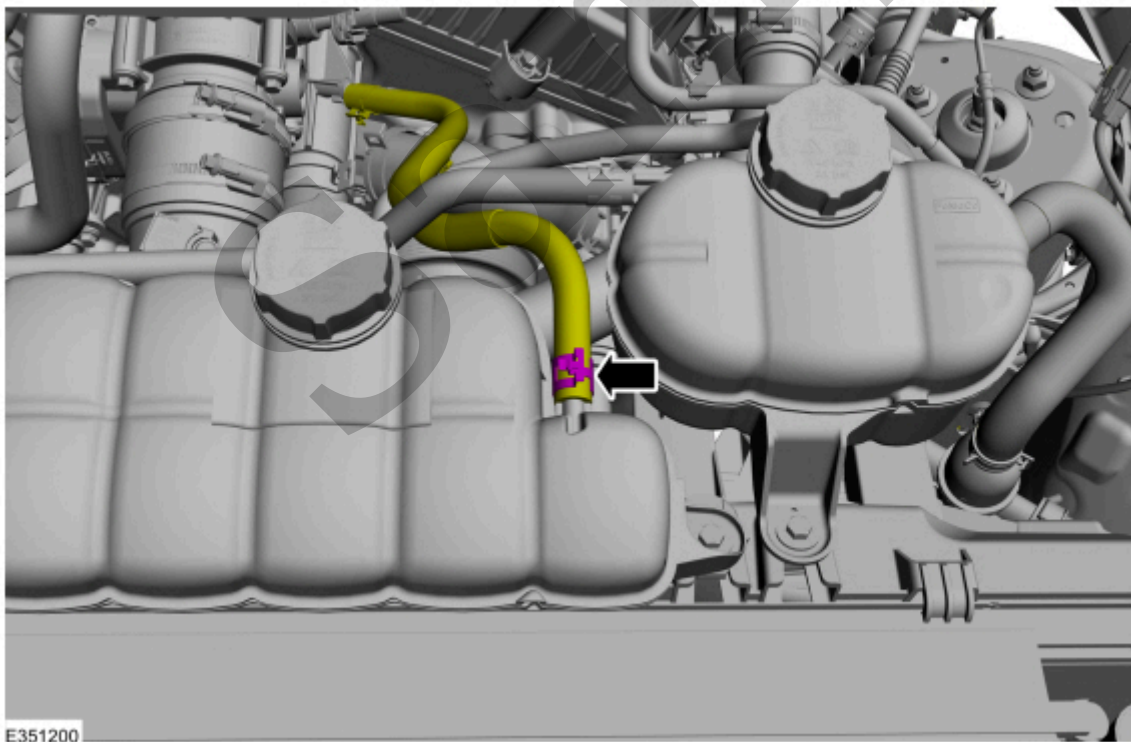

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

37. Remove the clip and disconnect the lower degas bottle hoses.

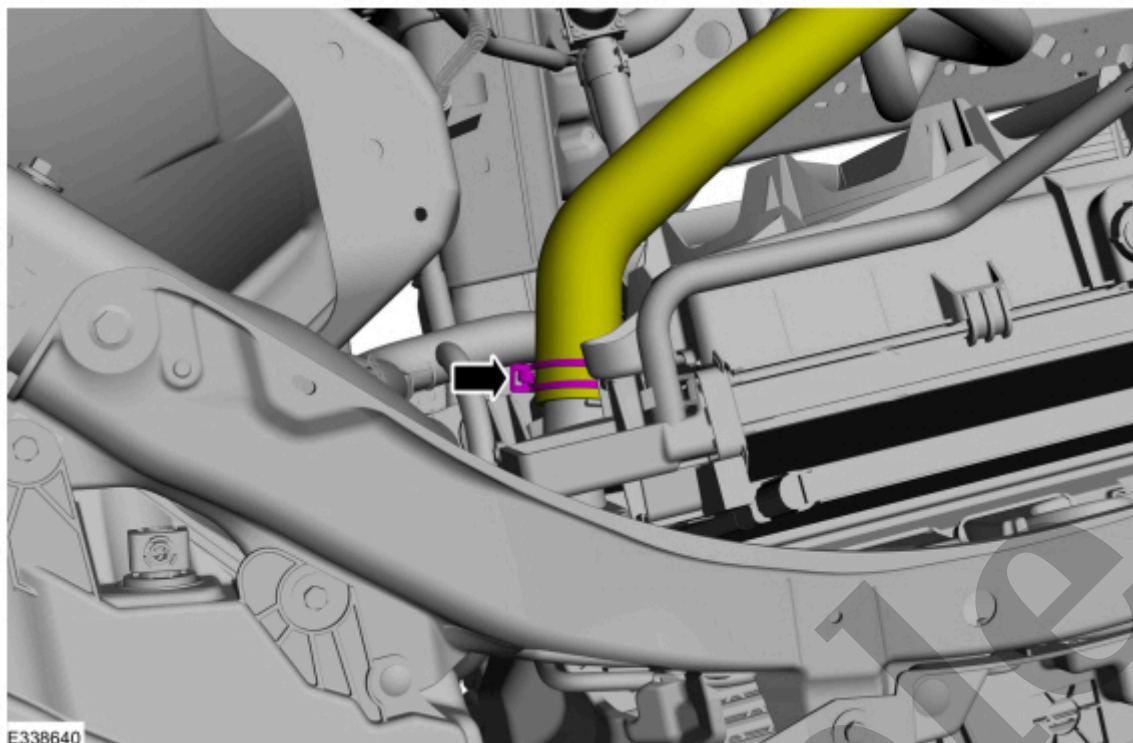

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

40. **NOTE**

Place a drain pan under the radiator to capture excess fluid.

Disconnect the lower radiator hose at the radiator.