


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2017 Jeep Cherokee Service and Repair Manual

[Go to manual page](#)

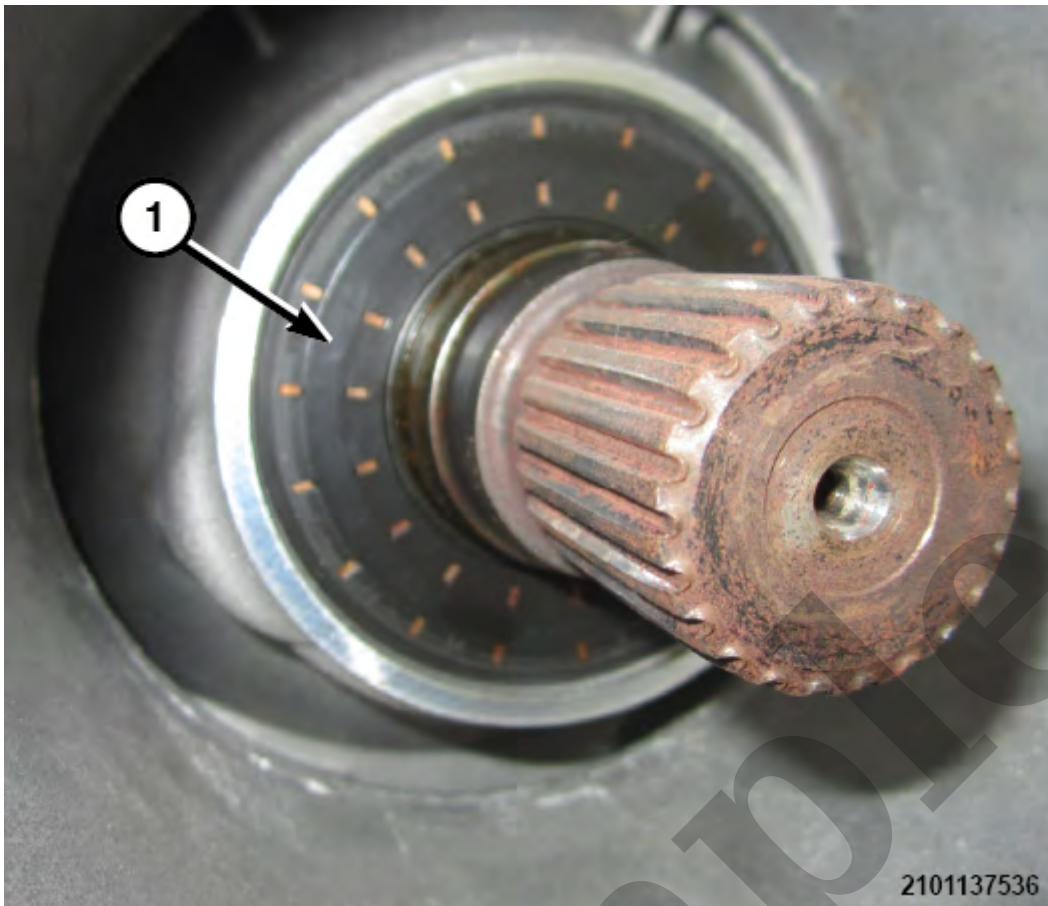

1 - Output Shaft Seal

**NOTE**


4WD Only

4. Remove the transmission output shaft seal with a suitable slide hammer and screw.

2 - Clutch B Discs and Plates
3 - Press Fixture Assembly
4 - Bearing/Gear Splitter

1. Position the input/output shaft and the P4 annulus drum assembly on

Assembly, Press Fixture

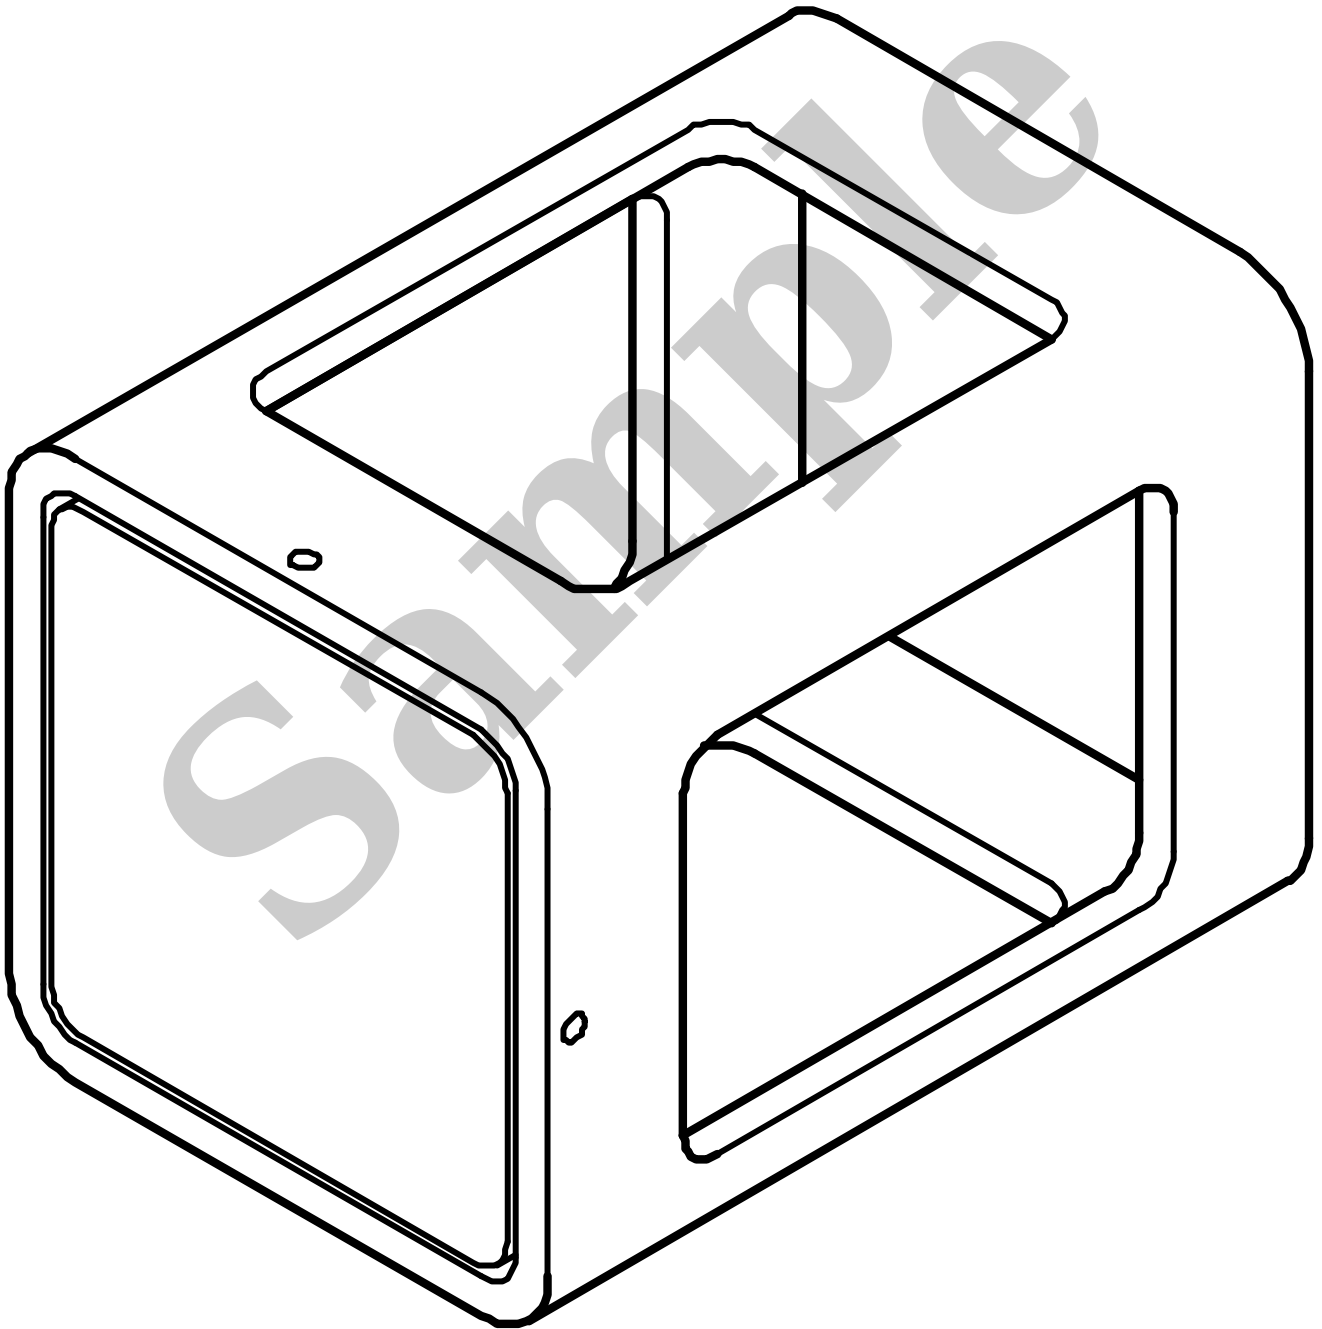

with




1 - Thrust Bearing

2 - Holding Plate

3 - Selectable Shim

1. Install the selectable shim onto the P1 planetary carrier.

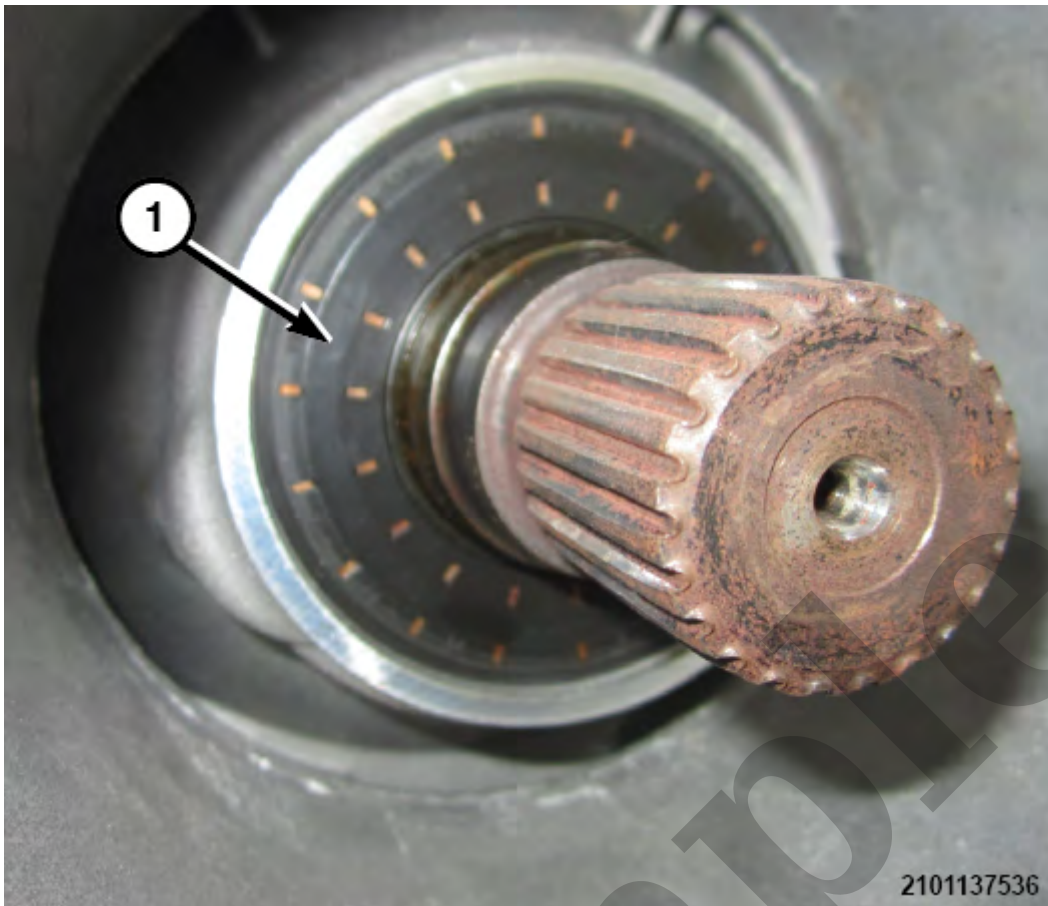


1 - Output Shaft Seal

**NOTE**

4X4 Only.

3. Remove the transmission output shaft seal with a suitable slide hammer and screw.

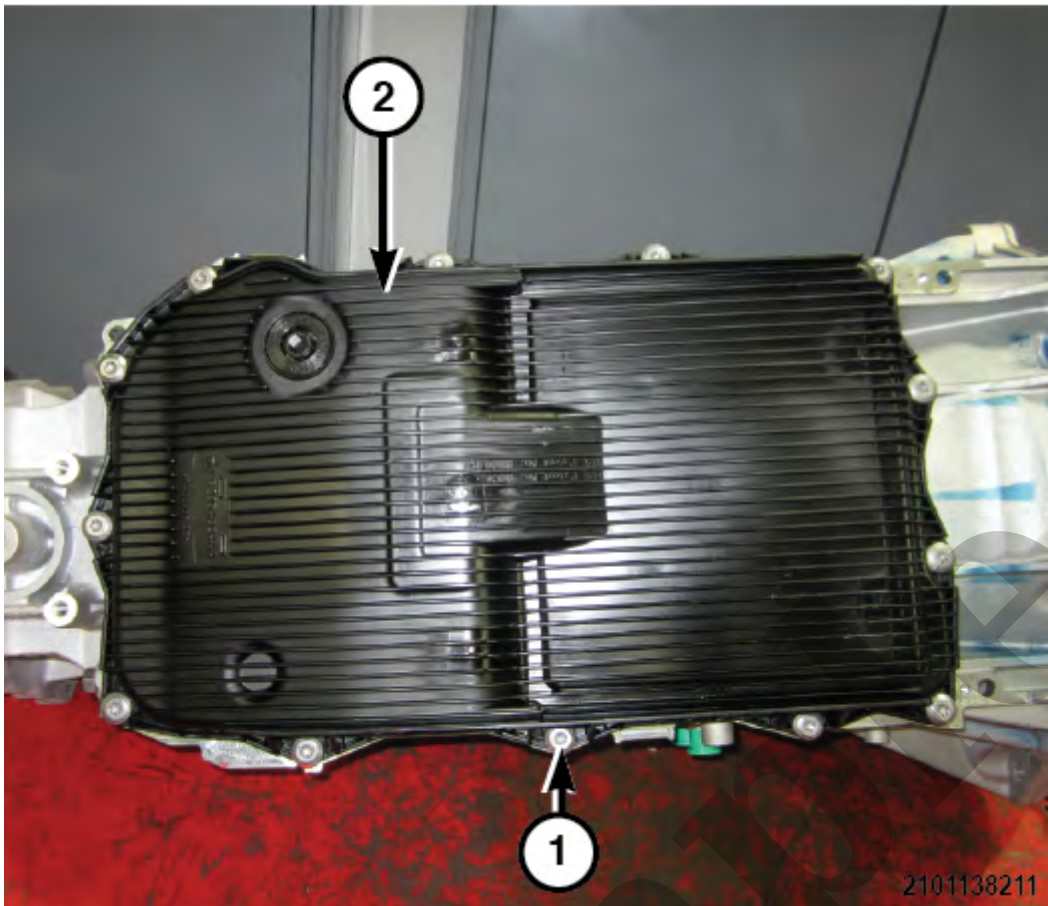

1 - Transmission Oil Pan Bolts

2 - Transmission Oil Pan


8. Remove the transmission oil pan bolts.

#### NOTE

Inspect the gasket for reuse. If the seal is cut or torn, replace the gasket.


9. Carefully remove the transmission oil pan and gasket.



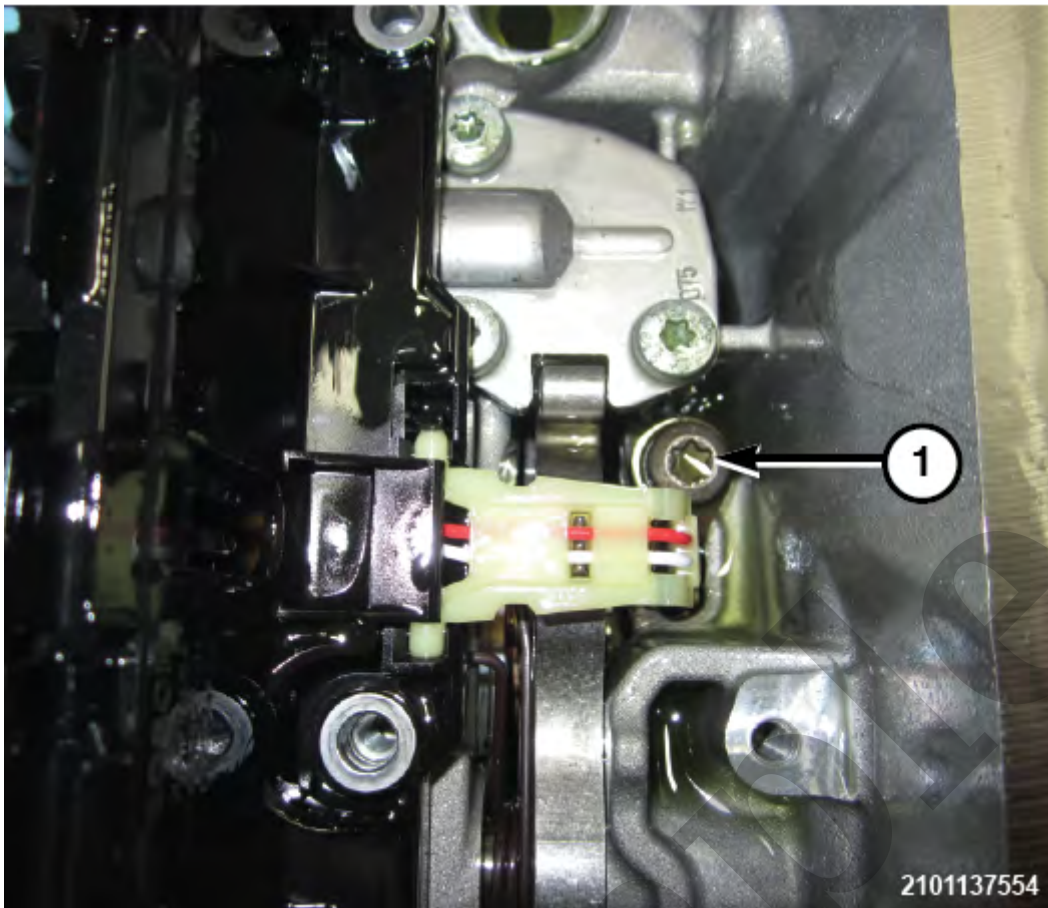

1 - Output Speed Sensor Bolt


16. Remove the Output Speed Sensor (OSS) bolt and gently lift the output speed sensor out from the case.

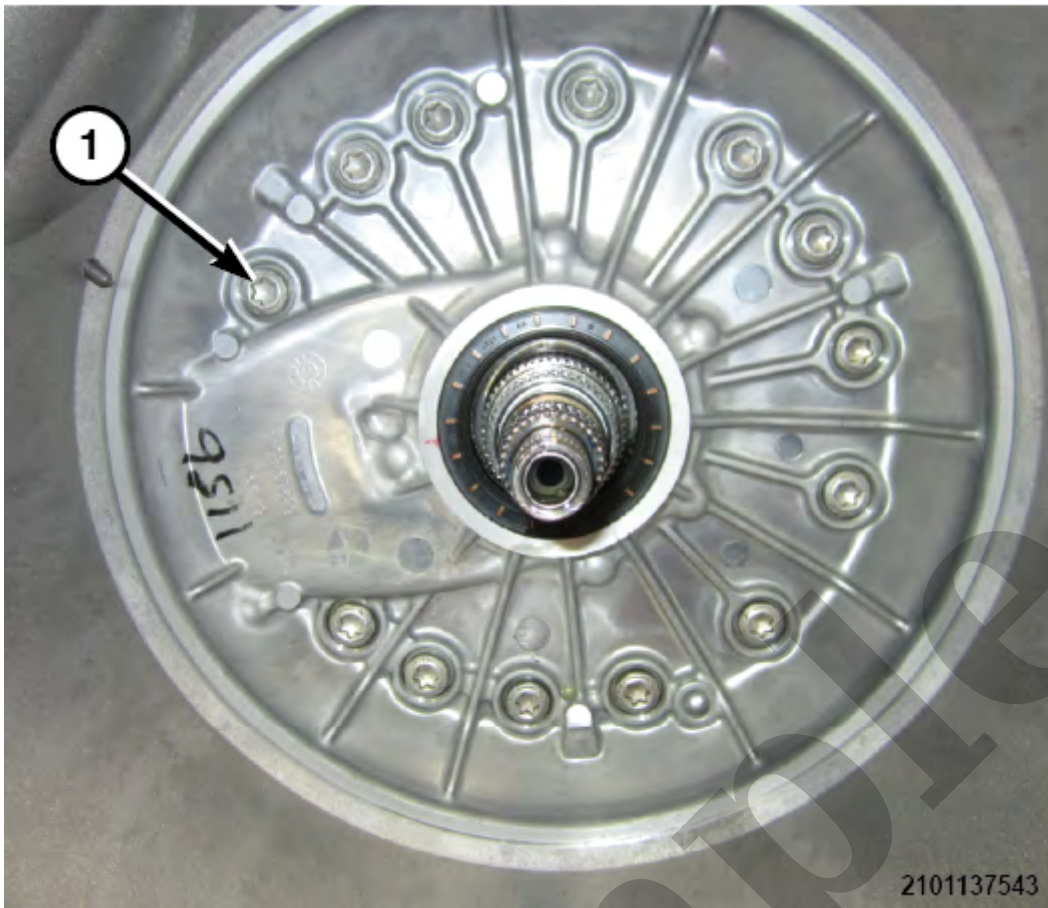

1 - Transmission Oil Pump Assembly to Case Bolts


21. Remove and **DISCARD** the transmission oil pump assembly to case bolts.



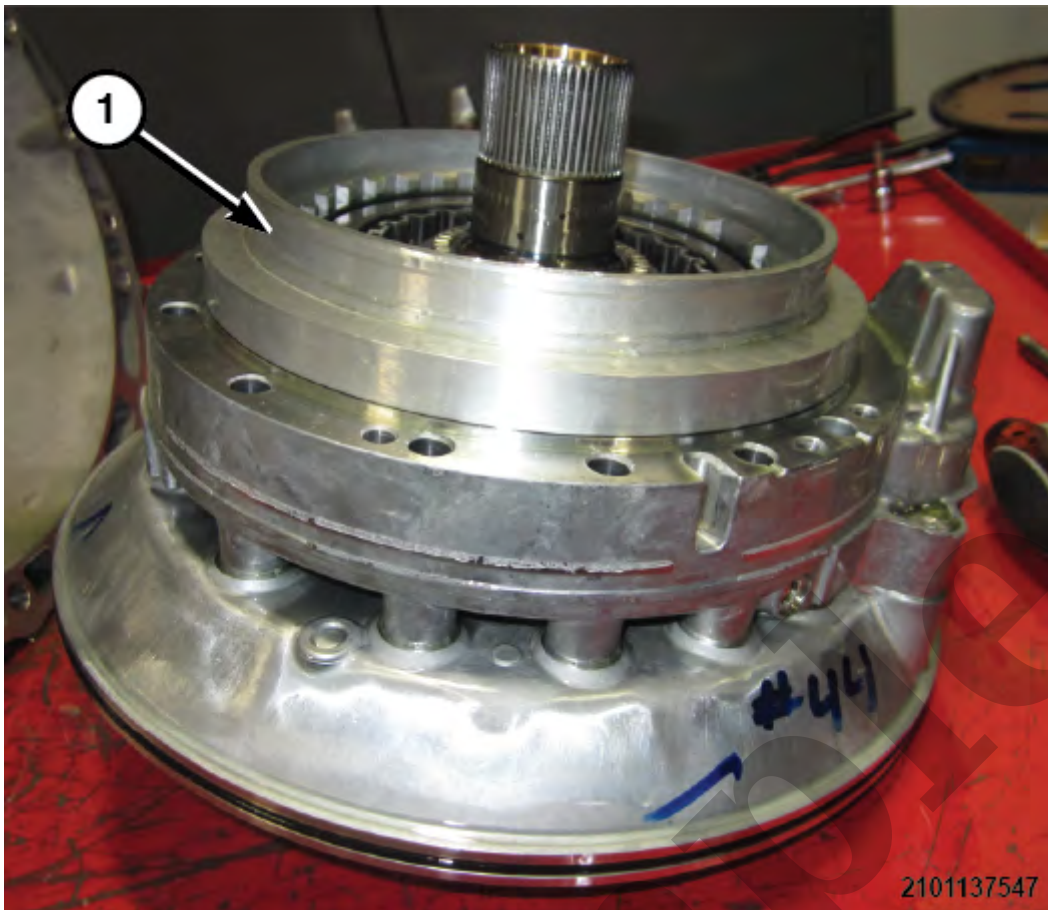

1 - Clutch B Piston

26. Remove the Clutch B piston from the assembly.

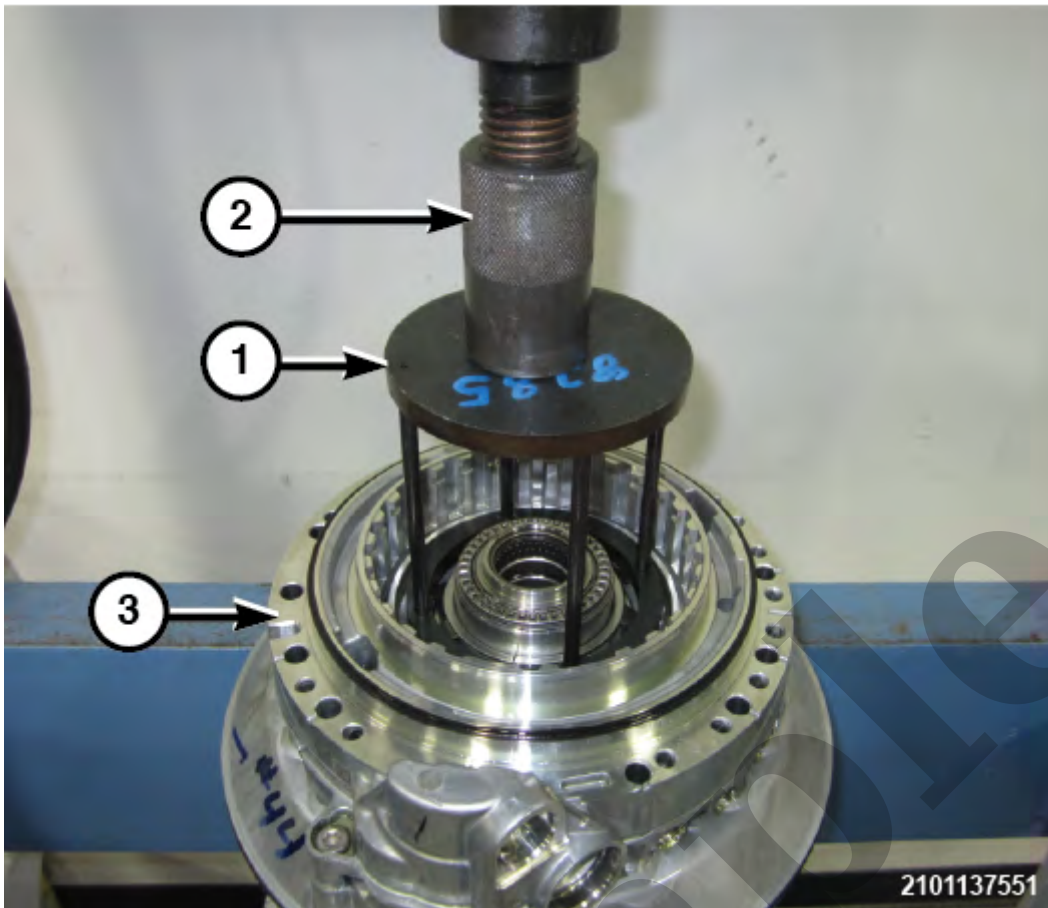

1 - Spring Compressor Tool

2 - Arbor Press

3 - Transmission Oil Pump Assembly

31. Position the oil pump housing assembly in a suitable arbor press.

32. Using

Compressor, Spring