


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


## 2017 JEEP Compass OEM Service and Repair Workshop Manual

[Go to manual page](#)

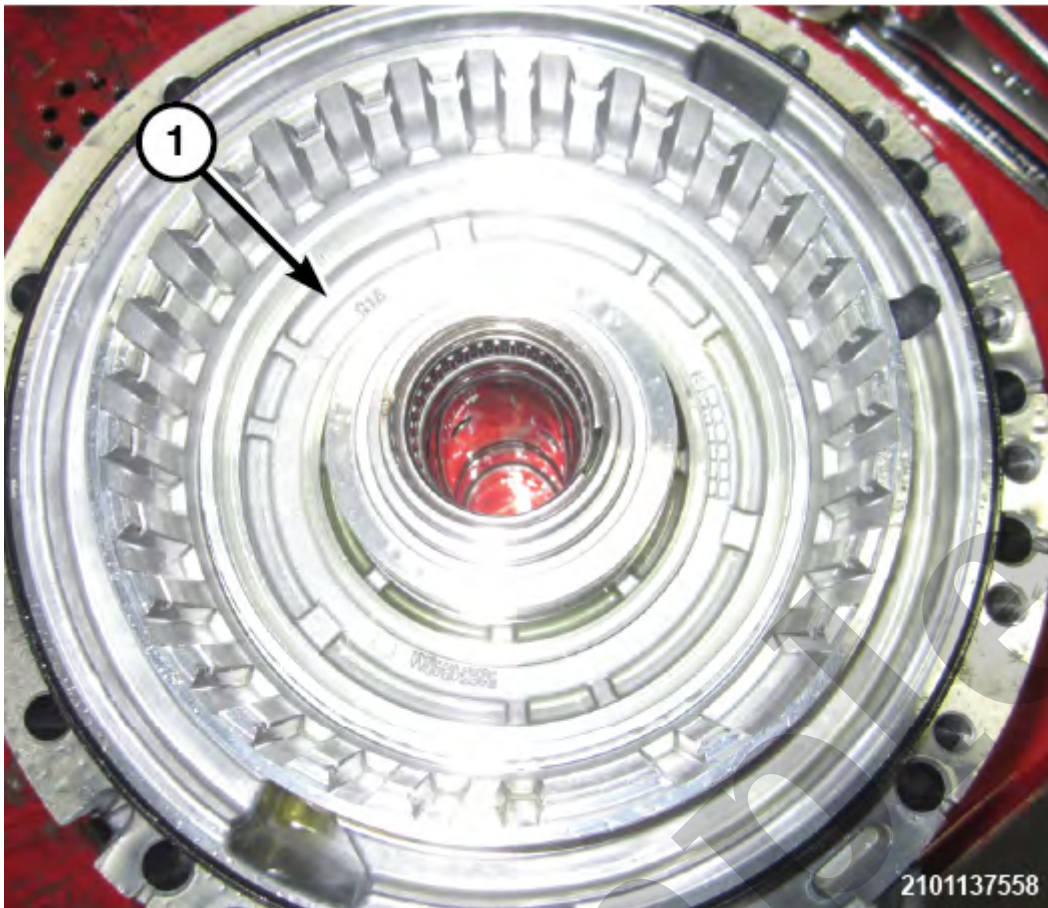

1 - Clutch A Piston


35. Remove the Clutch A piston (1) by rotating and gently lifting.

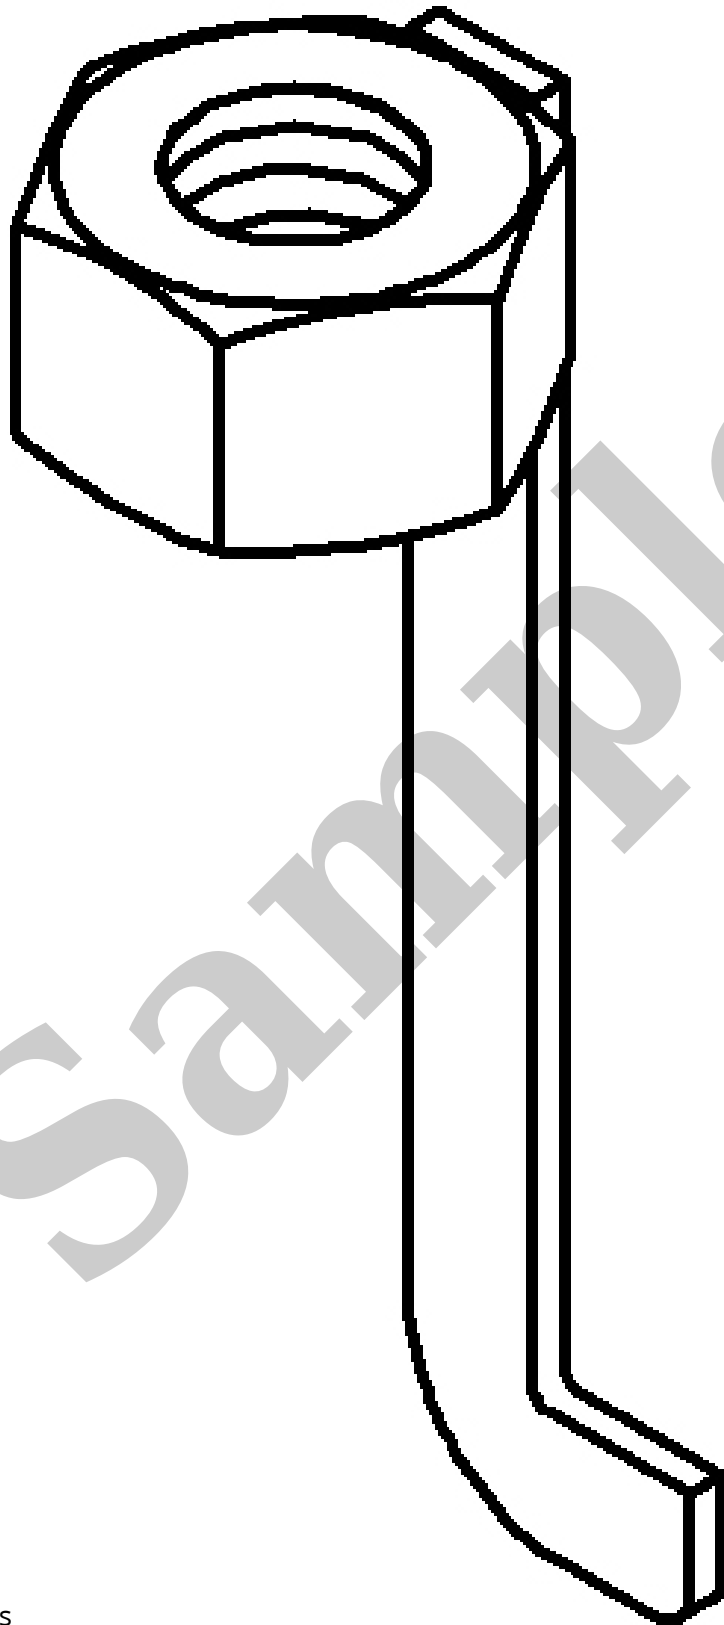


and

Slide Hammers

## Slide Hammer, Universal

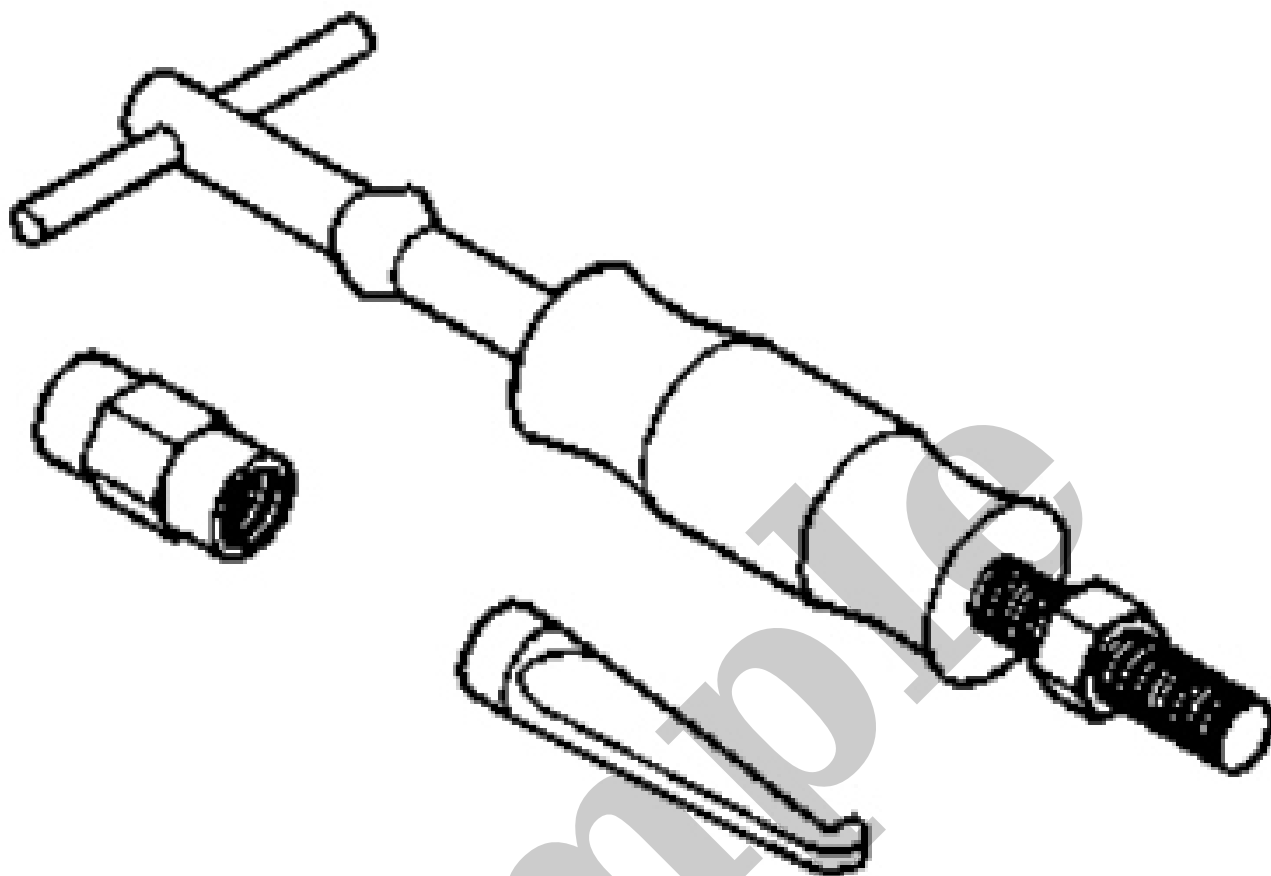


remove the front pump needle bearing.

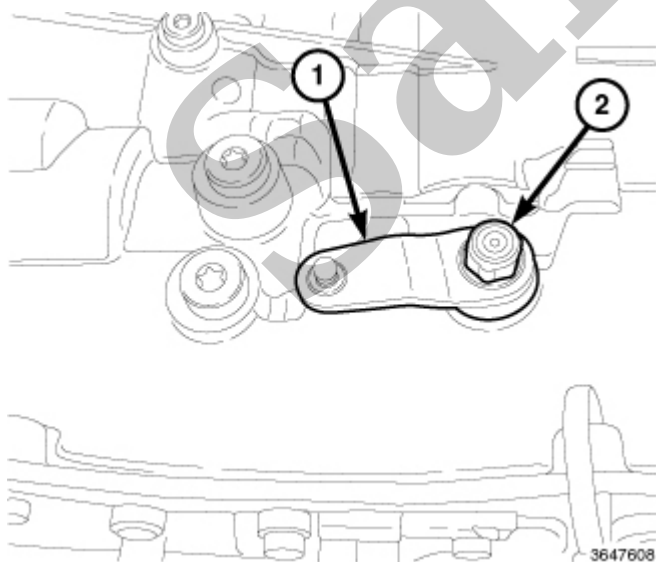

1 - Manual Park Release (MPR) Lever

2 - Manual Park Release (MPR) Lever Retaining Nut

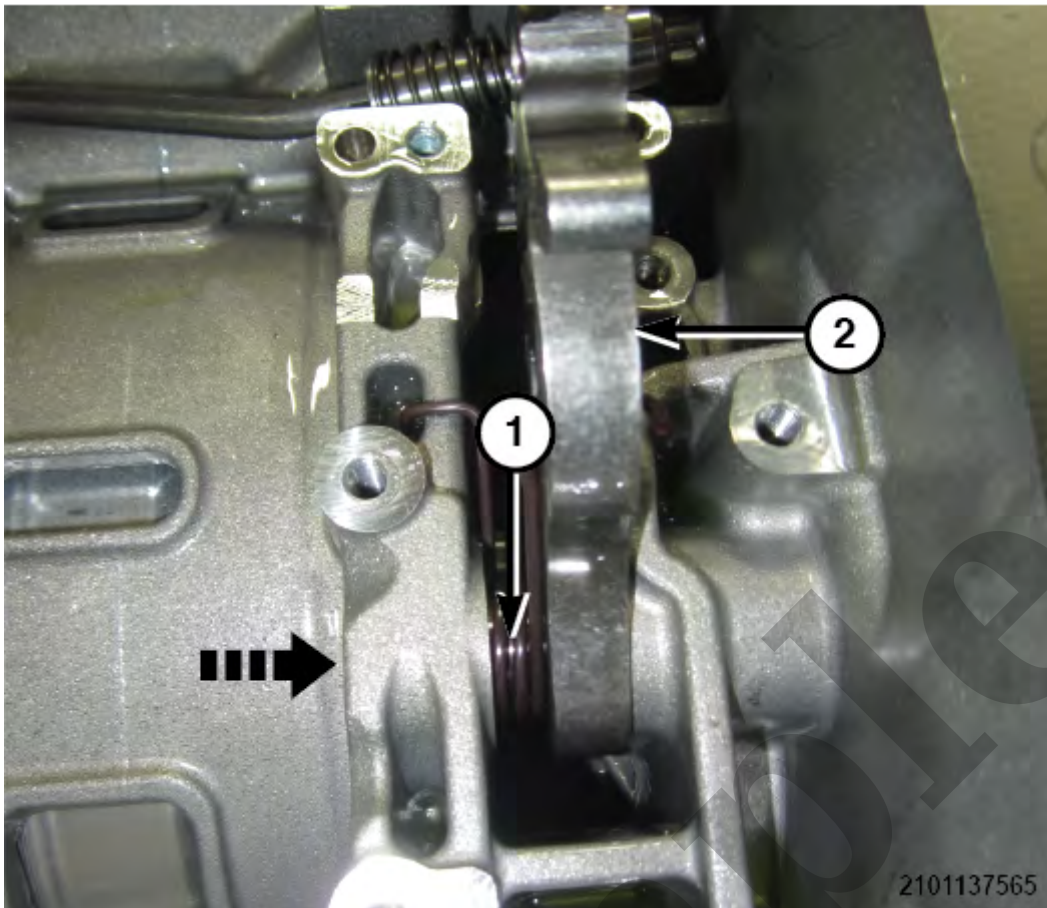


1 - Park Pawl Spring

2 - Park Pawl

#### NOTE


Pay attention to the spring position for installation.

51. Remove the park pawl shaft using a suitable pin punch (Notation arrow for location and drive-out direction), remove the park pawl and spring.

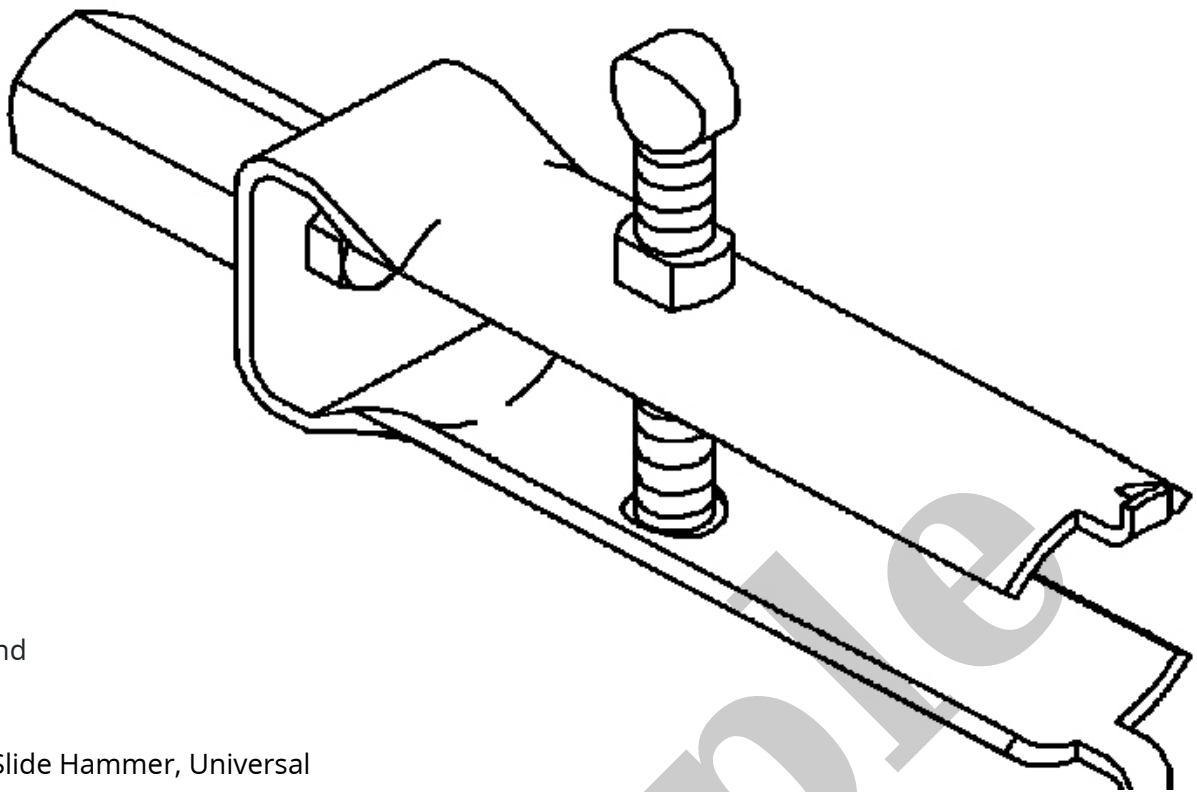


and

Slide Hammer, Universal

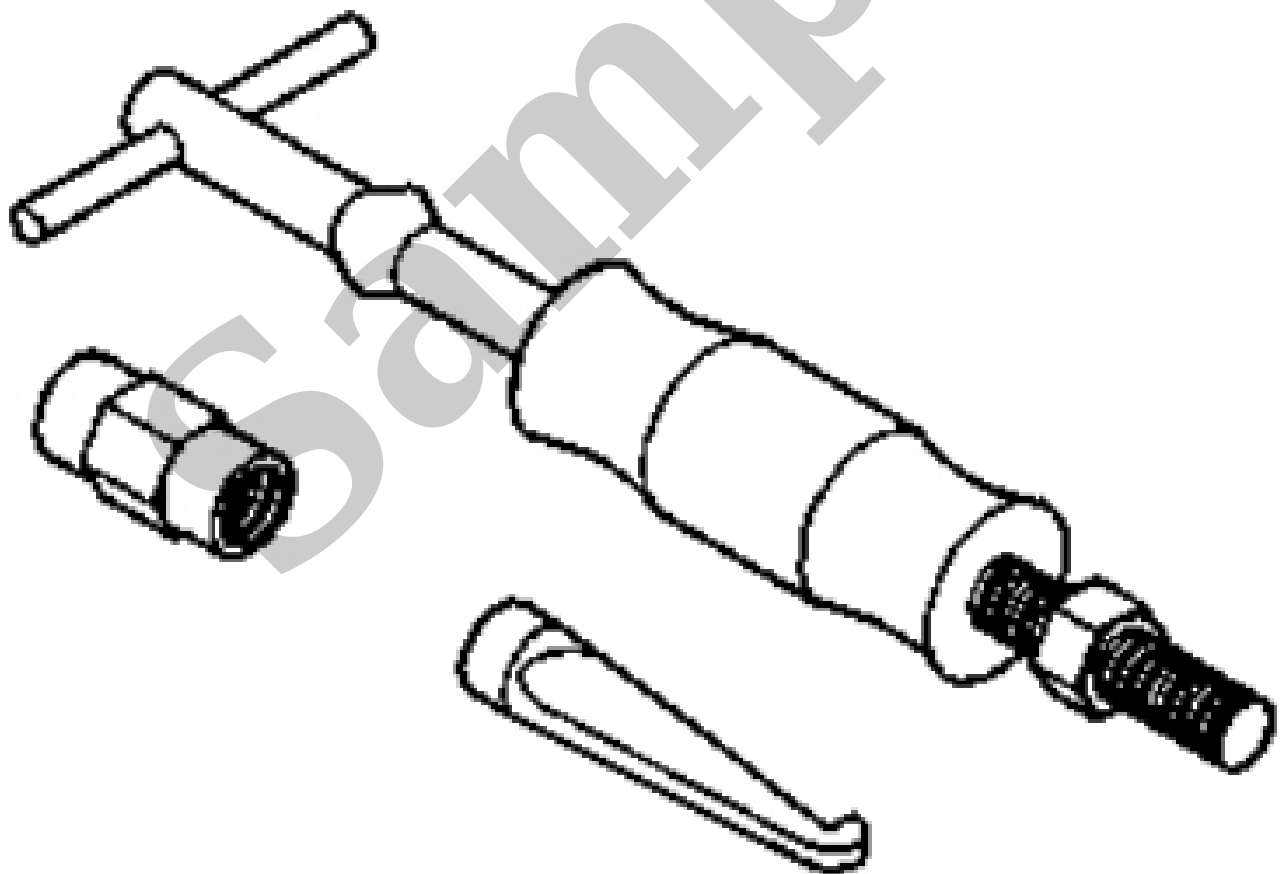

, remove the outer bearing cup.

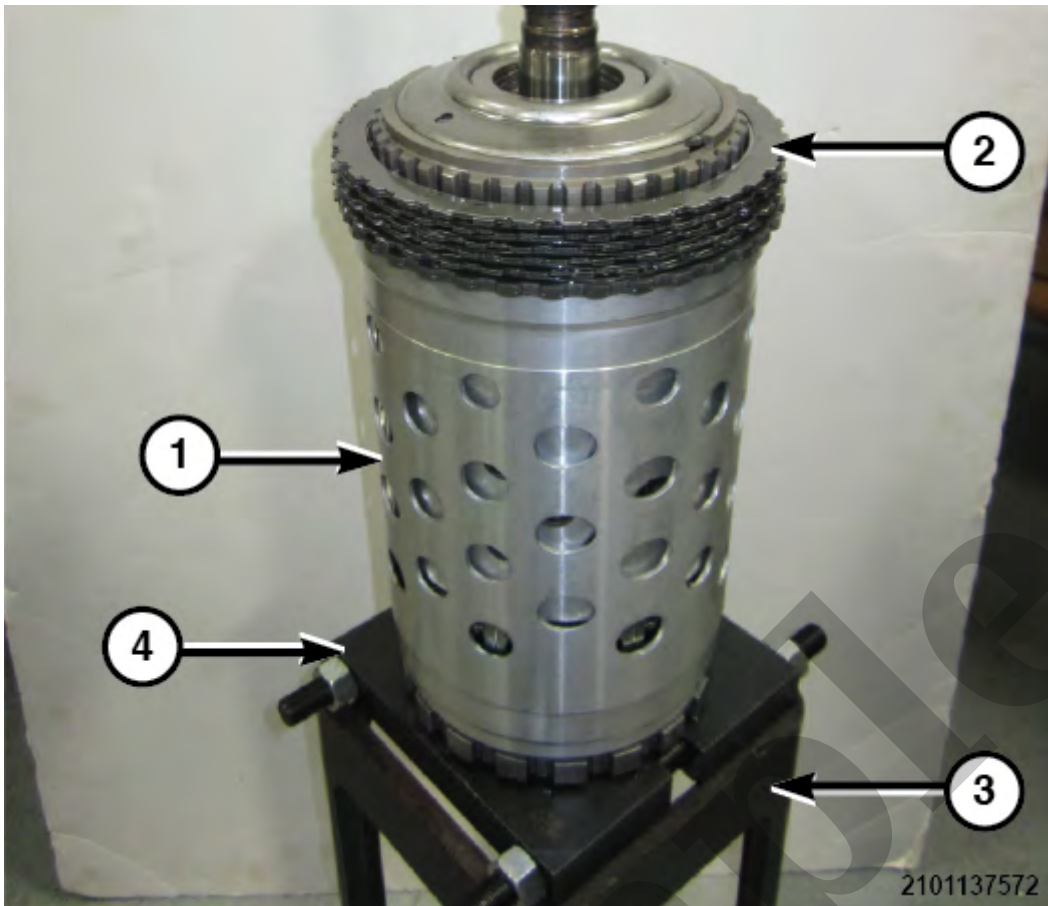


1 - Input/Output Shaft and P4 Annulus Drum Assembly
2 - Clutch B Discs and Plates
3 - Press Fixture Assembly
4 - Bearing/Gear Splitter

57. Position the input/output shaft and P4 annulus drum assembly on

Assembly, Press Fixture



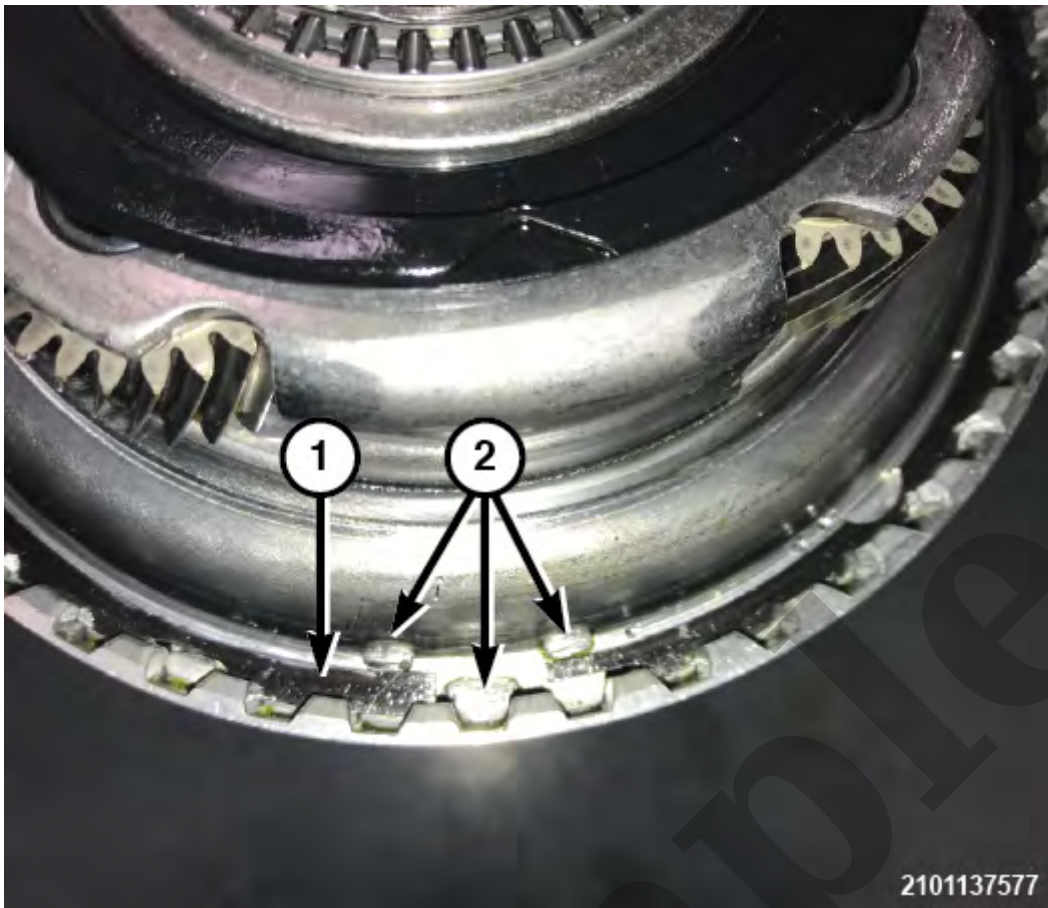

1 - Snap Ring


2 - Snap Ring Openings

#### NOTE

The

Rings, Support



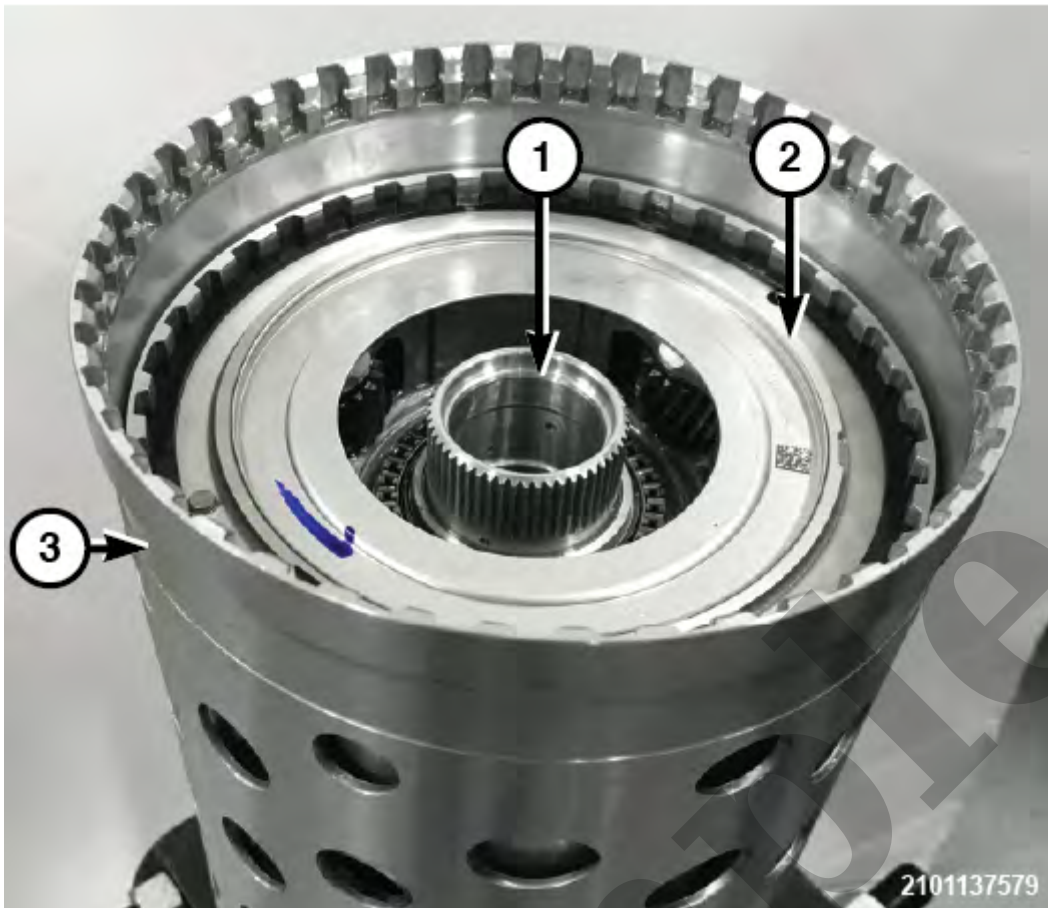


1 - P2 Annulus/P3 Sun Gear
2 - Clutch D Drum
3 - P4 Annulus Drum

68. Remove the P2 annulus/P3 sun gear from the P4 annulus drum assembly.

69. Remove the Clutch D drum from the P4 annulus drum.

73. Remove the thrust bearing from the P3 planetary carrier.

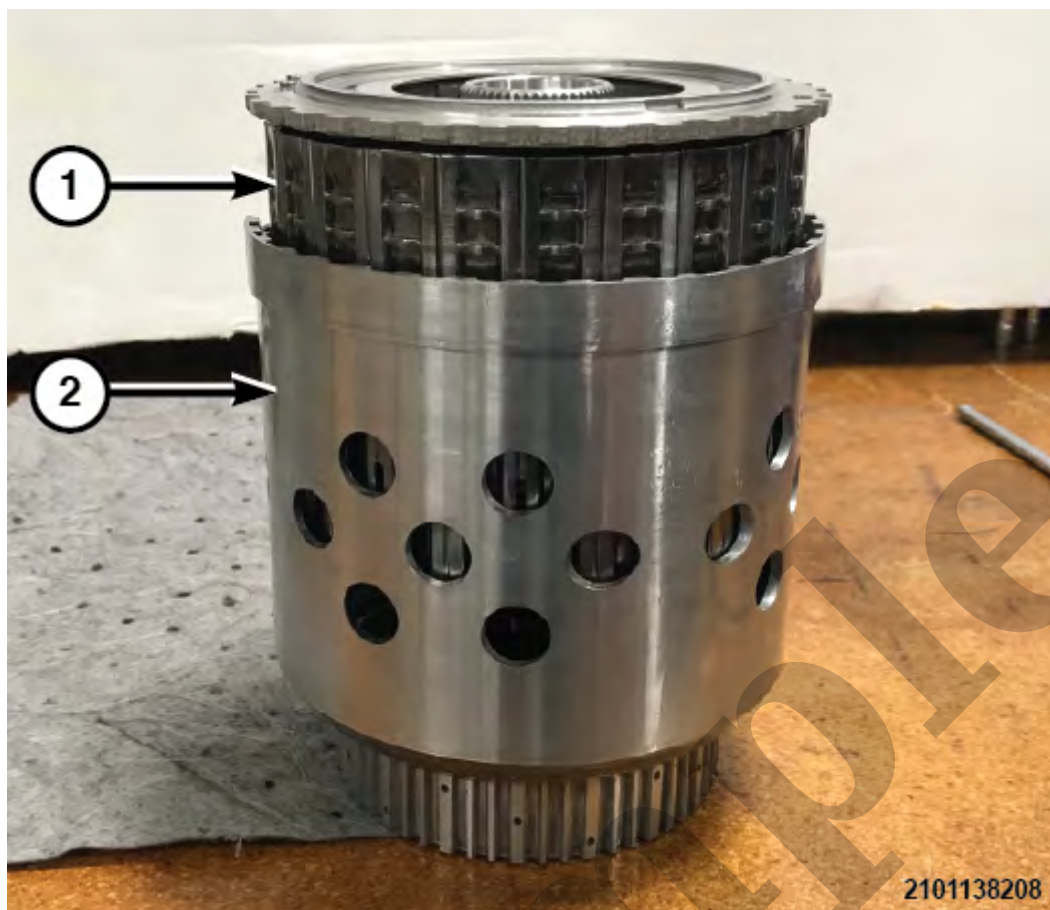

1 - P4 Sun Gear/Clutch C/E Retainer

2 - Clutch D Drum

74. Remove the P4 sun gear/Clutch C/E retainer from the Clutch D drum.