


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


2017 Jeep COMPASS PATRIOT Service Manual

[Go to manual page](#)

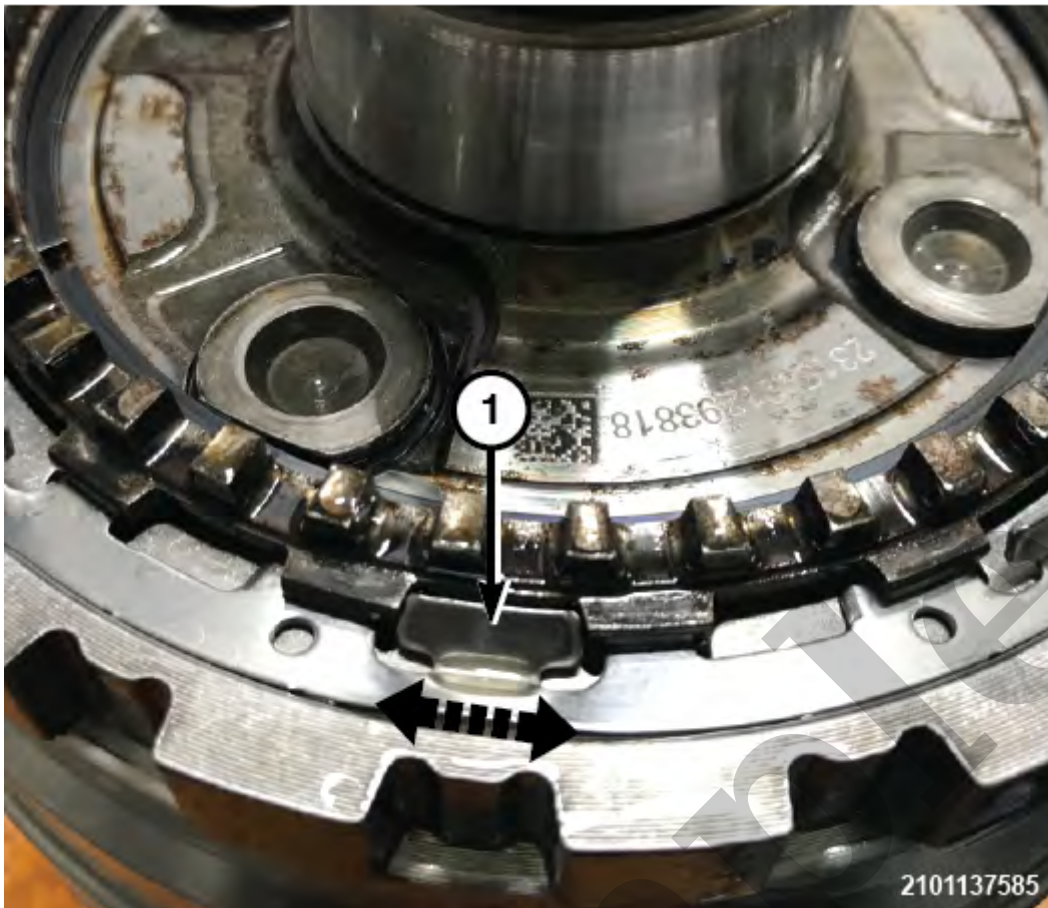


1 - P4 Planetary Carrier/Output Shaft Lock Ring

81. Remove the P4 planetary carrier/output shaft lock ring from the P4 annulus drum by gently prying the locking tabs open and turning the lock ring to center the locating tabs in the output shaft tab openings. **DISCARD** the lock ring and install a **NEW** lock ring during assembly.

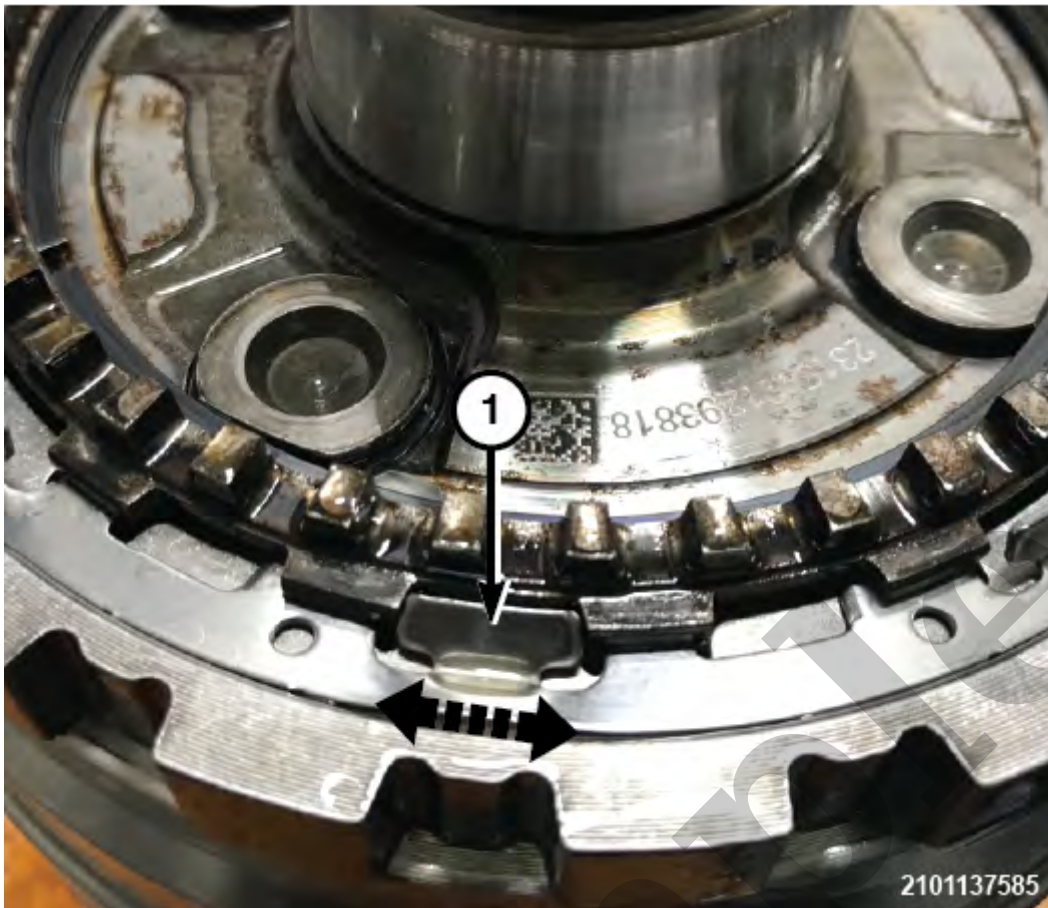

1 - P4 Planetary Carrier/Output Shaft Lock Ring

3. Install the **NEW** P4 planetary carrier/output shaft lock ring from the P4 annulus drum by turning the lock ring to center the lock ring tabs in the output shaft tab openings and gently staking the locking tabs closed.

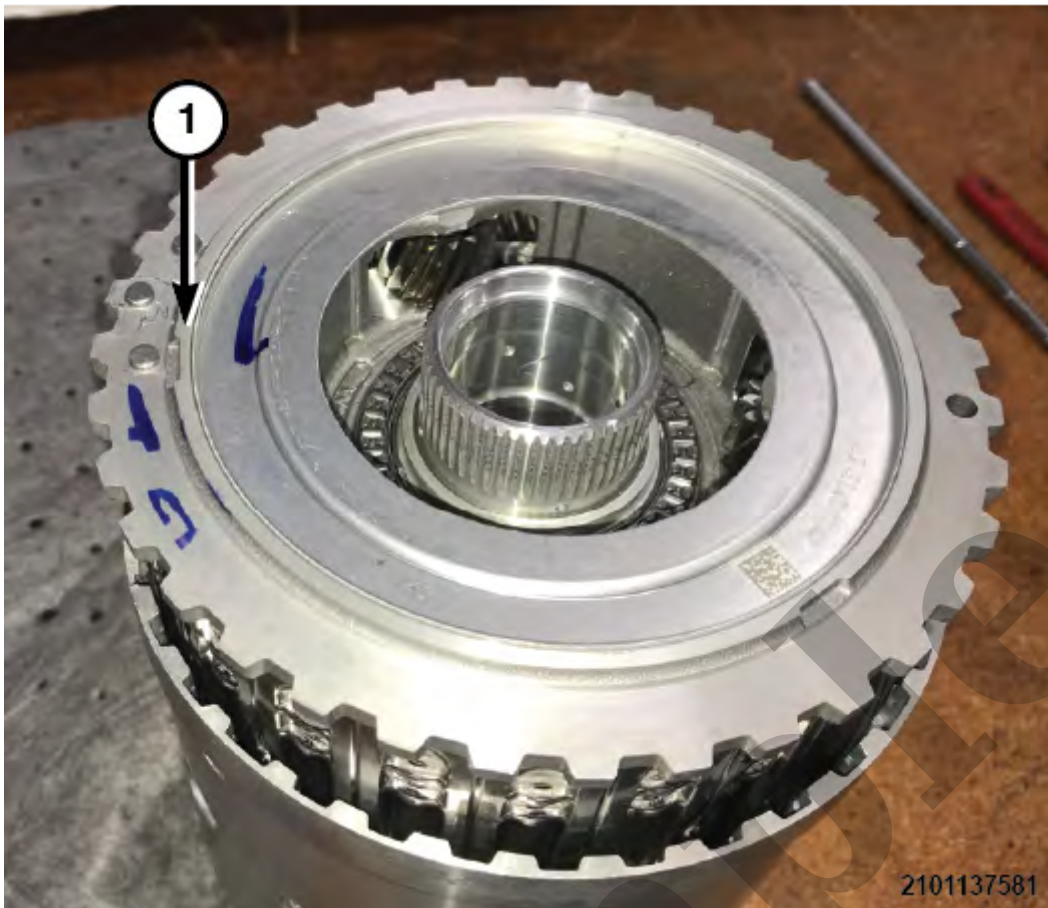


1 - P3 Planetary Carrier

10. Install the P3 sun gear/Clutch C/E retainer into the Clutch D drum.

1 - Input Shaft

2 - P2 Planetary Carrier


17. Install the input shaft with P2 planetary carrier into the drum assembly.

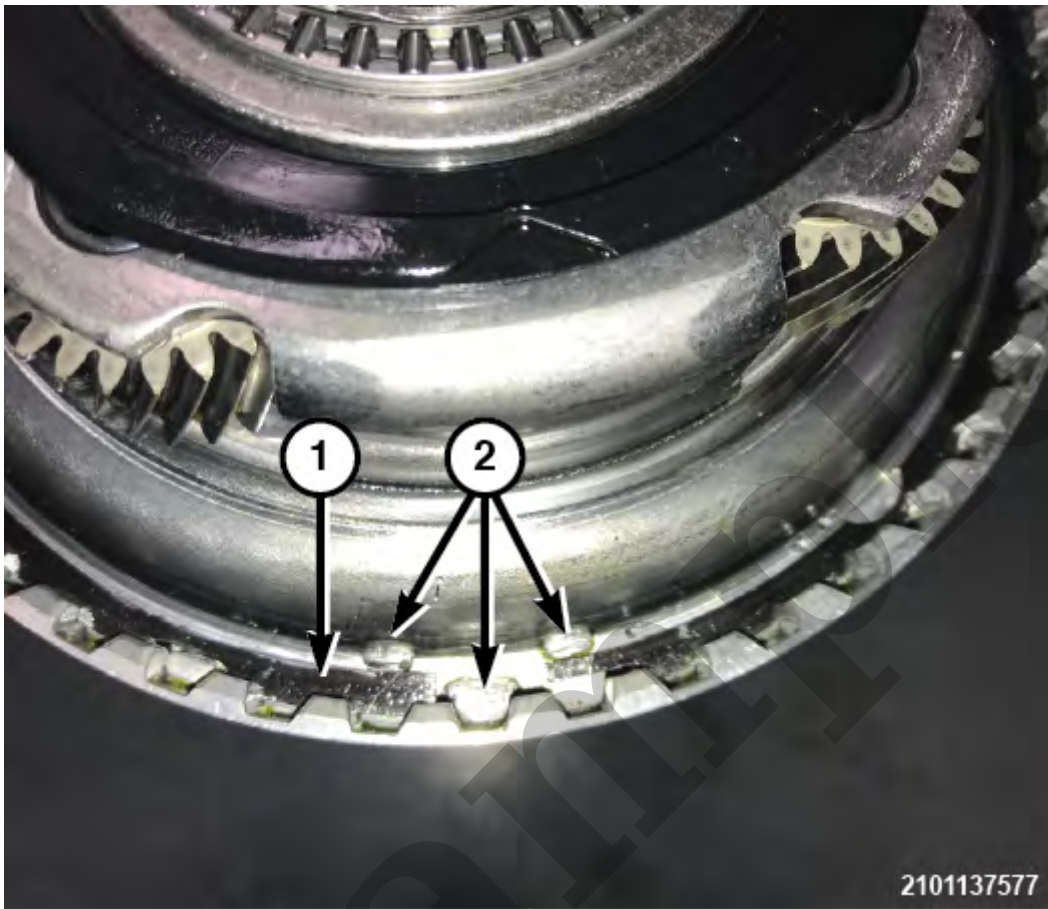

1 - Snap Ring


2 - Snap Ring Locating Tabs

18. Install the snap ring in the orientation shown (snap ring will only install one way) with the locating tabs.

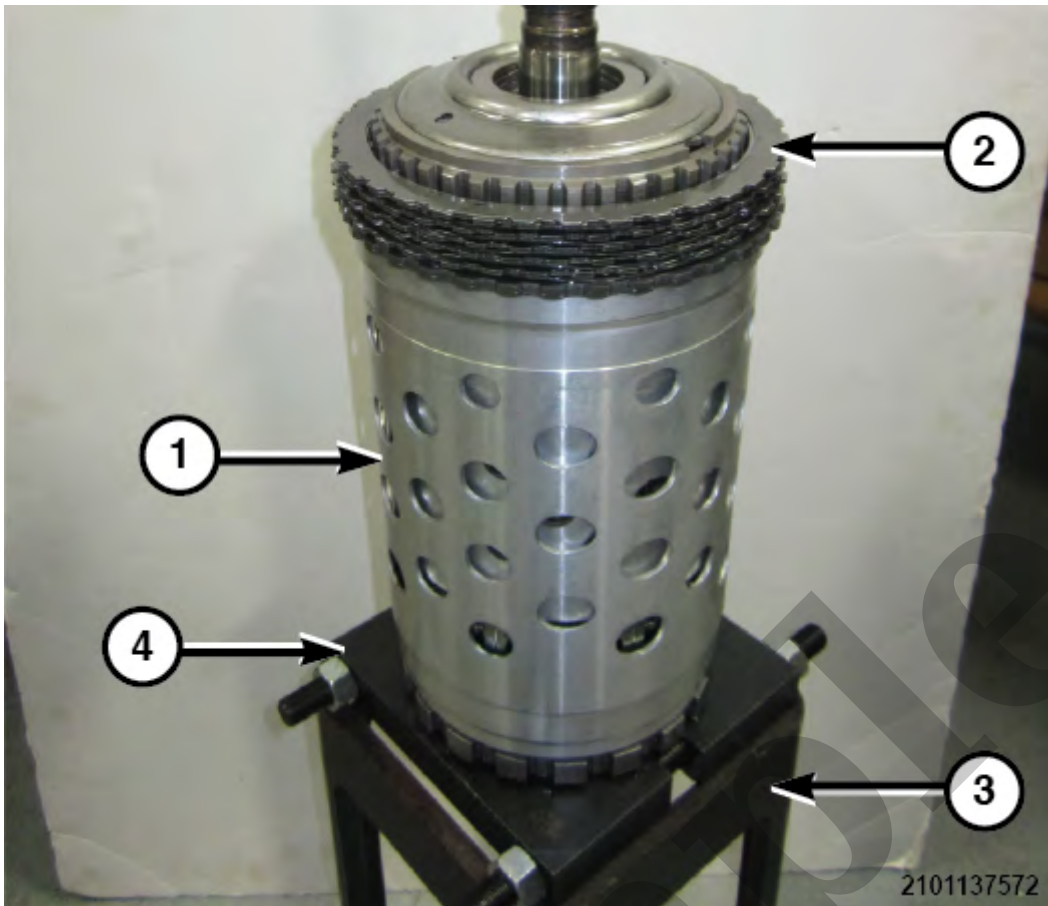

1 - Input/Output Shaft and P4 Annulus Drum Assembly
2 - Clutch B Discs and Plates
3 - Press Fixture Assembly
4 - Bearing/Gear Splitter


24. Install the Clutch B discs and plates.

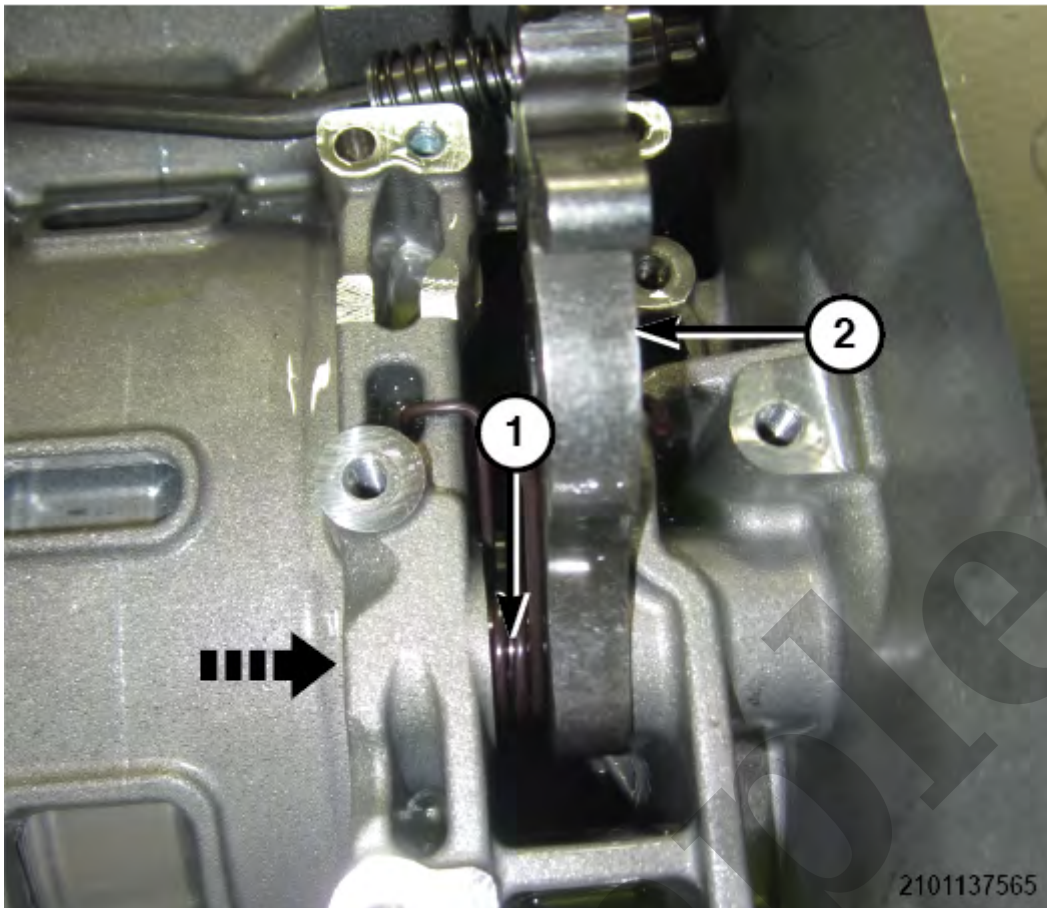

1 - Park Pawl Spring

2 - Park Pawl


29. From outside the transmission case, install the park pawl shaft and install the park pawl and spring.

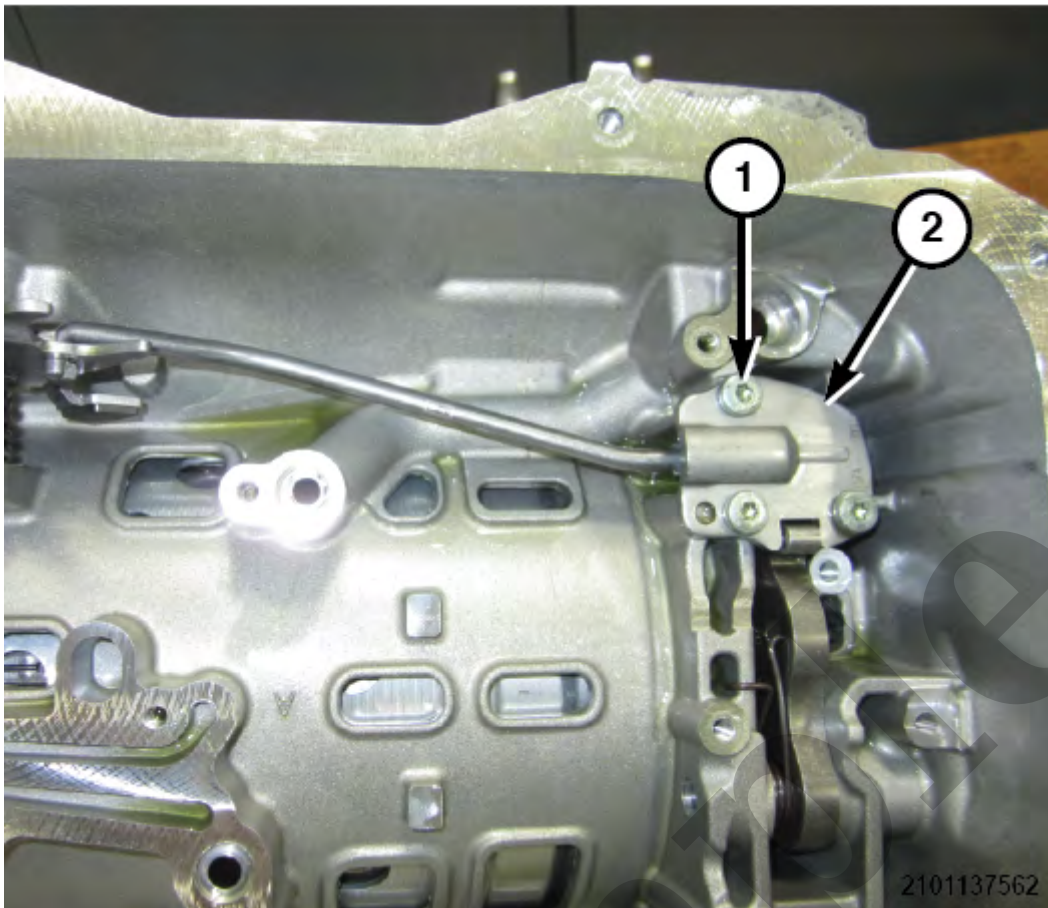


1 - Park Pawl Lock Rod Guide Plate Retaining Bolts

2 - Park Pawl Lock Rod Guide Plate


35. Position the park pawl lock rod guide plate, install the three park pawl lock rod guide plate retaining bolts.

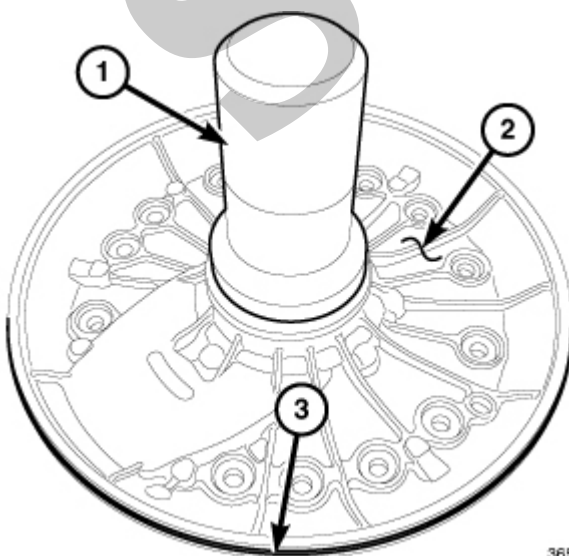

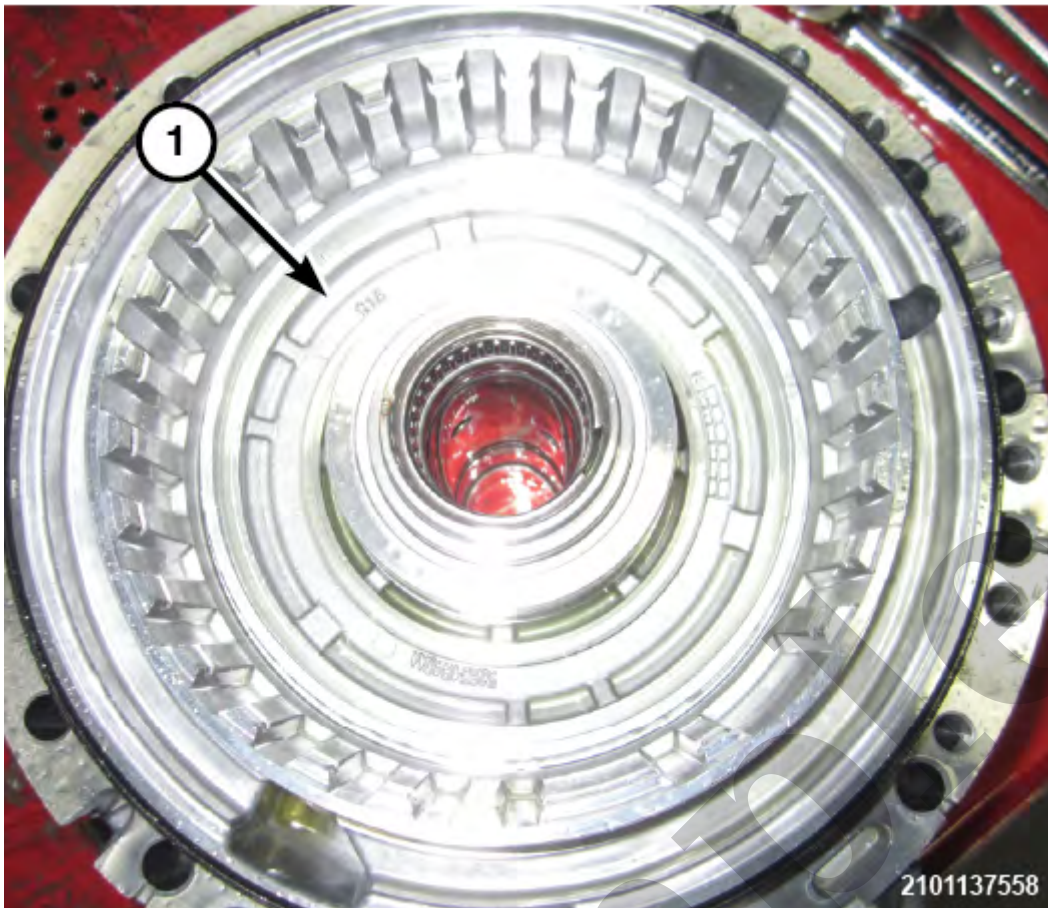

1 - Clutch A Piston

40. Install the Clutch A piston in the housing.

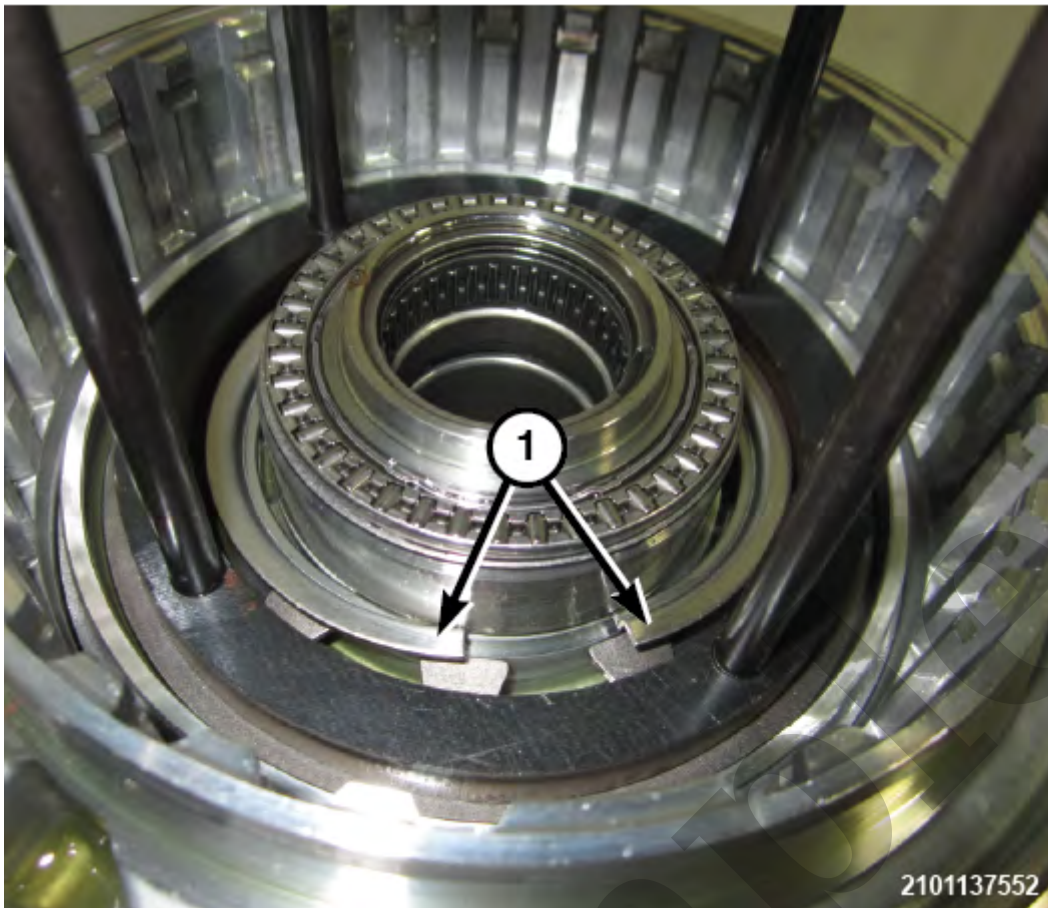

1 - Retaining Ring

44. Verify the split retainer ring halves are seated in the groove.