

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2017 NISSAN Murano OEM Service and Repair Workshop Manual

[Go to manual page](#)

## 1. CHECK DTC PRIORITY

---

If DTC “U1DA4-82” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

## 2. CHECK HEAD UP DISPLAY UNIT SELF-DIAGNOSIS RESULTS

---

Check if any DTC is detected in “Self Diagnostic Result” of “E-HUD”.

Is any DTC detected?

YES>>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#).

NO>>

Replace the around view monitor control unit. Refer to [Removal and Installation](#).

## DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detection condition	
U1DA4	83	Head UP Display unit	Diagnosis condition	Vehicle: READY
			Signal (terminal)	CAN communication signal
			Threshold	If Head Up Display unit is not transmitting or receiving CAN communication signal
			Diagnosis delay time	1 second or less

## POSSIBLE CAUSE

- Head Up Display unit
- Around view monitor control unit

## FAIL-SAFE

The following systems are canceled.

- Lane keep function\*
- Lane change support function
- Overtaking support function
- Route driving support function

\*: ProPILOT Assist 2.0 display is blue

## 1. CHECK DTC PRIORITY

---

If DTC “U1DA4-83” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

## 2. PERFORM DTC CONFIRMATION PROCEDURE

---

1. Set the vehicle to READY.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “U1DA4-83” is detected as the current malfunction in “Self Diagnostic Result” of “AROUND VIEW MONITOR”.

Is “U1DA4-83” detected as the current malfunction?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

## 1. CHECK DTC PRIORITY

---

If DTC “U1DA4-83” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

## 2. CHECK HEAD UP DISPLAY UNIT SELF-DIAGNOSIS RESULTS

---

Check if any DTC is detected in “Self Diagnostic Result” of “E-HUD”.

Is any DTC detected?

YES>>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#).

NO>>

Replace the around view monitor control unit. Refer to [Removal and Installation](#).

**DTC DETECTION LOGIC**

DTC		CONSULT screen terms	DTC detection condition	
U1DA4	87	Head UP Display unit	Diagnosis condition	Vehicle: READY
			Signal (terminal)	CAN communication signal
			Threshold	If Head Up Display unit is not transmitting or receiving CAN communication signal
			Diagnosis delay time	1 second or less

**POSSIBLE CAUSE**

- Head Up Display unit
- Around view monitor control unit

**FAIL-SAFE**

None

## 1. CHECK DTC PRIORITY

---

If DTC “U1DA4-87” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

## 2. PERFORM DTC CONFIRMATION PROCEDURE

---

1. Set the vehicle to READY.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “U1DA4-87” is detected as the current malfunction in “Self Diagnostic Result” of “AROUND VIEW MONITOR”.

Is “U1DA4-87” detected as the current malfunction?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

## 1. CHECK DTC PRIORITY

---

If DTC “U1DA4-87” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

## 2. CHECK HEAD UP DISPLAY UNIT SELF-DIAGNOSIS RESULTS

---

Check if any DTC is detected in “Self Diagnostic Result” of “E-HUD”.

Is any DTC detected?

YES>>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#).

NO>>

Replace the around view monitor control unit. Refer to [Removal and Installation](#).



## DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detection condition	
U1EC0	57	BCM	Diagnosis condition	—
			Signal (terminal)	—
			Threshold	MAC communication error
			Diagnosis delay time	—

## POSSIBLE CAUSE

- MAC communication error
- Around view monitor control unit
- BCM

## FAIL-SAFE

The following systems are canceled.

- ProPILOT Park

## 1. CHECK DTC PRIORITY

---

If DTC “U1EC0-57” is displayed with DTC “U1327-52” or “U1327-54”, first perform the trouble diagnosis for DTC “U1327-52” or “U1327-54”.

Is DTC “U1327-52” or “U1327-54” detected?

YES >>

Perform diagnosis of applicable. Refer to the following.

- U1327-52: Refer to [DTC Description](#).
- U1327-54: Refer to [DTC Description](#).

NO >>

[GO TO 2.](#)

## 2. CHECK MAC DIAGNOSIS

---

1. Turn the power switch ON.
2. Perform “MAC Diagnosis” mode of “AROUND VIEW MONITOR” using CONSULT.
3. Check if the “U1EC0-57” is detected as the current malfunction in “Self Diagnostic Result” of “AROUND VIEW MONITOR”.

Is DTC “U1EC0-57” detected?

YES >>

Refer to [DTC Diagnosis Procedure](#).

NO-1 >>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2 >>

Confirmation after repair: INSPECTION END