

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2017 NISSAN Primera Sedan OEM Service and Repair Workshop Manual

[Go to manual page](#)

1. CHECK DTC PRIORITY

If DTC “U2376-57” is displayed with DTC “U1327-52” or “U1327-54”, first perform the trouble diagnosis for DTC “U1327-52” or “U1327-54”.

Is DTC “U1327-52” or “U1327-54” detected?

YES >>

Perform diagnosis of applicable. Refer to the following.

- U1327-52: Refer to [DTC Description](#).
- U1327-54: Refer to [DTC Description](#).

NO >>

[GO TO 2.](#)

2. CHECK MAC DIAGNOSIS

1. Turn the power switch ON.
2. Perform “MAC Diagnosis” mode of “AROUND VIEW MONITOR” using CONSULT.
3. Check if the “U2376-57” is detected as the current malfunction in “Self Diagnostic Result” of “AROUND VIEW MONITOR”.

Is DTC “U2376-57” detected?

YES >>

Refer to [DTC Diagnosis Procedure](#).

NO-1 >>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2 >>

Confirmation after repair: INSPECTION END

1. CHECK DTC PRIORITY

If DTC “U2376-57” is displayed with DTC “U1327-52” or “U1327-54”, first perform the trouble diagnosis for DTC “U1327-52” or “U1327-54”.

Is DTC “U1327-52” or “U1327-54” detected?

YES >>

Perform diagnosis of applicable. Refer to the following.

- U1327-52: Refer to [DTC Description](#).
- U1327-54: Refer to [DTC Description](#).

NO >>

[GO TO 2.](#)

2. CHECK MAC DIAGNOSIS

 With CONSULT

Perform “MAC Diagnosis” mode of “AROUND VIEW MONITOR” using CONSULT.

Is DTC “U2376-57” detected with DTC “U1327-52”, “U1327-54”, “U1EC0-57”, “U1EC1-57”, “U1ECE-57”, “U1ED6-57”, “U1ED8-57”, “U2143-57”, “U214F-57”, “U2152-57”, “U2165-57” and “U2176-57” at the same time?

YES (all DTC codes are detected at the same time)>>

Replace the around view monitor control unit. Refer to [Removal and Installation](#).

NO (all DTC codes are not detected at the same time)>>

[GO TO 3.](#)

3. PERFORM DIAGNOSIS OF CAN COMMUNICATION CIRCUIT

Perform diagnosis of CAN communication circuit. Refer to [Trouble Diagnosis Flow Chart](#).

>>

INSPECTION END

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detection condition	
C21F2	04	ABS actuator and electric unit	Diagnosis condition	Vehicle: READY
			Signal (terminal)	VDC/TCS/ABS malfunction signal
			Threshold	If a malfunction occurs in the VDC/TCS/ABS system
			Diagnosis delay time	60 seconds or more

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit)
- Around view monitor control unit

FAIL-SAFE

The following systems are canceled.

- Vehicle-to-vehicle distance control mode
- Lane keep function*1
- Lane keep function*2
- Lane change support function
- Overtaking support function
- Route driving support function
- AEB
- RAB
- I-FCW
- I-LI
- I-BSI
- TSR

*1: ProPILOT Assist 2.0 display is green

*2: ProPILOT Assist 2.0 display is blue

1. CHECK DTC PRIORITY

If DTC “C21F2-04” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

2. PERFORM COMPONENT FUNCTION CHECK

1. Set the vehicle to READY.
2. Turn the AEB system ON and wait at least 60 seconds or more
3. Perform “All DTC Reading” with CONSULT.
4. “Check if the “C21F2-04” is detected as the current malfunction in “Self Diagnostic Result” of “AROUND VIEW MONITOR”.

Is “C21F2-04” detected as the current malfunction?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

1. CHECK DTC PRIORITY

If DTC “C21F2-04” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in “Self Diagnostic Result” of “ABS”.

Is any DTC detected?

YES>>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#).

NO>>

Replace the around view monitor control unit. Refer to [Removal and Installation](#).

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detection condition	
U1DA7	82	ABS actuator and electric unit (control unit)	Diagnosis condition	Vehicle: READY
			Signal (terminal)	—
			Threshold	If around view monitor control unit detects an error signal that is received from ABS actuator and electric unit (control unit) via CAN communication
			Diagnosis delay time	1 second or less

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit)
- Around view monitor control unit

FAIL-SAFE

The following systems are canceled.

- Vehicle-to-vehicle distance control mode
- Lane keep function*¹
- Lane keep function*²
- Lane change support function
- Overtaking support function
- Route driving support function
- AEB
- RAB
- I-FCW
- I-LI
- I-BSI
- TSR

*1: ProPILOT Assist 2.0 display is green

*2: ProPILOT Assist 2.0 display is blue

1. CHECK DTC PRIORITY

If DTC “U1DA7-82” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Set the vehicle to READY.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “U1DA7-82” is detected as the current malfunction in “Self Diagnostic Result” of “AROUND VIEW MONITOR”.

Is “U1DA7-82” detected as the current malfunction?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

1. CHECK DTC PRIORITY

If DTC “U1DA7-82” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO>>

[GO TO 2.](#)

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS RESULTS

Check if any DTC is detected in “Self Diagnostic Result” of “ABS”.

Is any DTC detected?

YES>>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#).

NO>>

Replace the around view monitor control unit. Refer to [Removal and Installation](#).

DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detection condition	
U1DA7	83	ABS actuator and electric unit (control unit)	Diagnosis condition	Vehicle: READY
			Signal (terminal)	—
			Threshold	If around view monitor control unit detects an error signal that is received from ABS actuator and electric unit (control unit) via CAN communication
			Diagnosis delay time	1 second or less

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit)
- Around view monitor control unit

FAIL-SAFE

The following systems are canceled.

- Vehicle-to-vehicle distance control mode
- Lane keep function*1
- Lane keep function*2
- Lane change support function
- Overtaking support function
- Route driving support function
- AEB
- RAB
- I-FCW
- I-LI
- I-BSI
- TSR

*1: ProPILOT Assist 2.0 display is green

*2: ProPILOT Assist 2.0 display is blue