

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2017 NISSAN Terrano OEM Service and Repair Workshop Manual

[Go to manual page](#)

CONSULT Function (LASER/RADAR)

SIEMD-7106232

Refer to [CONSULT Function \(LASER/RADAR\)](#).

Sample

CONSULT Function (LANE CAMERA)

Refer to [CONSULT Function \(LANE CAMERA\)](#).

Sample

CONSULT Function (ICC/ADAS 2)

SIEMD-7106222


Refer to [CONSULT Function \(ICC/ADAS 2\)](#).

Sample

REMOVAL


1 Remove instrument lower cover LH. Refer to [Removal & Installation](#).

2 Remove switch panel fixing screws (A).

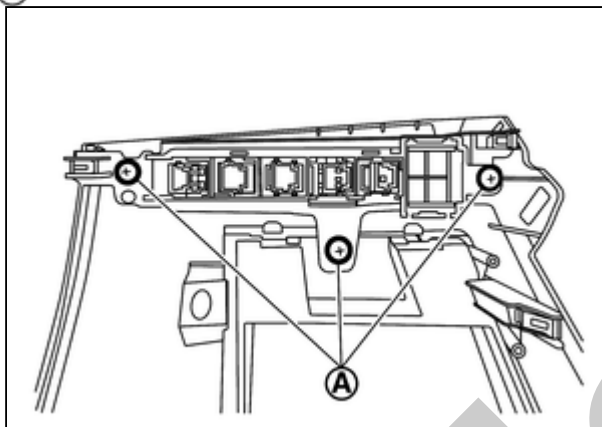


RPR-001932209-05-000389915

3 Remove the switch panel (A).

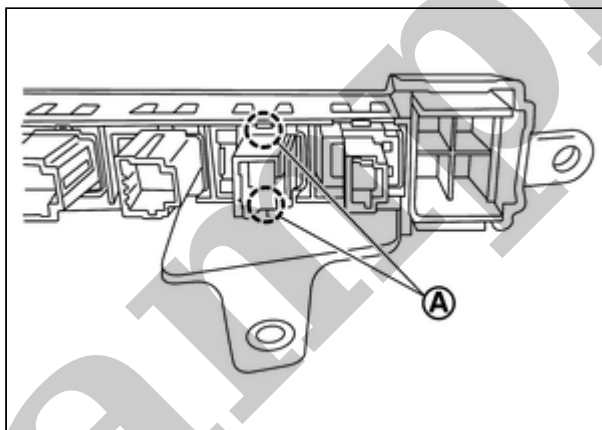

RPR-001932209-04-000389916

4 Push the steering assist switch in the direction of the arrow and remove it.

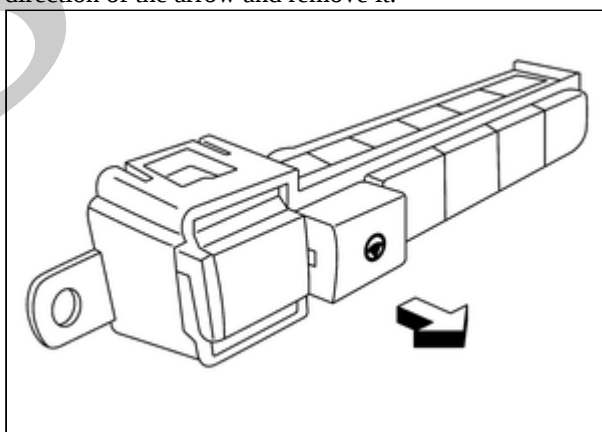

RPR-001932209-03-000389917

INSTALLATION

Installation is in the reverse order of removal.

Exploded View

RDE-001897992

ProPILOT Assist steering switch is integrated in the steering switch. Refer to [STEERING WHEEL : Removal & Installation](#).



NOTE:

Always remove ProPILOT Assist steering switch together with steering wheel.

Sample

List of ECU Reference

SIEMD-7106224

ECU	Reference
Distance sensor	Reference Value
	Fail-safe (Distance Sensor)
	DTC Inspection Priority Chart
	DTC Index

Sample

List of ECU Reference

SIEMD-7106213

ECU	Reference
Front camera unit	Reference Value
	Fail-safe (Front Camera Unit)
	DTC Inspection Priority Chart
	DTC Index

Sample

List of ECU Reference

SIEMD-7106236

ECU	Reference
ADAS control unit 2	Reference Value
	Fail-safe (ADAS Control Unit 2)
	DTC Inspection Priority Chart
	DTC Index

Sample

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

RDE-001899085

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collisions.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" sections of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition/power switch ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always place the ignition/power switch in the OFF position, disconnect the 12V battery or batteries, and wait at least 3 minutes before performing any service.