 


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2018 Ford E-450 Super Duty Service and Repair Manual

[Go to manual page](#)

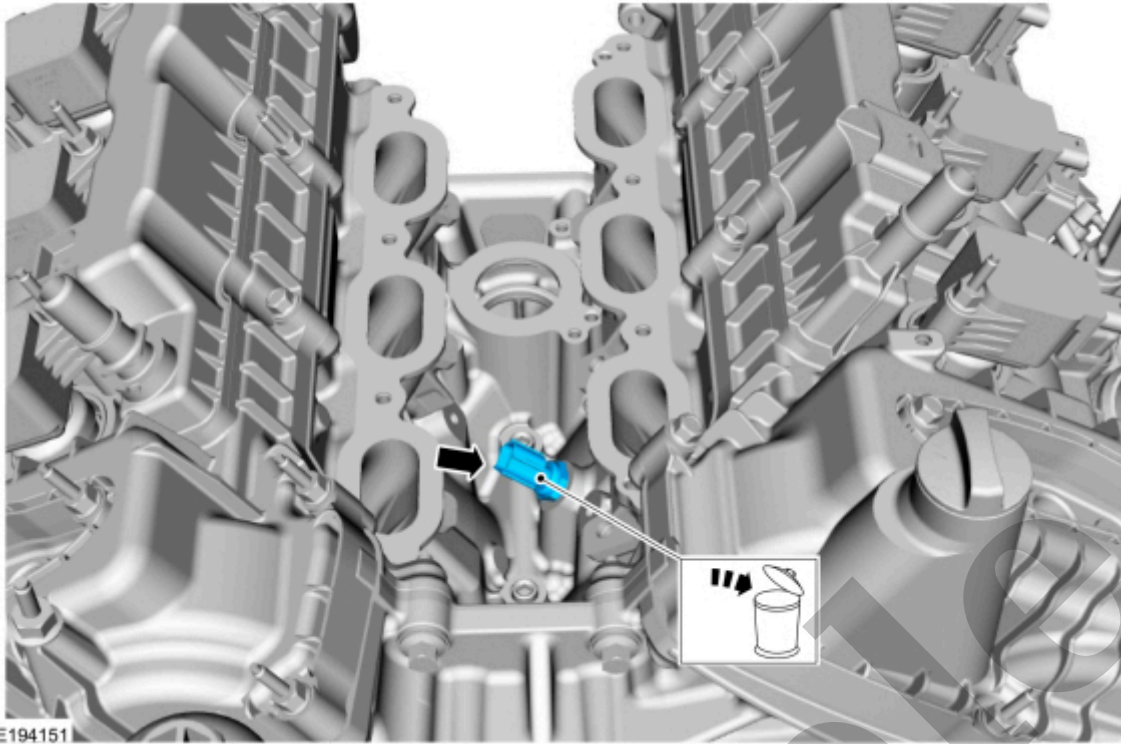 


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation


1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

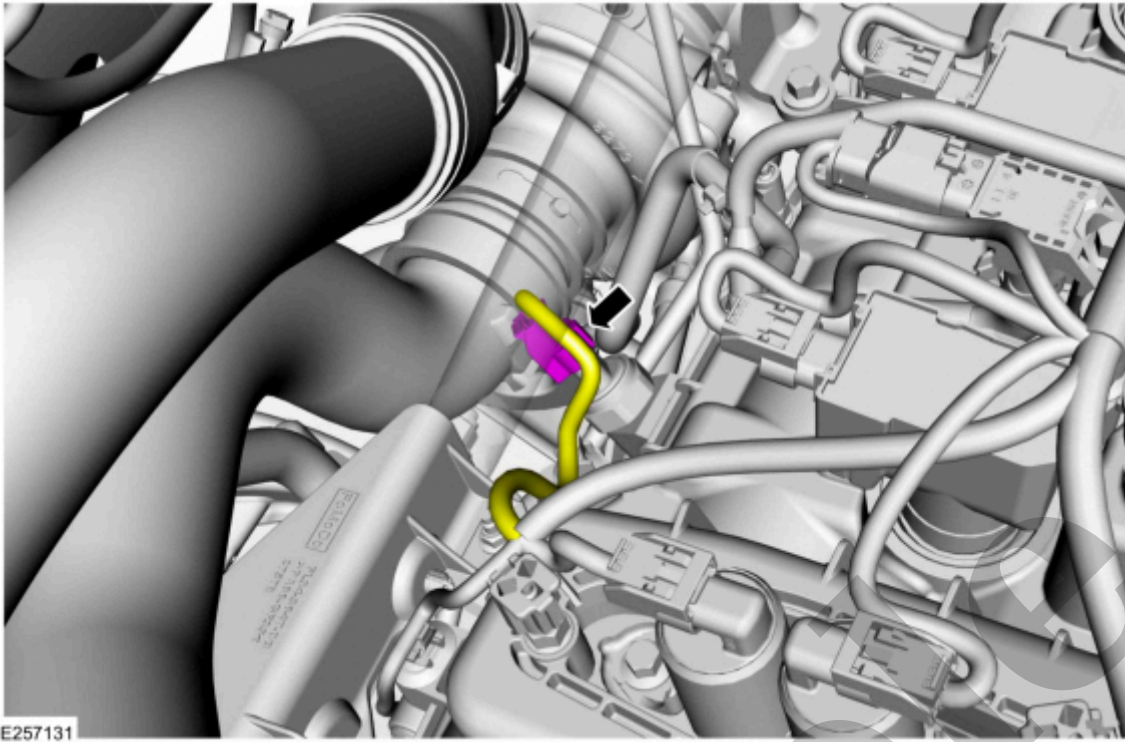

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

 2. Remove the EOP (engine oil pressure) sensor.

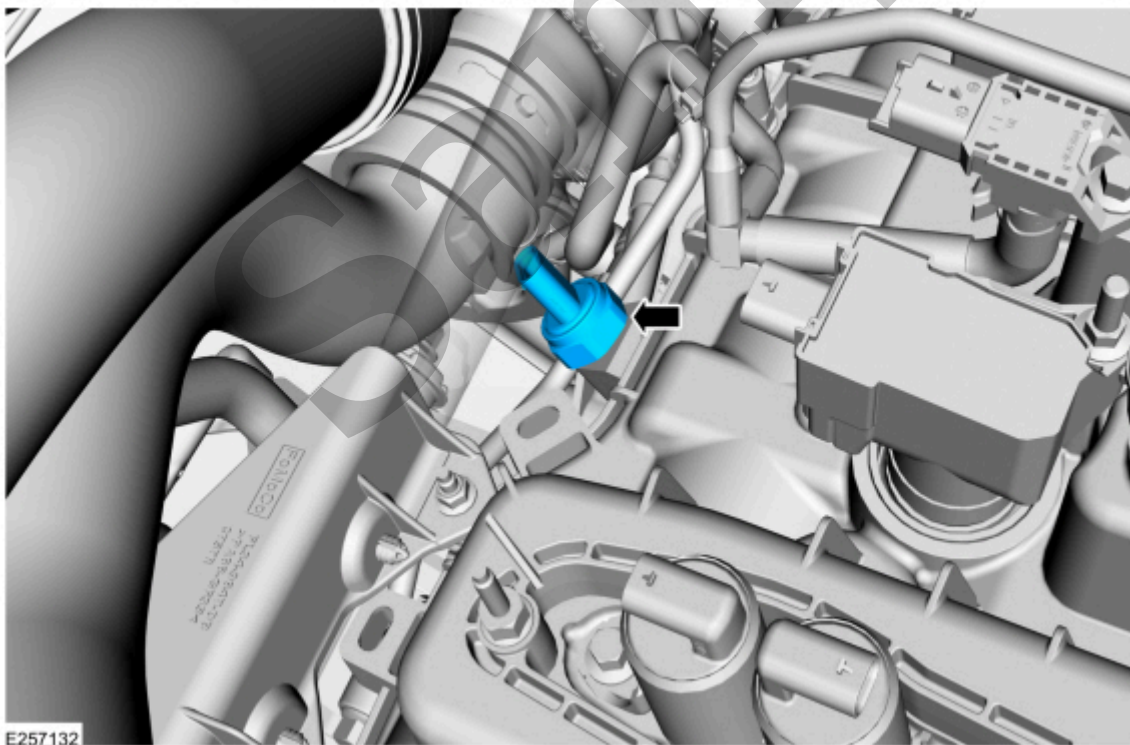

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation



Exhaust Pressure Sensor

| | |
|---|--|
| 303-14A Electronic Engine Controls - 2.7L EcoBoost (238kW/324PS) | 2022 F-150 |
| Removal and Installation | Procedure revision date: 01/26/2021 |

Exhaust Pressure Sensor

Removal

NOTE

Removal steps in this procedure may contain installation details.

 
1. Disconnect the electrical connector.

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample

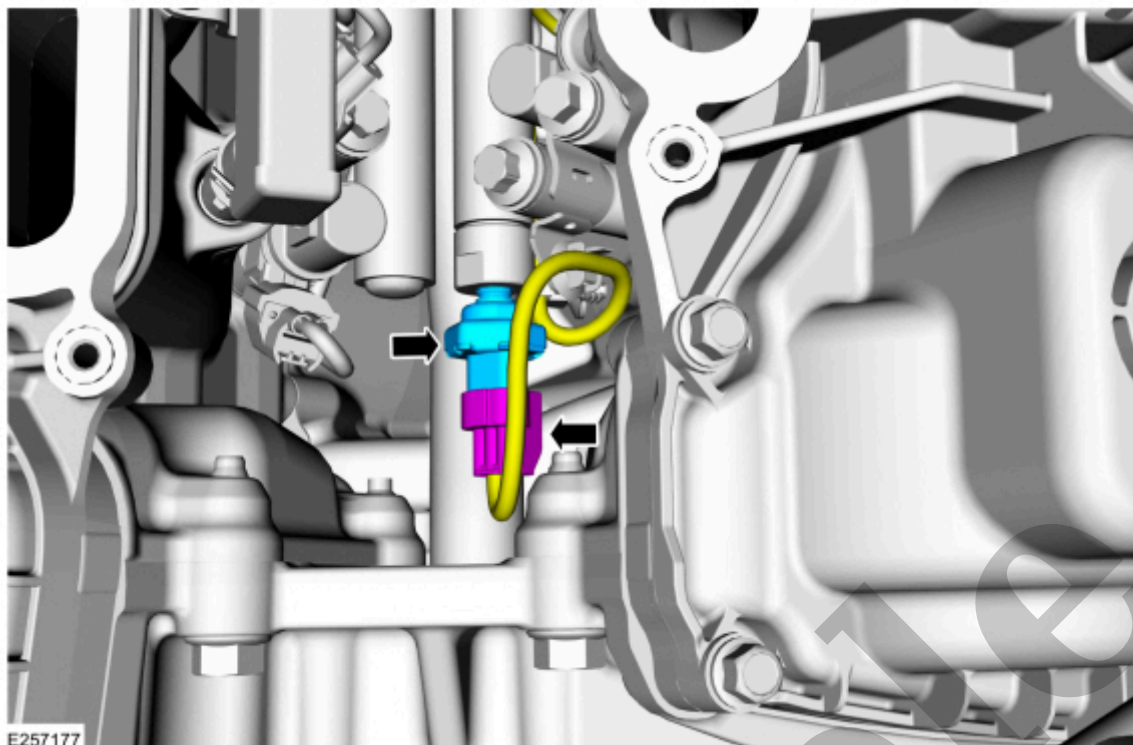

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

 
Installation

1. NOTE

Lubricate the thread area of the new FRP (fuel rail pressure) sensor with clean engine oil prior to installation.

To install, reverse the removal procedure.

Copyright © Ford Motor Company

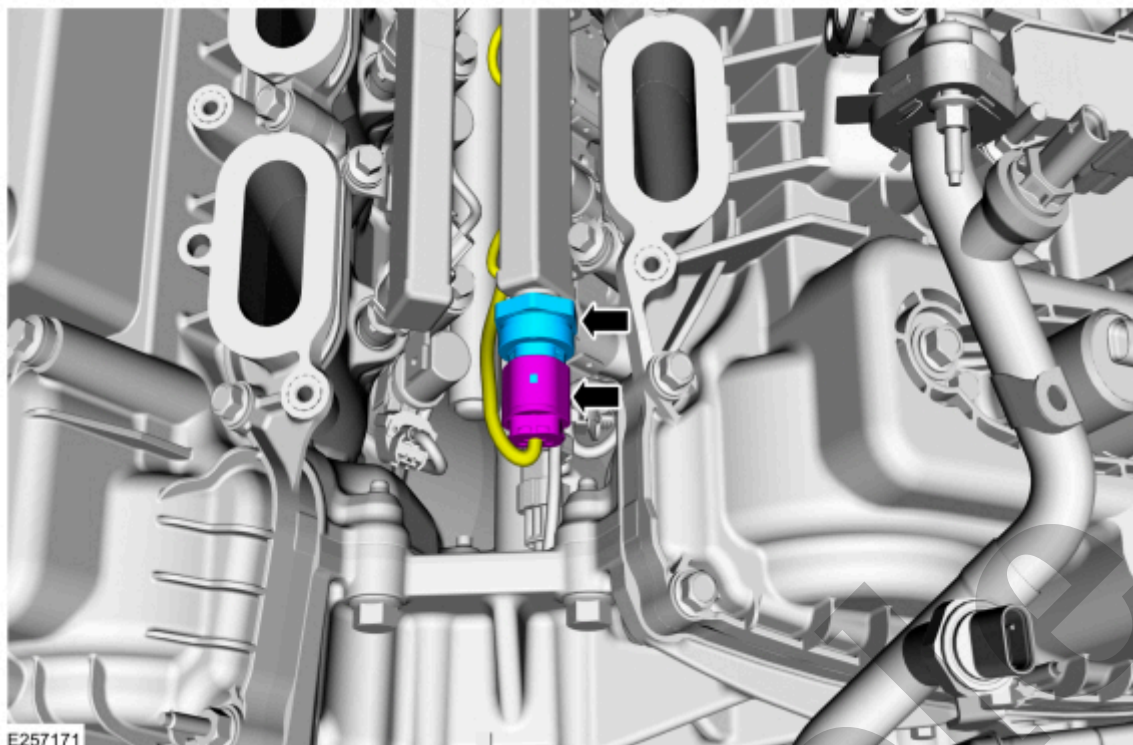


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

 Copyright © Ford Motor Company

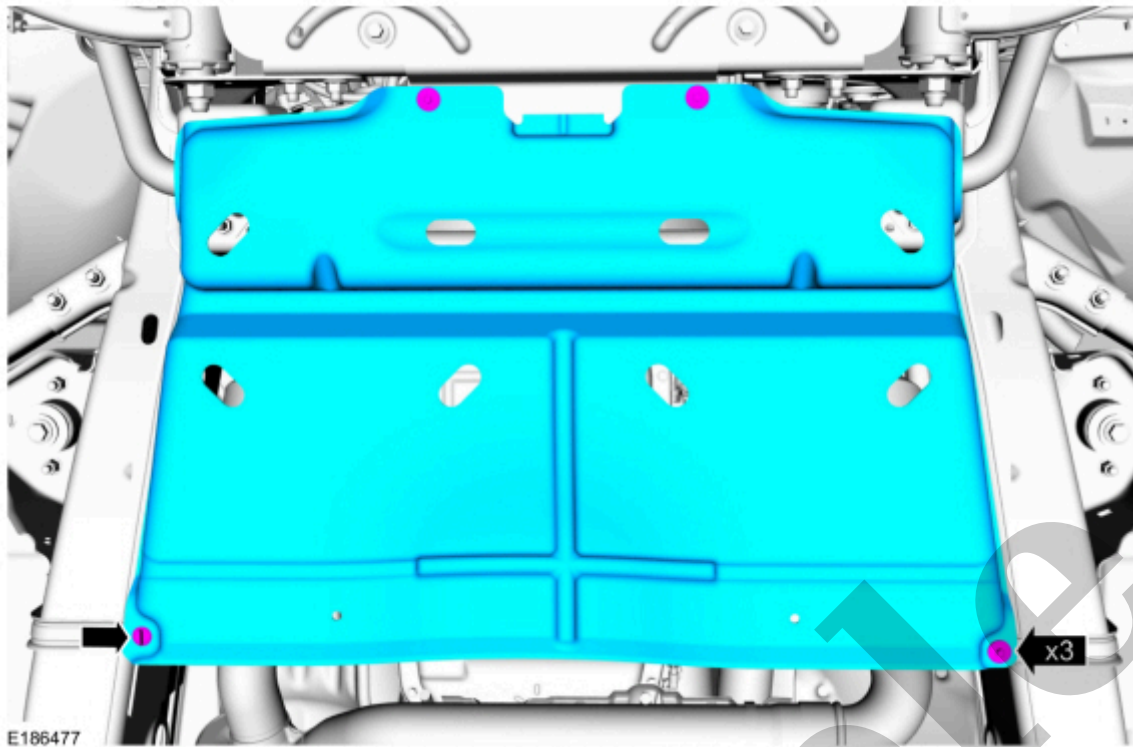


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Heated Oxygen Bank 1 Sensor 1

3. Disconnect the electrical connector and harness retainer. Apply penetrating oil to sensor, using the special tool remove the HO2S (heated oxygen sensor) .

Use Special Service Tool : 303-476 (T94P-9472-A) Socket, Exhaust Gas Oxygen Sensor

 Material : Motorcraft® Penetrating and Lock Lubricant / XL-1

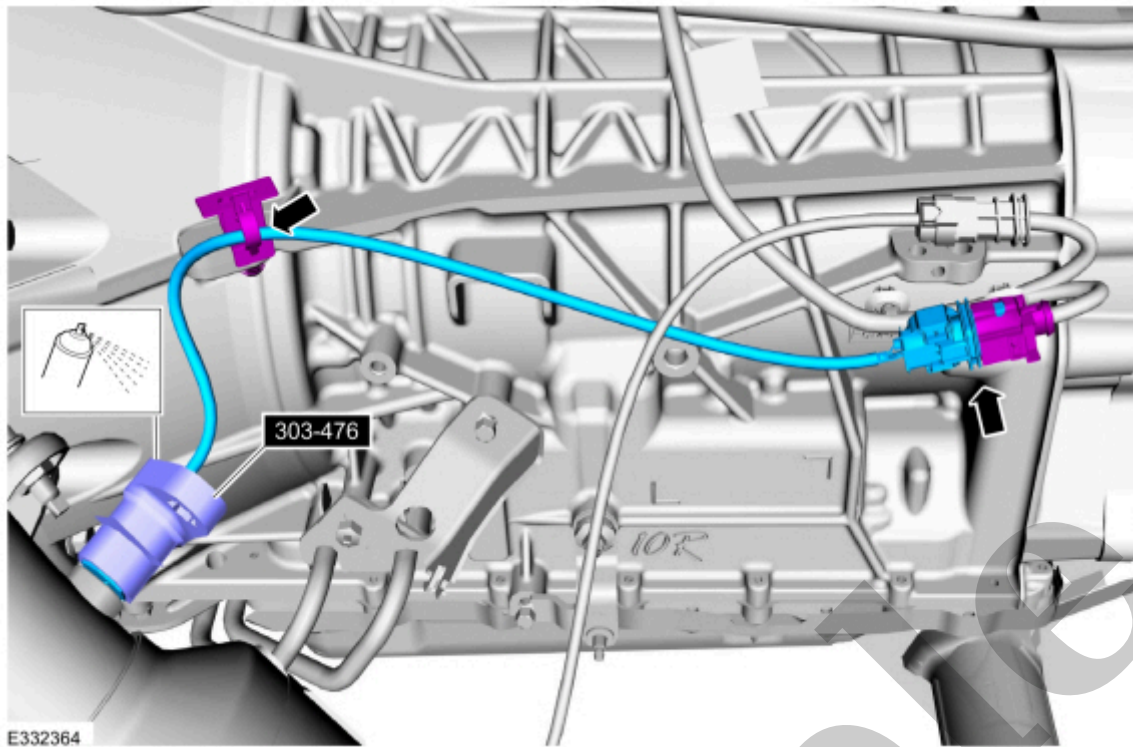

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

 
Heated Oxygen Bank 2 Sensor 1

1. Apply anti-seize to thread of sensor, using special tool install the HO2S (heated oxygen sensor) . Connect the electrical connector and harness retainer

Use Special Service Tool : 303-476 (T94P-9472-A) Socket, Exhaust Gas Oxygen Sensor

Material : Motorcraft® High Temperature Nickel Anti-Seize Lubricant / XL-2

Torque : 35 lb.ft (48 Nm)

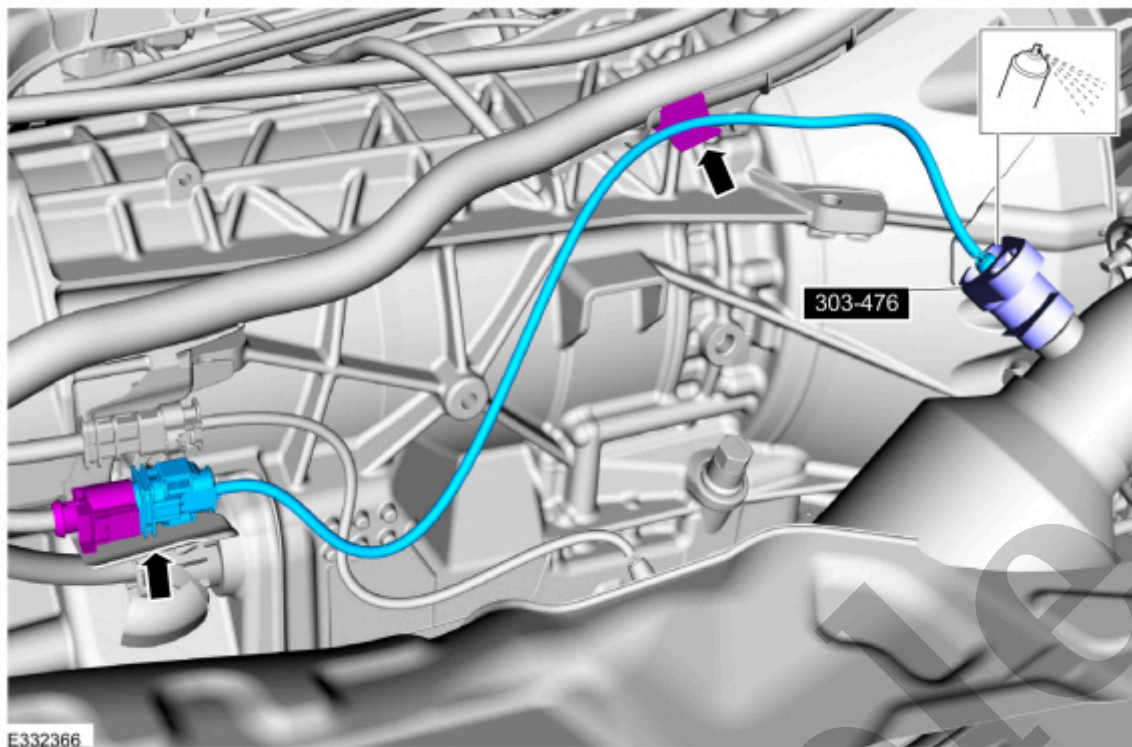

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

All sensors

3. If equipped, install the underbody shield.

Torque : 71 lb.in (8 Nm)

