

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2018 FORD EDGE OEM Service and Repair Workshop Manual

[Go to manual page](#)

Driver seat belt buckle status	GWM (gateway module A)	HS-CAN4 (high-speed controller area network 4)	TCU (telematic control unit module)
Driver set temperature	APIM (SYNC module)	HS-CAN3 (high-speed controller area network 3)	GWM (gateway module A)
Driver set temperature	GWM (gateway module A)	MS-CAN (medium speed-controller area network) 1	HVAC (heating, ventilation and air conditioning) module
DSP (audio digital signal processing module) chime request	DSP (audio digital signal processing module)	HS-CAN3 (high-speed controller area network 3)	- ACM (audio front control module) - APIM (SYNC module)
DSP (audio digital signal processing module) volume status	DSP (audio digital signal processing module)	HS-CAN3 (high-speed controller area network 3)	APIM (SYNC module)
Easy entry/easy exit request	DSM (driver front seat module)	MS-CAN (medium speed-controller area network) 1	- DDM (driver door module) - PDM (passenger door module) - SCMG (driver multi-contour seat module) - SCMH (passenger multi-contour seat module)
eCall confirmation	APIM (SYNC module)	HS-CAN3 (high-speed controller area network 3)	GWM (gateway module A)

Emergency call fault display	GWM (gateway module A)	HS-CAN3 (high-speed controller area network 3)	• APIM (SYNC module)
Emergency call mute status	TCU (telematic control unit module)	HS-CAN4 (high-speed controller area network 4)	• GWM (gateway module A)
Emergency call mute status	GWM (gateway module A)	HS-CAN3 (high-speed controller area network 3)	• APIM (SYNC module) • DSP (audio digital signal processing module)
Emergency call mute status	GWM (gateway module A)	FD-CAN (Flexible Data Rate Controller Area Network)	• SOBDMC (secondary on-board diagnostic control module C)
Engine coolant temperature	PCM (powertrain control module)	FD-CAN (Flexible Data Rate Controller Area Network)	• SOBDMC (secondary on-board diagnostic control module C) • TCM (transmission control module) • VDM (vehicle dynamics control module) • GWM (gateway module A)
Engine coolant temperature	GWM (gateway module A)	HS-CAN1 (high-speed controller area network 1)	• BCM (body control module)
Engine coolant temperature	GWM (gateway module A)	HS-CAN2 (high-speed controller area network 2)	• GSM (gear shift module) • OCS (occupant classification system) module

		controller area network 1)	• BCM (body control module) • BECM (battery energy control module) • DCDC (direct current/direct current converter control module)
Engine idle shutdown request	GWM (gateway module A)	HS-CAN2 (high-speed controller area network 2)	• GSM (gear shift module) • RCM (restraints control module) • SASM (steering angle sensor module)
Engine idle shutdown request	GWM (gateway module A)	MS-CAN (medium speed-controller area network) 2	• RGTM (rear gate trunk module)
Engine idle shutdown status	PCM (powertrain control module)	FD-CAN (Flexible Data Rate Controller Area Network)	• SOBDMC (secondary on-board diagnostic control module C) • TCM (transmission control module) • GWM (gateway module A)
Engine idle shutdown status	GWM (gateway module A)	HS-CAN1 (high-speed controller area network 1)	• BCM (body control module)
Engine idle shutdown status	GWM (gateway module A)	HS-CAN3 (high-speed controller area network 3)	• IPC (instrument panel cluster)

			• TCM (transmission control module) • VDM (vehicle dynamics control module) • GWM (gateway module A)
Engine status	GWM (gateway module A)	HS-CAN1 (high-speed controller area network 1)	• ACCM (air conditioning control module) • BCM (body control module) • BCMC (body control module C) [BJB (battery junction box)] • BECM (battery energy control module) • DCDC (direct current/direct current converter control module) • PACM (pedestrian alert control module)
Engine status	GWM (gateway module A)	HS-CAN2 (high-speed controller area network 2)	• GSM (gear shift module) • HCM (headlamp control module) • OCS (occupant classification system) module • RCM (restraints control module) • SASM (steering angle sensor module) • SCCM (steering column control module)

EPAS (electronic power assist steering) failure	PSCM (power steering control module)	FD-CAN (Flexible Data Rate Controller Area Network)	• ABS (anti-lock brake system) module • IPMA (image processing module A) • PCM (powertrain control module) • GWM (gateway module A)
EPAS (electronic power assist steering) failure	GWM (gateway module A)	HS-CAN1 (high-speed controller area network 1)	• BCM (body control module)
EPAS (electronic power assist steering) failure	GWM (gateway module A)	HS-CAN2 (high-speed controller area network 2)	• RCM (restraints control module) • SASM (steering angle sensor module)
EPAS (electronic power assist steering) failure	GWM (gateway module A)	HS-CAN3 (high-speed controller area network 3)	• IPC (instrument panel cluster)
Factory mode	BCM (body control module)	HS-CAN1 (high-speed controller area network 1)	• BCMC (body control module C) [BJB (battery junction box)] • PACM (pedestrian alert control module) • GWM (gateway module A)
Factory mode	GWM (gateway module A)	FD-CAN (Flexible Data Rate Controller Area Network)	• ABS (anti-lock brake system) module • IPMA (image processing module A) • PCM (powertrain control module)

			module • PDM (passenger door module) • RTM (radio transceiver module)
Factory mode	GWM (gateway module A)	MS-CAN (medium speed-controller area network) 2	• RGTM (rear gate trunk module)
Folder/track information request	APIM (SYNC module)	HS-CAN3 (high-speed controller area network 3)	• ACM (audio front control module)
Front park aid chime request	IPMA (image processing module A)	FD-CAN (Flexible Data Rate Controller Area Network)	• ABS (anti-lock brake system) module • PSCM (power steering control module) • GWM (gateway module A)
Front park aid chime request	GWM (gateway module A)	HS-CAN3 (high-speed controller area network 3)	• APIM (SYNC module) • IPC (instrument panel cluster)
Front park aid status	IPMA (image processing module A)	FD-CAN (Flexible Data Rate Controller Area Network)	• ABS (anti-lock brake system) module • PCM (powertrain control module) • PSCM (power steering control module) • TCM (transmission control module)

			converter control module) • PACM (pedestrian alert control module)
Gear lever position	GWM (gateway module A)	HS-CAN2 (high-speed controller area network 2)	• GSM (gear shift module) • HCM (headlamp control module) • RCM (restraints control module) • SASM (steering angle sensor module) • SCCM (steering column control module)
Gear lever position	GWM (gateway module A)	HS-CAN3 (high-speed controller area network 3)	• ACM (audio front control module) • APIM (SYNC module) • IPC (instrument panel cluster) • TRM (trailer module) / TBM (trailer brake control module)
Gear lever position	GWM (gateway module A)	HS-CAN4 (high-speed controller area network 4)	• TCU (telematic control unit module)
Global clock	BCM (body control module)	HS-CAN1 (high-speed controller area network 1)	• GWM (gateway module A)
Global clock	GWM (gateway module A)	FD-CAN (Flexible Data Rate Controller Area Network)	• Driver Status Monitor Camera Module [CMR (Camera Module - Rear)] • IPMA (image processing module A)

GPS (global positioning system) data	GWM (gateway module A)	FD-CAN (Flexible Data Rate Controller Area Network)	• IPMA (image processing module A) • SOBDMC (secondary on-board diagnostic control module C)
Grill shutter position command	PCM (powertrain control module)	FD-CAN (Flexible Data Rate Controller Area Network)	• SOBDMC (secondary on-board diagnostic control module C) • TCM (transmission control module) • GWM (gateway module A)
Grill shutter position command	GWM (gateway module A)	HS-CAN1 (high-speed controller area network 1)	• ACCM (air conditioning control module) • BCM (body control module) • BECM (battery energy control module) • DCACA (Direct Current/Alternating Current Converter Module A) • DCDC (direct current/direct current converter control module)
Grill shutter position command	GWM (gateway module A)	HS-CAN3 (high-speed controller area network 3)	• APIM (SYNC module) • IPC (instrument panel cluster)
Heated steering wheel command status	HVAC (heating, ventilation and air conditioning) module	MS-CAN (medium speed-	• GWM (gateway module A)

			• TCM (transmission control module) • VDM (vehicle dynamics control module) • GWM (gateway module A)
Hill start assist status	GWM (gateway module A)	HS-CAN2 (high-speed controller area network 2)	• HCM (headlamp control module) • RCM (restraints control module)
Hill start assist status	GWM (gateway module A)	HS-CAN3 (high-speed controller area network 3)	• APIM (SYNC module) • IPC (instrument panel cluster) • TRM (trailer module) / TBM (trailer brake control module)
HMI mode status	APIM (SYNC module)	HS-CAN3 (high-speed controller area network 3)	• DSP (audio digital signal processing module) • IPC (instrument panel cluster) • WACM (wireless accessory charging module)
HVAC (heating, ventilation and air conditioning) A/C (air conditioning) request	HVAC (heating, ventilation and air conditioning) module	MS-CAN (medium speed-controller area network) 1	• SCMG (driver multi-contour seat module) • SCMH (passenger multi-contour seat module) • GWM (gateway module A)
HVAC (heating, ventilation and air conditioning) A/C (air conditioning) request	GWM (gateway module A)	FD-CAN (Flexible Data Rate Controller Area Network)	• PCM (powertrain control module) • SOBDMC (secondary on-board diagnostic control