


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2018 FORD Fiesta ST OEM Service and Repair Workshop Manual

[Go to manual page](#)

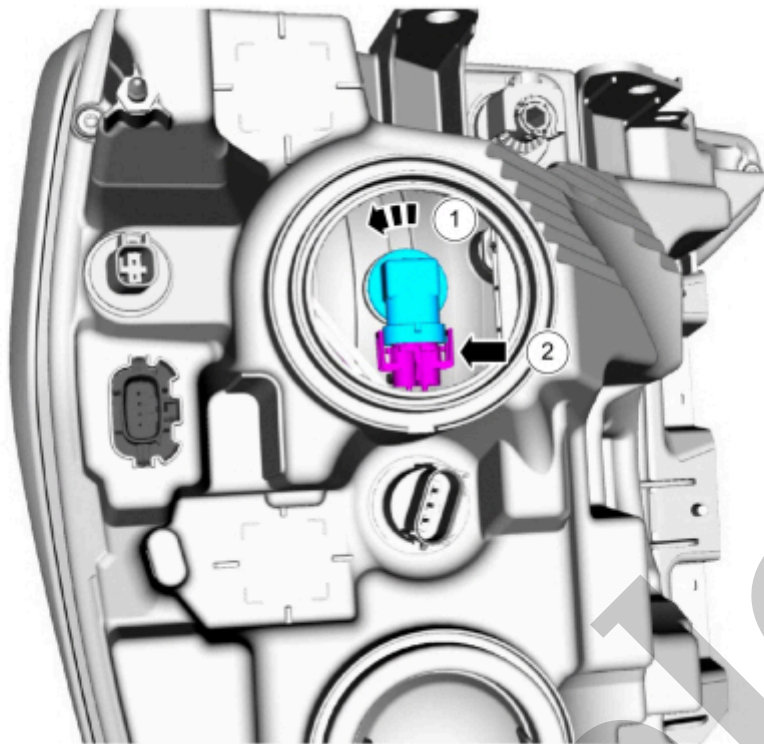

E336790

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. **NOTE**


The headlamp assembly is shown removed for clarity.

Remove the high beam bulb cover.

The headlamp assembly is shown removed for clarity.

Remove the high beam headlamp bulb.

1. Rotate the high beam headlamp bulb counter clock-wise.
2. Disconnect the high beam headlamp bulb electrical connector.

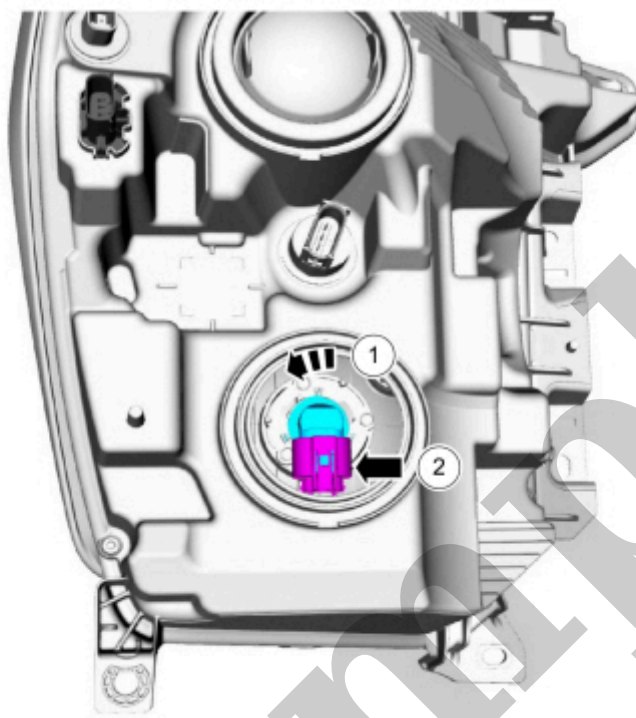

E336792


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.


Copyright © Ford Motor Company

Torque : 22 lb.in (2.5 Nm)

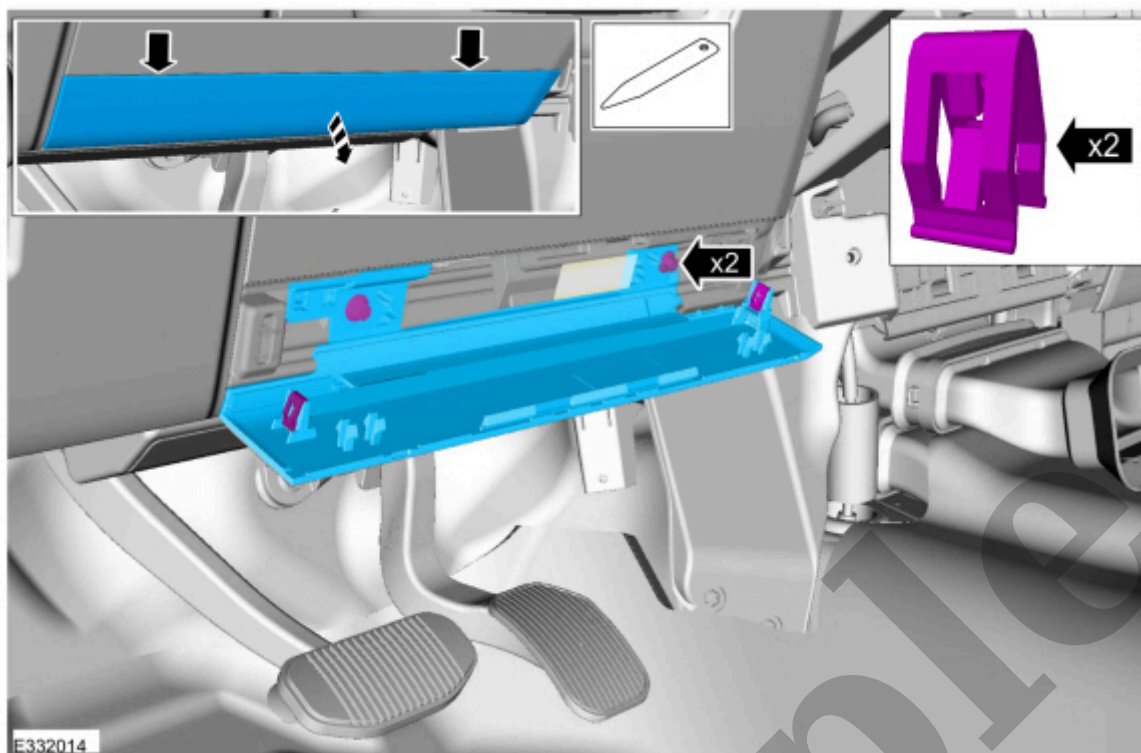

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Release the clips and remove the lower steering column trim panel.

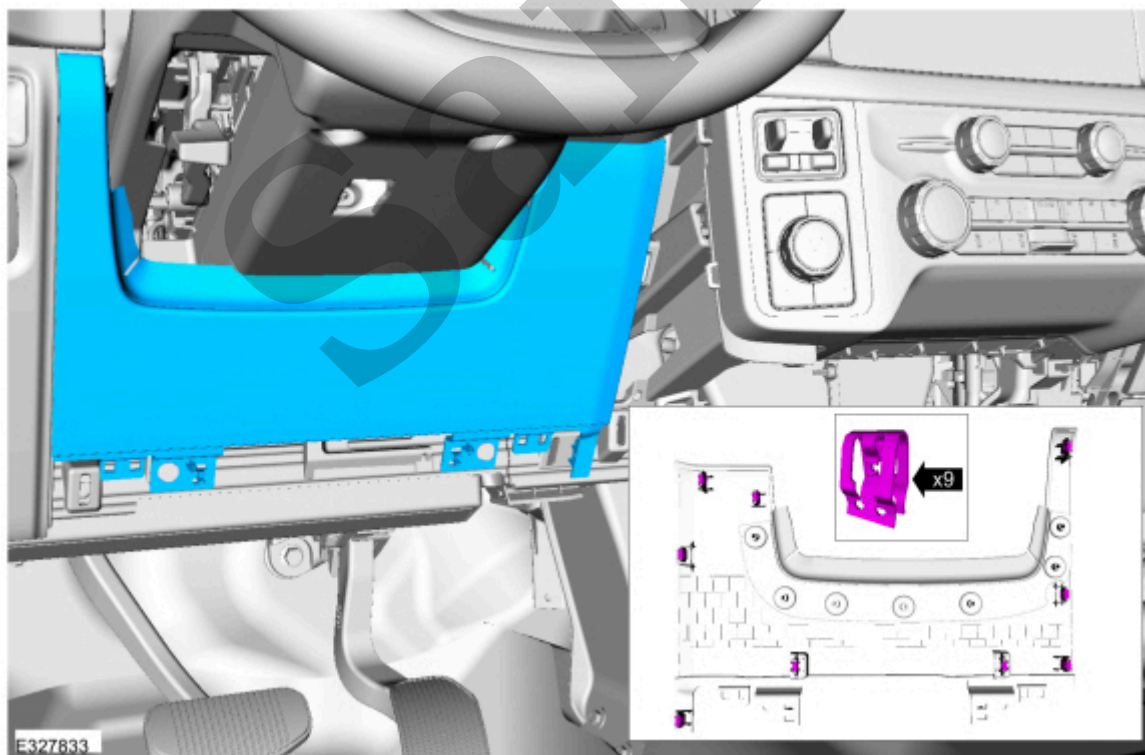


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.
2. Using a diagnostic scan tool, complete the PMI (programmable module installation) process for the HCM (headlamp control module) following the on-screen instructions.

Refer to: [Module Configuration - System Operation and Component Description](#)(418-01A Module Configuration, Description and Operation).

Copyright © Ford Motor Company

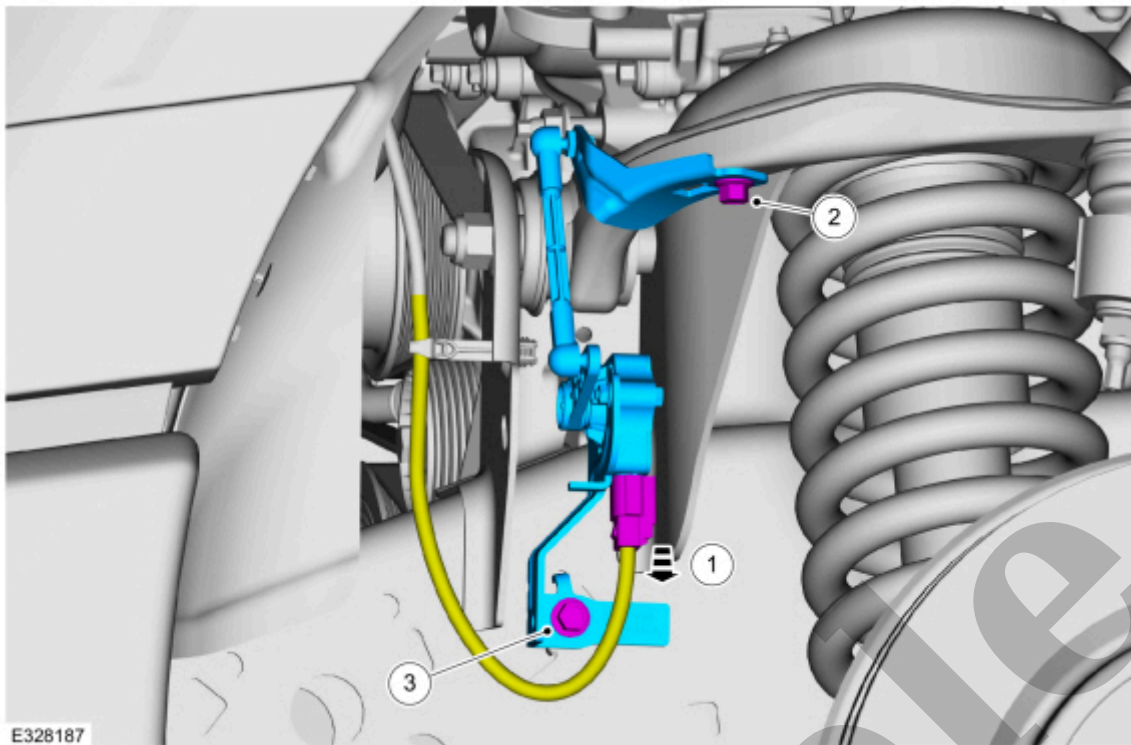

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Front suspension mounted - Raptor

3. Remove the LH (left-hand) front tire and wheel.

Refer to: [Wheel and Tire](#)(204-04A Wheels and Tires, Removal and Installation).

4. NOTE

Note the position of the components before removal.

1. Disconnect the height sensor electrical connector.
2. Remove the bolt and detach the height sensor arm from the upper control arm.


Torque : 177 lb.in (20 Nm)

3. Remove the height sensor bracket bolt and remove the height sensor.

Torque : 177 lb.in (20 Nm)

3. Remove the height sensor bracket bolt and remove the height sensor.

Torque : 97 lb.in (11 Nm)

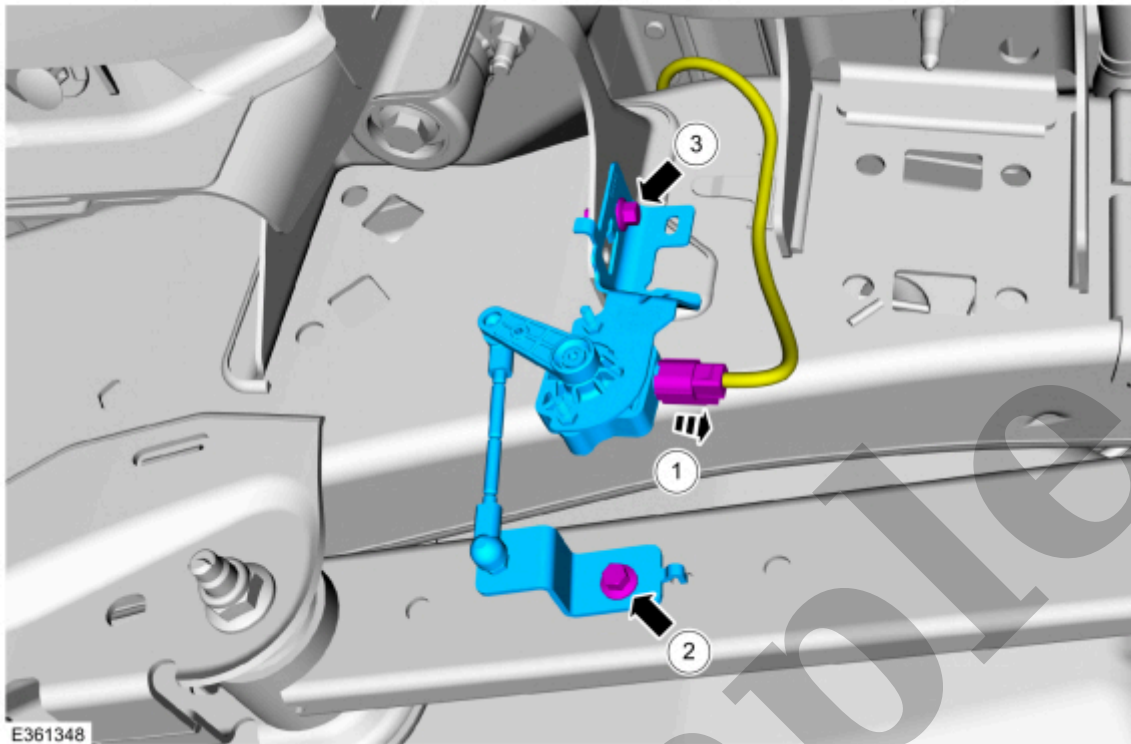

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation


1. NOTICE

The linkage must be in a vertical position after installation. Failure to follow these instructions may result in component damage and/or failure.

To install, reverse the removal procedure.


2. Calibrate the suspension height sensor. Connect the scan tool and carry out the Ride Height Calibration routine, following the scan tool directions.

Copyright © Ford Motor Company

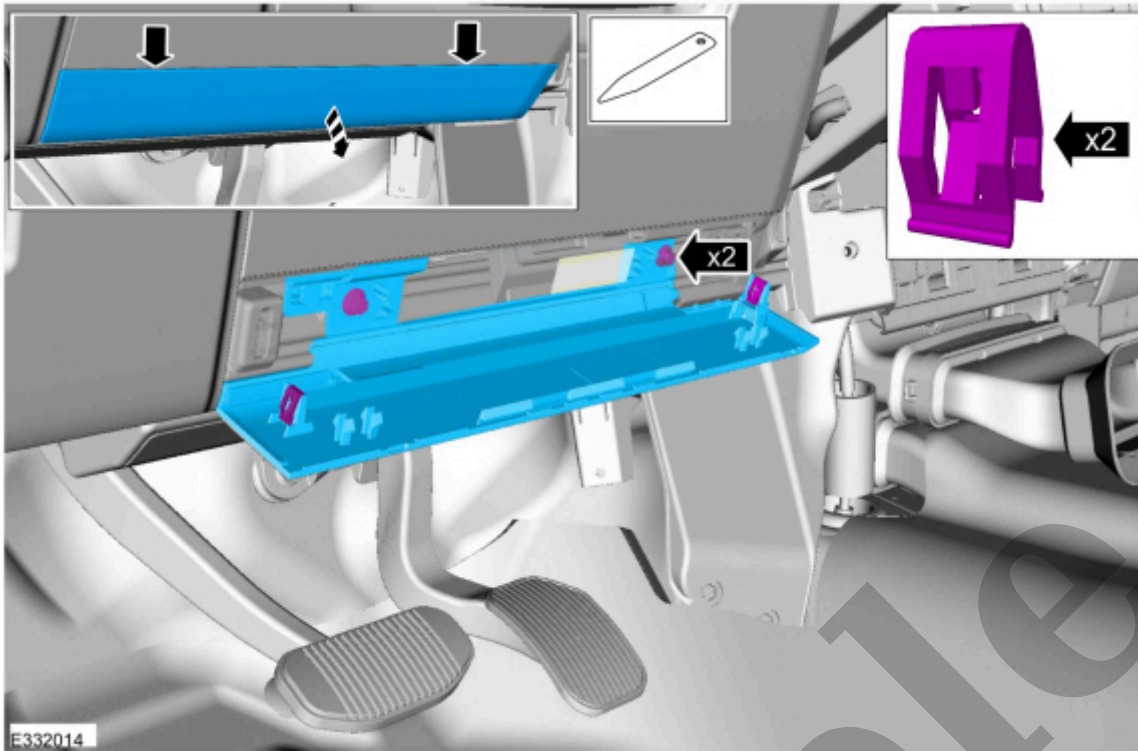

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Release the clips and remove the lower steering column trim panel.

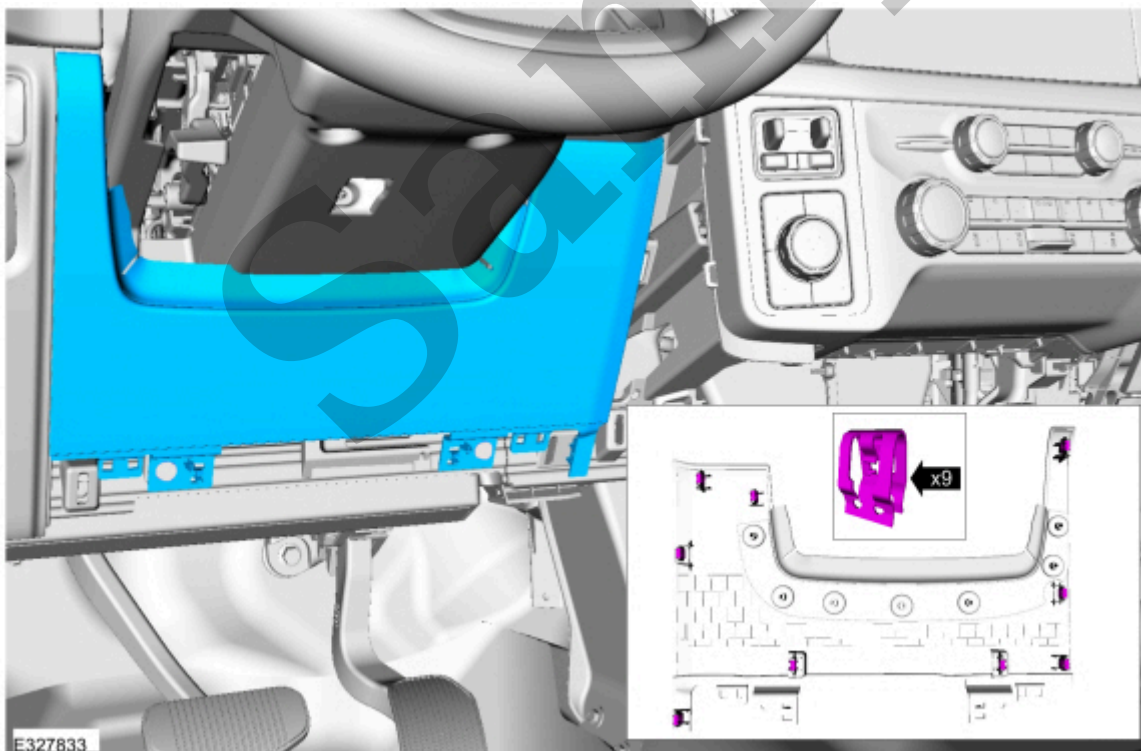


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Release the clips and remove the LH (left-hand) instrument panel trim panel.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Remove the two bolts and the LH (left-hand) register.

Torque : 22 lb.in (2.5 Nm)

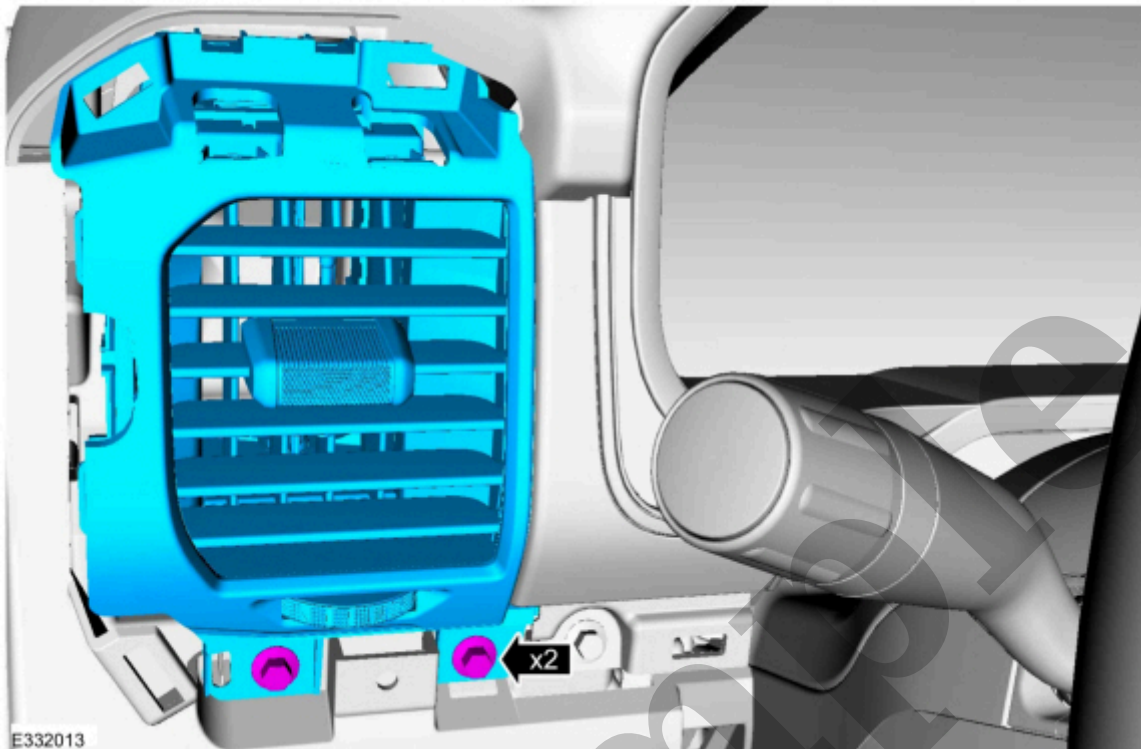

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Remove the bolt and gently release the lower dash panel clips and position out the panel enough to access the rear of the headlamp switch.

Torque : 22 lb.in (2.5 Nm)

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample