


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2018 FORD Focus ST Estate OEM Service and Repair Workshop Manual


[Go to manual page](#)

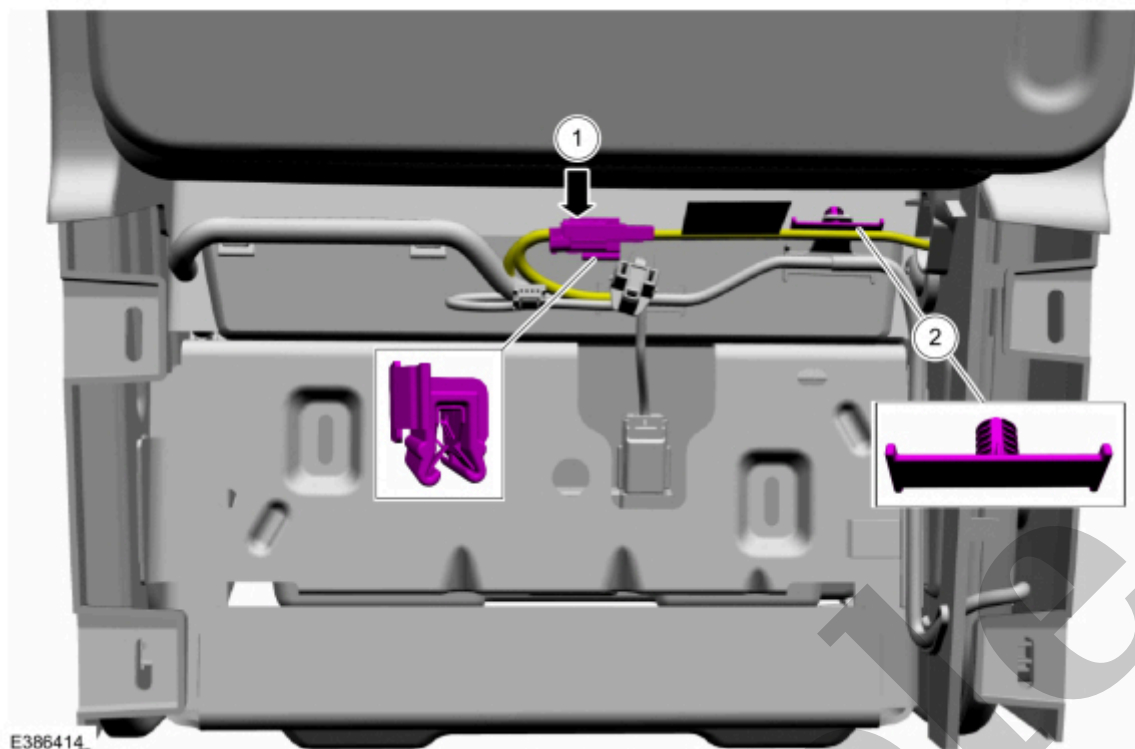

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. If equipped.


1. Disconnect the PATS (passive anti-theft system) center antenna.
2. Detach the front center seat wiring harness retainer.
3. Detach the front center seat wiring harness retainer.
4. Detach the front center seat wiring harness retainers.

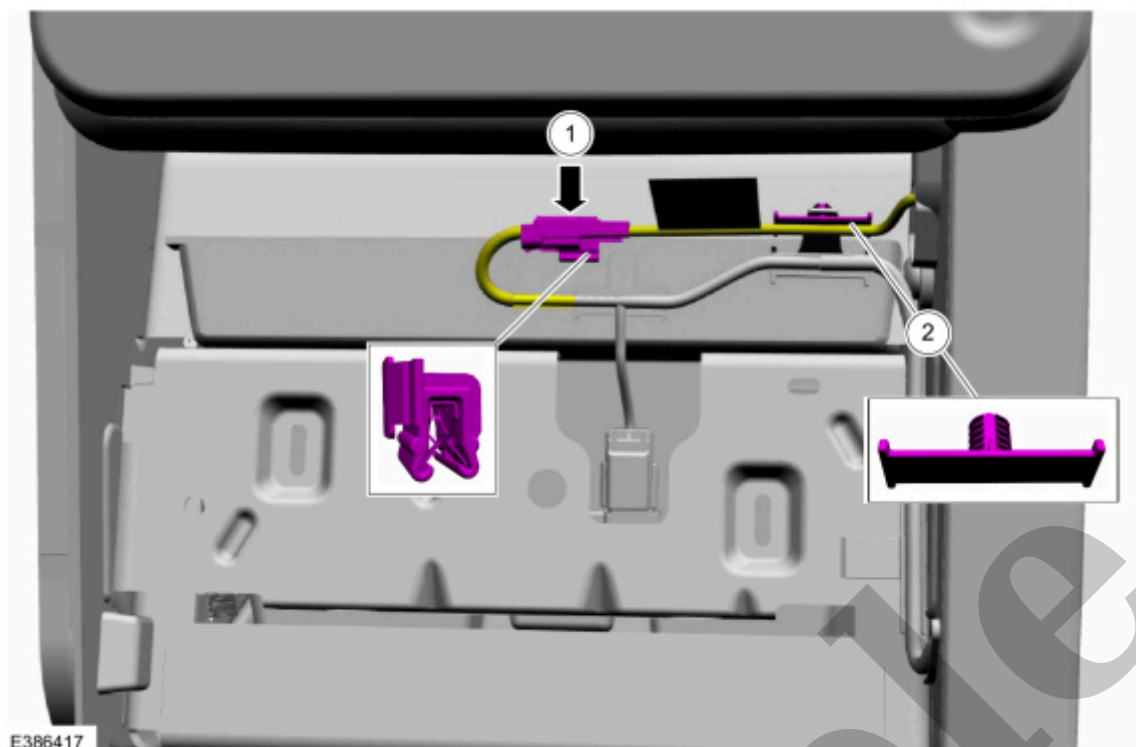

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. If equipped.

1. Disconnect the PATS (passive anti-theft system) center antenna.
2. Detach the front center seat wiring harness retainer.
3. Detach the front center seat wiring harness retainer.

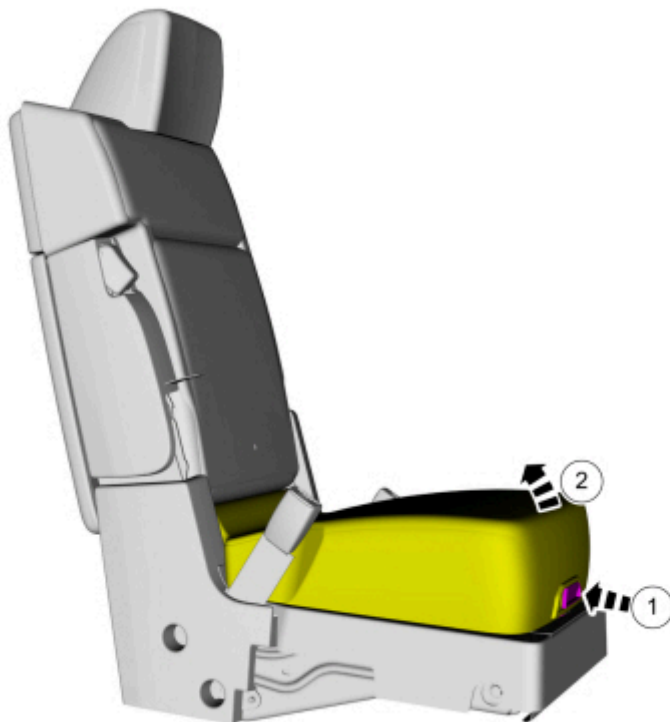


E237897

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. If equipped.


Remove the front center seat cup holder.

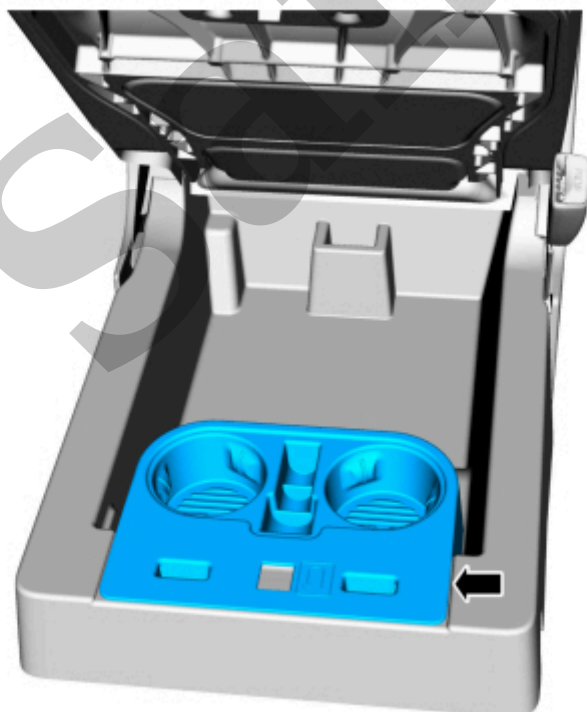

E195507

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

12. Release the front center seat latch and fold the front center seat backrest down.

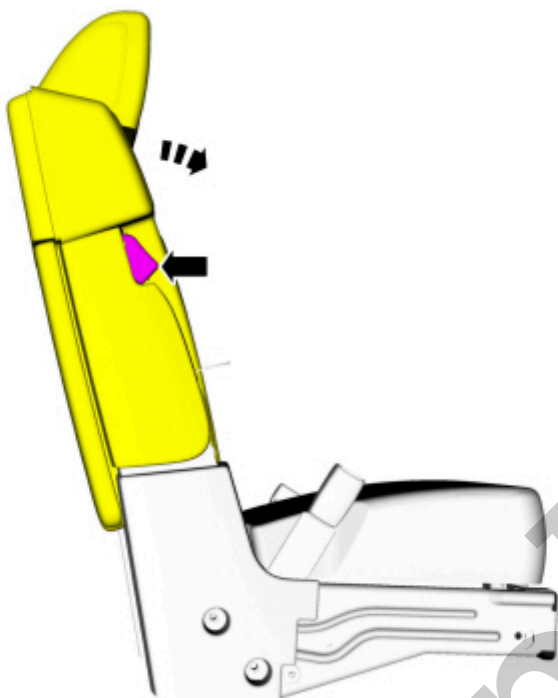


E195586


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Regular cab

13. Remove the front center seat backrest latch cover.

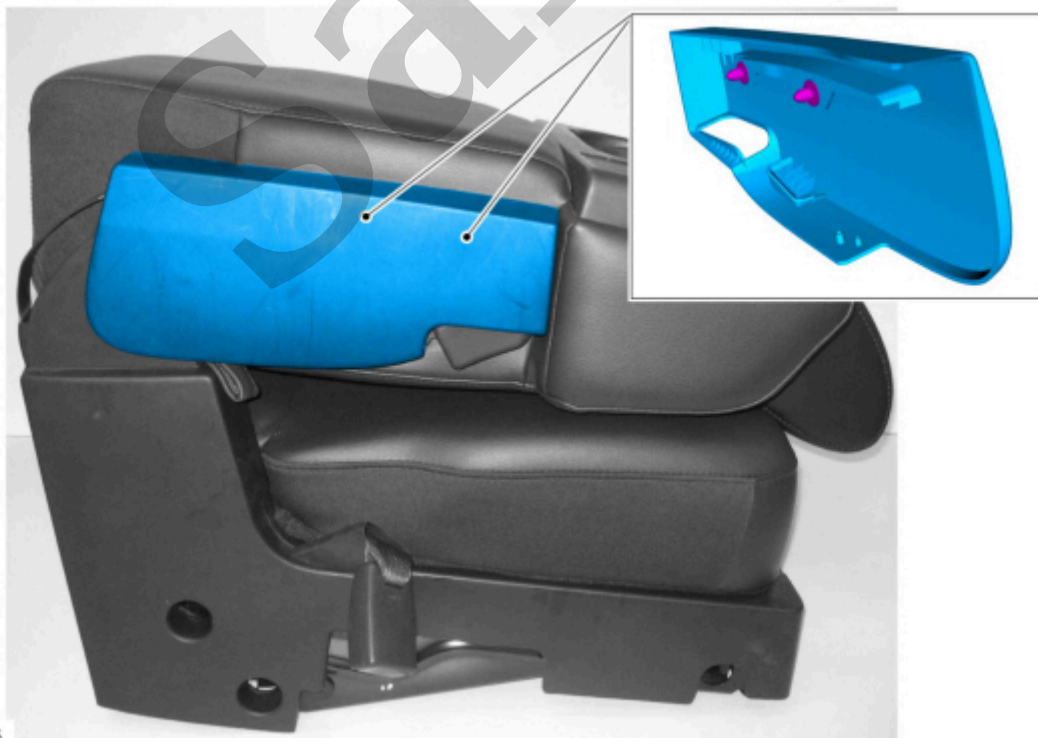


E193445

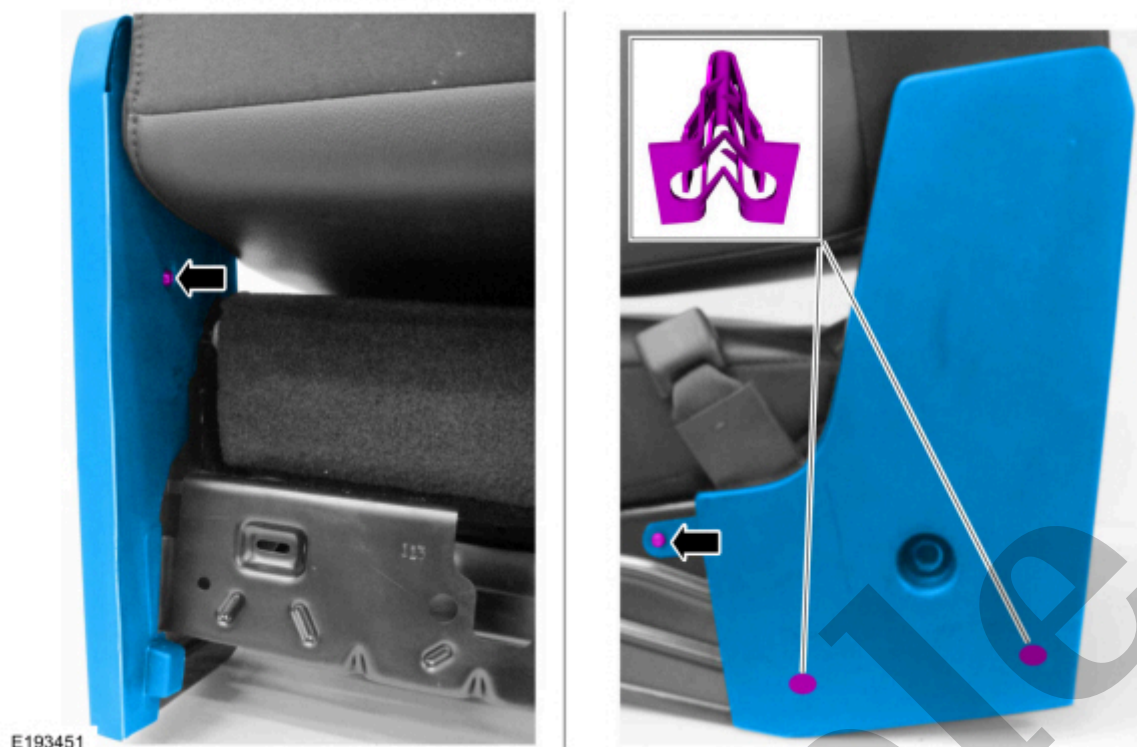

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

16. Release the seat latch and raise the front center seat backrest up.

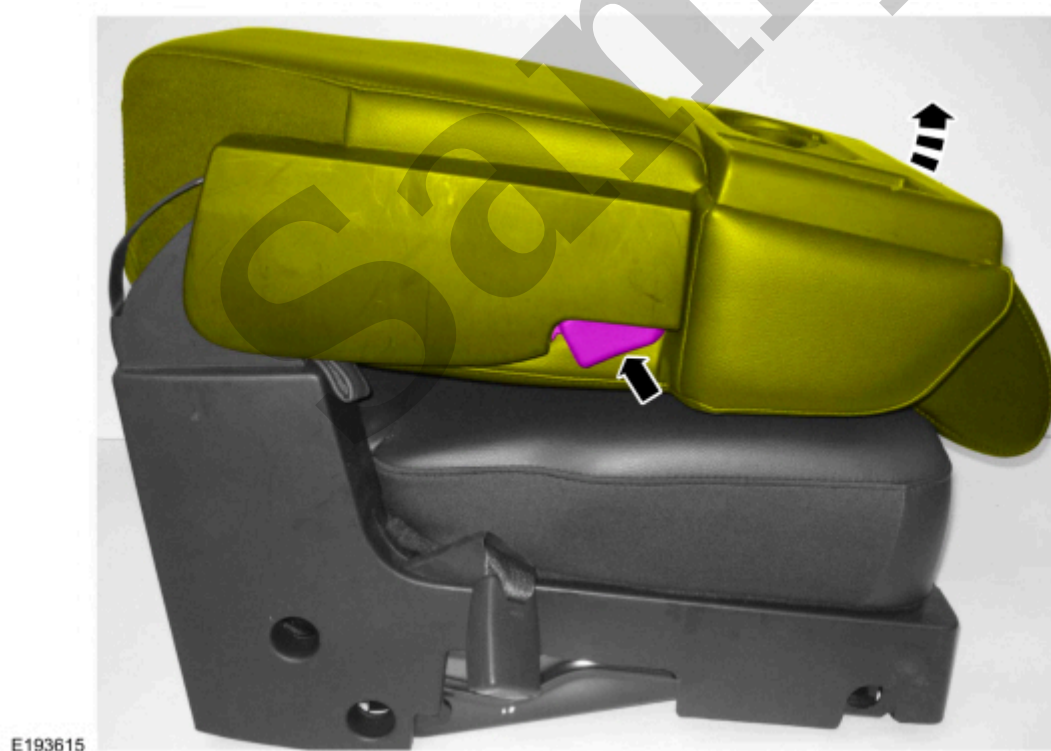


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

SuperCab and SuperCrew

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

19. Remove the screws, release the retaining clip and remove the front center seat RH (right-hand) side shields.

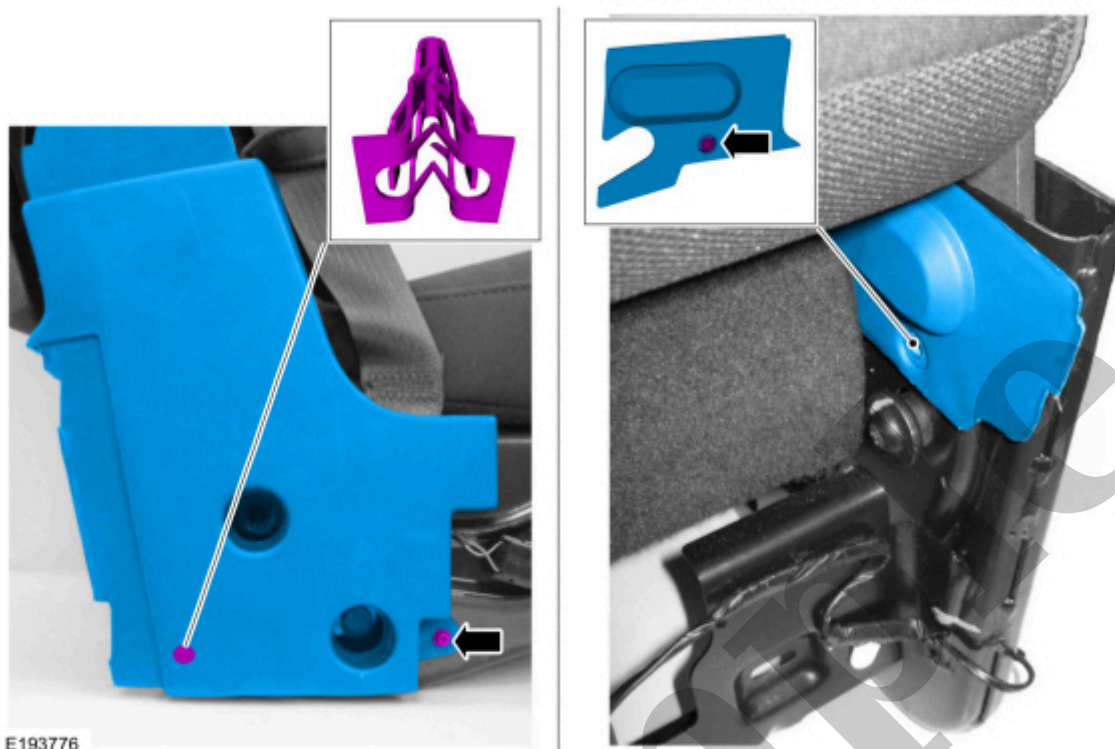


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

20. Remove the screws, release the retaining clips and remove the front center seat LH (left-hand) side shield.

22. Remove the front center seat cushion pivot bolts.

Torque : 145 lb.in (16.4 Nm)

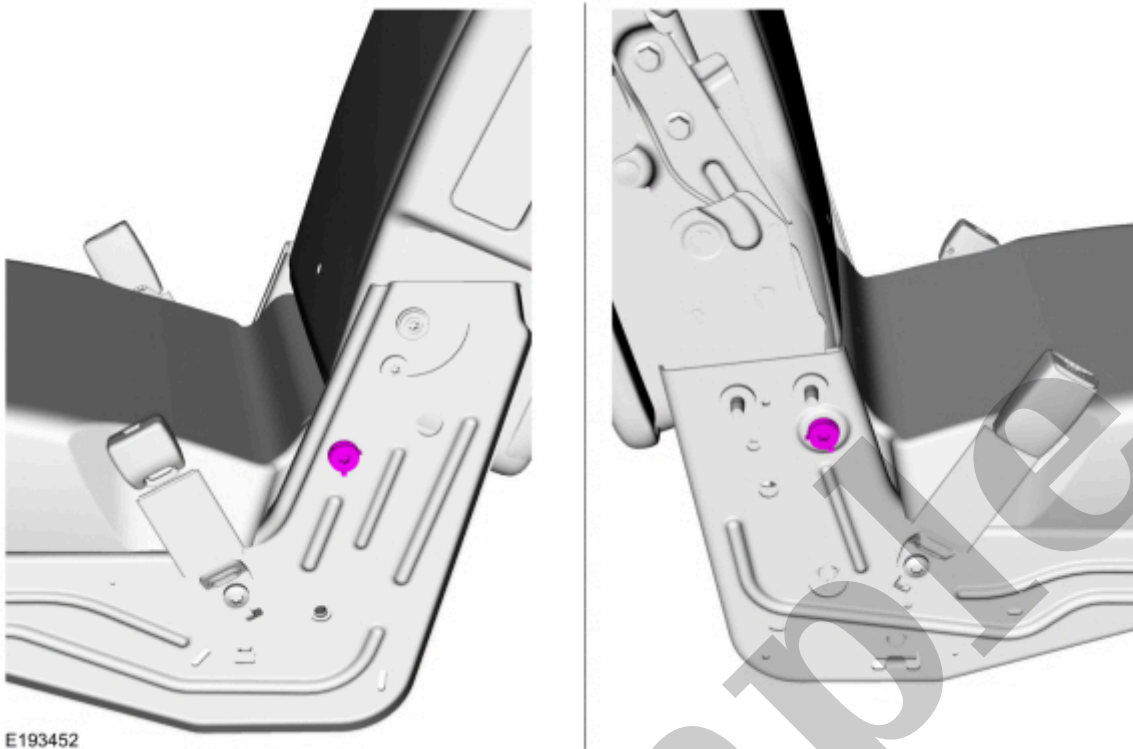


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

23. Release the LH (left-hand) side of the front center seat cushion from the cushion base and remove the front center seat cushion.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


25. Release the J-hook and position the front center seat cushion cover upward.

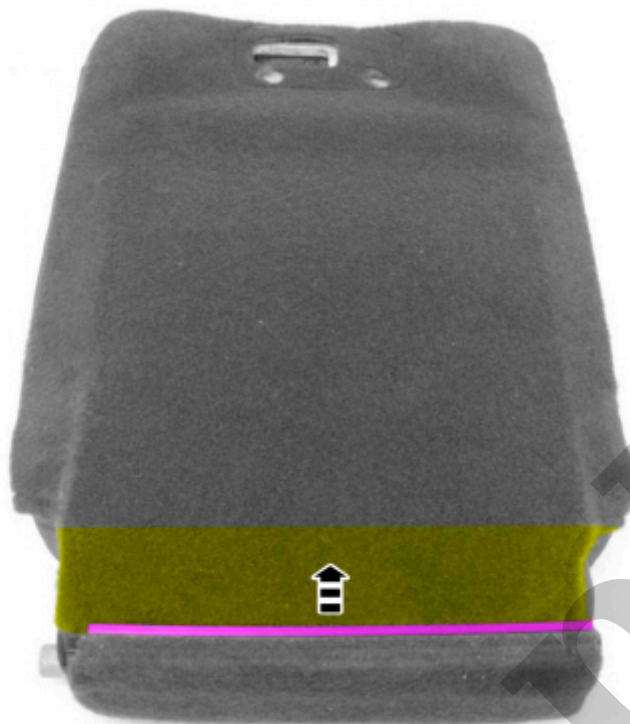

E193625

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

26. Release the hook-and-loop retainer and position the front center seat cushion cover strap aside.

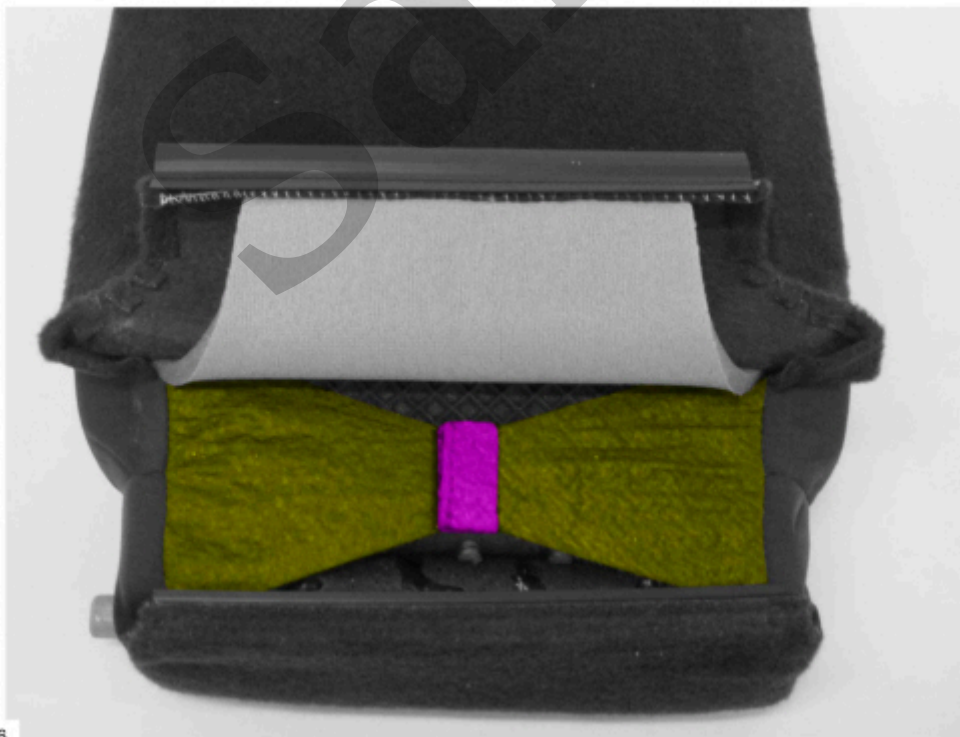

E193626



E193628

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company