

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2018 Jeep Renegade Service and Repair Manual

[Go to manual page](#)

YOUR CURRENT VEHICLE

Fuse F11 50A

FUSE F11 50A

FUSE No:F0011R		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	Front	PDC_REAR

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	A0	FUSED B(+)	INTERNAL	NA	
1	A1	FUSED B(+)	INTERNAL	NA	2.0L GAS 3.6L
2	A904	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

Fuse F13 40A

FUSE F13 40A

FUSE No:F0013U		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_UNDERHOOD
Repair Kit Part Number	See StarParts	PDC_UNDERHOOD
Part Description		PDC_UNDERHOOD
Cavity Count	2	PDC_UNDERHOOD
Location View	Back	PDC_UNDERHOOD

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_UNDERHOOD					
1	A0	FUSED B(+)	INTERNAL	NA	
2	A128	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

Fuse F16 10A

FUSE F16 10A

FUSE No:F0016I		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_INT
Repair Kit Part Number	See StarParts	PDC_INT
Part Description		PDC_INT
Cavity Count	2	PDC_INT
Location View	Interior Power Distribution Center (PDC)	PDC_INT

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_INT					
1	F941	FUSED IGNITION	INTERNAL	NA	
2	F201	FUSED IGNITION	INTERNAL	NA	

YOUR CURRENT VEHICLE

Fuse F18 30A

FUSE F18 30A

FUSE No:F0018R		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	Front	PDC_REAR

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	A0	FUSED B(+)	INTERNAL	NA	
1	A1	FUSED B(+)	INTERNAL	NA	2.0L GAS 3.6L
2	A111	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

Fuse F20 15A

FUSE F20 15A

FUSE No:F0020R		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker_3	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	3	PDC_REAR
Location View	Front	PDC_REAR

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	F926	FUSED IGNITION	INTERNAL	NA	
2	F923	FUSED IGNITION	INTERNAL	NA	

YOUR CURRENT VEHICLE

Fuse F25 30A

FUSE F25 30A

FUSE No:F0025R		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	Front	PDC_REAR

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	A0	FUSED B(+)	INTERNAL	NA	
1	A1	FUSED B(+)	INTERNAL	NA	2.0L GAS 3.6L
2	A355	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

Fuse F28 30A

FUSE F28 30A

FUSE No:F0028R		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	Front	PDC_REAR

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	A0	FUSED B(+)	INTERNAL	NA	
1	A1	FUSED B(+)	INTERNAL	NA	2.0L GAS 3.6L
2	A967	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

Fuse F33 15A

FUSE F33 15A

FUSE No:F0033I		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_INT
Repair Kit Part Number	See StarParts	PDC_INT
Part Description		PDC_INT
Cavity Count	2	PDC_INT
Location View	Interior Power Distribution Center (PDC)	PDC_INT

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_INT					
1	A950	FUSED B(+)	INTERNAL	NA	
2	A195	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

Fuse F36 10A

FUSE F36 10A

FUSE No:F0036R		Option:Standard
Connector Details		Harness Family
Color	NA	
Part Number	Fuse-Ckt_Breaker_3	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	3	PDC_REAR
Location View	Front	PDC_REAR

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	A0	FUSED B(+)	INTERNAL	NA	
1	A1	FUSED B(+)	INTERNAL	NA	2.0L GAS 3.6L
2	A436	FUSED B(+)	INTERNAL	NA	
3	A233	FUSED B(+)	INTERNAL	NA	