

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2018 Jeep Wrangler JK Service and Repair Manual

[Go to manual page](#)

YOUR CURRENT VEHICLE

## Fuse F40 30A

### FUSE F40 30A

<b>FUSE No:F0040R</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	<a href="#">Front</a>	PDC_REAR

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	A0	FUSED B(+)	INTERNAL	NA	
1	A1	FUSED B(+)	INTERNAL	NA	2.0L GAS 3.6L
2	A931	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

## Fuse F42 10A

### FUSE F42 10A

<b>FUSE No:F0042I</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker_3	PDC_INT
Repair Kit Part Number	See StarParts	PDC_INT
Part Description		PDC_INT
Cavity Count	3	PDC_INT
Location View	<a href="#">Interior Power Distribution Center (PDC)</a>	PDC_INT

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_INT					
1	F941	FUSED IGNITION	INTERNAL	NA	
2	F945	FUSED IGNITION	INTERNAL	NA	
3	F948	FUSED IGNITION	INTERNAL	NA	

### FUSE F42 10A

YOUR CURRENT VEHICLE

## Fuse F44 20A

### FUSE F44 20A

<b>FUSE No:F0044RA</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	<a href="#">Front</a>	PDC_REAR

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	F721	FUSED IGNITION	INTERNAL	NA	
2	W880	FUSED B(+)	INTERNAL	NA	

### FUSE F44 20A

## Fuse F46 30A

## FUSE F46 30A

<b>FUSE No:F0046R</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	Front	PDC_REAR

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	A0	FUSED B(+)	INTERNAL	NA	
1	A1	FUSED B(+)	INTERNAL	NA	2.0L GAS 3.6L
2	A131	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

## Fuse F50 10A

### FUSE F50 10A

<b>FUSE No:F00501</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker_3	PDC_INT
Repair Kit Part Number	See StarParts	PDC_INT
Part Description		PDC_INT
Cavity Count	3	PDC_INT
Location View	<a href="#">Interior Power Distribution Center (PDC)</a>	PDC_INT

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_INT					
1	A950	FUSED B(+)	INTERNAL	NA	
2	A438	FUSED B(+)	INTERNAL	NA	
3	A900	FUSED B(+)	INTERNAL	NA	

YOUR CURRENT VEHICLE

## Fuse F52 20A

### FUSE F52 20A

<b>FUSE No:F0052R</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	Front	PDC_REAR

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	F926	FUSED IGNITION	INTERNAL	NA	
2	F917	FUSED IGNITION	INTERNAL	NA	

## Fuse F55 15A

## FUSE F55 15A

<b>FUSE No:F0055U</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_UNDERHOOD
Repair Kit Part Number	See StarParts	PDC_UNDERHOOD
Part Description		PDC_UNDERHOOD
Cavity Count	2	PDC_UNDERHOOD
Location View	<a href="#">Back</a>	PDC_UNDERHOOD

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_UNDERHOOD					
1	A0	FUSED B(+)	INTERNAL	NA	EXCEPT SJH
1	A9	FUSED B(+)	INTERNAL	NA	SJH
2	A381	FUSED B(+)	INTERNAL	NA	



YOUR CURRENT VEHICLE

## Fuse F62 20A

### FUSE F62 20A

<b>FUSE No:F0062R</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker	PDC_REAR
Repair Kit Part Number	See StarParts	PDC_REAR
Part Description		PDC_REAR
Cavity Count	2	PDC_REAR
Location View	Front	PDC_REAR

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_REAR					
1	F927	FUSED IGNITION	INTERNAL	NA	
2	F921	FUSED IGNITION	INTERNAL	NA	

YOUR CURRENT VEHICLE

## Fuse F64 10A

### FUSE F64 10A

<b>FUSE No:F0064I</b>		<b>Option:Standard</b>
<b>Connector Details</b>		<b>Harness Family</b>
Color	NA	
Part Number	Fuse-Ckt_Breaker_3	PDC_INT
Repair Kit Part Number	See StarParts	PDC_INT
Part Description		PDC_INT
Cavity Count	3	PDC_INT
Location View	<a href="#">Interior Power Distribution Center (PDC)</a>	PDC_INT

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
PDC_INT					
1	A950	FUSED B(+)	INTERNAL	NA	
2	A368	FUSED B(+)	INTERNAL	NA	
3	A929	FUSED B(+)	INTERNAL	NA	