

Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2018 MAZDA BT-50 OEM Service and Repair Workshop Manual

Go to manual page

- 2.Peel off the backing of the double-sided adhesive tape.
- 3.Install the front door garnish.
- 4.Install the front beltline molding. (See FRONT BELTLINE MOLDING REMOVAL/INSTALLATION.)



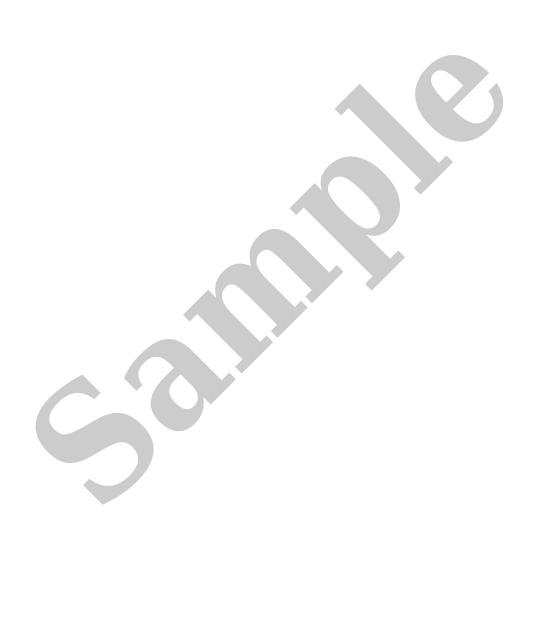


1	Upper face (See Rivet Removal Note.) (See Upper Face Removal Note.)
2	Radiator grille bracket
3	Grille garnish
4	Grille mesh

3. Assemble in the reverse order of disassembly.


Type C

1.Remove the front camera. (With 360° view monitor system) (See FRONT CAMERA REMOVAL/INSTALLATION.)

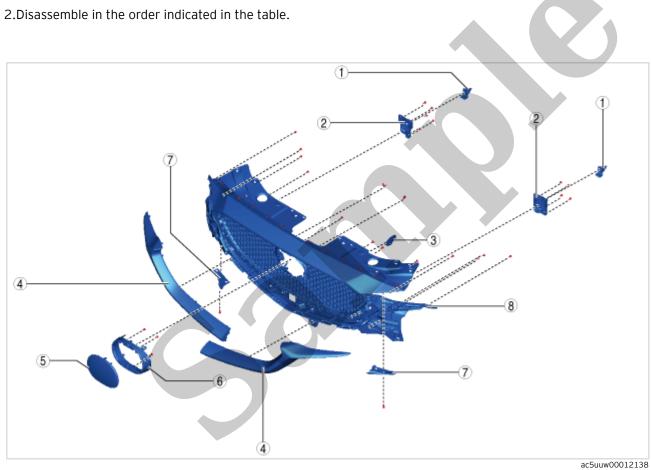


1	Bracket
2	Bracket
3	Cover
4	Clip
5	Lower grille molding
6	Mascot base
7	Mascot
8	Radiator grille component

3. Assemble in the reverse order of disassembly.

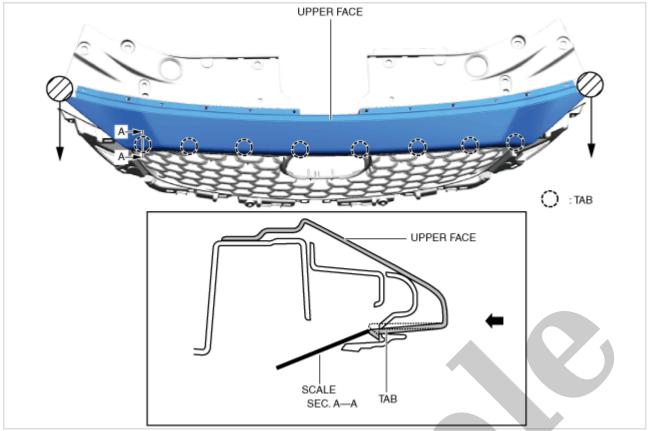


ac5uuw00012057

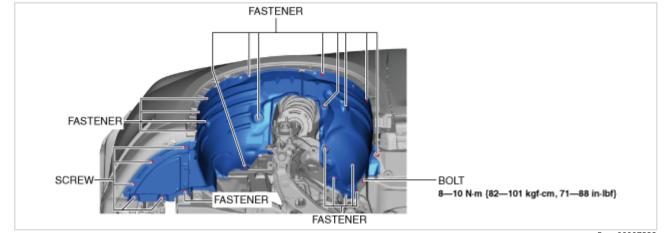


ac5uuw00007999

RH

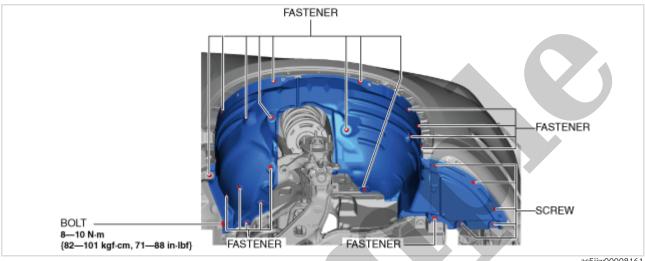

ac5jjw00008161

- 6.Remove the fasteners.
- 7. Pull the front mudguard in the direction of the arrow shown in the figure.

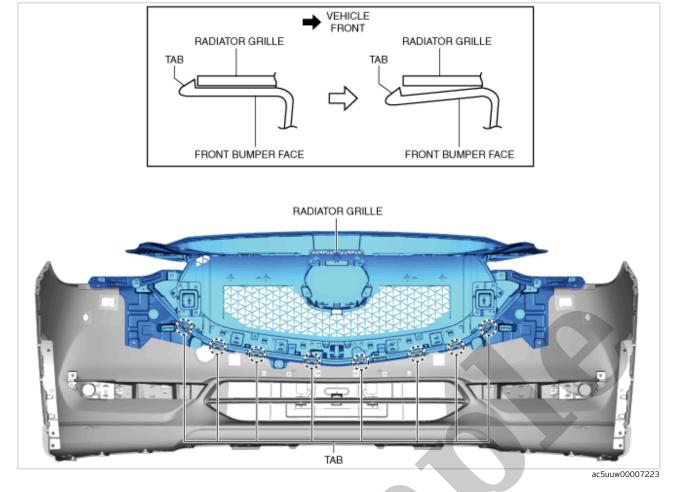


6.Remove the radiator grille.

7.Install in the reverse order of removal.

8.Perform the 360° view monitor system aiming. (With 360° view monitor system) (See 360°VIEW MONITOR SYSTEM AIMING.)

Type B

- 1.Disconnect the negative battery terminal. (See NEGATIVE BATTERY TERMINAL DISCONNECTION/CONNECTION.)
- 2.Remove the following parts:
 - (1)Seal board upper (See SEAL BOARD UPPER REMOVAL/INSTALLATION.)
 - (2)Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION.)
 - (3)Front ultrasonic sensor short-cord (With front ultrasonic sensor) (See FRONT ULTRASONIC SENSOR SHORT-CORD REMOVAL/INSTALLATION.)
- 3. Remove the fasteners.

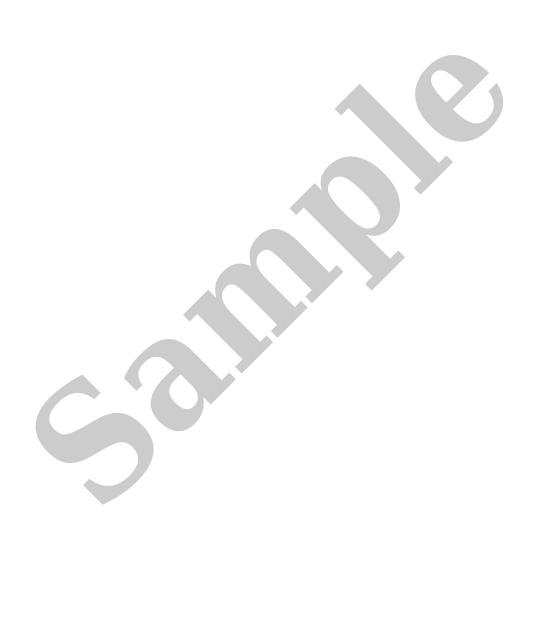

REAR SPOILER REMOVAL/INSTALLATION

SM2899436

id09160080160

Replace parts


Double-sided adhesive tape

Number of parts: 2

Used place: Rear spoiler

Warning

- Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.
- 1.Disconnect the negative battery terminal. (See NEGATIVE BATTERY TERMINAL DISCONNECTION/CONNECTION.)
- 2.Remove the liftgate upper trim. (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
- 3. Remove the caps.

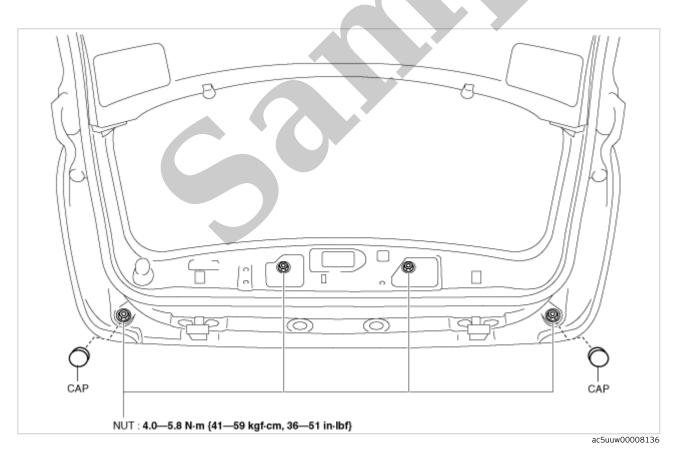

4.Remove the nuts.

REAR BELTLINE MOLDING REMOVAL/INSTALLATION

SM2899439


id09160080470

Replace parts

Rear beltline molding

Number of parts: 1

Used place: Rear beltline molding

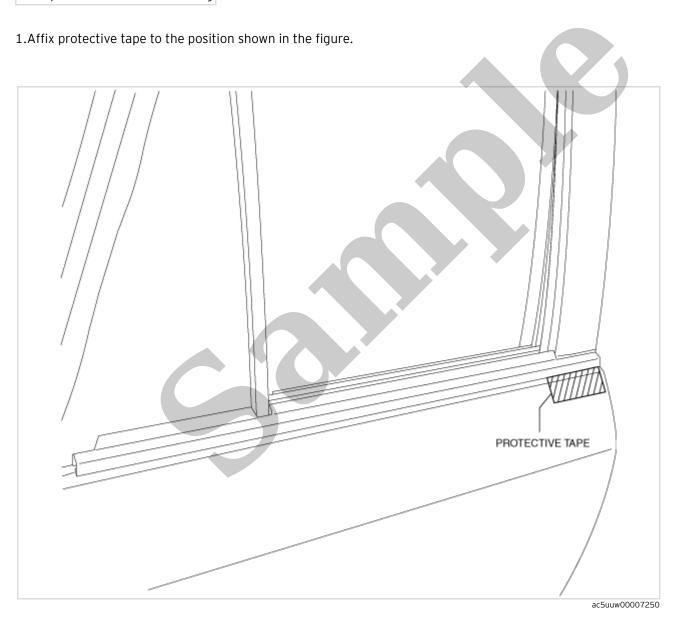

2.Fully open the rear door glass.

3.Insert tape-wrapped flathead screwdrivers and then detach clip A in the direction of arrows (1) shown in the figure.