

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2018 Mazda CX-9 Service and Repair Manual

[Go to manual page](#)

# SIDE WALL REMOVAL/INSTALLATION

SM2899494


id09170080540

## Driver-side

1.Remove the clip and hooks while pulling the side wall in the order of arrows (1) and (2) shown in the figure.

### Caution

•If the side wall is pulled forcibly when removing the hooks and clip, the guide could be damaged. When pulling the side wall in the direction of arrows (1) and (2), be careful not to damage the guide.

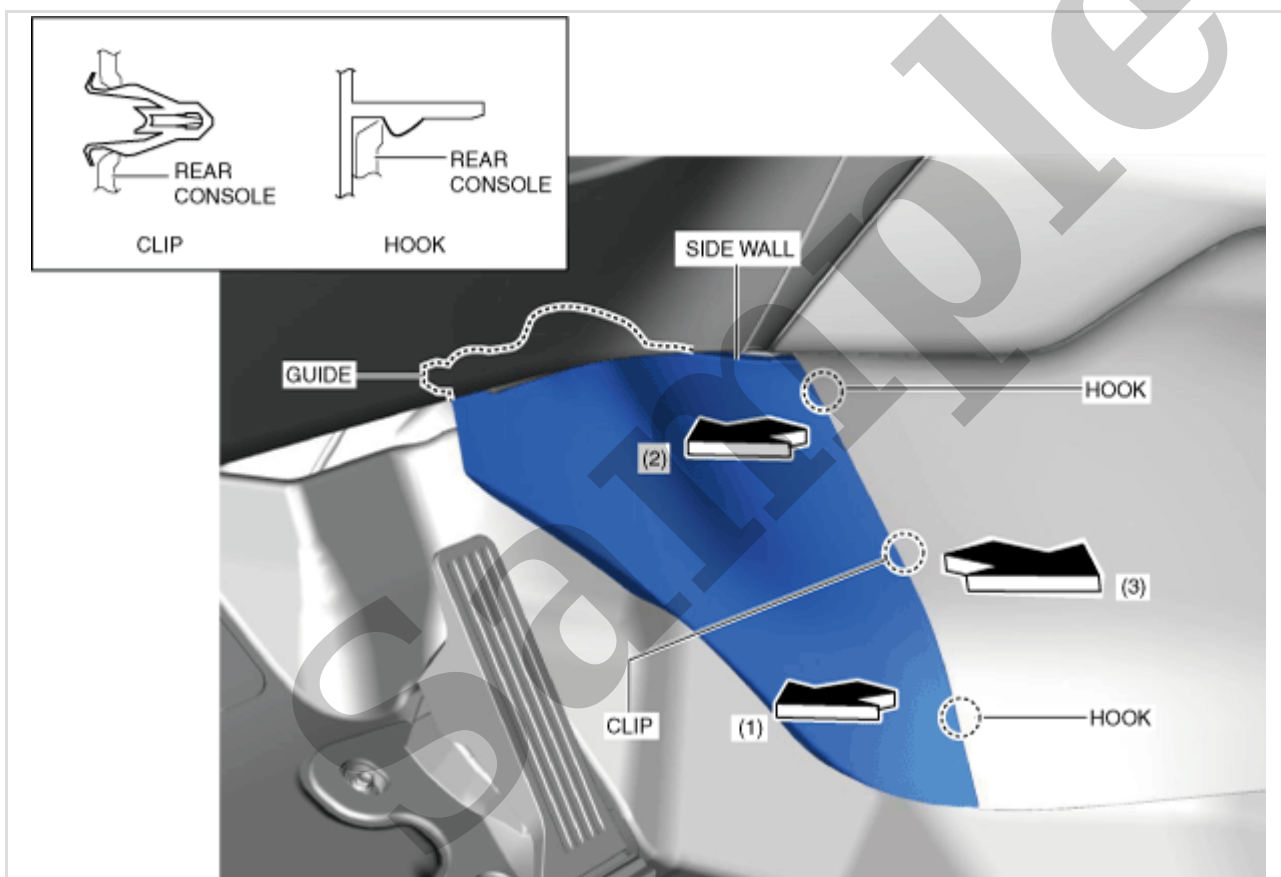

ac5uuw00010155

2.Pull the side wall in the direction of arrow (3) shown in the figure and remove it while removing the guide.


3.Install in the reverse order of removal.

## Passenger-side

1.Remove the clip and hooks while pulling the side wall in the order of arrows (1) and (2) shown in the figure.


2.Remove the lower decoration panel. (See [Lower Decoration Panel.](#))

3.To prevent scratches or damage, apply protective tape to the position shown in the figure.

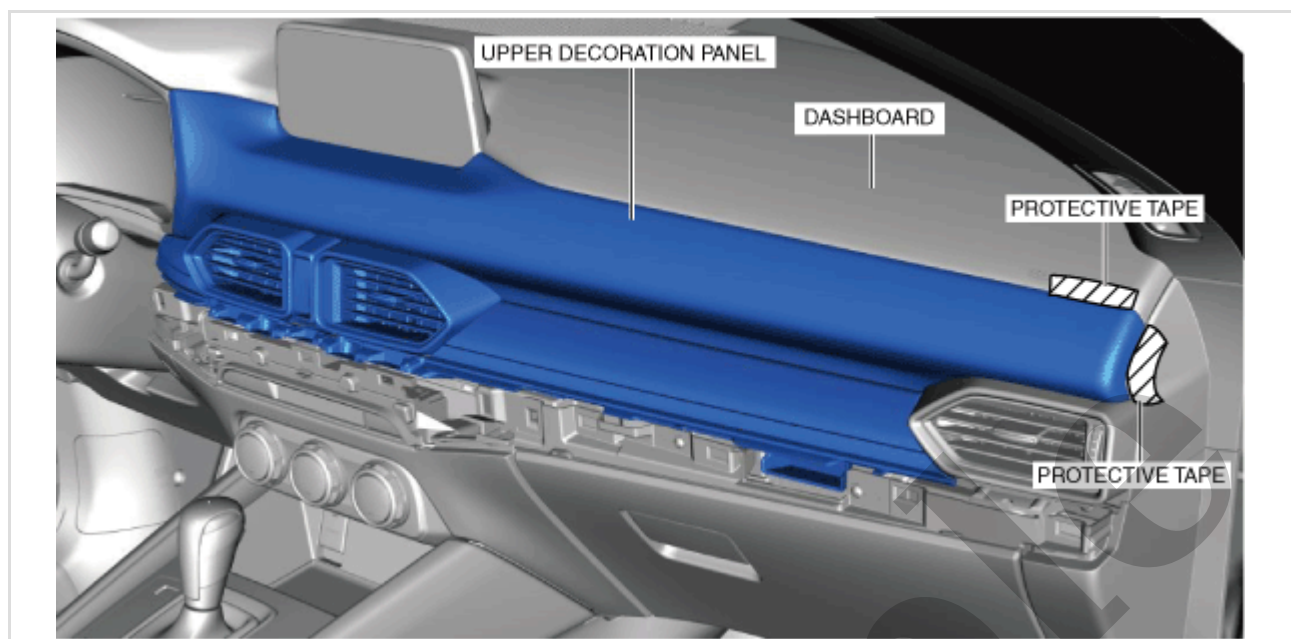

ac5uuw00005302


4.Insert remover tool A into the position shown in the figure and secure a clearance to insert remover tool B.

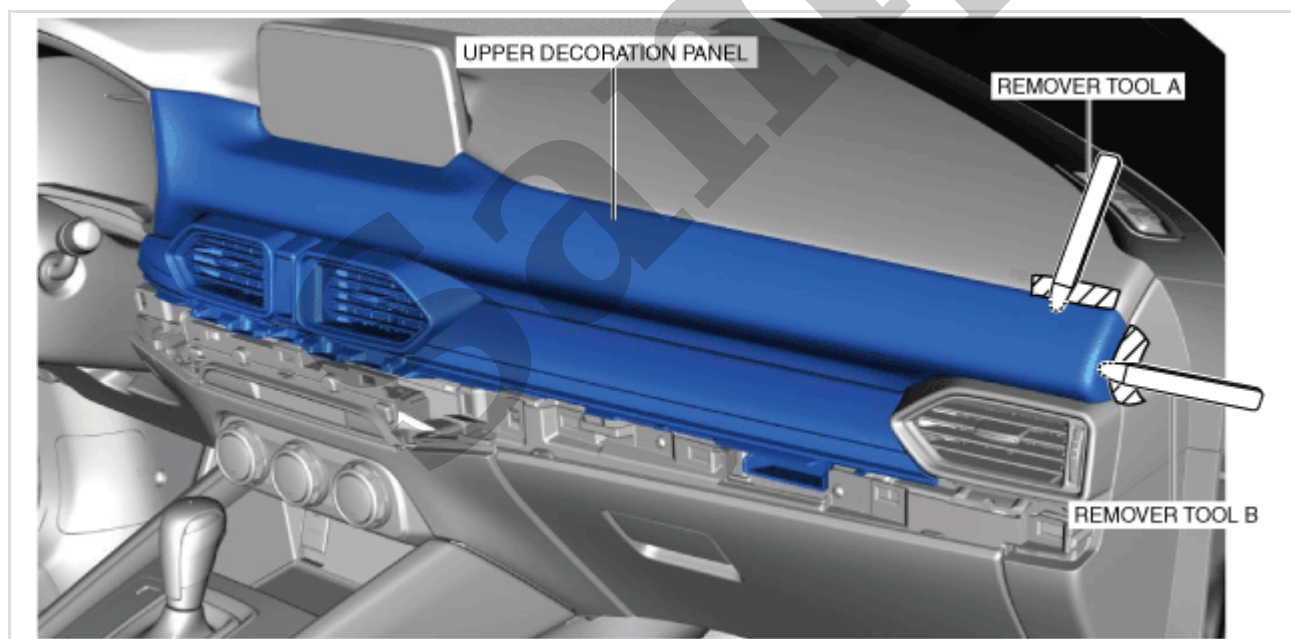

ac5uuw00005302


5.Insert remover tool B into the position shown in the figure.

6.Move remover tools A and B in the direction of the arrows shown in the figure and detach the clip.

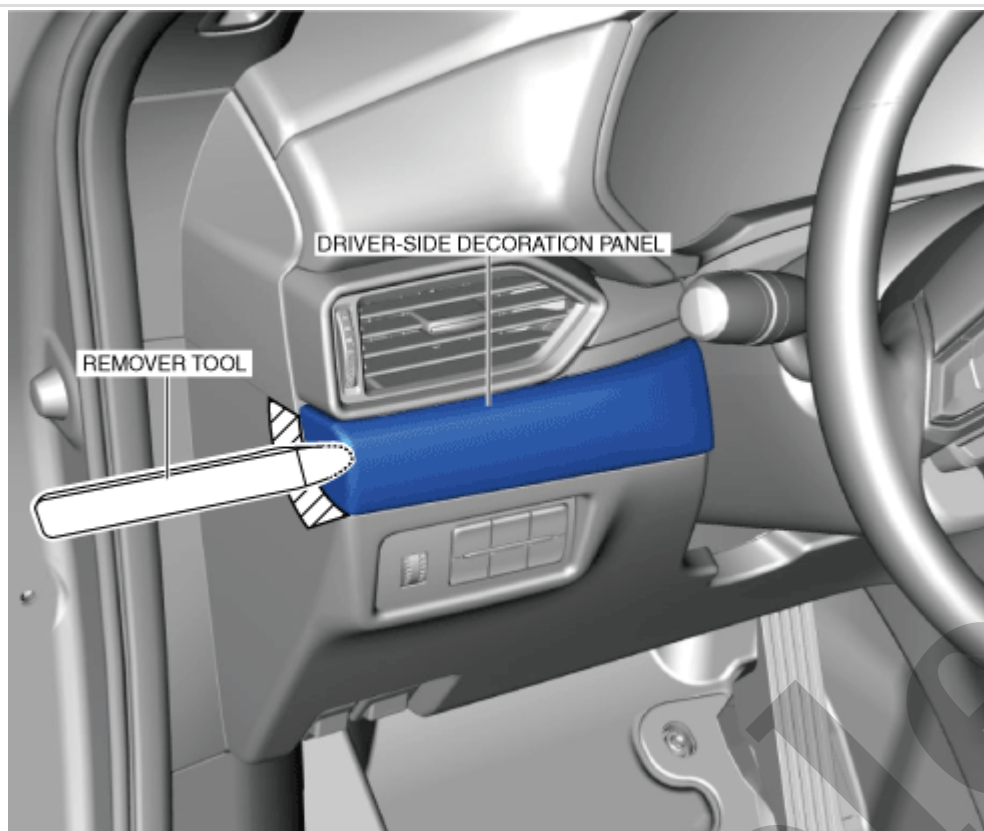

ac5uuw00005309

3. Move the remover tool in the direction of the arrow shown in the figure and detach the clip.

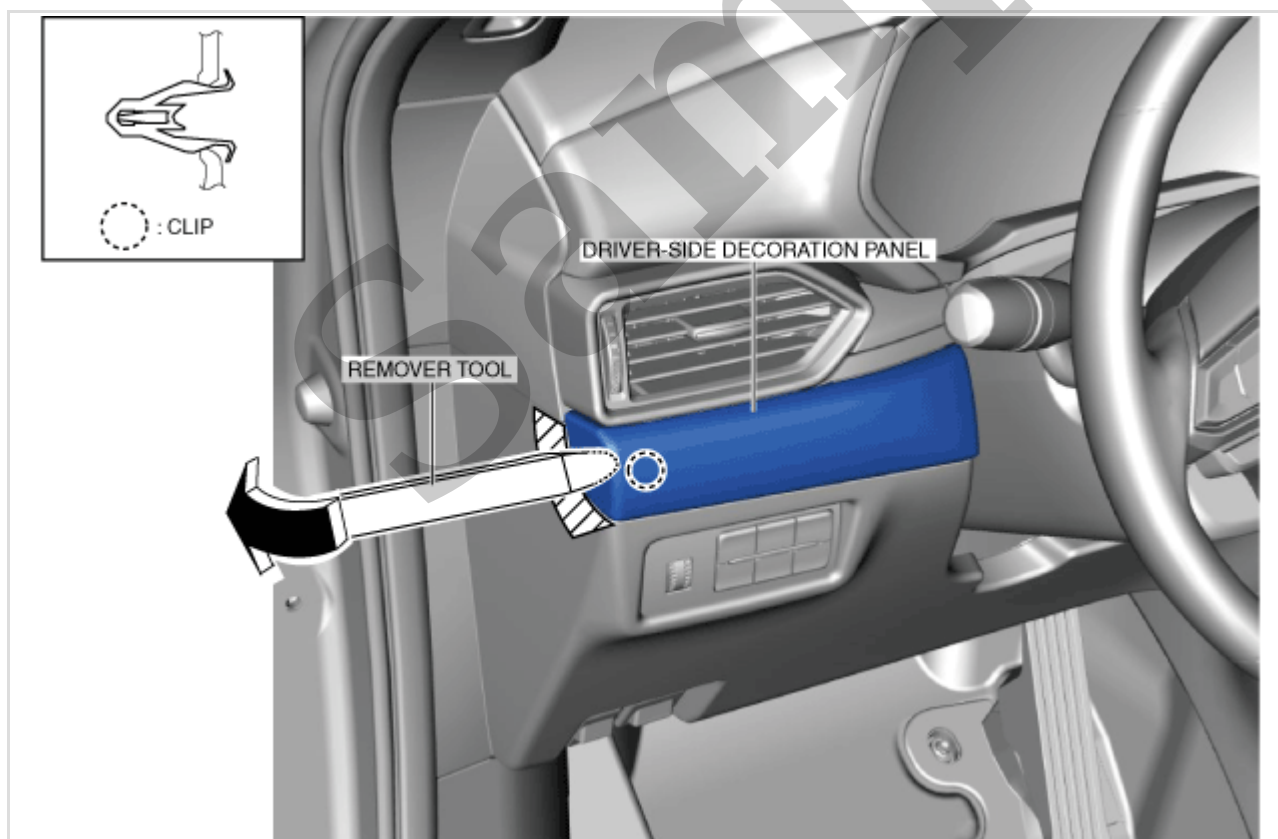

ac5uuw00005310

4. Move the driver-side decoration panel in the direction of the arrow shown in the figure and remove it while detaching the clip.



# SHIFT PANEL REMOVAL/INSTALLATION

SM2899498

id09170089840

1. Disconnect the negative battery terminal. (See [NEGATIVE BATTERY TERMINAL DISCONNECTION/CONNECTION.](#))


2. Remove the following parts:

(1) Console side panel (See [CONSOLE SIDE PANEL REMOVAL/INSTALLATION.](#))

(2) Switch panel (See [SWITCH PANEL REMOVAL/INSTALLATION.](#))


(3) Selector lever knob (See [SELECTOR LEVER COMPONENT REMOVAL/INSTALLATION.](#))

3. Disconnect the connector.

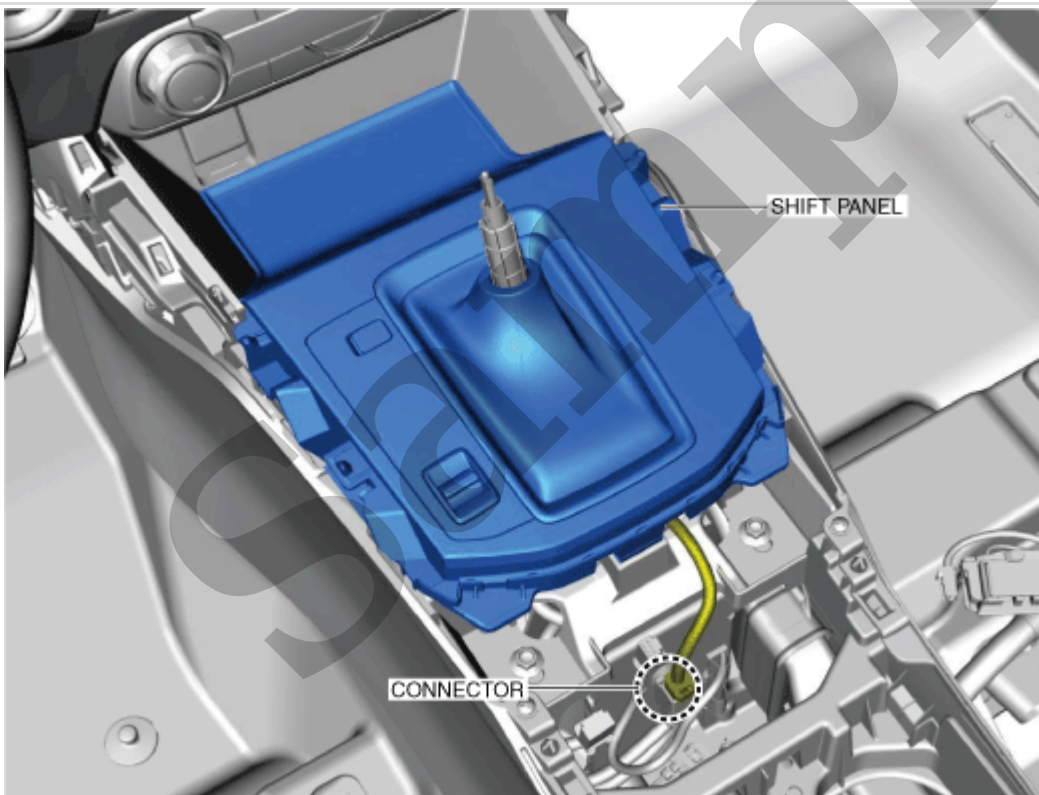


ac5uuw00005313

4. Using a remover tool, move the shift panel in the order of arrows (1), (2), (3), and (4) shown in the figure, and detach the clips and hooks.

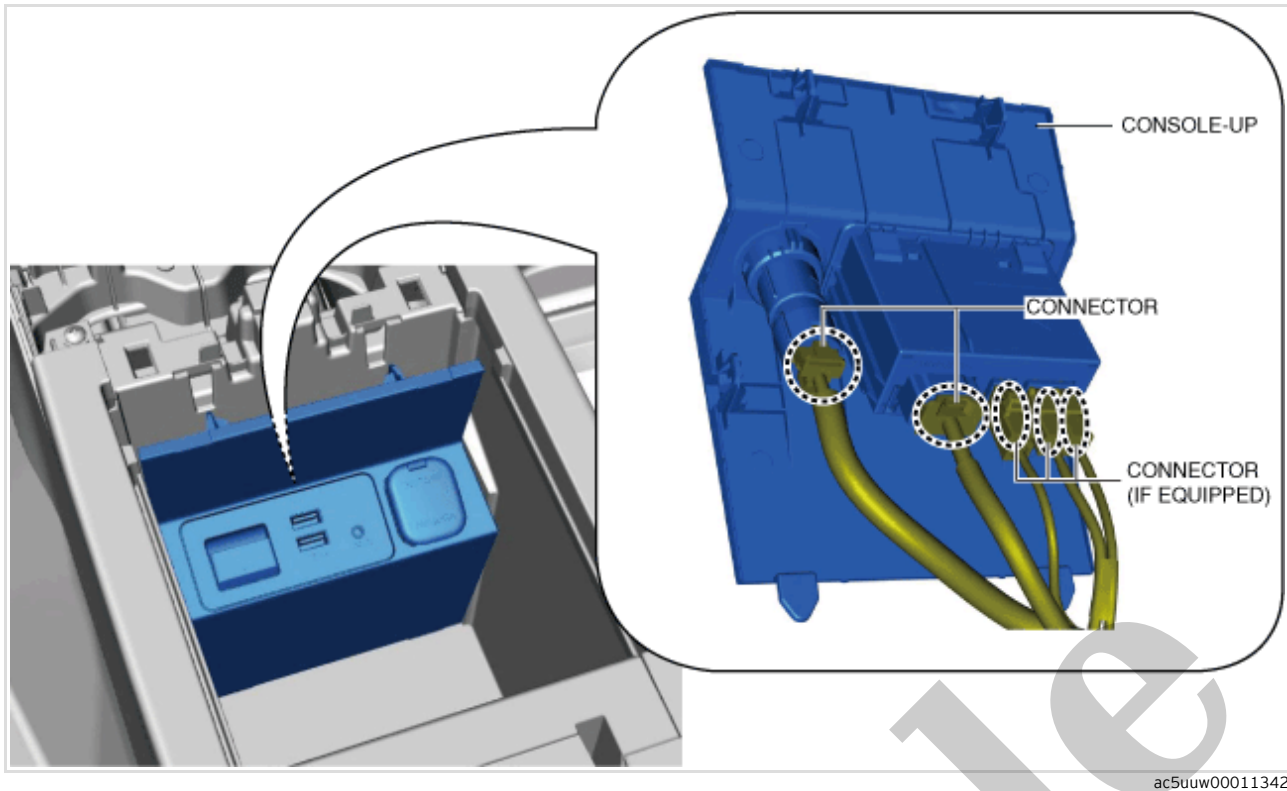

ac5uuw00011342

6. Move the console-up in the direction of the arrow shown in the figure, detach the guides from the rear console, and remove the console-up.

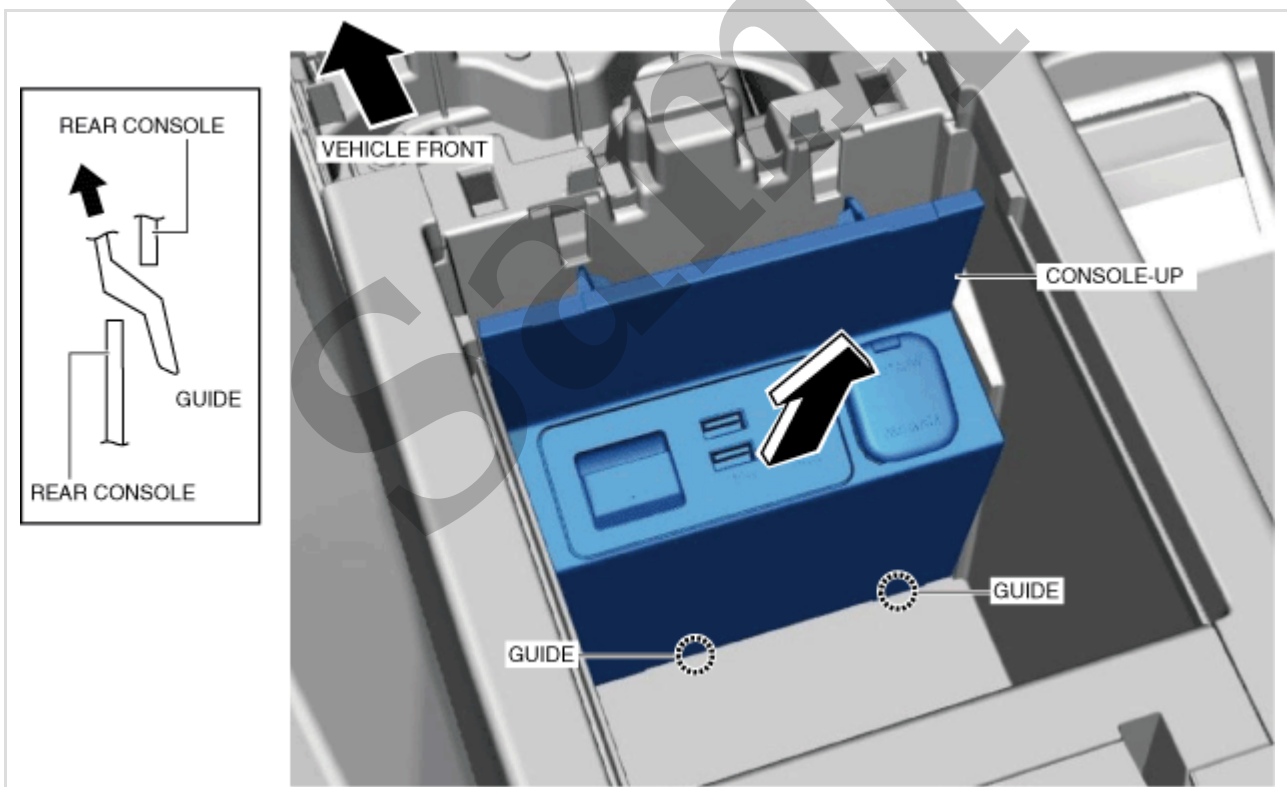

ac5uuw00010160


7. Close the console lid.

# CUP HOLDER REMOVAL/INSTALLATION

SM2899502

id09170096910

1. Disconnect the negative battery terminal. (See [NEGATIVE BATTERY TERMINAL DISCONNECTION/CONNECTION.](#))
2. Remove the console side panel. (See [CONSOLE SIDE PANEL REMOVAL/INSTALLATION.](#))
3. Remove the switch panel. (See [SWITCH PANEL REMOVAL/INSTALLATION.](#))
4. Open the console lid and remove the storage box.

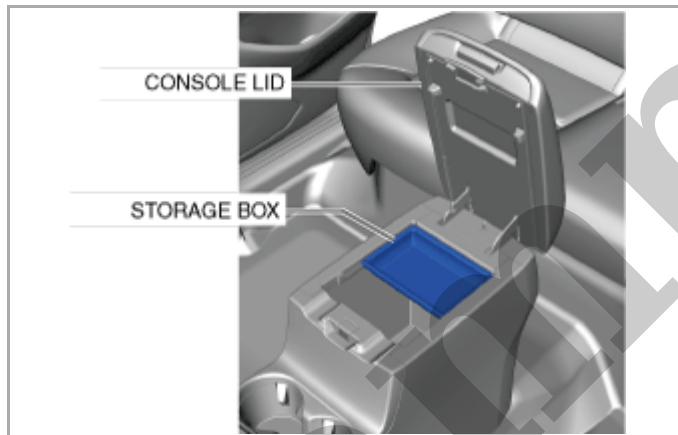

ac5uuw00005327

5. Insert the remover tools into the service holes.


7	Side panel (See <a href="#">Side Panel Removal Note</a> .)
8	Screw
9	Rear console cover
10	Rear console box

2. Assemble in the reverse order of disassembly.

## Side Panel Removal Note

1. Move the side panel in the order of arrows (1) and (2) shown in the figure, and remove it while detaching the guides.


ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

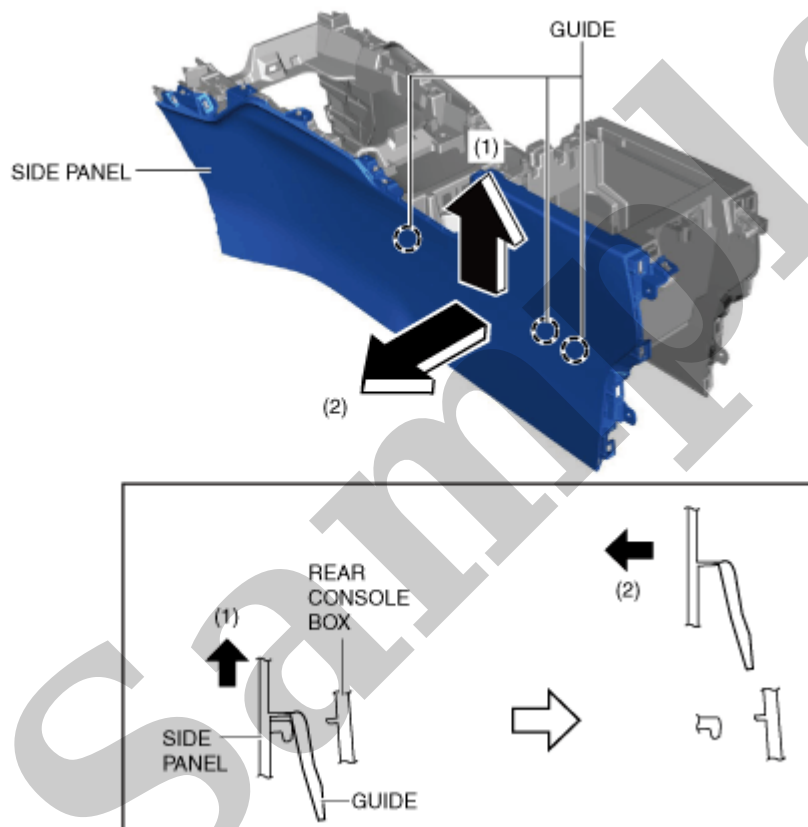

ac5uuw00010165


- (1) Trunk board (See [TRUNK BOARD REMOVAL/INSTALLATION.](#))
- (2) Bass-box (With Bose®) (See [BASS-BOX REMOVAL/INSTALLATION.](#))
- (3) Sub-trunk (See [SUB-TRUNK REMOVAL/INSTALLATION.](#))
- (4) Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
- (5) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
- (6) Trunk side trim (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION.](#))
- (7) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
- (8) Rear speaker (See [REAR SPEAKER REMOVAL/INSTALLATION.](#))

3.Remove the screws.

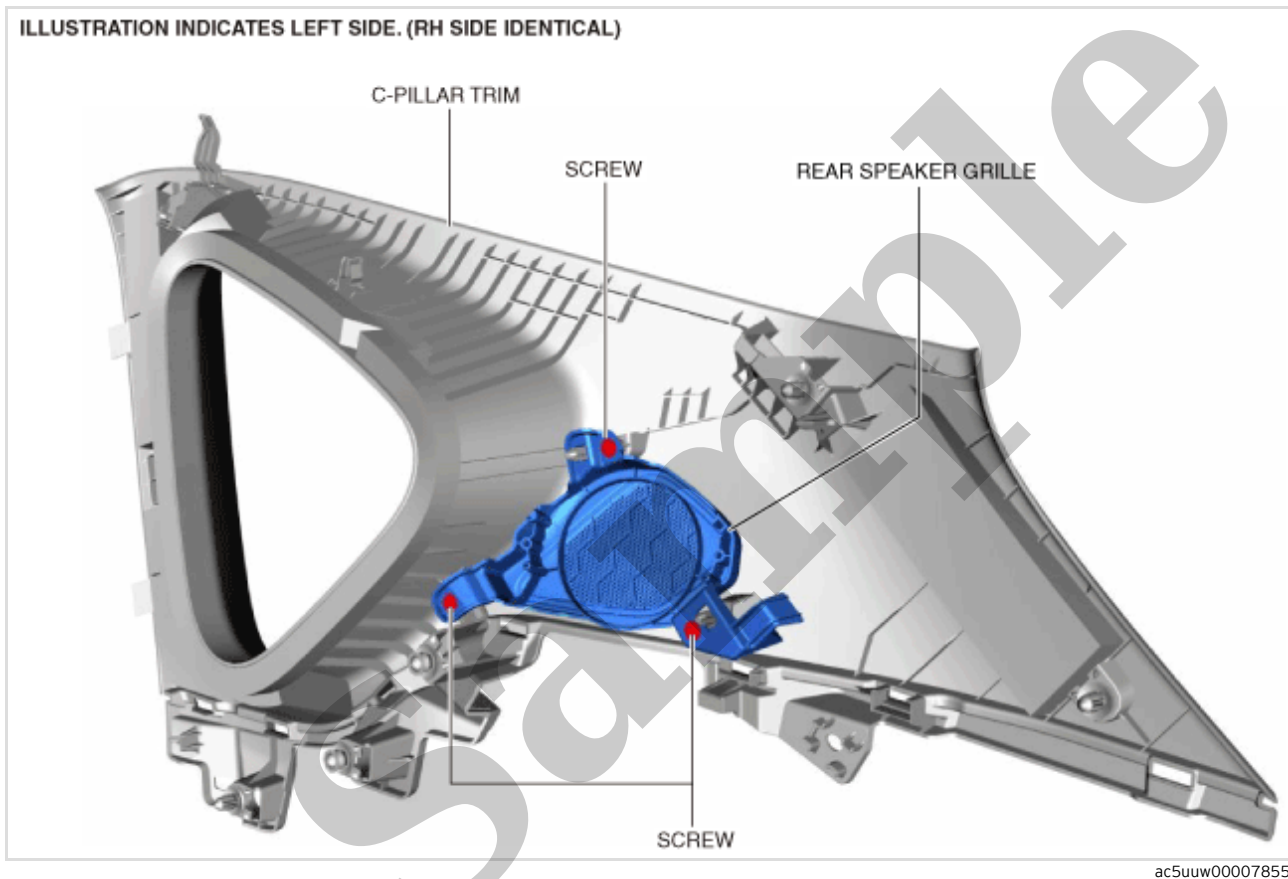

4.Remove the rear speaker grille in the direction of the arrow shown in the figure.




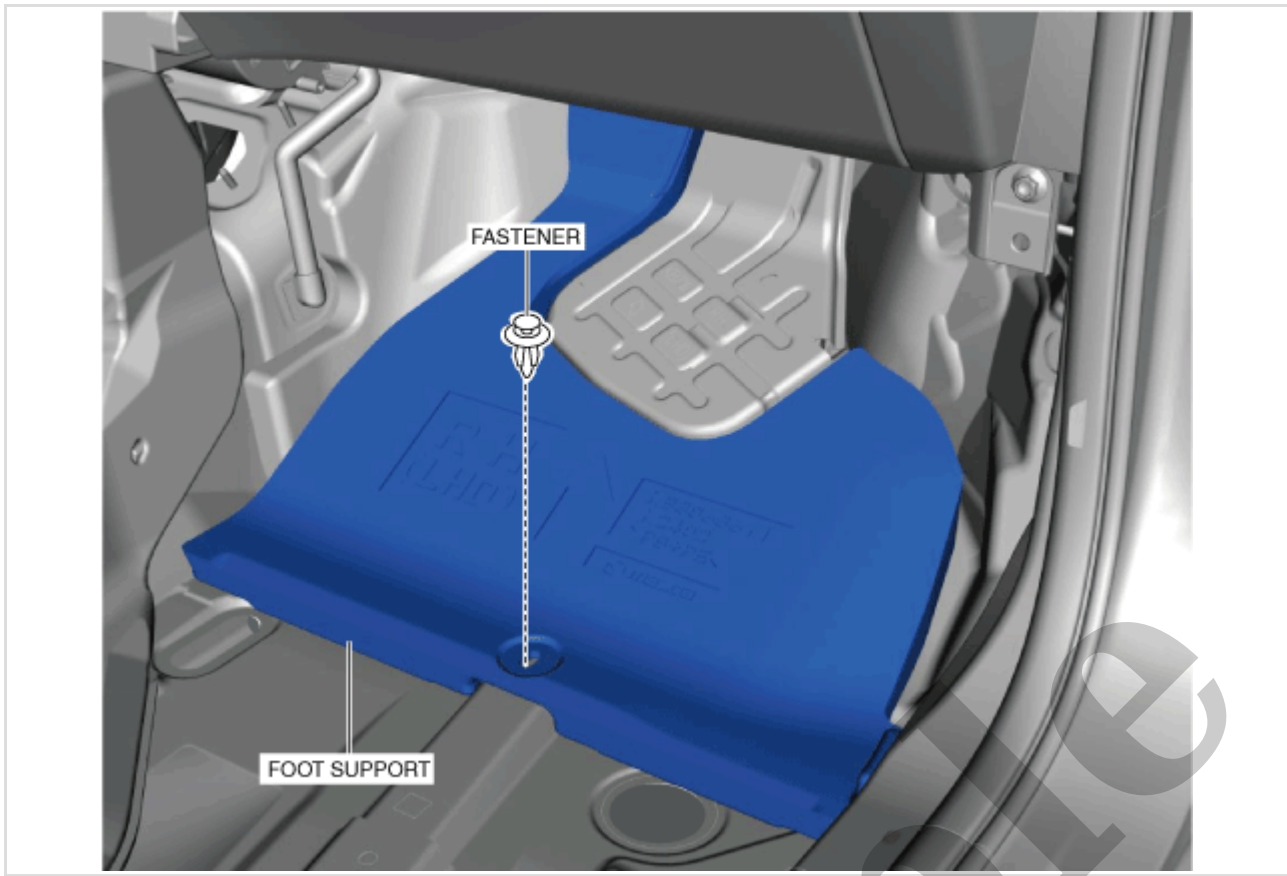

ac5uuw00010103

4.Remove the foot support in the direction of the arrow shown in the figure.

Without 360° view monitor control module

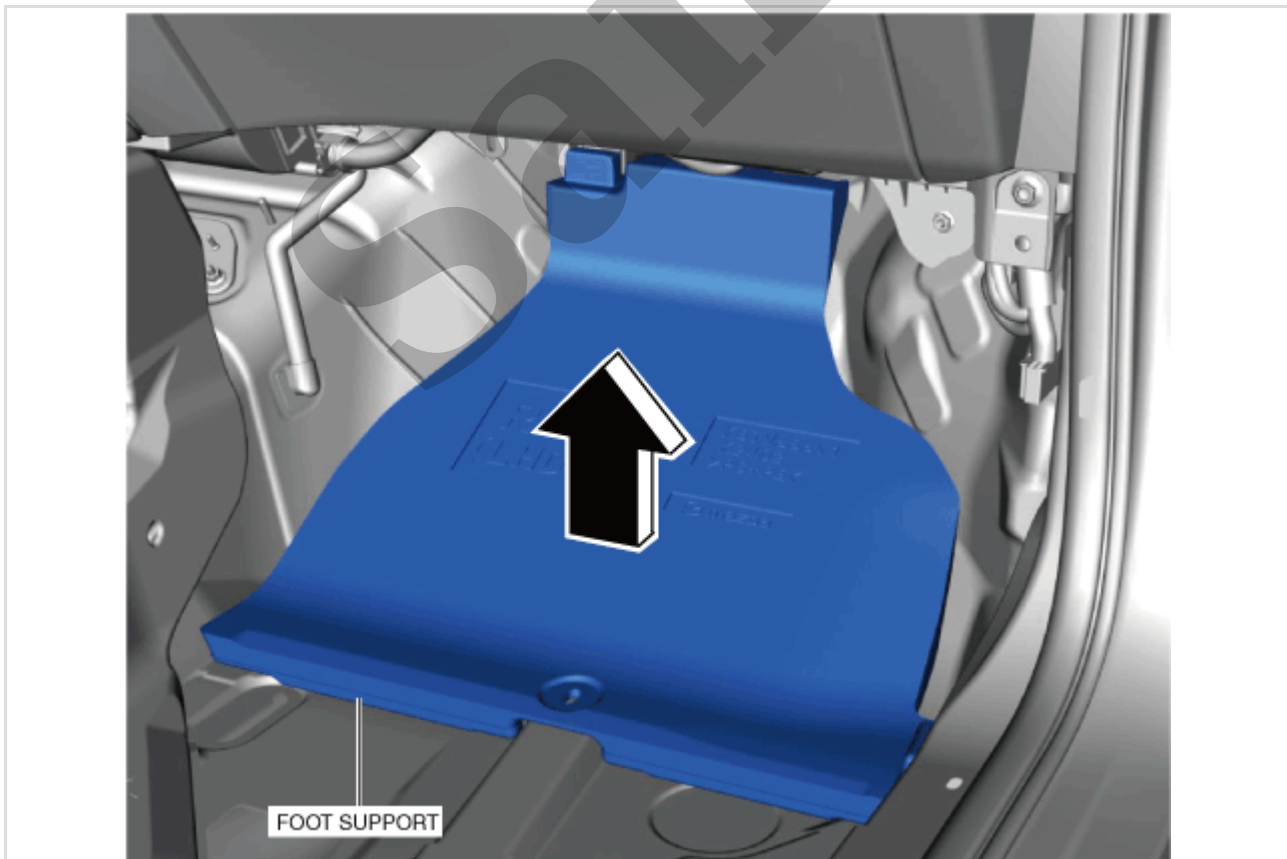

ac5uuw00010104

With 360° view monitor control module