

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2018 MAZDA Flair OEM Service and Repair Workshop Manual

[Go to manual page](#)

1	Screw
2	Bezel
3	Dashboard pad
4	Screw
5	Center panel
6	Screw
7	Print plate A
8	Screw
9	Print plate B
10	Screw
11	Decoration plate


4.Assemble in the reverse order of disassembly.

Type B

1.Remove the center ventilator grille. (See [VENTILATOR GRILLE REMOVAL/INSTALLATION.](#))

2.Remove the hazard warning switch. (See [HAZARD WARNING SWITCH REMOVAL/INSTALLATION.](#))

3.Disassemble in the order shown in the figure.

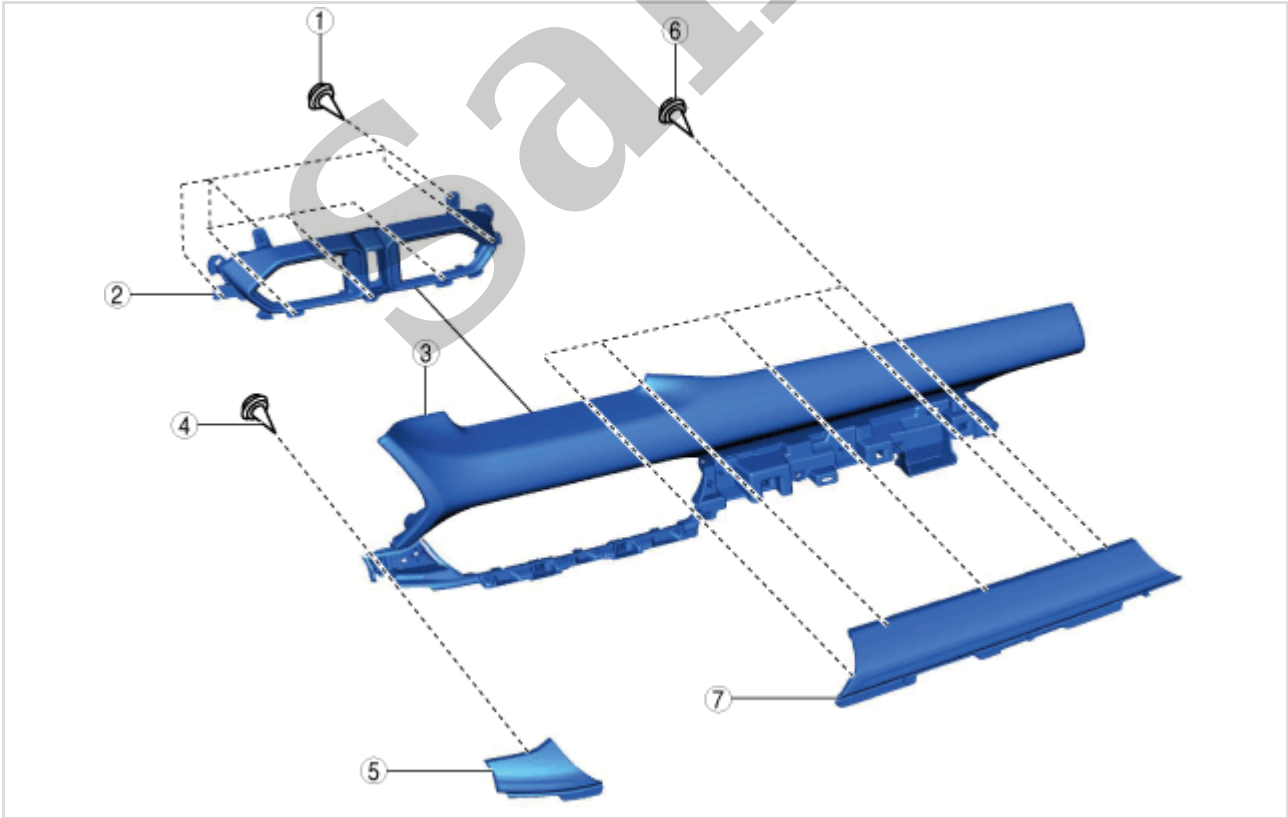


ac5uuw00006714

1	Screw
---	-------

7.Set the driver-side lower panel aside to a position where the cluster switch hooks can be detached.

8.Disconnect the cluster switch connector.

9.With the hooks pressed in the direction of arrows (1) shown in the figure, push out the cluster switch in the direction of arrow (2) and remove it from the driver-side lower panel.

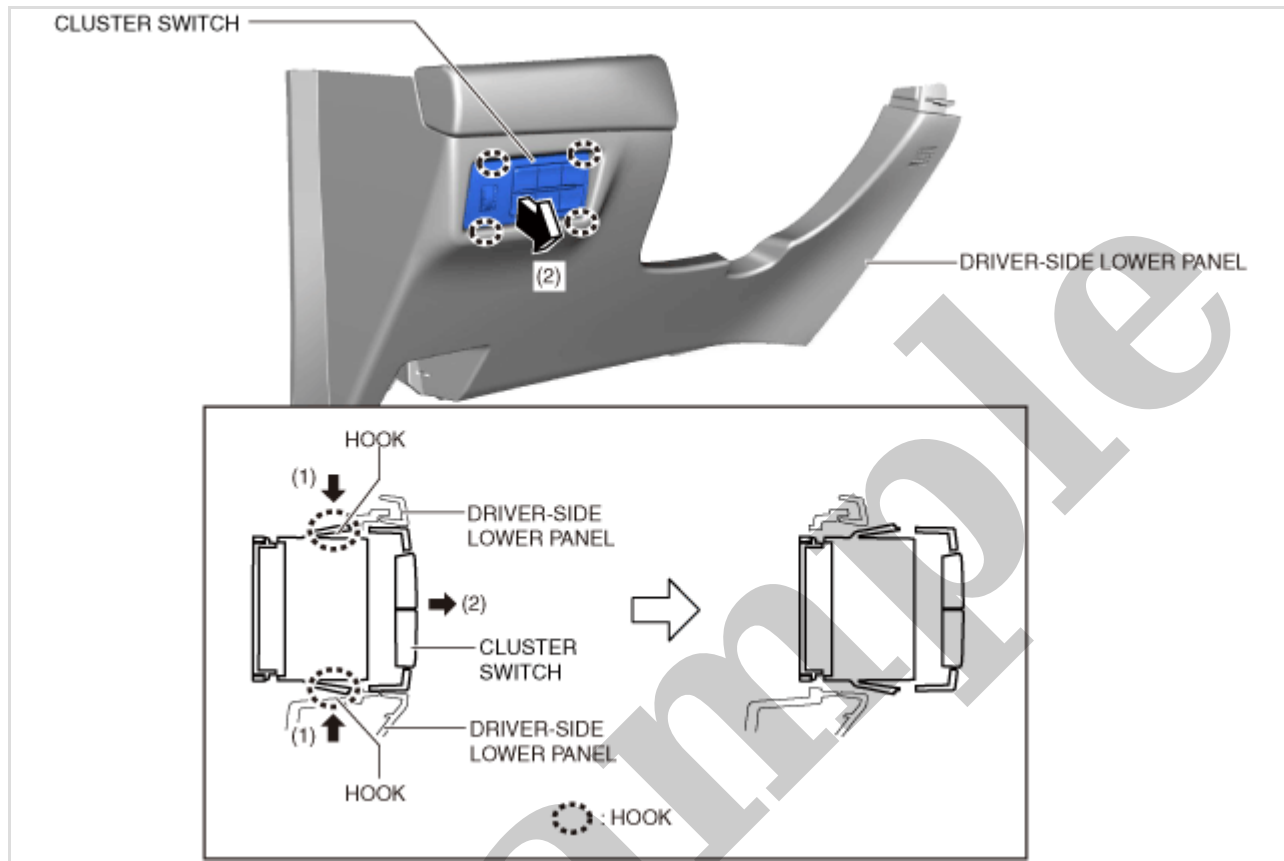


ac5uuw00010101

10.Install in the reverse order of removal.

•Meter hood No.2 (With active driving display (auto flip-up type)) cannot be disassembled. When replacing Meter hood No.2 (With active driving display (auto flip-up type)), refer to the METER HOOD REMOVAL/INSTALLATION. (See **METER HOOD REMOVAL/INSTALLATION.**)

Meter hood No.2 (With active driving display (windshield type))

1.Disassemble in the order shown in the figure.

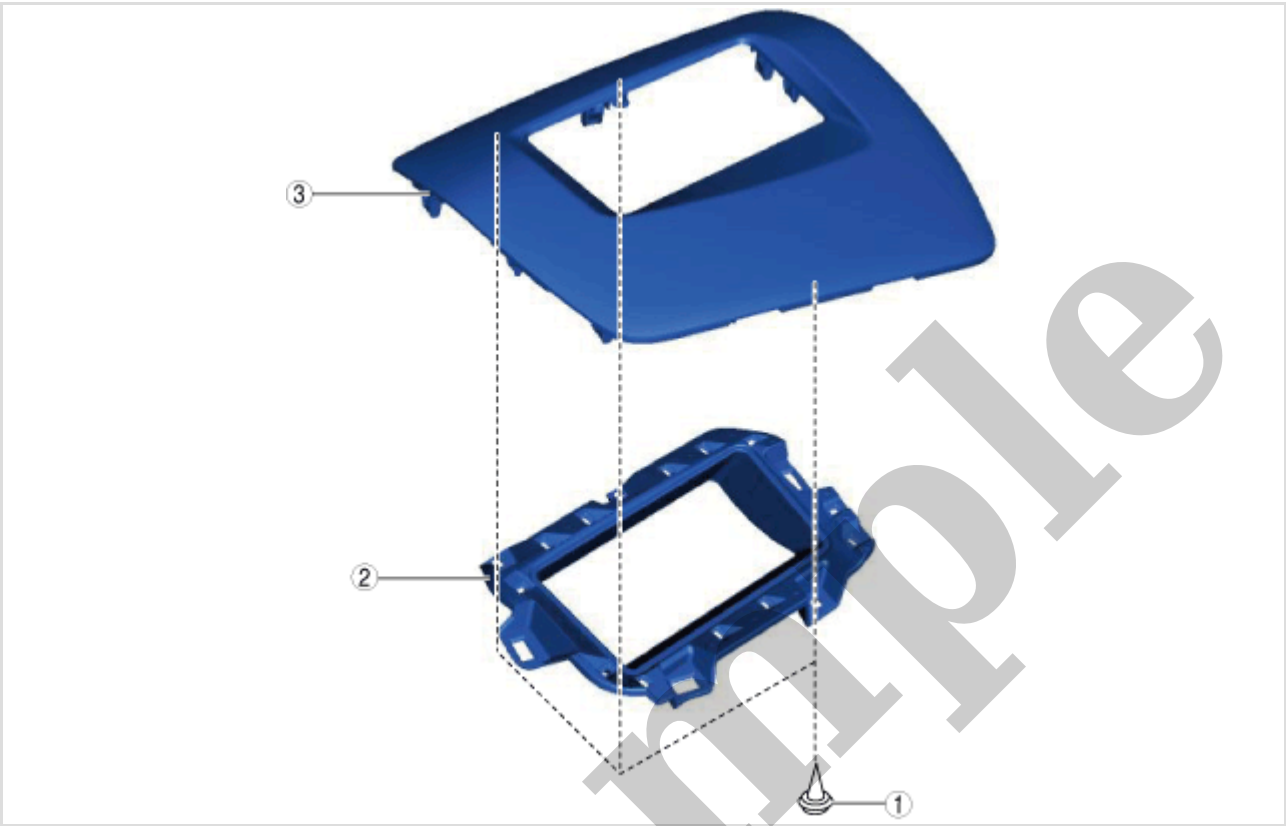

ac5uuw00006712

1	Screw
2	Hole cover
3	Meter hood No.2


2.Assemble in the reverse order of disassembly.

CONSOLE SIDE PANEL REMOVAL/INSTALLATION


SM2899461

id09170060660

1. Insert the clean cloth in the position shown in the figure.

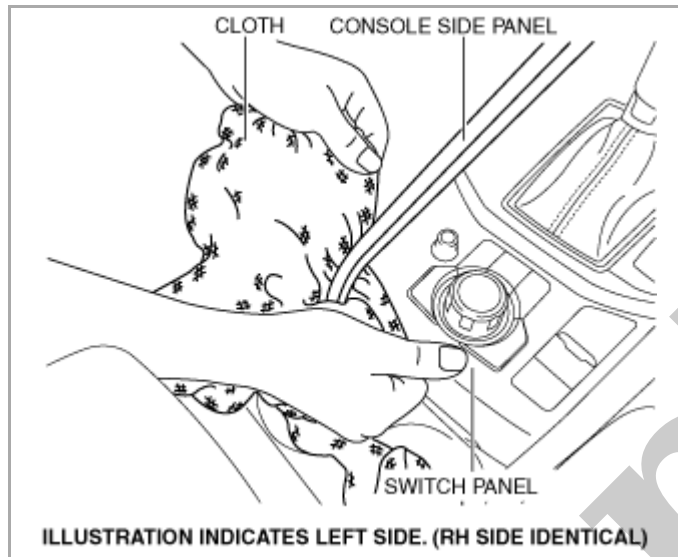


2. Pull the clean cloth up in the direction of the arrow shown in the figure and remove the clips.

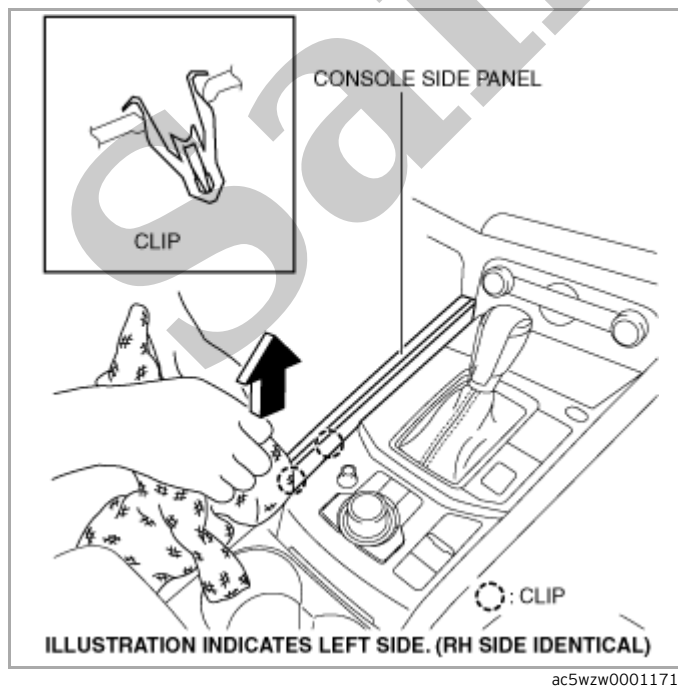

3. Hold the shaded area shown in the figure, move the console side panel in the direction of the arrow, and remove it while detaching the clips and guides.








9.Install in the reverse order of removal.

Sample

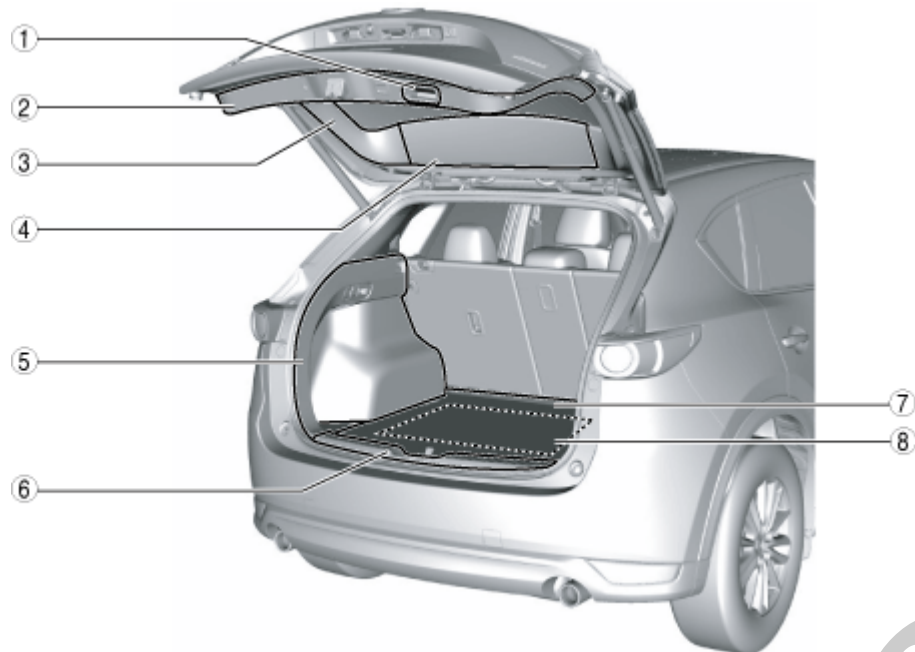

ac5uuw00007967

1	Liftgate recess (See LIFTGATE RECESS REMOVAL/INSTALLATION.)
2	Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
3	Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
4	Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
5	Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
6	Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
7	Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
8	Sub-trunk (See SUB-TRUNK REMOVAL/INSTALLATION.)

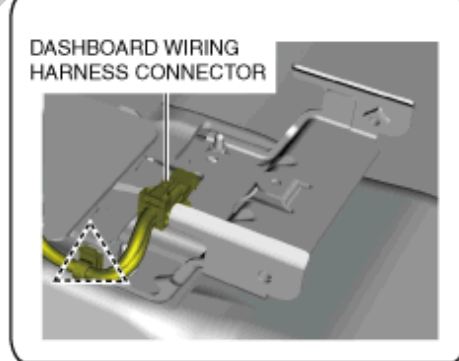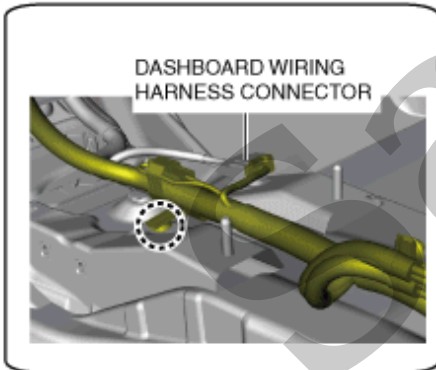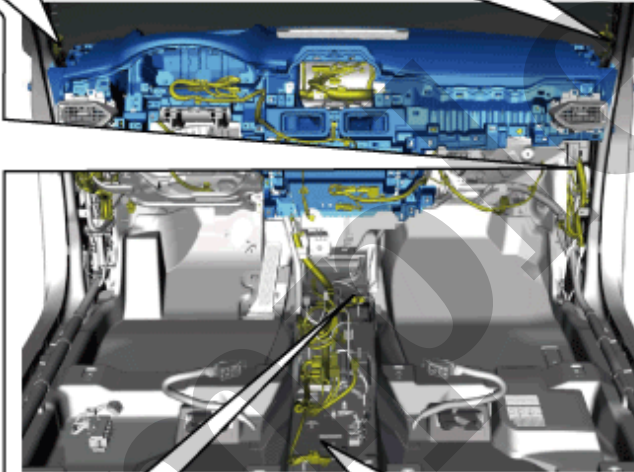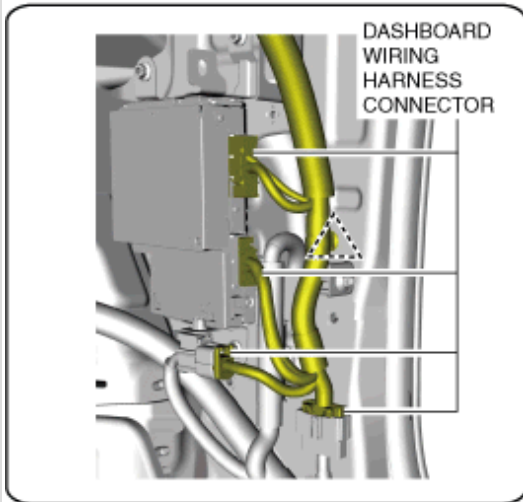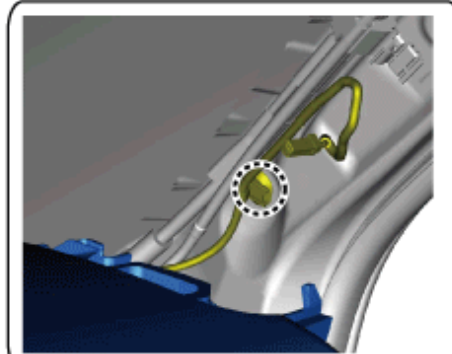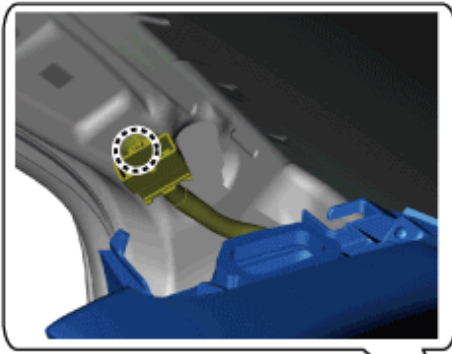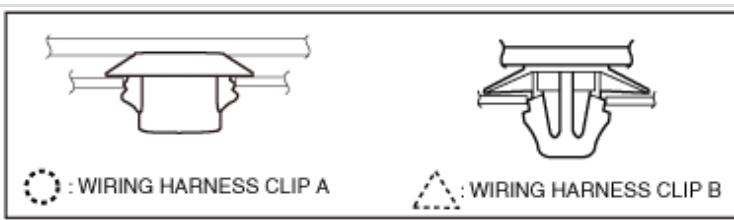


ac5uuw00006727

9.Remove the bolts.

Note

- If the plate nuts cannot be rotated by hand, loosen the plate nuts using a hexagonal wrench.

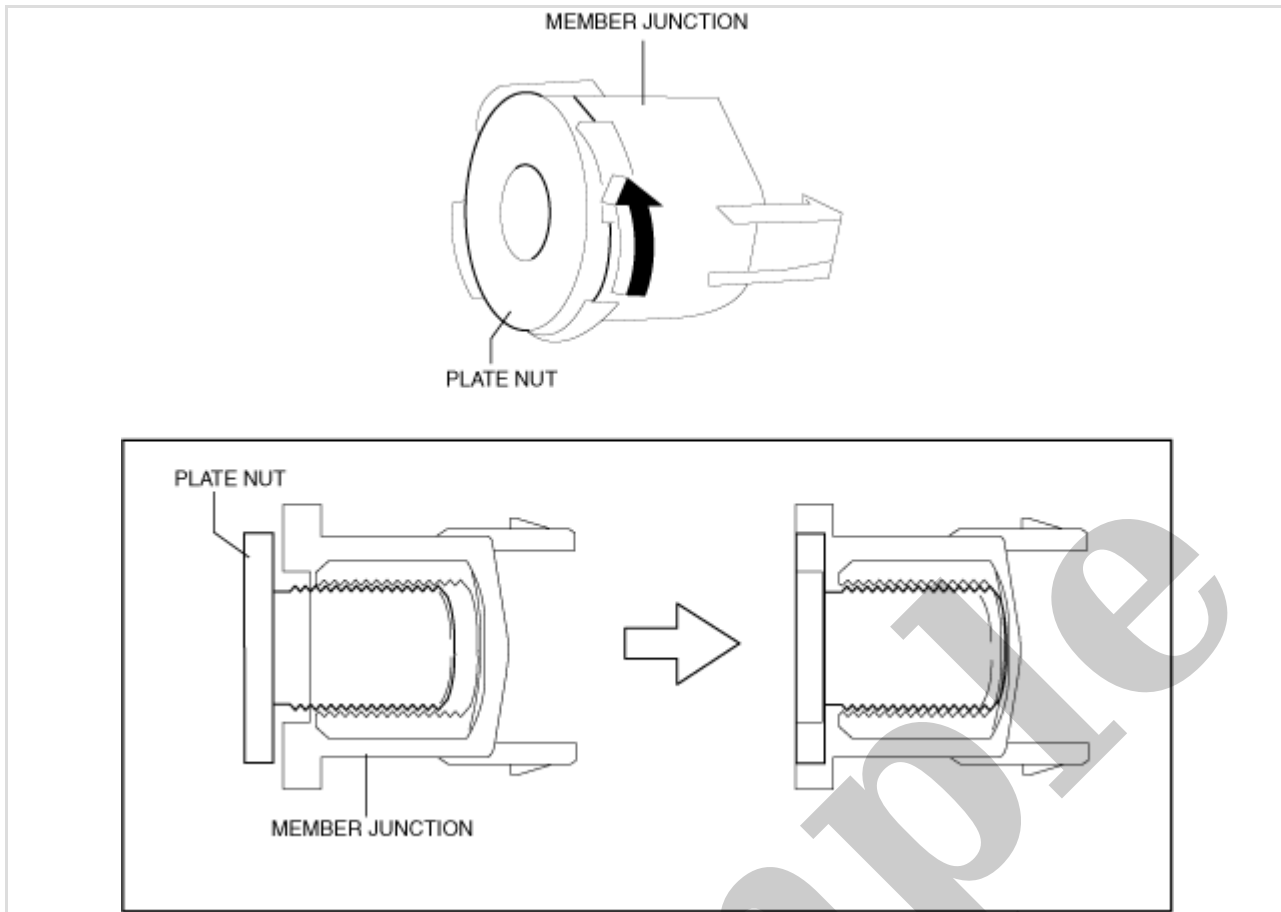


ac5uuw00006734


2. Verify that the member junction tabs are engaged to the dashboard.

Caution

- If the member junction tabs are disengaged from the dashboard when inserting the dashboard into the cabin, the vehicle body could be damaged. Before inserting the dashboard into the cabin, verify that the member junction tabs are engaged with the dashboard.

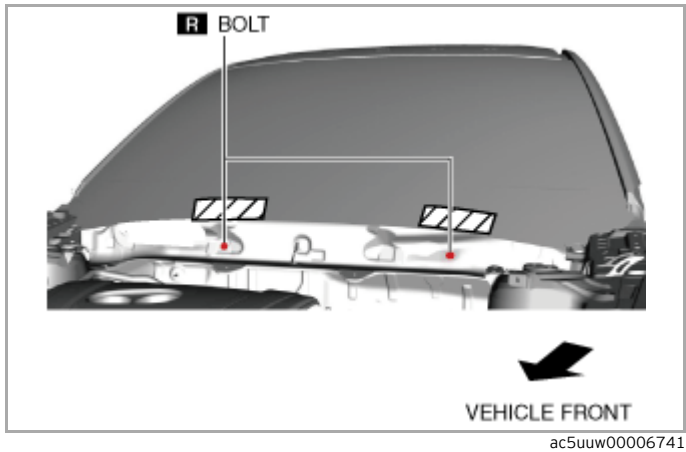


10.Tighten bolts A and B to the specified torque and install the caps.

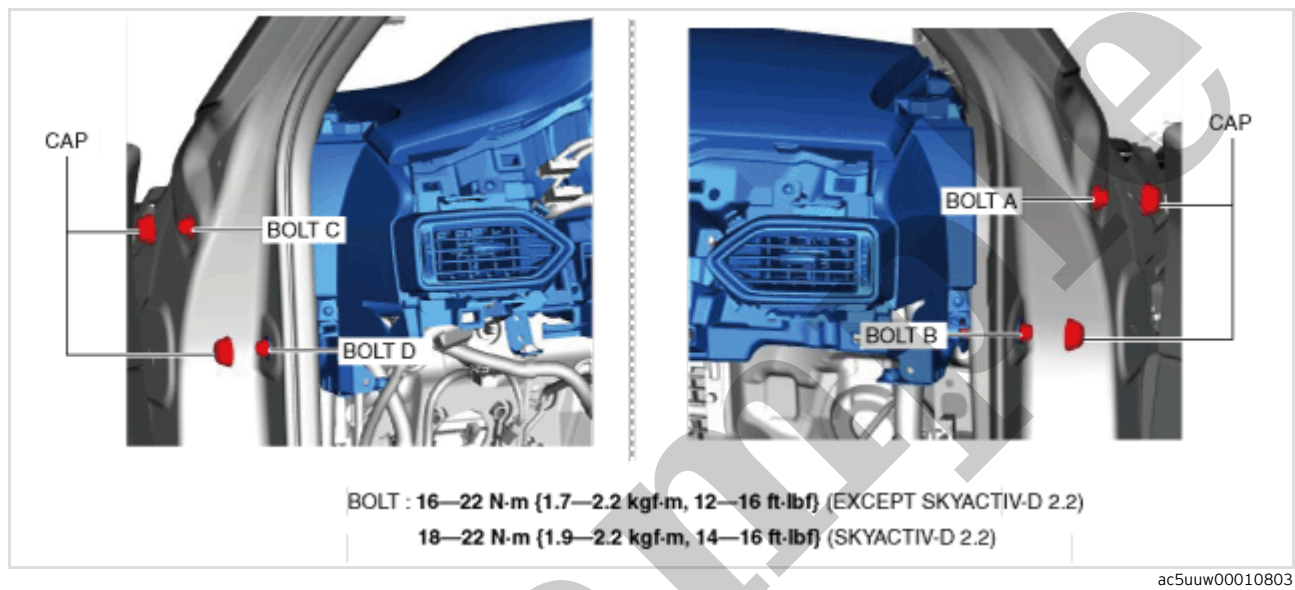

11.Tighten bolts C and D to the specified torque and install the caps.

12.Tighten the bolts to the specified torque.

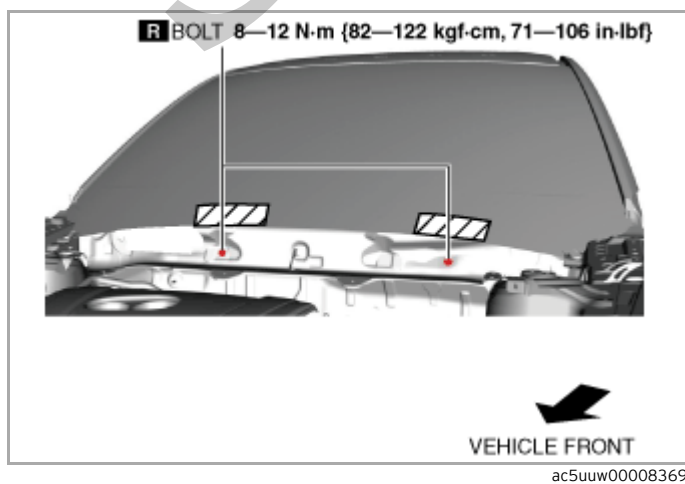

13.Peel off the protective tape.