


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


## 2018 VOLVO V40 OEM Service and Repair Workshop Manual

[Go to manual page](#)

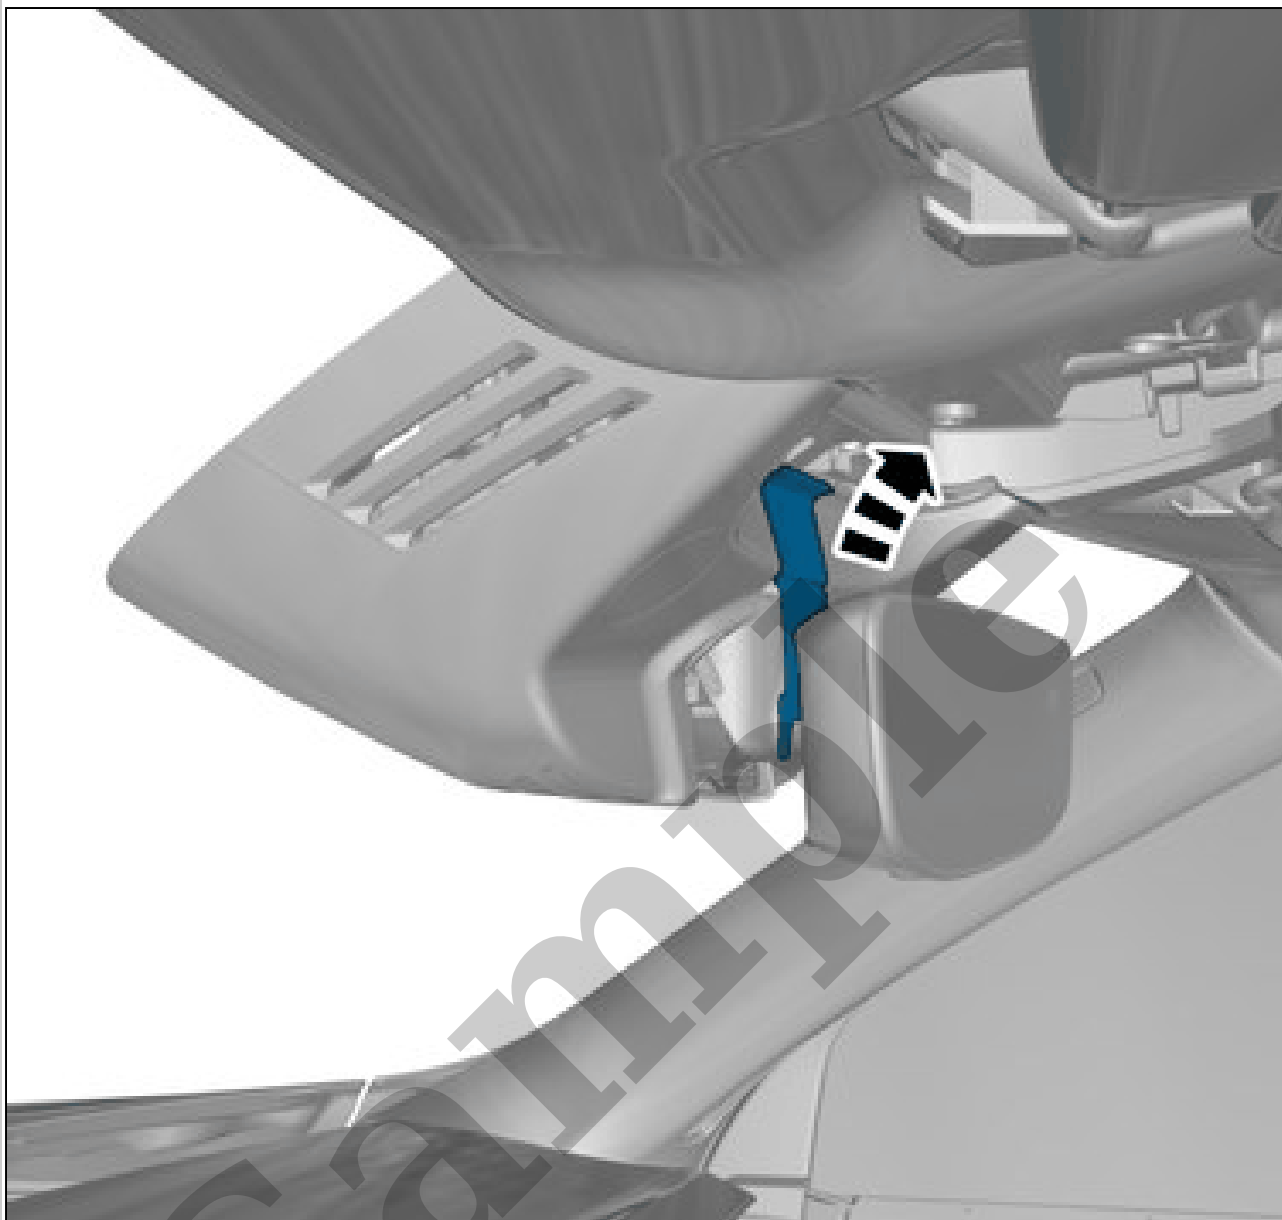

Courtesy of VOLVO CARS CORPORATION


Remove the marked part.

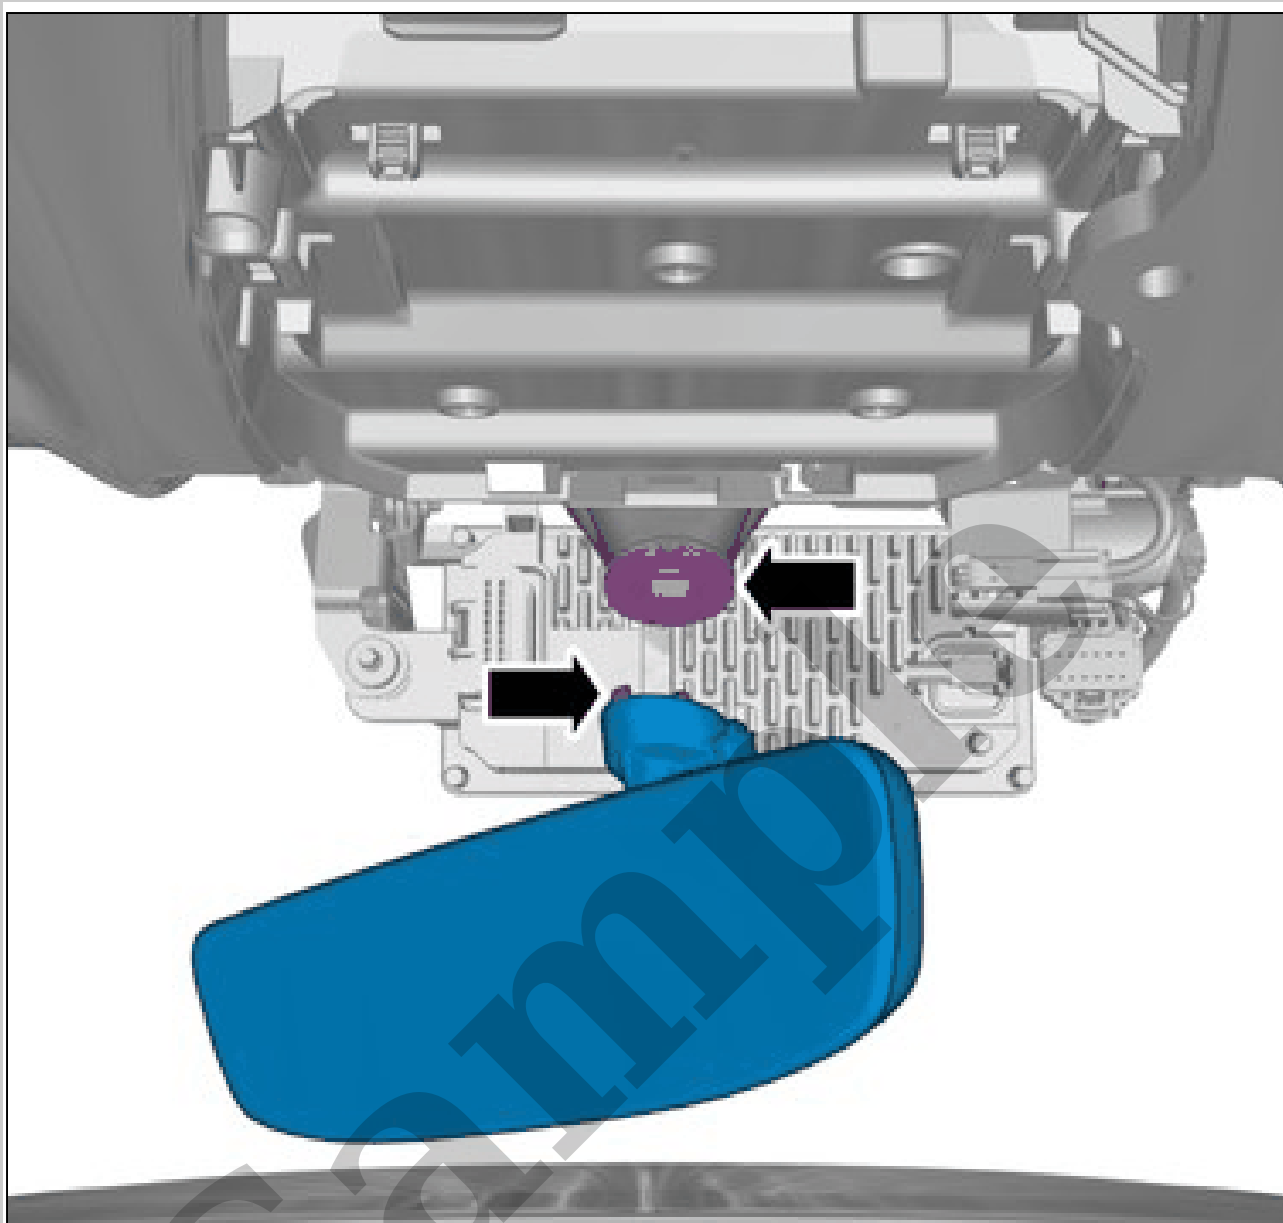


Courtesy of VOLVO CARS CORPORATION

Remove the marked part.

**INNER REAR VIEW MIRROR > INNER REAR VIEW MIRROR [2018-2022] >  
INSTALLATION**

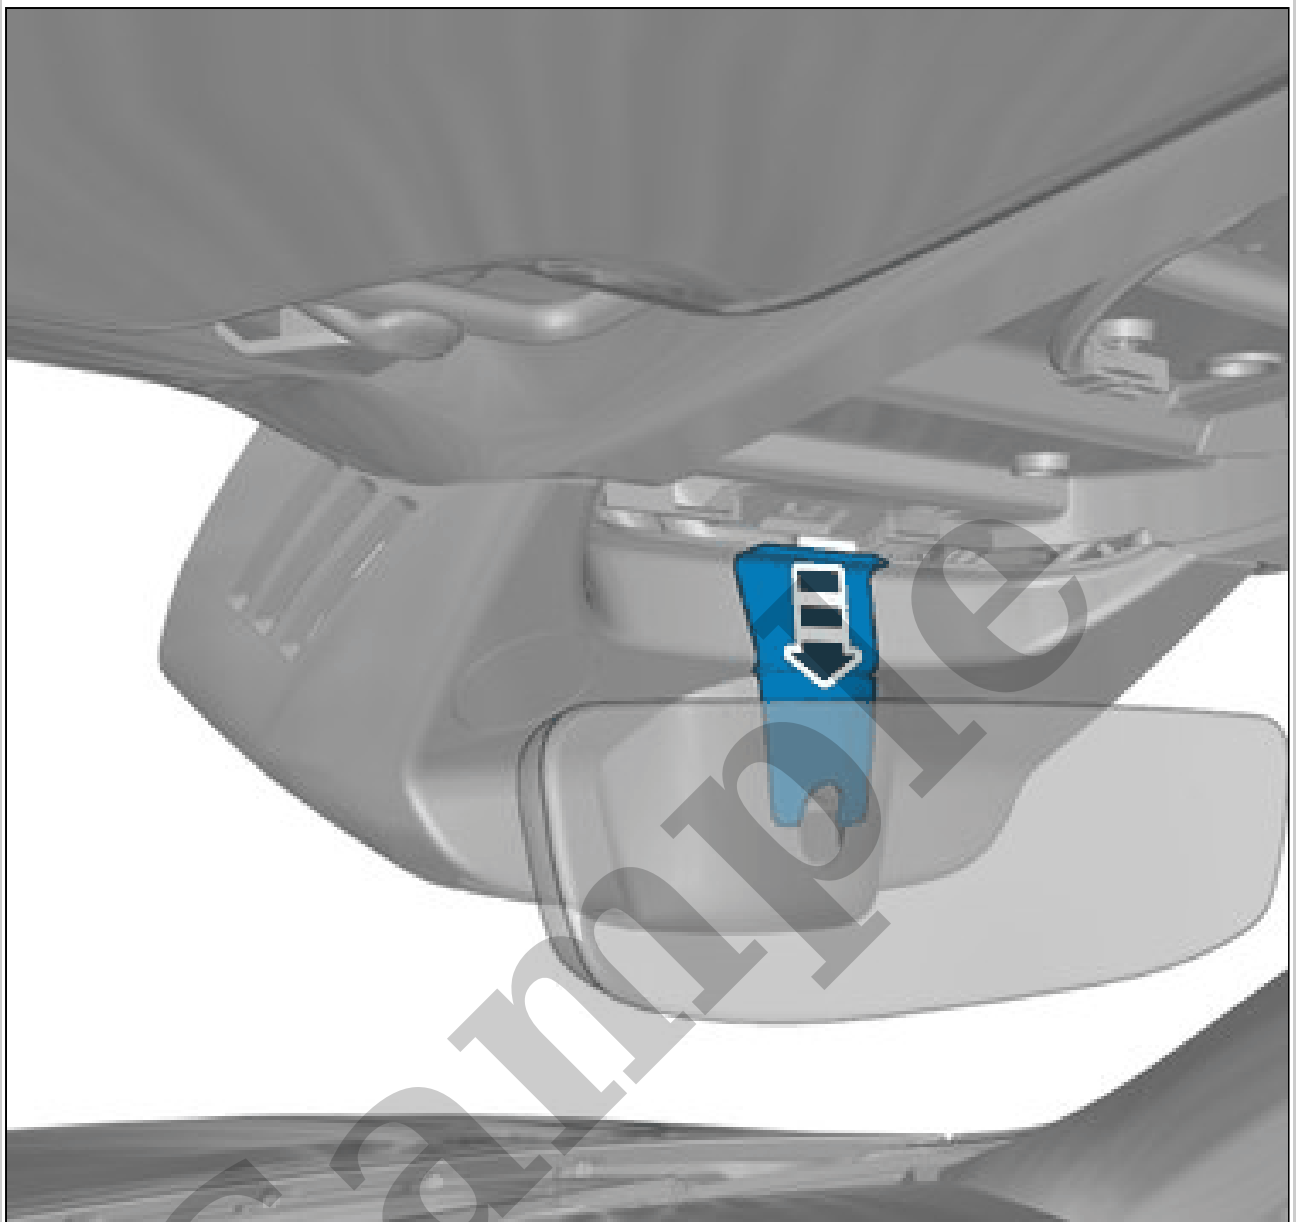

Courtesy of VOLVO CARS CORPORATION

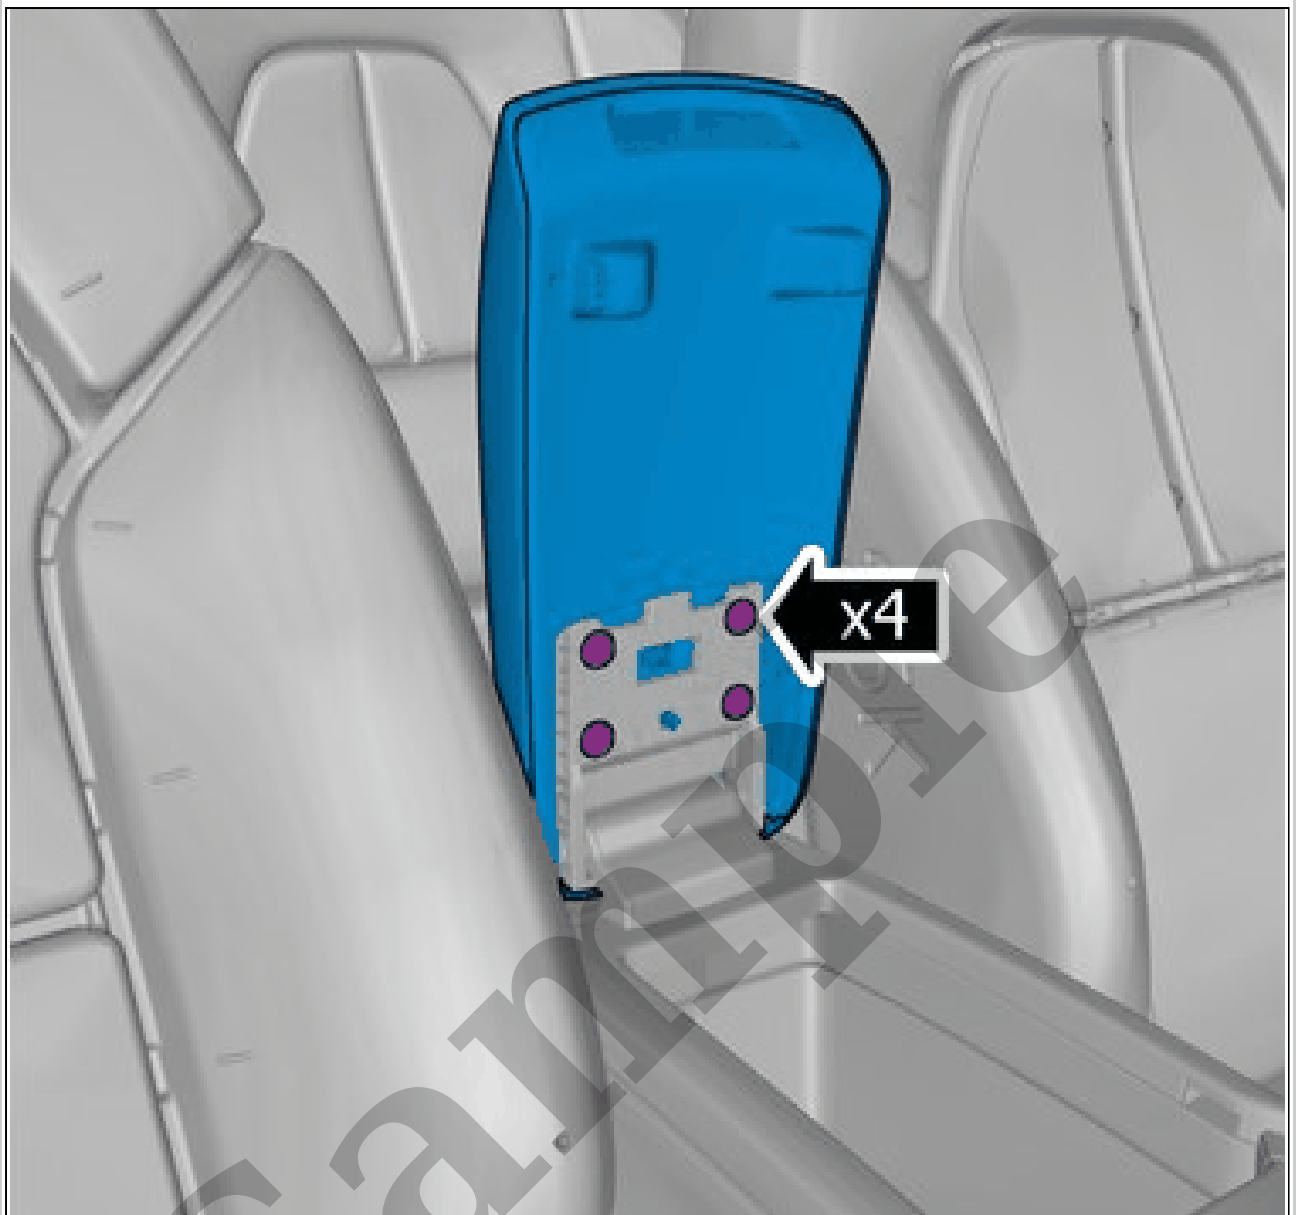


Courtesy of VOLVO CARS CORPORATION

Remove the screws.  
Remove the marked part.

### **LID/ARMREST, FLOOR CONSOLE > LID/ARMREST, FLOOR CONSOLE [2018-2022] > INSTALLATION**


To install, reverse the removal procedure.

### **REAR PANEL, FLOOR CONSOLE > REAR PANEL, FLOOR CONSOLE [2018-2019 | 2019-2022, B4204T18; B4204T47 | 2021-2022, E400V6] > REMOVAL AND INSTALLATION**

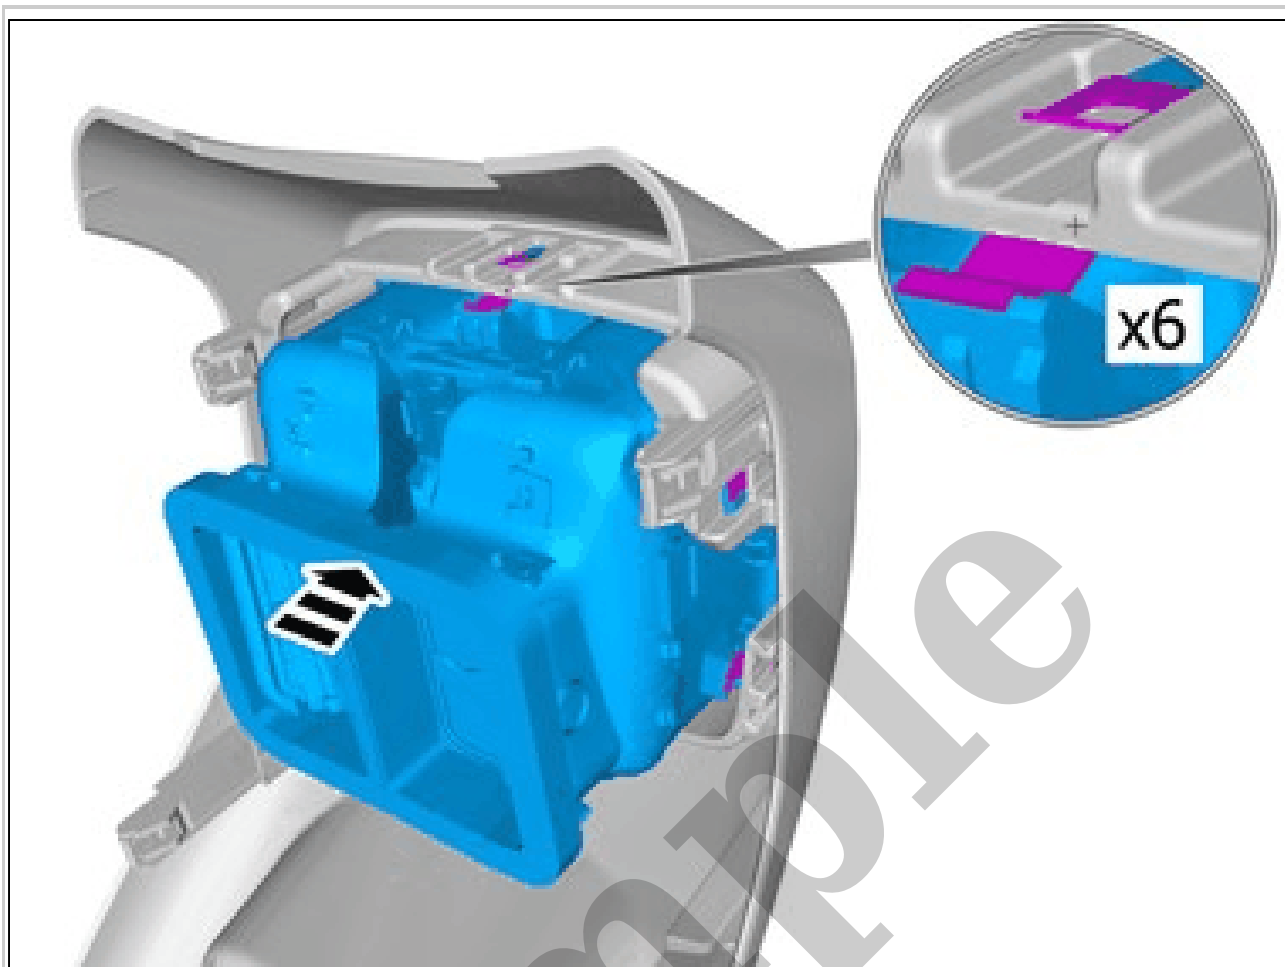




Courtesy of VOLVO CARS CORPORATION

Release the locks.  
Remove the marked part.

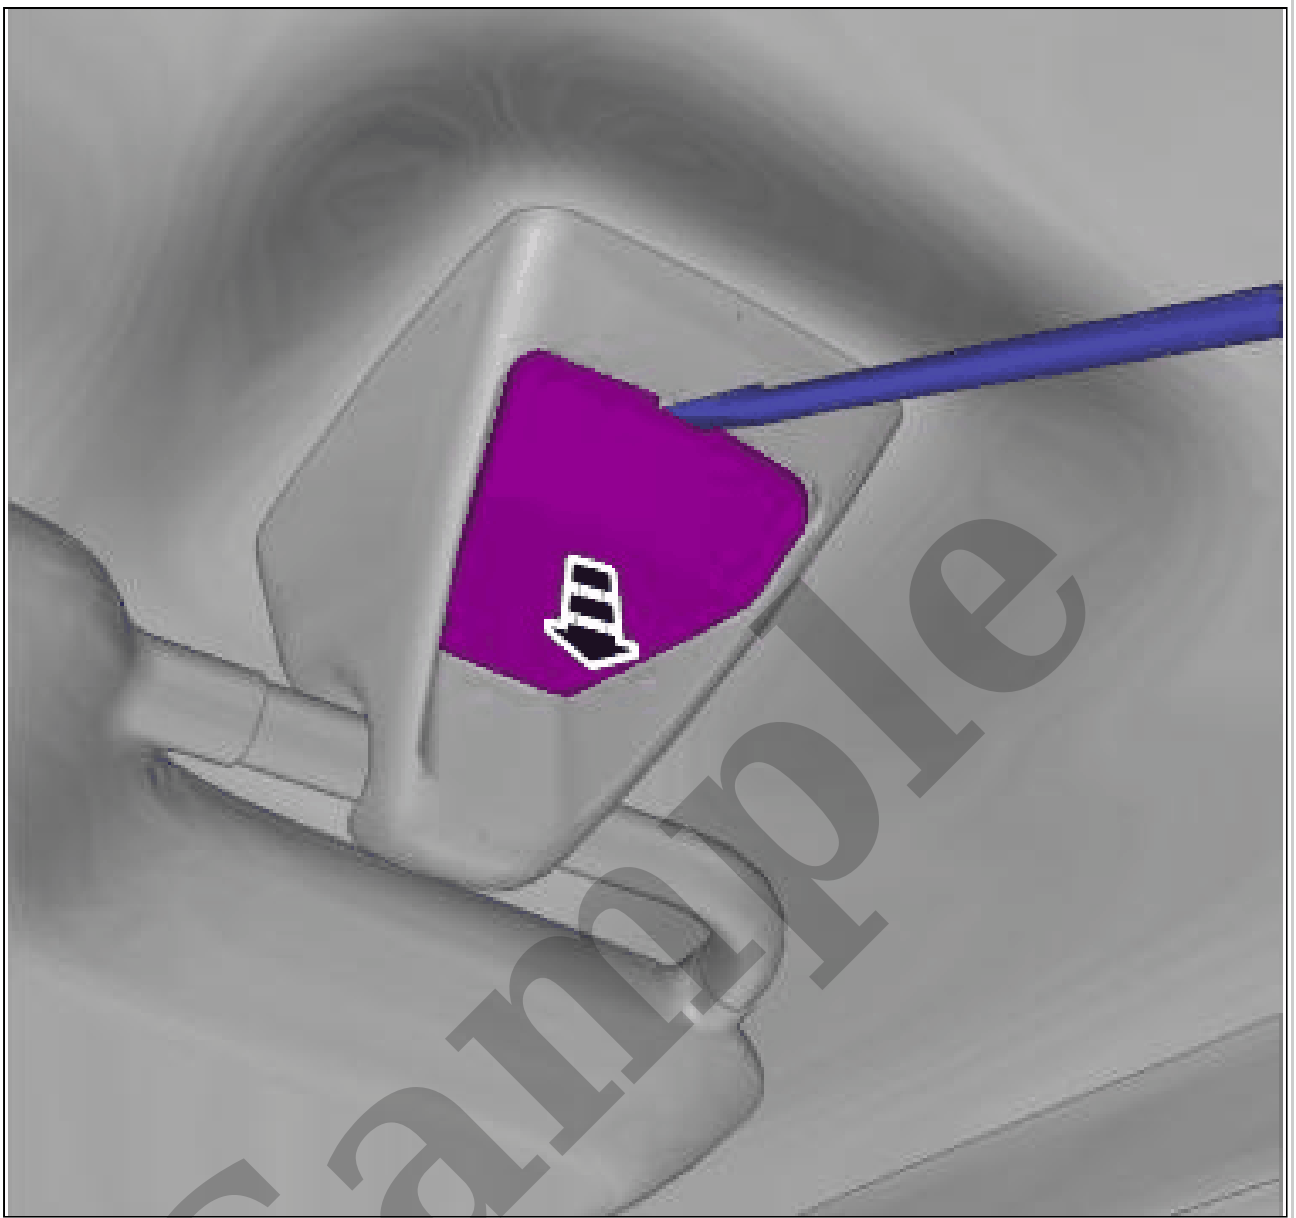

Courtesy of VOLVO CARS CORPORATION


**CAUTION:** *Take extra care when handling the component.*

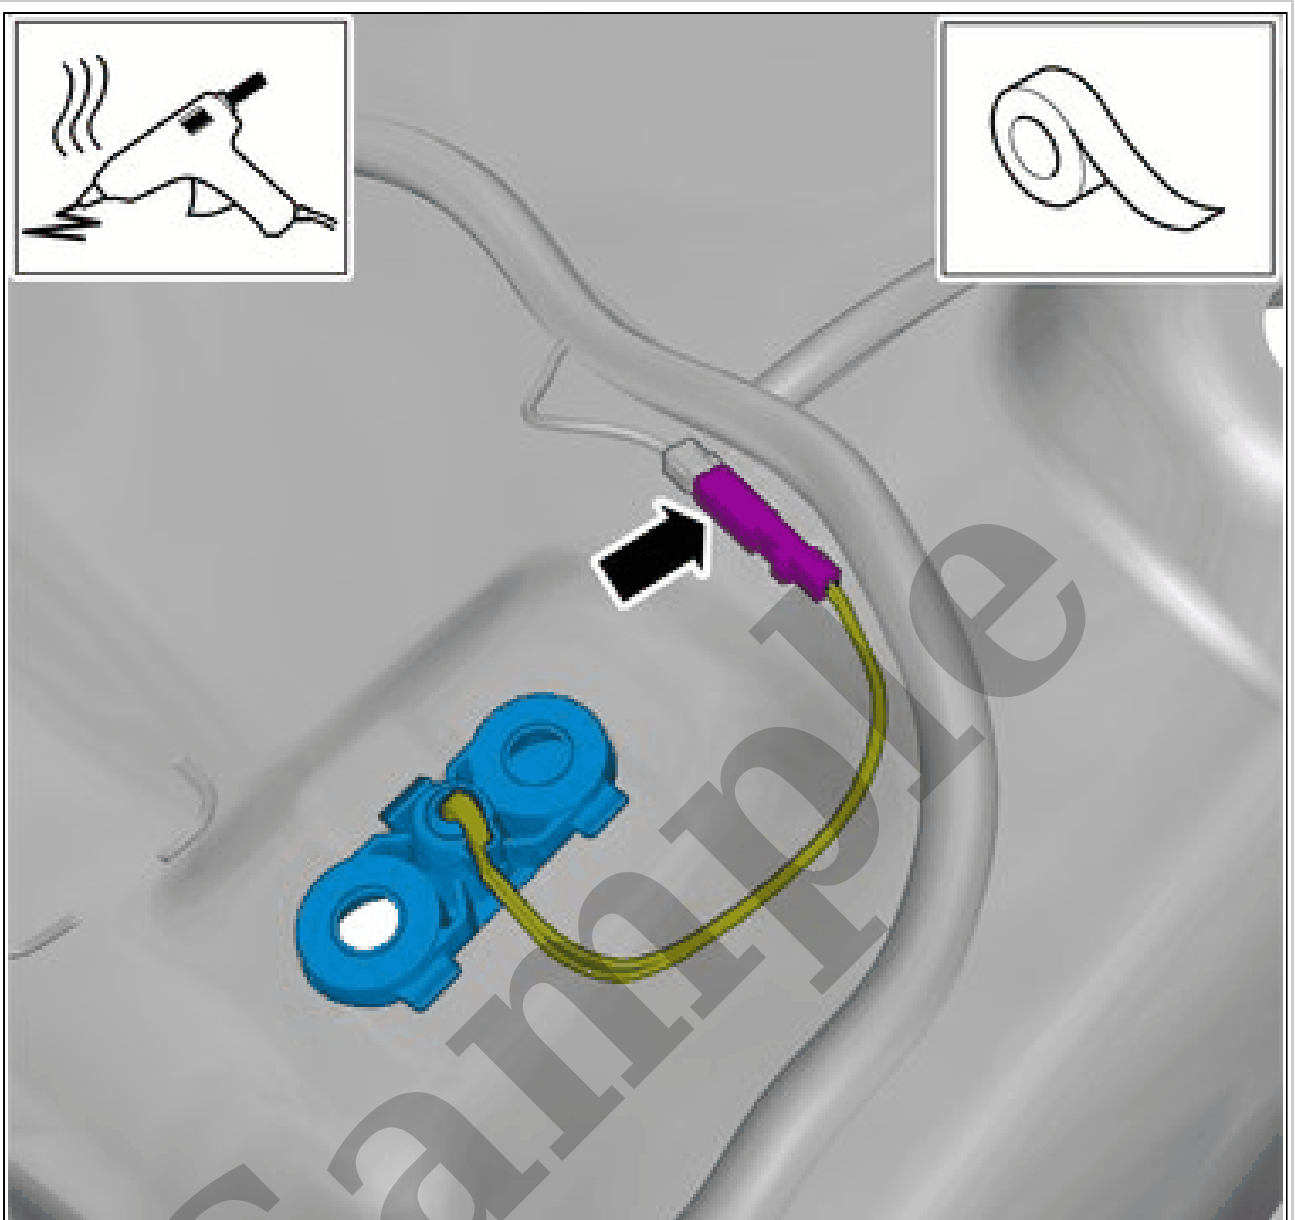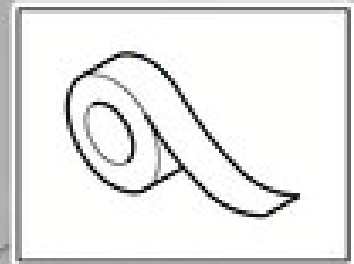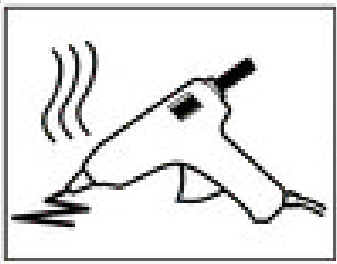

Courtesy of VOLVO CARS CORPORATION

Disconnect the connector.



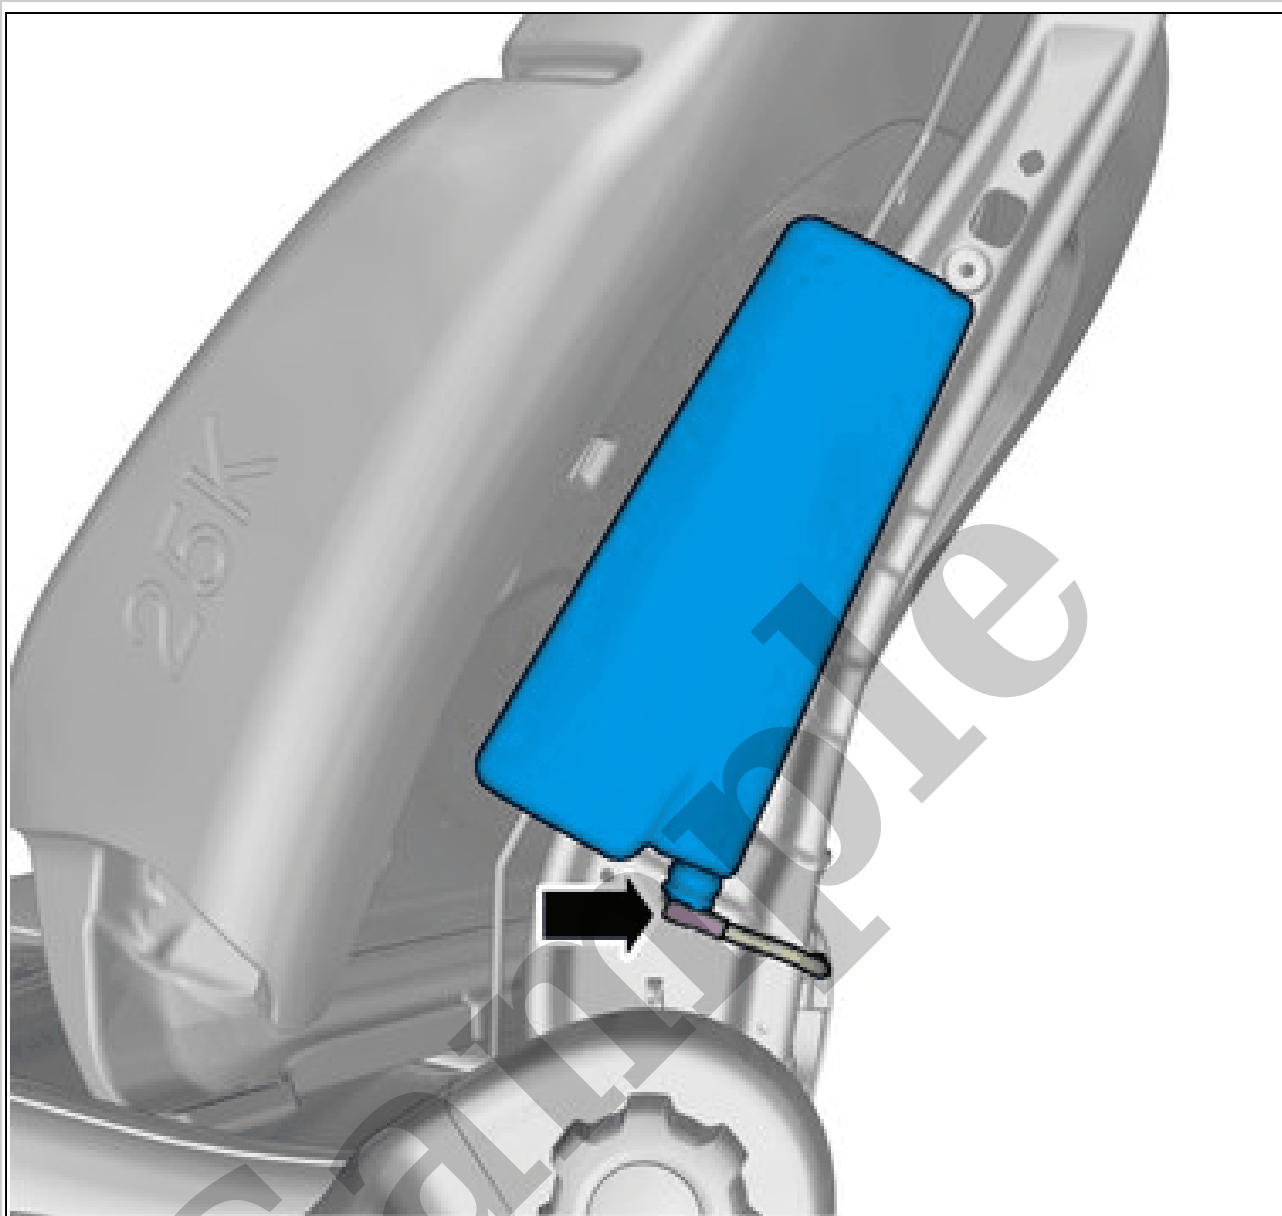

Courtesy of VOLVO CARS CORPORATION

Disconnect the connector.

**NOTE:** Removal steps in this procedure may contain installation details.

Follow instructions about safety information pyrotechnical system. Refer to: SAFETY INFORMATION PYROTECHNICAL SYSTEMS

See information regarding the handling of non-deployed pyrotechnical parts. Refer to: HANDLING NON-DEPLOYED PYROTECHNICAL PART

Perform battery disconnecting and connecting. Refer to: BATTERY DISCONNECTING AND CONNECTING

**WARNING:** The supplemental restraint system (SRS) is active for a certain length of time after the power supply has been disconnected. Wait for a minimum of 30 seconds before disconnecting or removing any SRS components.

Remove back rest, rear panel. Refer to: BACK REST REAR PANEL