

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2019 NISSAN Grand Livina Service and Repair Manual

[Go to manual page](#)

YES >>

Refer to [DTC Diagnosis Procedure](#).

NO-1 >>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2 >>

Confirmation after repair: INSPECTION END

Sample

1. CHECK SELF-DIAGNOSIS RESULTS

Check if any DTC other than “C1F00-XX”, is detected in “Self Diagnostic Result” of “ICC/ADAS 2”.

Is any DTC detected?

YES >>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#)(Without ProPILOT Assist 2.0) or [DTC Index](#)(With ProPILOT Assist 2.0).

NO >>

Replace the ADAS control unit 2. Refer to [Removal and Installation](#)(Without ProPILOT Assist 2.0) or [Removal and Installation](#)(With ProPILOT Assist 2.0).

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C1F00	4B	CONTROL UNIT (Control unit)	Diagnosis condition	When vehicle is READY
			Signal (terminal)	—
			Threshold	ADAS control unit 2 internal malfunction
			Diagnosis delay time	1 second or less

POSSIBLE CAUSE

ADAS control unit 2

FAIL-SAFE

The following systems are canceled.

- Vehicle-to-vehicle distance control mode
- Conventional (fixed speed) cruise control mode
- Steering wheel assistance function
- AEB
- RAB
- I-FCW
- I-LI
- I-BSI
- TSR
- I-DA

CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Set the vehicle to READY.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “C1F00-4B” is detected as the current malfunction in “Self Diagnostic Result” of “ICC/ADAS 2”.

Is “C1F00-4B” detected as the current malfunction?

YES >>

Refer to [DTC Diagnosis Procedure](#).

NO-1 >>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2 >>

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C1F00	71	CONTROL UNIT (Control unit)	Diagnosis condition	When vehicle is READY
			Signal (terminal)	—
			Threshold	ADAS control unit 2 internal malfunction
			Diagnosis delay time	1 second or less

POSSIBLE CAUSE

ADAS control unit 2

FAIL-SAFE

None

CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Set the vehicle to READY.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “C1F00-71” is detected as the current malfunction in “Self Diagnostic Result” of “ICC/ADAS 2”.

Is “C1F00-71” detected as the current malfunction?

YES >>

Refer to [DTC Diagnosis Procedure](#).

NO-1 >>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2 >>

Confirmation after repair: INSPECTION END

1. CHECK SELF-DIAGNOSIS RESULTS

Check if any DTC other than “C1F00-44”, “C1F00-45”, “C1F00-46”, “C1F00-47”, “C1F00-49”, “C1F00-71”, “C1F00-87” and “C1F96-29” is detected in “Self Diagnostic Result” of “ICC/ADAS 2”.

Is any DTC detected?

YES >>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#).

NO >>

Replace the ADAS control unit 2. Refer to [Removal and Installation](#).

Sample

DTC DETECTION LOGIC

DTC		CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C1F00	71	CONTROL UNIT (Control unit)	Diagnosis condition	Set the vehicle to READY
			Signal (terminal)	—
			Threshold	ADAS control unit 2 internal malfunction
			Diagnosis delay time	1 second or less

POSSIBLE CAUSE

ADAS control unit 2

FAIL-SAFE

The following systems are canceled.

- Vehicle-to-vehicle distance control mode
- Conventional (fixed speed) cruise control mode
- Steering wheel assistance function
- AEB
- RAB
- I-FCW
- I-LI
- I-BSI
- TSR
- I-DA

CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Set the vehicle to READY.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “C1F00-71” is detected as the current malfunction in “Self Diagnostic Result” of “ICC/ADAS 2”.

Is “C1F00-71” detected as the current malfunction?

YES >>

Refer to [DTC Diagnosis Procedure](#).

NO-1 >>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2 >>

Sample

1. CHECK SELF-DIAGNOSIS RESULTS

Check if any DTC other than “C1F00-1C”, “C1F00-44”, “C1F00-45”, “C1F00-46”, “C1F00-49”, “C1F00-71” and “C1F00-87” is detected in “Self Diagnostic Result” of “ICC/ADAS 2”.

Is any DTC detected?

YES >>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#).

NO >>

Replace the ADAS control unit 2. Refer to [Removal and Installation](#).

Sample