





Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


2020 Lexus NX 300 Service and Repair Manual

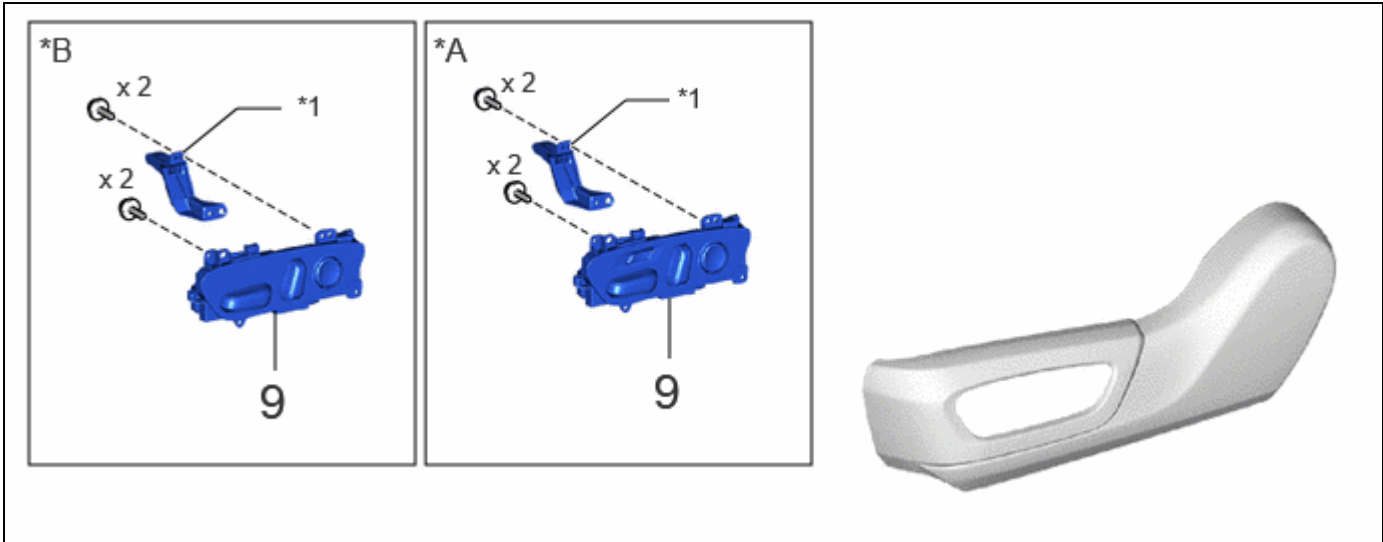


[Go to manual page](#)




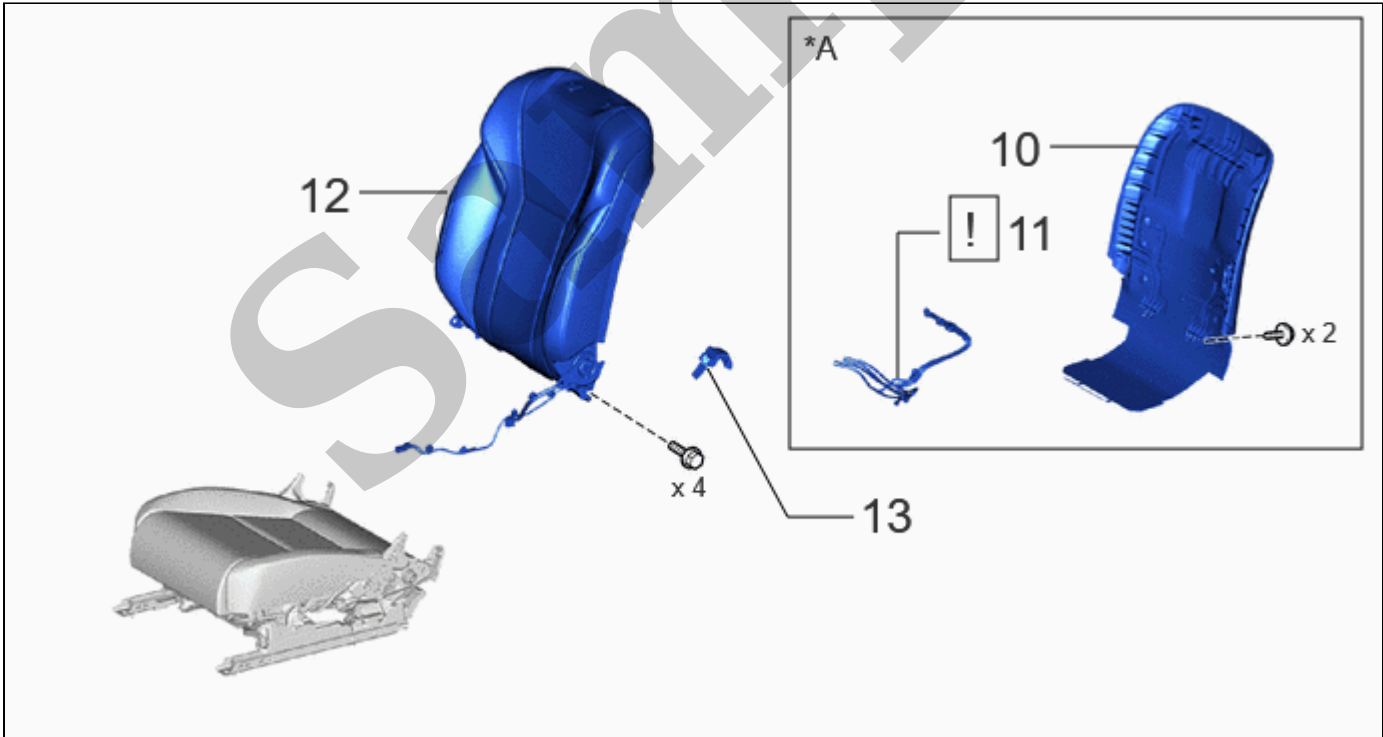


PROCEDURE		PART NAME CODE			
9	FRONT POWER SEAT SWITCH LH	84922C	-	-	-

*A	for 10 Way Seat Type	*B	for 8 Way Seat Type
*1	SEAT ADJUSTER SHIELD CLAMP BRACKET LH	-	-

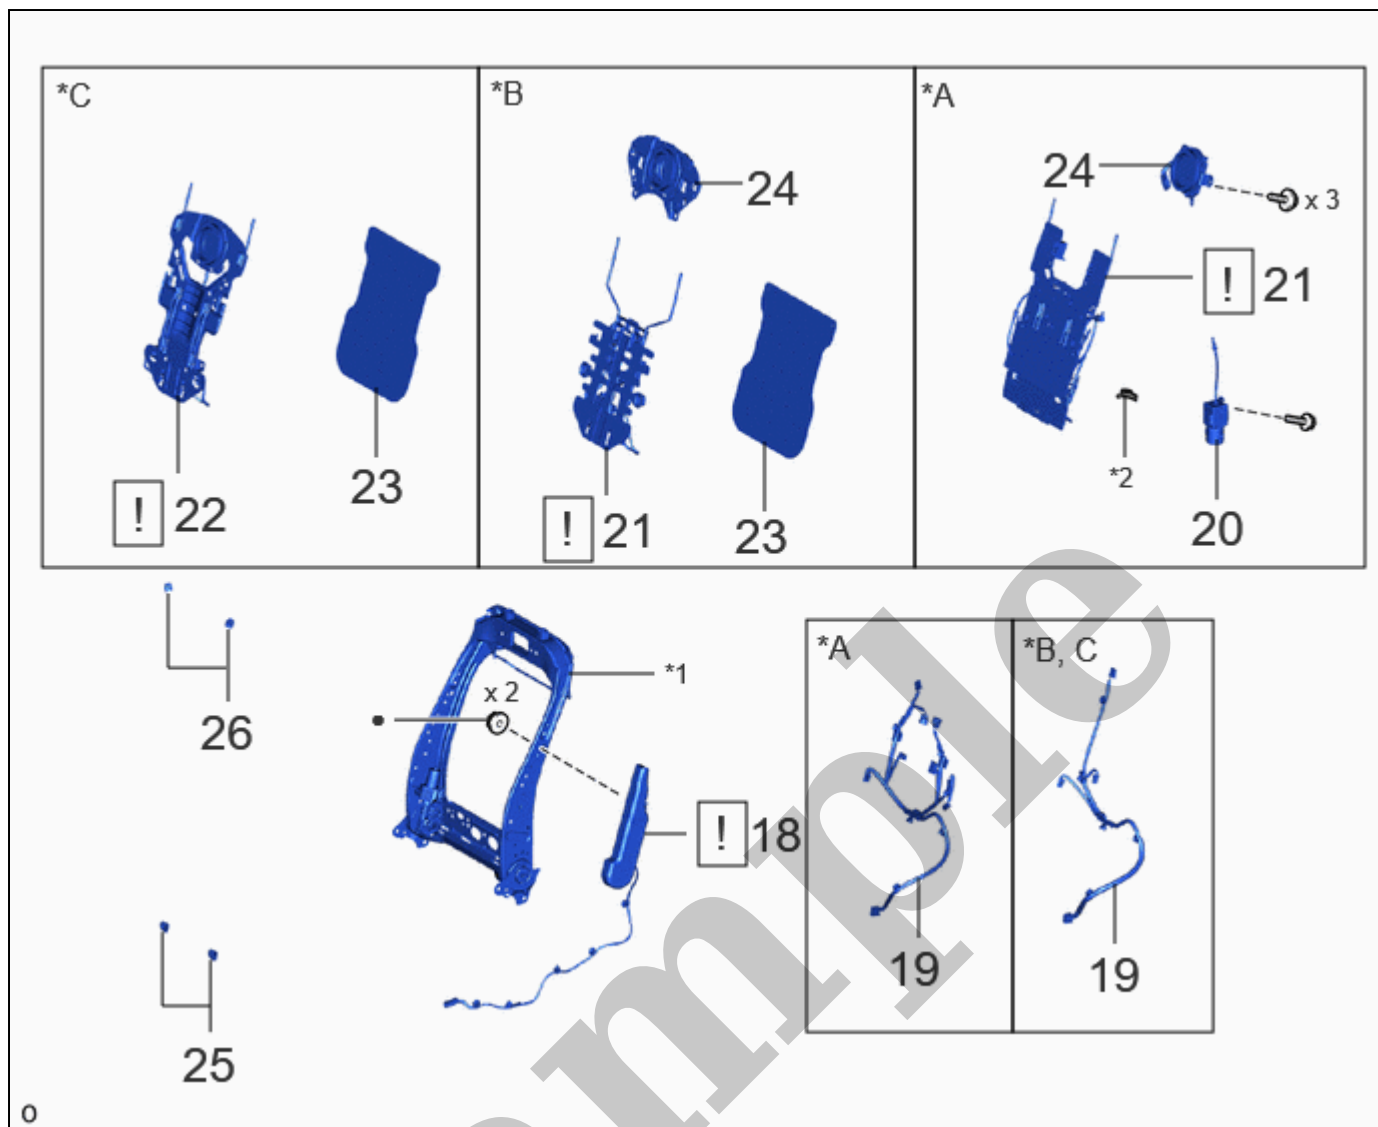


PROCEDURE		PART NAME CODE			
10	FRONT SEATBACK BOARD SUB-ASSEMBLY LH	71705G	-	-	-



PROCEDURE		PART NAME CODE			
18	FRONT SEAT AIRBAG ASSEMBLY LH	73920B	INFO	-	-
19	FRONT NO. 2 SEAT WIRE LH	8219B	-	-	-
20	LUMBER SUPPORT PUMP SUB-ASSEMBLY LH	72072A	-	-	-
21	LUMBAR SUPPORT ADJUSTER ASSEMBLY LH	72760G	INFO	-	-
22	LUMBAR SUPPORT ADJUSTER ASSEMBLY RH	72750G	INFO	-	-
23	SEATBACK FELT LH	79977Y	-	-	-
24	SEATBACK CLIMATE CONTROL BLOWER LH	87867G	-	-	-
25	FRONT SEATBACK EDGE PROTECTOR LH	71587L	-	-	-
26	FRONT SEATBACK HOOK LH	71759F	-	-	-

*A	w/ Refresh Seat	*B	w/ Lumbar Support
*C	w/o Lumbar Support	-	-
*1	FRONT SEATBACK FRAME SUB-ASSEMBLY LH	*2	HOSE CLIP

*1	FRONT SEAT CUSHION PAD LH	-	-
•	Non-reusable part	-	-

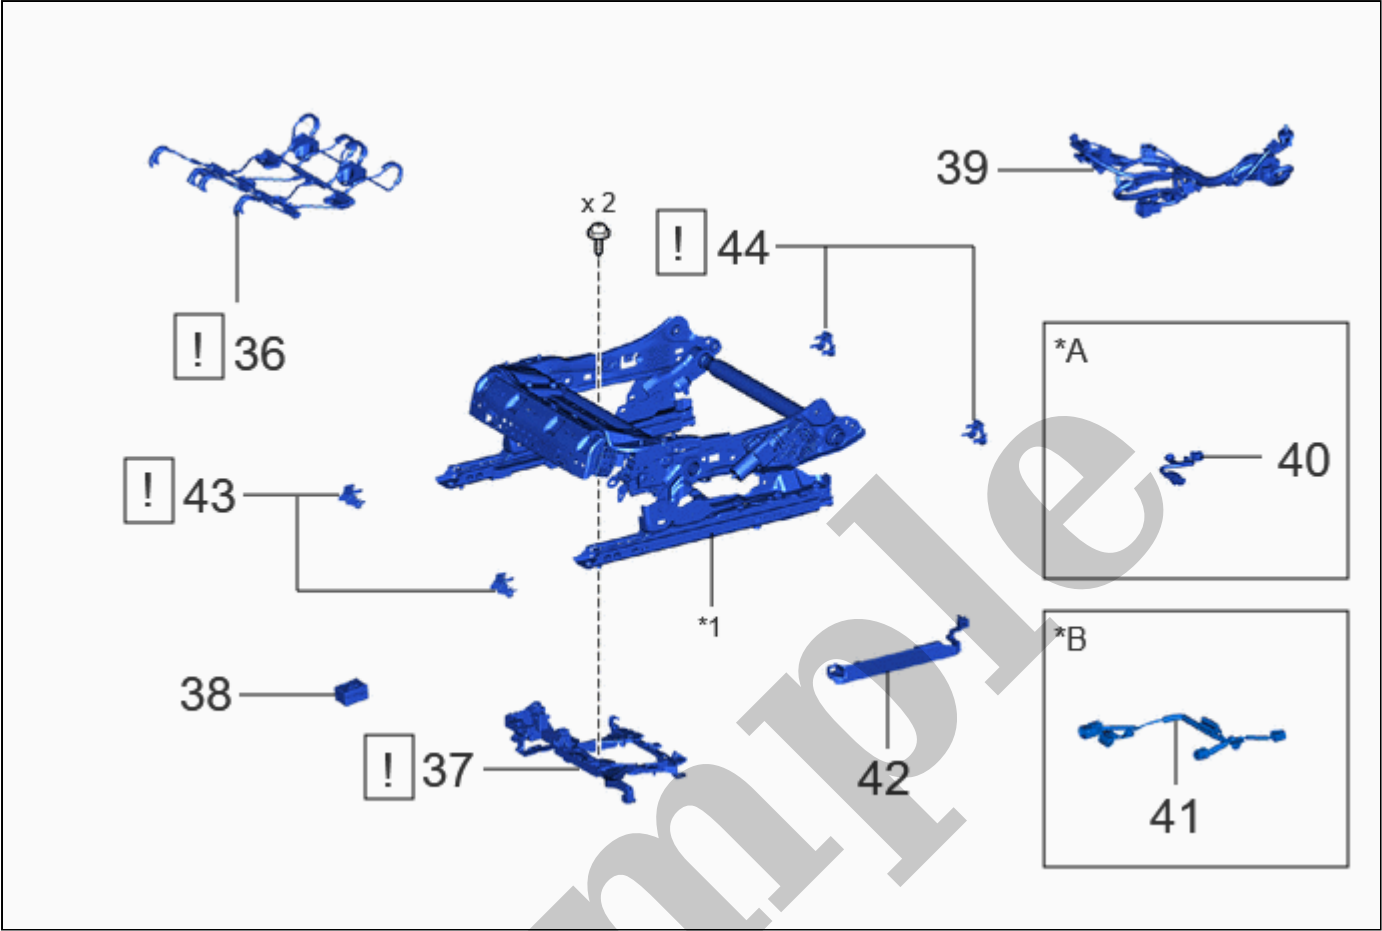

PROCEDURE		PART NAME CODE			
36	FRONT SEAT CUSHION SPRING SUB-ASSEMBLY LH	71051C	INFO	-	-
37	FRONT SEAT CUSHION WIRE HARNESS HOLDER LH	7181BA	INFO	-	-
38	SEAT HEATER CONTROL SUB-ASSEMBLY LH	87501H	-	-	-
39	FRONT SEAT WIRE LH	82192	-	-	-
40	REAR SEAT WIRE LH	82192A	-	-	-
41	FRONT SEAT WIRE RH	82191A	-	-	-
42	FRONT SEAT LOWER CUSHION SHIELD LH	71874U	-	-	-
43	UPPER SEAT TRACK RAIL COVER LH	72265N	INFO	-	-
44	REAR UPPER SEAT TRACK COVER LH	72125V	INFO	-	-

*A	for Driver Side	*B	for Front Passenger Side
*1	FRONT SEAT ADJUSTER ASSEMBLY LH	-	-

PROCEDURE

1. REMOVE WIRING HARNESS SUPPORT

	Remove in this Direction (2)	-	-
---	------------------------------	---	---

- (1) Remove the 2 clips and disconnect the front seat cushion cover sub-assembly LH.
- (2) Remove the clip.
- (3) Place your hands at the position shown in the illustration and pull in the removal direction (1) to detach the guide.
- (4) Using a thin-bladed screwdriver, detach the claw.




HINT:

Tape the thin-bladed screwdriver tip before use.

- (5) Place your hands at the position shown in the illustration and pull in the removal direction (2) to detach the guide and remove the front seat front cushion shield LH.

(b) for 8 Way Seat Type:



	Place Hands Here		Remove in this Direction (1)
	Remove in this Direction (2)	-	-


- (1) Remove the clip.
- (2) Place your hands at the position shown in the illustration and pull in the removal direction (1) to detach the guide.
- (3) Using a thin-bladed screwdriver, detach the claw.

HINT:

Tape the thin-bladed screwdriver tip before use.

- (4) Place your hands at the position shown in the illustration and pull in the removal direction (2) to detach the guide and remove the front seat front cushion shield LH.

4. REMOVE FRONT SEAT CUSHION SHIELD LH

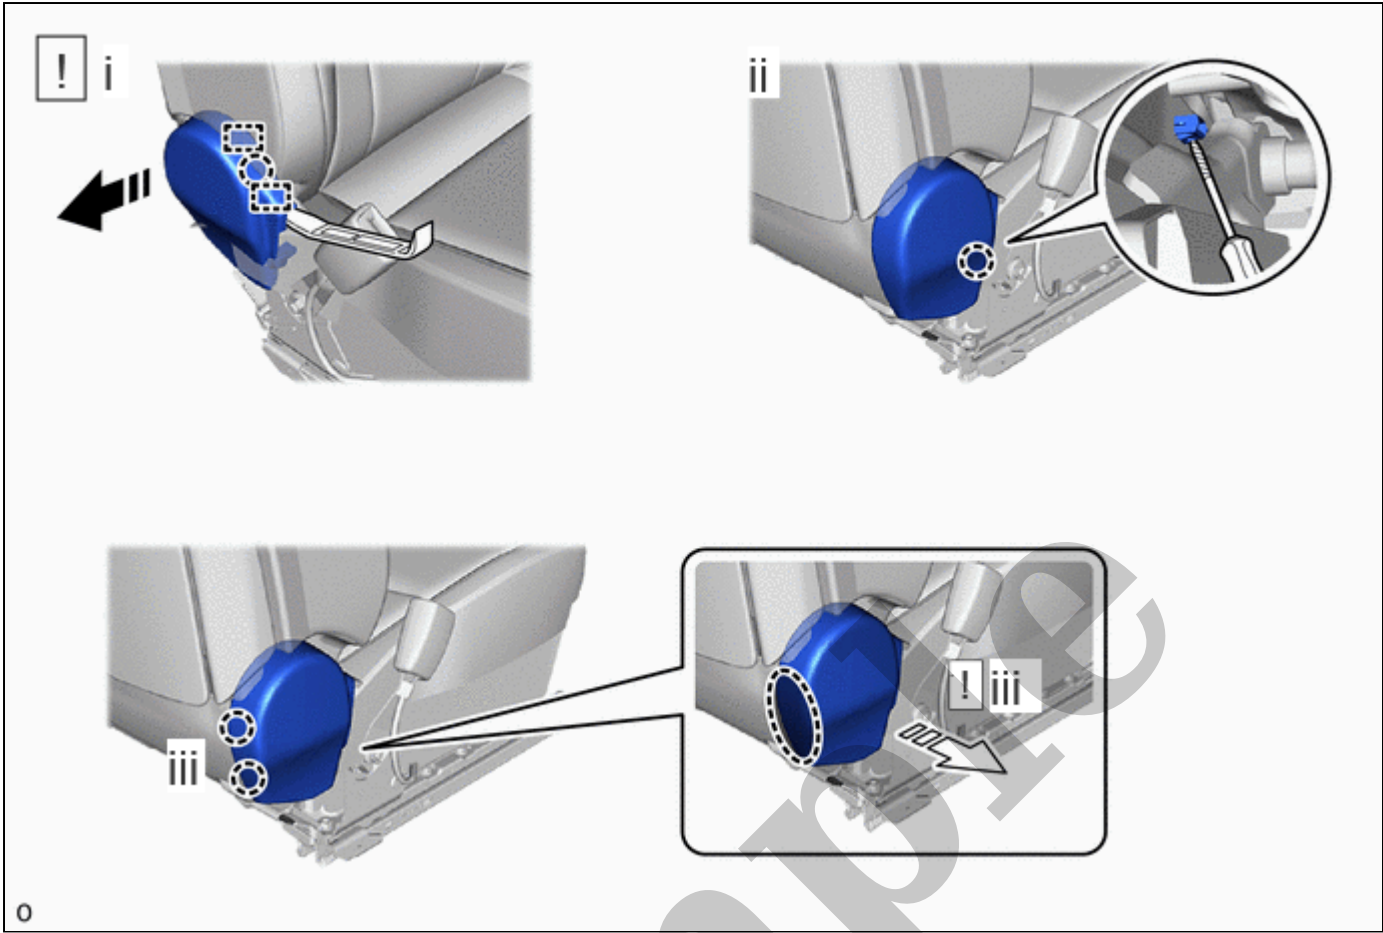

	Place Hands Here		Remove in this Direction (1)
	Remove in this Direction (2)	-	-

- (1) Using moulding remover A, detach the claw and guide.
- (2) Using a thin-bladed screwdriver, detach the claw.
- HINT:**
Tape the thin-bladed screwdriver tip before use.
- (3) Place your hands at the position shown in the illustration and pull in the removal direction (2) to detach the claw and remove the front seat inner cushion shield LH.

6. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH (for Driver Side)

Click here [INFO](#)

7. REMOVE FRONT SEAT INNER BELT ASSEMBLY RH (for Front Passenger Side)


Click here [INFO](#)

8. REMOVE NO. 1 SEAT INNER BELT ANCHOR BRACKET LH

Click here [INFO](#)

9. REMOVE FRONT POWER SEAT SWITCH LH

Click here [INFO](#)

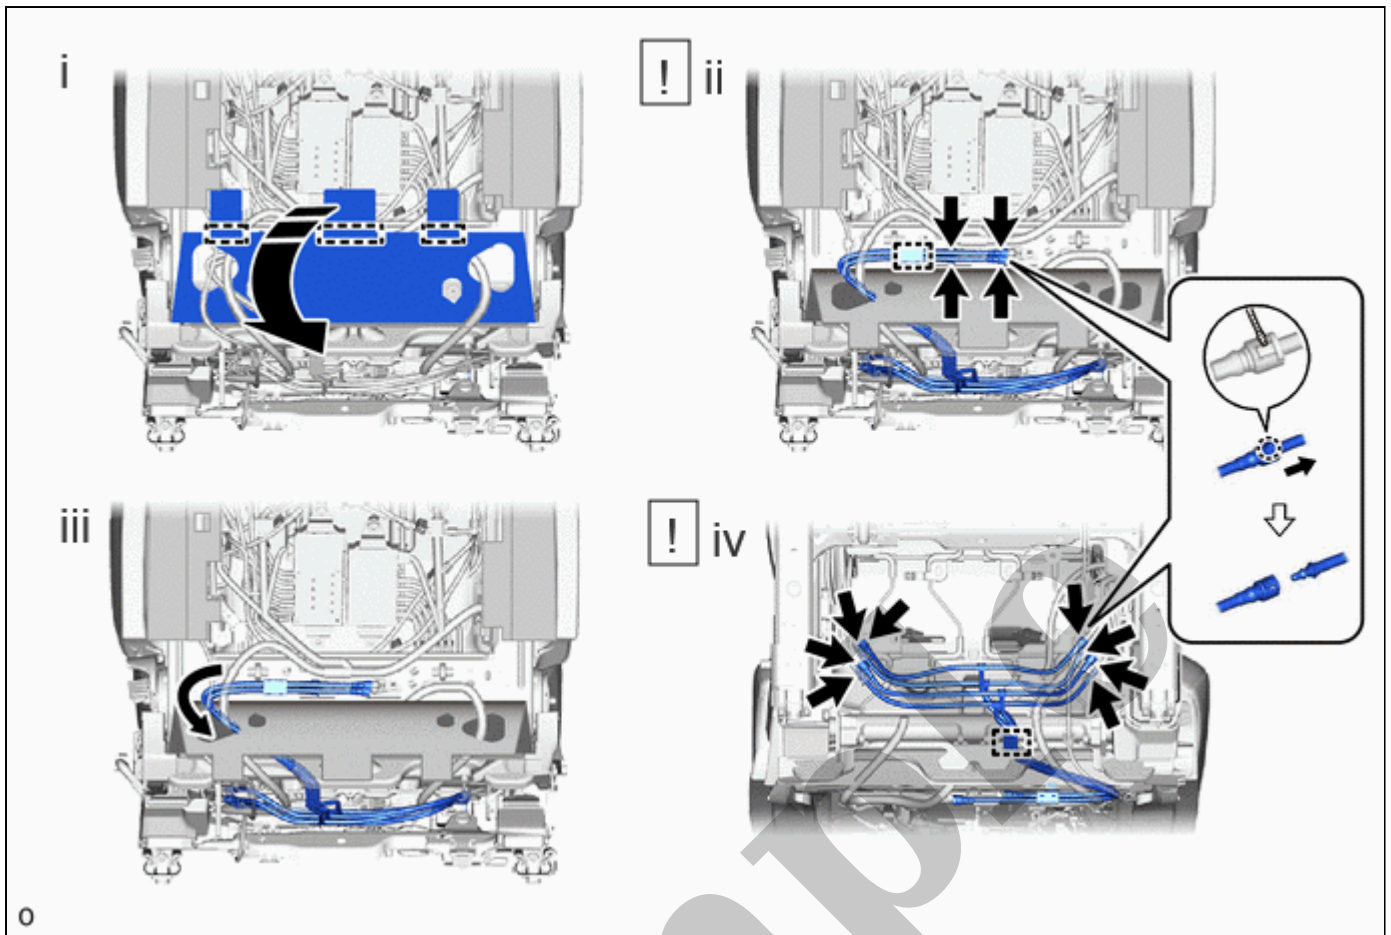

(1) Detach the hook as shown in the illustration.

(2) Using a thin-bladed screwdriver, detach the claw and disconnect the 4 joints as shown in the illustration and detach the guide.

HINT:

Tape the thin-bladed screwdriver tip before use.


(3) Pass the adjuster tube LH through the hole of front seatback cover sub-assembly LH as shown in the illustration.

(4) Using a thin-bladed screwdriver, detach the claw and disconnect the 8 joints as shown in the illustration and detach the guide to remove the adjuster tube LH.

HINT:

Tape the thin-bladed screwdriver tip before use.


12. REMOVE FRONT SEATBACK ASSEMBLY LH

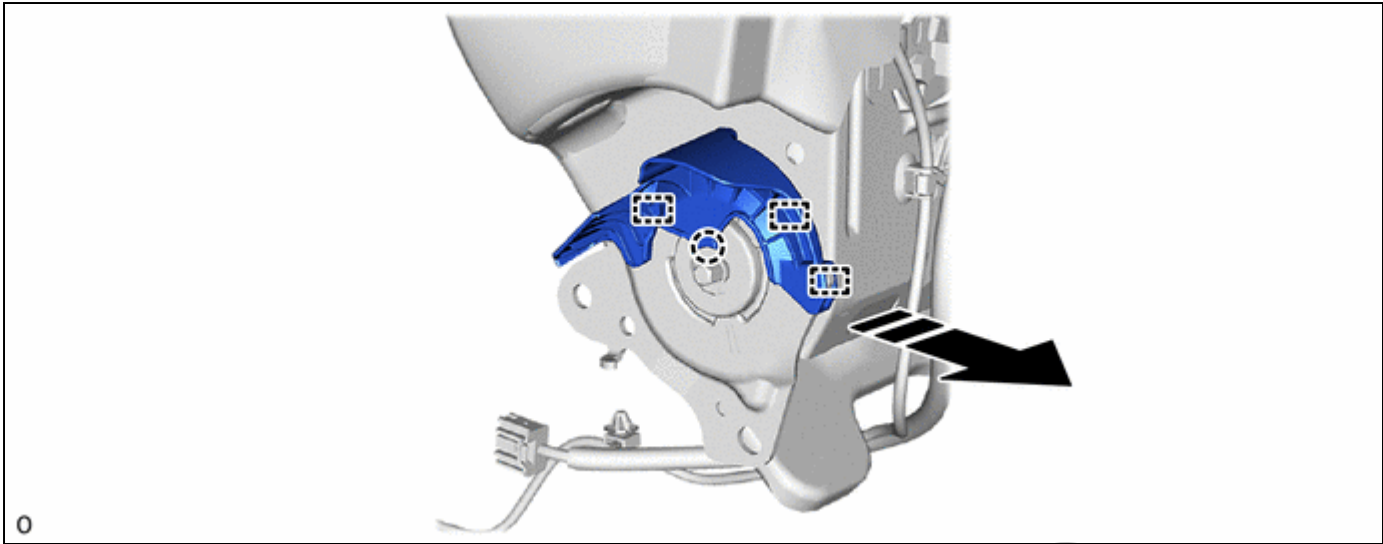

	Remove in this Direction	-	-
---	--------------------------	---	---

14. REMOVE FRONT SEAT HEADREST SUPPORT ASSEMBLY LH


(a) w/ Refresh Seat:

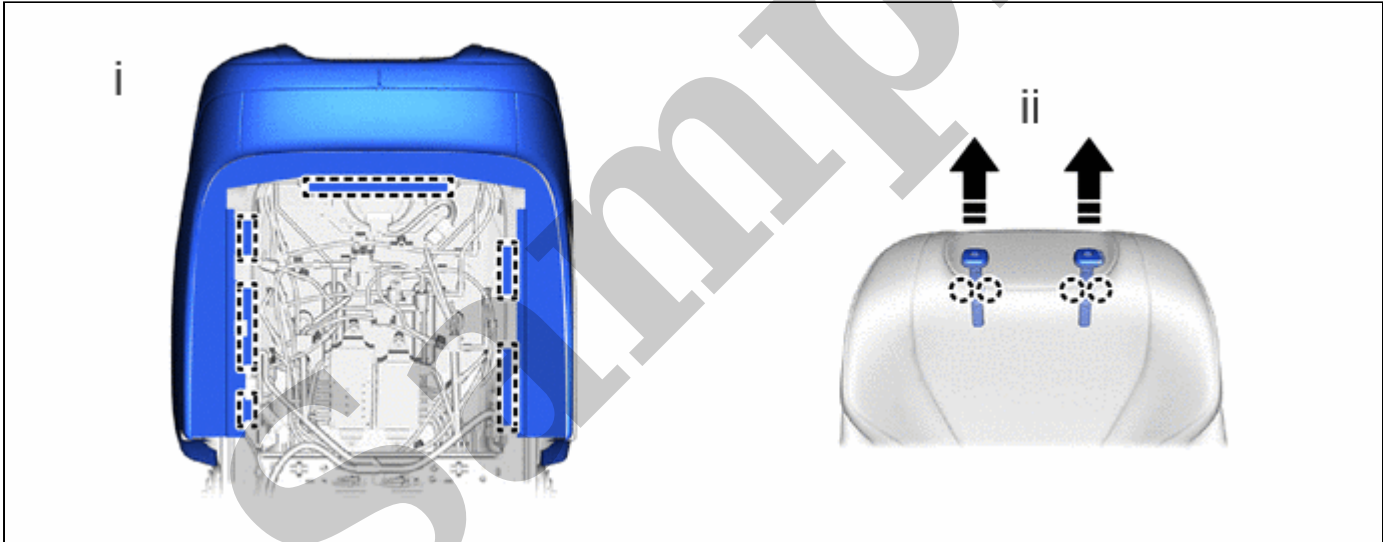

	Remove in this Direction	-	-
---	--------------------------	---	---

- (1) Detach the hook.
- (2) Detach the claw and remove the 2 front seat headrest support assemblies LH.

(b) w/o Refresh Seat:

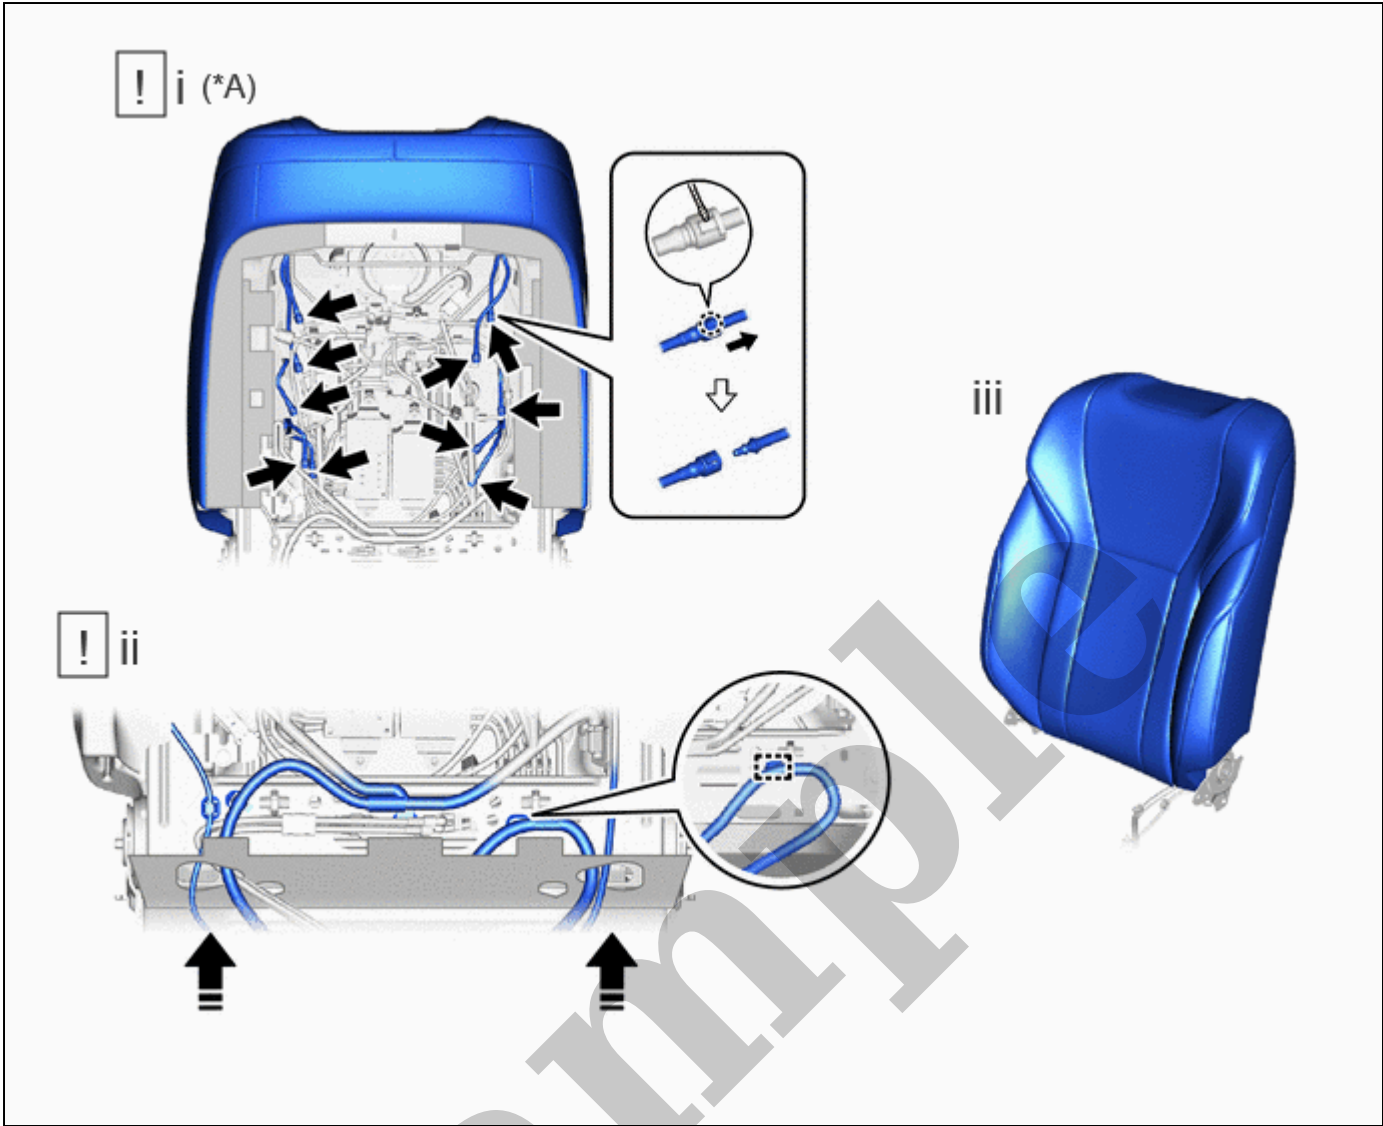

*A	w/ Refresh Seat	-	-
	Pass in this Direction	-	-


- (1) w/ Refresh Seat:
1. Using a thin-bladed screwdriver, detach the claw and disconnect the 10 joints as shown in the illustration.

NOTICE:
Be careful not to damage the joints and tubes.

HINT:
Tape the thin-bladed screwdriver tip before use.

- (2) Pass each wire harness through the hole of front seatback cover sub-assembly LH as shown in the illustration.
- (3) Remove seatback cover with pad.

16. REMOVE FRONT SEATBACK COVER SUB-ASSEMBLY LH

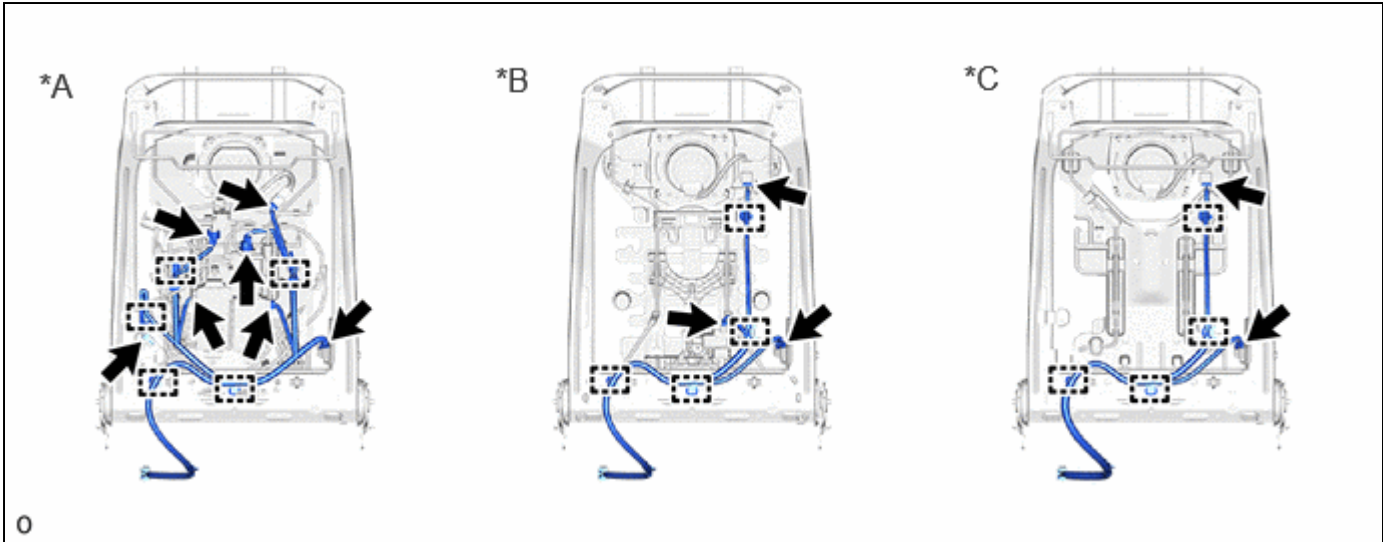

*A	w/ Refresh Seat	*B	w/ Lumbar Support
*C	w/o Lumbar Support	-	-

20. REMOVE LUMBAR SUPPORT PUMP SUB-ASSEMBLY LH (w/ Refresh Seat)

Click here [INFO](#)

21. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/ Lumbar Support)

Click here [INFO](#)

22. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY RH (w/o Lumbar Support)

HINT:

- Remove the lumbar support adjuster assembly RH together with the 2 front seatback edge protectors RH.
- Remove the seatback felt together.

